


RTW TUBE FOOTREST

Item Numbers 8654

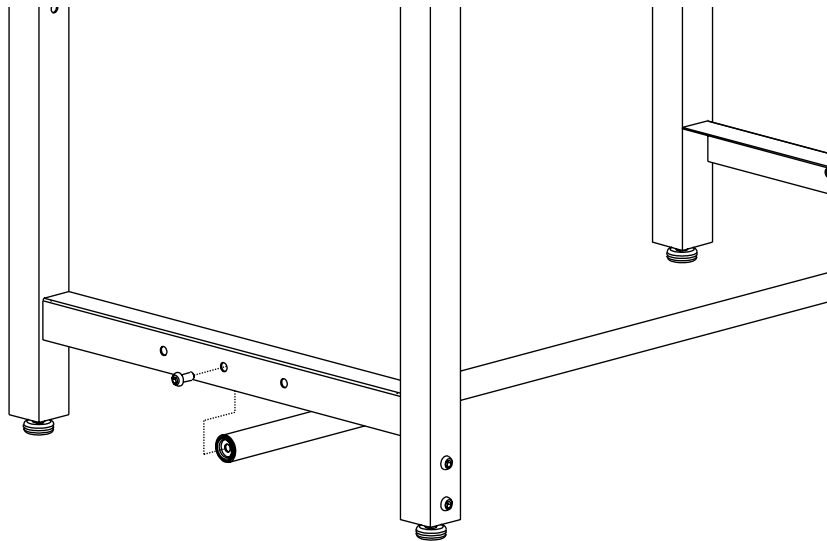


Accessories

PARTS AND HARDWARE	QUANTITY
Footrest Tube	1
Basic Bolts	2
Allen Wrench	1

1. Position tube footrest in 1 of the 3 hole positions on lower cross member on each RTW Frame Leg.
2. Insert Basic Bolt through lower cross member, then in footrest. Tighten with Basic Allen Wrench.

FOOTREST PLATE

Item Number 8668

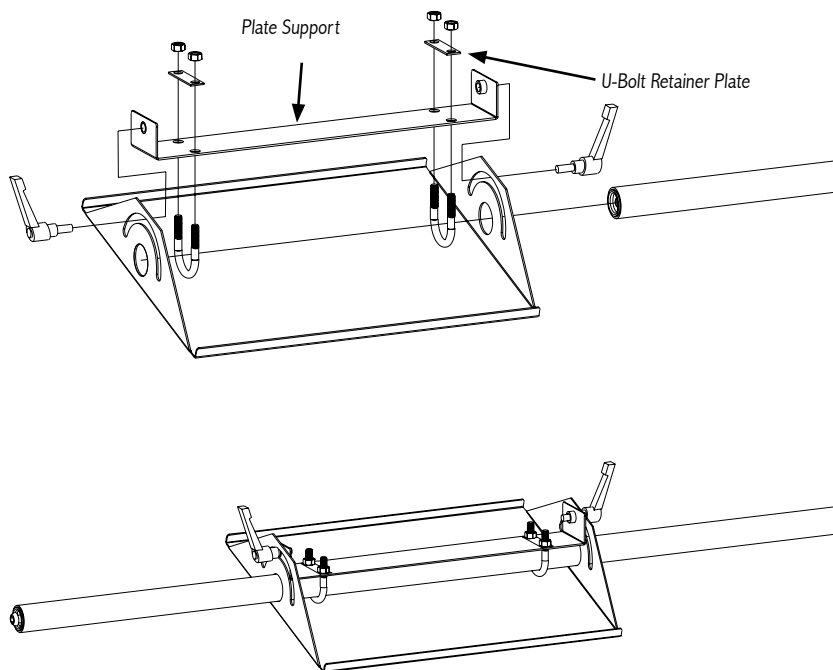


PARTS AND HARDWARE	QUANTITY
Footrest Plate	1
Plate Support	1
U-Bolts	2
Nuts	4
Handles	2
U-Bolt Retainer Plate	2

• **Note: Footrest Plate must be installed on Tube Footrest before tube is secured into position.**

1. Assemble Footrest Plate Bracket as shown.
2. Slip Footrest Tube through holes in Footrest Plate and the U-Bolts.
3. Secure by inserting the handle into the weld nut on the bracket.
4. To adjust Footrest Plate placement, loosen or tighten U-Bolt on underside of plate. To adjust angle, use handles on the side.
5. Attach footrest as directed (Adjustable Tube or RTW Tube).

C-LEG ADJUSTABLE TUBE FOOTREST

Item Numbers 8664, 8665, 8666, 8667

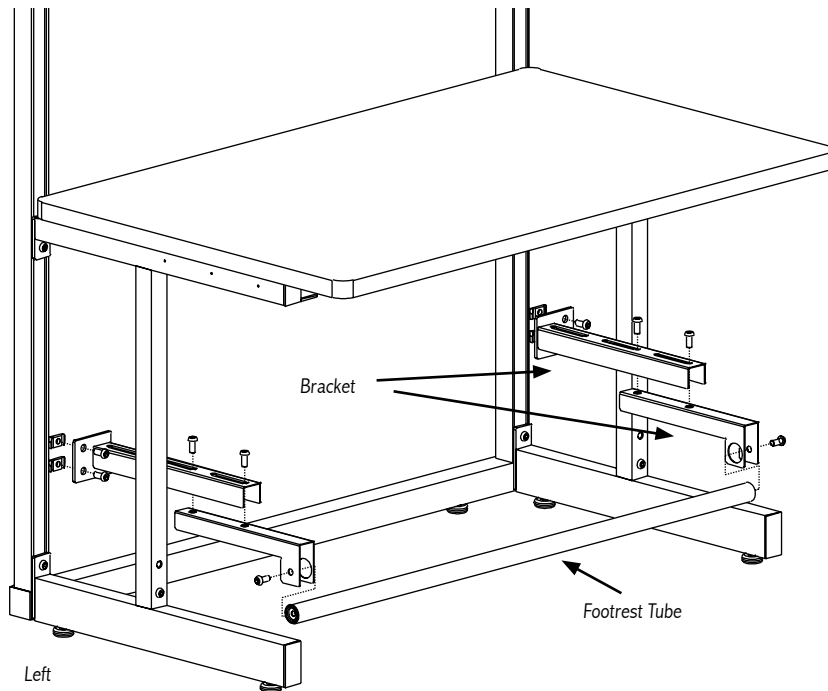

Accessories


PARTS AND HARDWARE	QUANTITY
Footrest Tube	1
Brackets (2 pieces each)	2
Basic Bolts	10
Basic Nuts	4
Allen Wrench	1
Other Items Needed (not included)	
Tape Measure	
Level	

• **Note: Adjust bracket position to accommodate operator and depth of station.**

1. Prepare brackets as shown. Adjust bracket according to operator comfort and depth of workstation. Brackets are LEFT and RIGHT specific.
2. Attach footrest tube between the bracket assemblies using a Basic Bolt.
3. Insert a Basic Bolt into the mounting plate on the bracket assembly and secure with a Basic Nut turning one revolution. Repeat for other bracket.
4. Install bracket onto frame under the worksurface. Measure or use a level to ensure brackets are at the same height. Repeat for other bracket.

FOOTREST PLATE

Item Number 8668

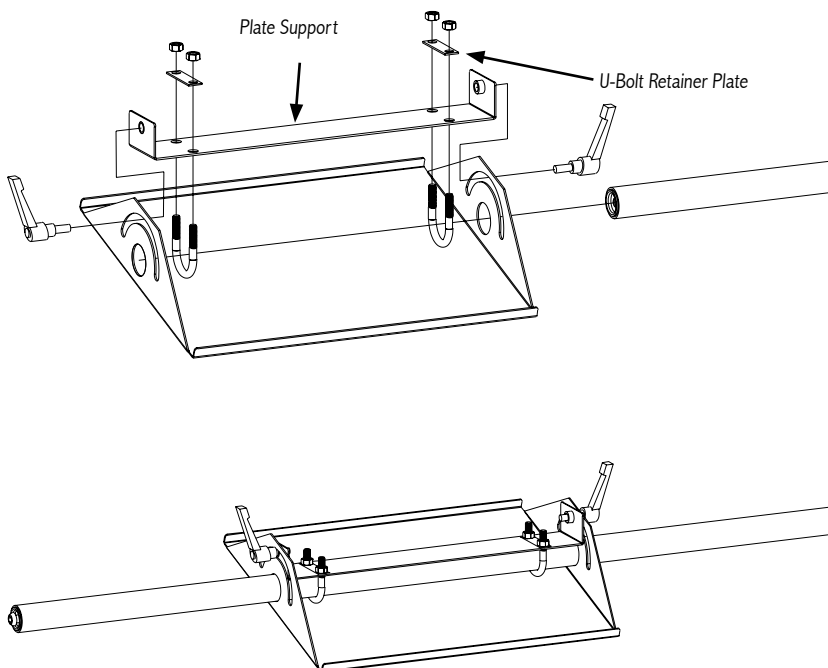

PARTS AND HARDWARE	QUANTITY
Footrest Plate	1
Plate Support	1
U-Bolts	2
Nuts	4
Handles	2
U-Bolt Retainer Plate	2

• **Note: Footrest Plate must be installed on Tube Footrest before tube is secured into position.**

1. Assemble Footrest Plate Bracket as shown.
2. Slip Footrest Tube through holes in Footrest Plate and the U-Bolts.
3. Secure by inserting the handle into the weld nut on the bracket.
4. To adjust Footrest Plate placement, loosen or tighten U-Bolt on underside of plate. To adjust angle, use handles on the side.
5. Attach footrest as directed (Adjustable Tube or RTW Tube).