
INSTALLATION INSTRUCTIONS



In-Wall Accessory Boxes

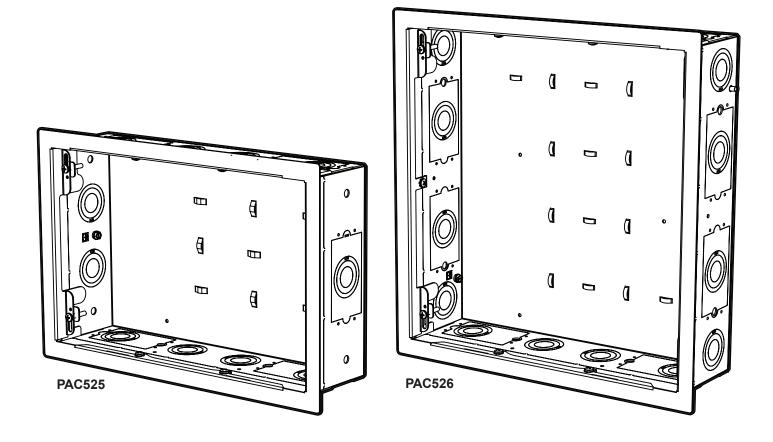

205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com





DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this accessory can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this accessory is attached can support five times the combined weight of all equipment.

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located in the accessory does not exceed 10 lbs (4.5 kg).

WARNING: Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

WARNING: For indoor use only.

IMPORTANT !: The PAC525/526 mounts are designed to be mounted to a 2" x 4" wood stud wall, 16" on center, or 2" x 4" -25ga (minimum) steel studs wall.

NOTE: Ambient Temperature - The manufacturer's maximum ambient temperature is 120°F (49°C) and minimum ambient temperature is 40°F (4°C) so that the installer is able to determine acceptability of use of accessories and components in the operating.

NOTE: Spacings - Minimum spacings between the 120 Vac power components and the A/V components shall be maintained for safe operation of the equipment when installed in accordance with the National Electric Code, ANSI/NFPA 70-2008.


NOTE: When selecting a Listed 120 Vac Receptacle for use as the main power source for the PAC Series boxes (to power the A/V equipment), make sure that AC Receptacle is rated at least 15A and it is used in the building's AC branch circuit that is connected to a circuit breaker rated at least 15A. Do not connect more than 12A from the Receptacle.

In the U.S., the equipment shall be installed per the applicable requirements of the National Electrical Code, ANSI/NFPA 70.

In Canada, the equipment shall be installed per the applicable requirements of the Canadian Electrical Code, CSA C22.1.

--SAVE THESE INSTRUCTIONS--


DIMENSIONS

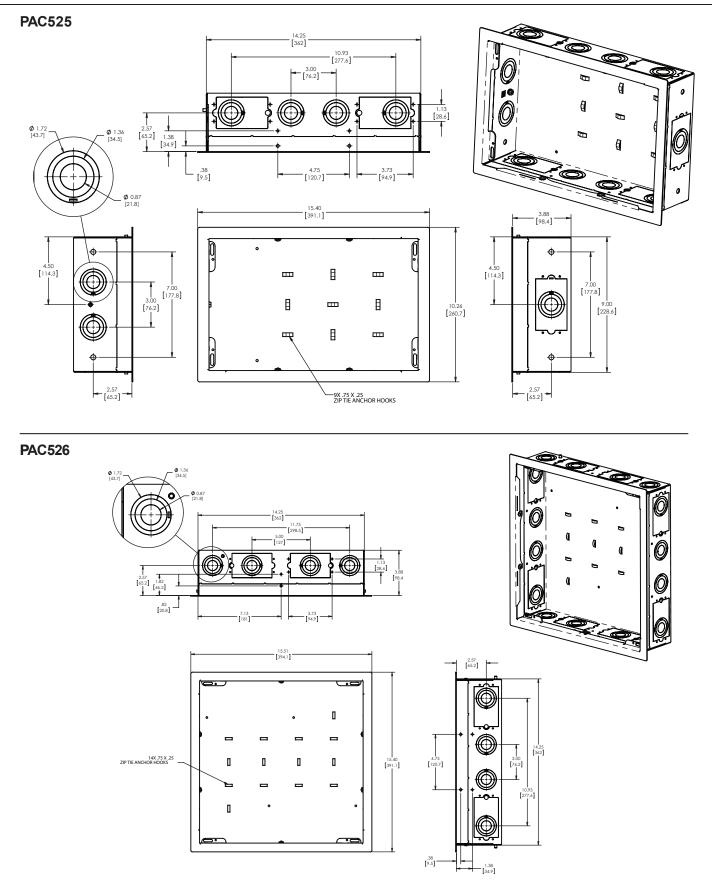


LEGEND

	Tighten Fastener	Pencil Mark
	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
C	Loosen Fastener	Drill Hole
	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
	Phillips Screwdriver	Adjust
	Destornillador Phillips	Ajustar
	Kreuzschlitzschraubendreher	Einstellen
	Chave de fendas Phillips	Ajustar
	Cacciavite a stella	Regolare
	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
	Flathead Screwdriver	Remove
		Quitar
		Entfernen
		Remover
		Rimuovere
		Verwijderen
		Retirez
	Mark level line	Precision hand cut surface

TOOLS REQUIRED FOR INSTALLATION

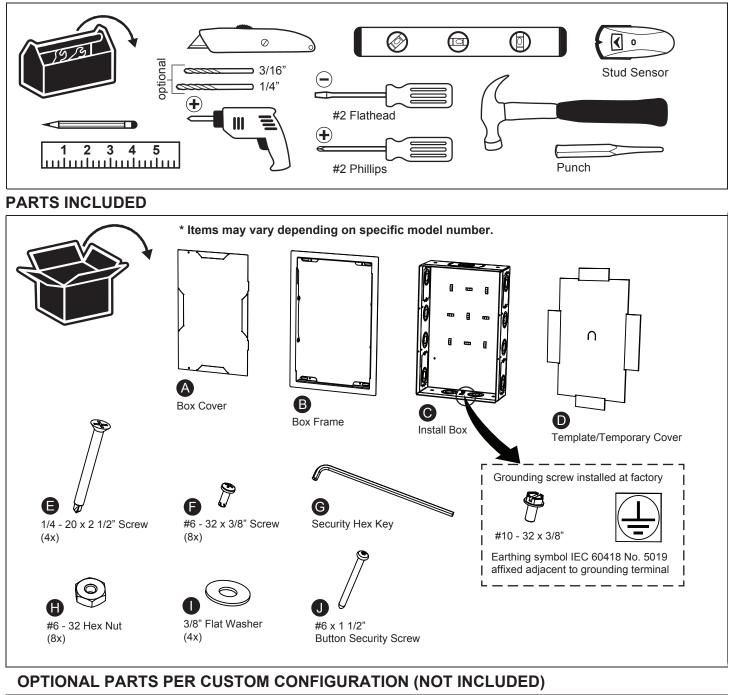

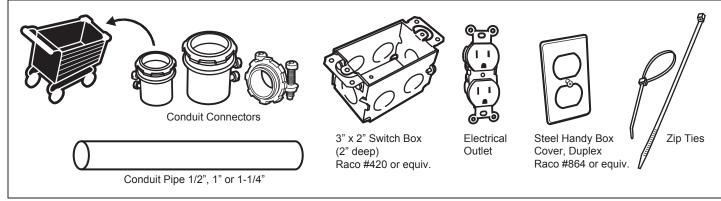


INSTALLATION

The PAC525/526 is intended for use both in installations where an existing finished drywall wall is present, and where the wall surface has not been finished and the structural studs are exposed. The wall then must be finished around the opening of the box after the box has been installed.



WARNING: All wiring should be performed by a licensed electrician following all local codes and ordinances.

PAC525/526 Project Planning




- 0
- (2) Using a stud sensor, locate and mark studs.
- Identify possible structural conflicts (electrical wiring, plumbing, gaslines, HVAC).

WARNING: ELECTRICAL SHOCK HAZARD! CUTTING OR DRILLING INTO ELECTRICAL WIRES OR CABLES CAN CAUSE DEATH OR SERIOUS PERSONAL INJURY! ALWAYS make certain area behind mounting surfaces is free of electrical wires and cables before cutting, drilling or installing fasteners.




WARNING: EXPLOSION AND FIRE HAZARD! CUTTING OR DRILLING INTO GAS PLUMBING CAN CAUSE DEATH OR SERIOUS PERSONAL INJURY. ALWAYS make certain area behind mounting surfaces is free of gas, water, waste or any other plumbing before cutting, drilling or installing fasteners.






Drywall attachment only

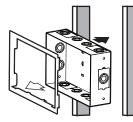



Pre-sheetrock attachment



Stud & drywall attachment

Plan box and component needs.
Sketch diagrams provided:

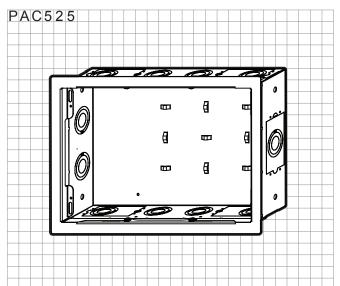

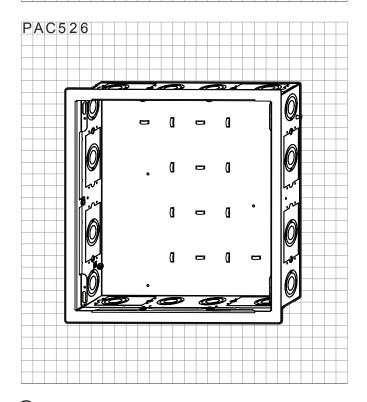

6 Determine all components needed.

Conduit Pipe

Conduit Connectors (large and small)


- Electrical Box(es) (3" x 2")
- Steel Electrical Box Cover(s)
- Zip Ties
- Electrical Outlet(s)

PAC525/526 Site Preparation


(7) Using a level, draw a horizontal line at lower edge of install site.

A - STUD ATTACHMENT - create exploratory hole to confirm edge of stud/studs.


B - DRYWALL ATTACHMENT - mark horizontal cut locations ensuring a minimum 1/2" distance from each stud.

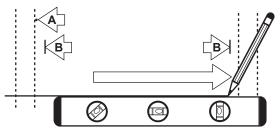

(8) Align on lower edge drawn line (A) and horizontal marking for inside stud location (B).Use enclosed template or housing as a template, drawing line around top and sides of housing.

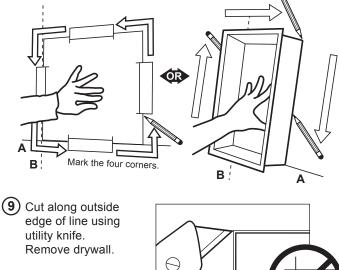


NOTE: Cutting past corners weakens the cleats' ability to hold securely.

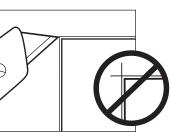


PAC525/526 Box Preparation

(11) Remove knock-outs in box as predetermined in step 5.

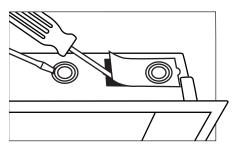


(12) Loosely attach components and conduit (cut to length) to box to ease fitting into wall opening.

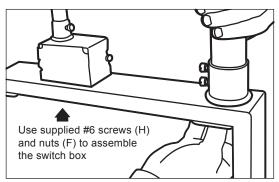


PAC525/526 Box Installation

(13) Feed attached conduit through cut-out and insert box into opening in wall. Tighten component connections.

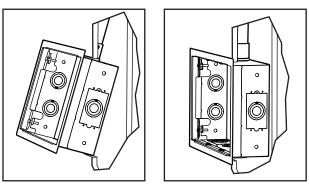

(10) Once wall opening is completed, check stud depth. If 3.5" or greater, proceed to step 11. If less than 3.5" deep, modify depth of box as follows before proceeding: **A** CAUTION: Injury may occur on sharp edges. Carefully discard the removable tabs.

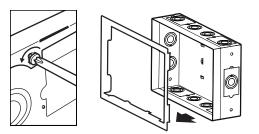


A - Remove box flange by removing screws.



B - Snap off removable tabs at perforations provided.




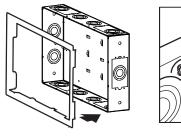

C - Reinstall box flange. Reattach screws.


Secure box into place by methods chosen.

> DRYWALL ATTACHMENT: Slide locking cleats into place. Tighten screws to secure.

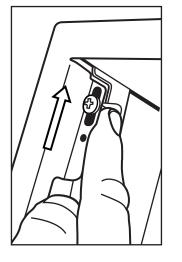


STUD ATTACHMENT:

Drill pilot holes (optional) into studs through mounting holes in box. Wood studs - use 3/16" bit. If steel studs - use 1/4" bit. Install with $1/4 - 20 \times 2 \times 1/2$ " screws (E) into pilot holes.

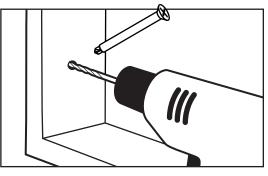

(15) NOTE:

Box may be installed with outer flange removed for a pre-sheetrock open stud mount configuration.

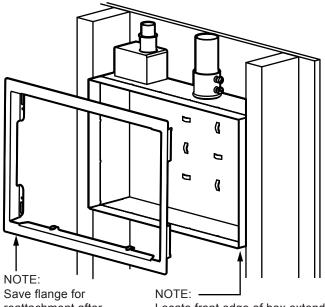


Save flange for reattachment after sheetrock is installed.


Locate front edge of box extended beyond studs by thickness of sheetrock to be used.

PAC525/526 Final Finishing


(6) Wire/Cable Management - Use "integrated zip-tie hook" in back wall of box to organize and secure cables and AV components.

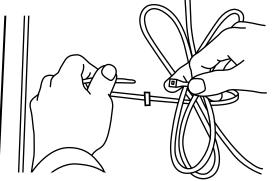


Install template as temporary cover if needed to protect from debris by folding tabs in and inserting into opening.

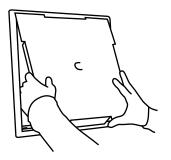

(18) Modify enclosure cover before attaching. Break away tab(s) to allow wire exit from box and meet ventilation needs.

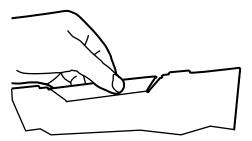

(9) Gather wires and route through cover opening. Install cover, screw fasteners(2) into place to secure and complete enclosure.

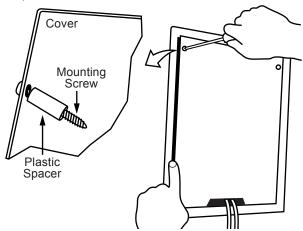



Chief, a products division of Milestone AV Technologies

8800-002517 Rev00 ©2014 Milestone AV Technologies www.chiefmfg.com 03/14

Europe

Asia Pacific

- USA/International A 6436 City West Parkway, Eden Prairie, MN 55344
 - P 800.582.6480 / 952.225.6000
 - **F** 877.894.6918 / 952.894.6918
 - Franklinstraat 14, 6003 DK Weert, Netherlands Α
 - Ρ +31 (0) 495 580 852
 - F +31 (0) 495 580 845
 - A Office No. 1 on 12/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong
 - Ρ 852 2145 4099
 - F 852 2145 4477

