


HAKCO DUCT KIT

999-205-01B Loc-Line® Duct Kit

Assembly Instructions

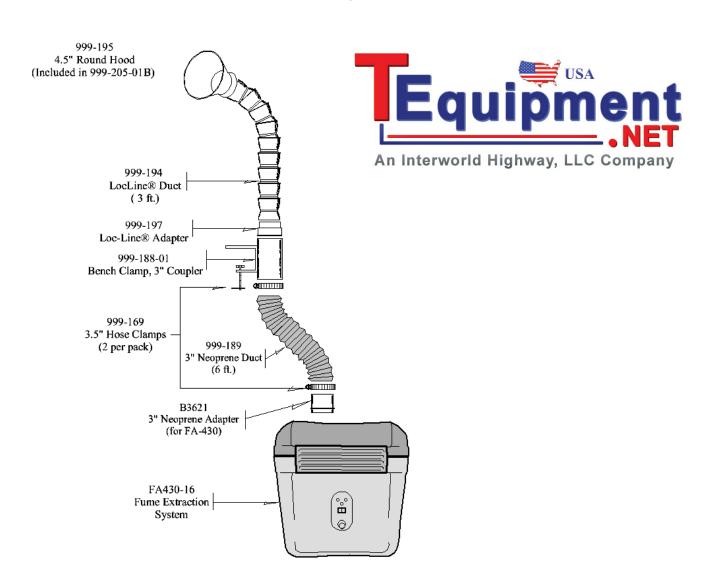

NOTE: Ensure the Neoprene Duct is attached to the longer side of the Neoprene Duct Adapter as measured from the flange.

Loc-Line® is a registered trademark of Lockwood Products