


# **Enlighten<sup>™</sup> Boards**

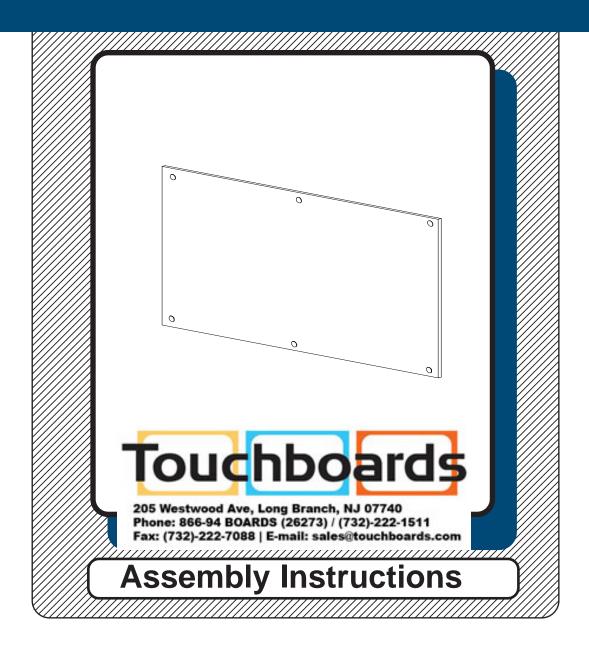

## **Enlighten** ™ **Board**

Part D	rawing	Description	Qty	P	art	Drawing	Description	Qty	
P-1	0	Glass Boar	d 1 EA	$\bigcap$		Н	ardware List		
o	o			А			Outer Cap	See Chart	
		-		В			Wall Mount	See Chart	
				С			Plastic Ancho	See or Chart	
Hardwai 83950			s. (A), (B) C), (D),(E)	D			CS Screw	See Chart	
83951	3'X4'	8 pcs. (F GBoard - 4 pc 6 pcs. (C 8 pcs. (F	s. (A), (B) s), (D), (E)	E	(		Drywall Anchor	See Chart	
83952	4'X6'	GBoard - 6 pc	s. (A), (B) s), (D), (E)	F		0	Plastic Washer	See Chart	
83948	1' X1' GBoard- 4 pcs. (A),(B) 6 pcs. (C), (D), (E) 8 pcs. (F)				Missing Parts or UPS Damaged Parts				
83949	1.5" X 2'	GBoard- 4 pc 6 pcs. (C 8 pcs. (F	(a), (D), (E)		For Your Convenience you can EMAIL us at support@moorecoinc.com				
83954	20" X 30	" GBoard-4 po 6 pcs. (C 8 pcs. (F	s), (D), (E)	Sh	24HOURS 7 DAYS A WEEK  Should you require assistance during assembly please call our				
					Customer Service Department  Monday - Friday 8 a.m 5 p.m.  Central Standard Time  Toll-Free Customer Service				


### **Important Information**

Do not use unless all screws are tight. At least every six months, check all screws to be sure they are tight. If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.

1-800-749-2258

## Preparing to Install Your New Enlighten™Board

Measure the length and width of your new board. Determine the wall center line and height off the floor that you want your new board to be located. Hold your board up in position and draw a line under the bottom of the board and parallel with the floor. If your wall has studs, determine the centerline of the studs. It is recommended that you tie into as many studs as possible when mounting your board.

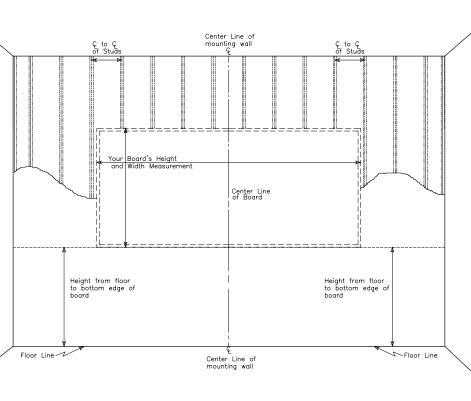

Typical Room With Stud Wall Centered Board Layout


**NOTE:** The proper installation of your board will require at least two people. Tools required: Tape measure, chalkline, electric drill / screwdriver, drill and screwdriver bits, stud finder and level.

Illustration #1

2.) When you have your glass board positioned, mark the wall through the mount holes that are in the board.

Note: If you are installing a marker tray, go to the Tray Mounting Steps next.


Illustration #2

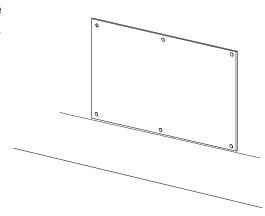

#### Installing the Glass Board

- 3.) After you have followed the guidelines from Page 3, install the correct number of Board Mounts (B) for the size board you are mounting to the wall. Install the Board Mounts as shown in Illustration #3A and #3B.
- 3A.) For all walls except sheet rock:

Predrill a 5/16" diameter hole in the center of each of your marked mount holes. Push in a Plastic Anchor (C) into each predrilled hole. Place the Wall Mount (B) on top of the Plastic Anchor (C) and attach using one CS Screw (D). Repeat this Step for each Wall Mount that is required for your size board.

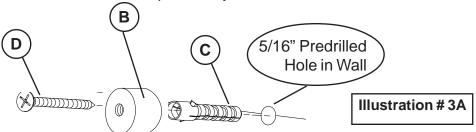


3B.) For sheet rock walls:

Screw in a Drywal I Anchor (F) in the center of each of the marked mount holes.

Place a Wall Mount (B) on top of each Drywall Anchor (F) and attach using one

CS Screw (D). Repeat this Step for each Wall Mount that is required

for your size board.

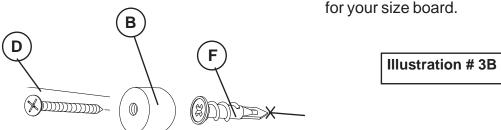

4.) Center the Glass Board (P1) over the Wall Mounts (B). Secure the Glass Board (P1) in place by screwing in a Top Cap (A) and Plastic Washer (F) into each treaded hole in the Wall Mounts (B) with Plastic Washer (F) as shown in Illustration #4. Repeat this Step for each hole.

