

INSTALLATION INSTRUCTIONS

Slat Wall Clamp System

Made in the U.S.A.


Read these instructions first and follow all steps in sequence.



COMPONENTS

- A Upper Clamp
- **B** Lower Clamp
- C Slat Wall Bracket

NOTE: Illustrations depict typical product. Yours may vary slightly.

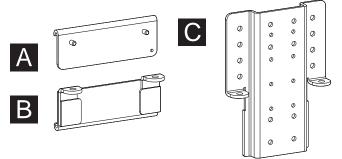

FASTENERS

- a #10-24 Acorn Nut
- **b** 1/4-20 x 1" Phillips Pan Head Screw








TOOLS REQUIRED

3/8" Open end wrench (customer supplied)

Hang Upper Clamp to edge of Slat Wall.

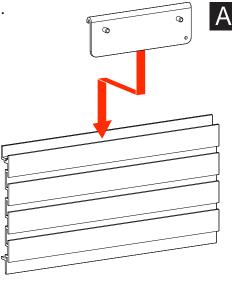


STEP

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511

Fax: (732)-222-7088 | E-mail: sales@touchboards.com


REV. B-03/00 Page 1 of 4 888-60-079-00

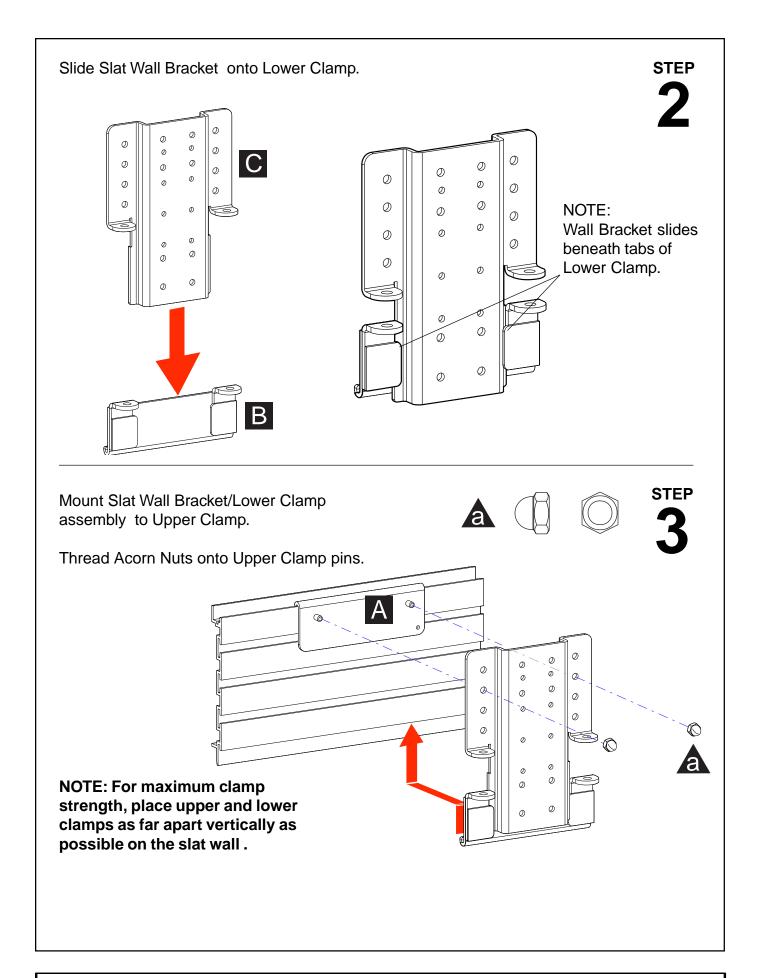

Using a 3/8" wrench, tighten Acorn Nuts.

STEP

4

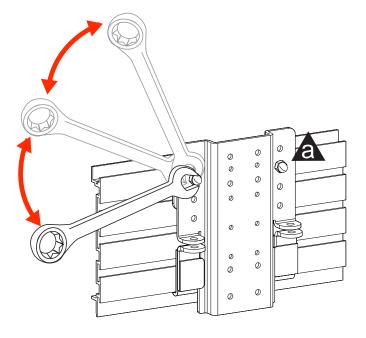


Using a Phillips screwdriver with provided screws, secure Slat Wall Bracket to Lower Clamp.







5

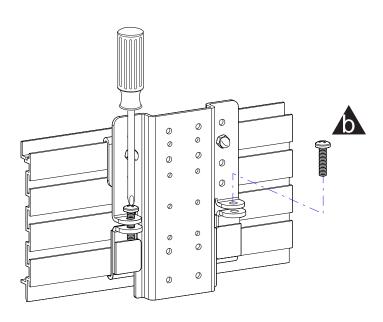

Mounting Patterns




A 100 Series Direct Mount Pivot

B 200 Series Vertical Mount Bracket

C 400 Series Flat Panel Monitor Arm with Fixed Mount

D 400 Series Flat Panel Monitor Arm with Rotate Mount

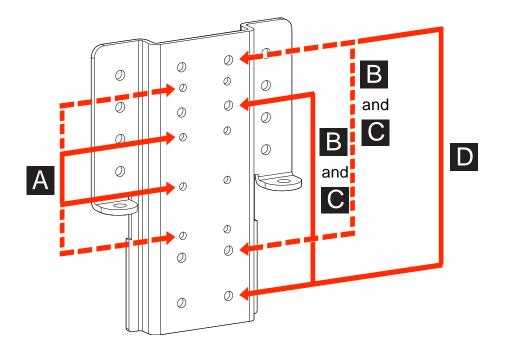

Replacement Parts

Part Number Description

696-569 Mounting Hardware Kit*

* Kit Includes: two #10-24 Acorn Nuts and two 1/4-20 x 1" Phillips Pan Head Screws



Patents Pending & Patented U.S. & Foreign.

Ergotron is a registered trademark of Ergotron, Inc. Reproduction of this material in whole or part for any purpose other than that authorized by Ergotron, Inc. is prohibited.

© 2000 Ergotron Inc. All rights reserved.

1181 Trapp Road • St. Paul, MN 55121 800-383-1916 • in MN: 651-681-7600 Fax: 651-681-7717 • www.ergotron.com