




CAREFIT™


by ergotron®

Enclosure Laminate Insert


1. Peel off 3" - 4" of the backing at the top.

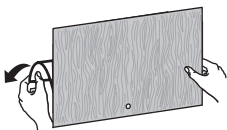

2. Carefully align to top edge. NOTE: Once applied this will not be adjustable. Double check alignment before adhering.

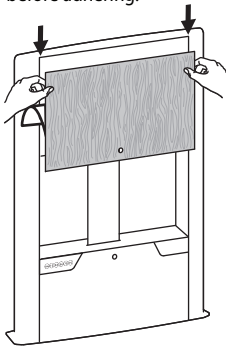

3. Apply insert and smooth out surface moving downward.

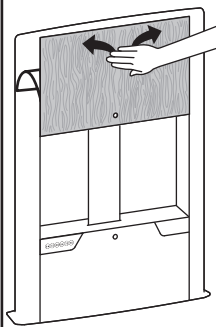

4. Continue removing small amounts of the backing, smoothing out the surface and applying pressure as you go, until backing is removed.

