

CEILING TILE INSTRUCTIONS

8. INSTALL 14-3/8" x 22-3/4" DROP CEILING MATERIAL (SUPPLIED BY CUSTOMER) INTO DOOR. BEND CAPTURE TABS OVER CEILING PANEL TO HOLD IN PLACE.

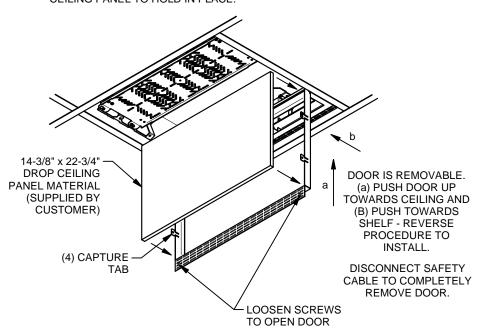

9. REMOVE CEILING BOX DOOR (SEE STEP 8), REMOVE
(2) #8-32 SCREWS AND ADJUSTMENT BAR COVER. SUPPORT
ADJUSTMENT BAR COVER WHILE REMOVING SCREWS.
POLE MOUNT FLANGE COVER IS NOT FASTENED AND JUST
SLIPS OUT. INSTALL (2) 4" WIDE (SEE NOTE) DROP CEILING
PANELS MATERIAL (SUPPLIED BY CUSTOMER) INTO POLE
ADJUSTMENT BAR. CUT LENGTH AS NEEDED BASED ON
POLE MOUNT POSITION.

NOTE: 4" x 9" PANEL SIZE IS ONLY VALID WHEN POLE MOUNT FLANGE IS CENTERED ON THE POLE ADJUSTMENT BAR (DEFAULT FACTORY INSTALLED LOCATION). IF POLE MOUNT IS RELOCATED PANELS WILL NEED TO BE CUT-TO-FIT.

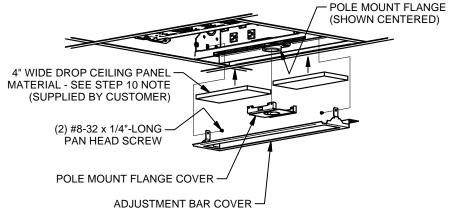



Fax: (732)-222-7088 | E-mail: sales@touchboards.com


FSR Inc.

244 Bergen Boulevard, Woodland Park, NJ 07424 Phone: 973.785.4347 - Fax: 973.785.4207 Web: www.fsrinc.com - E-mail: sales@fsrinc.com


FSR

CB-22P INSTALLATION INSTRUCTIONS

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - Fax: 973.785.4207

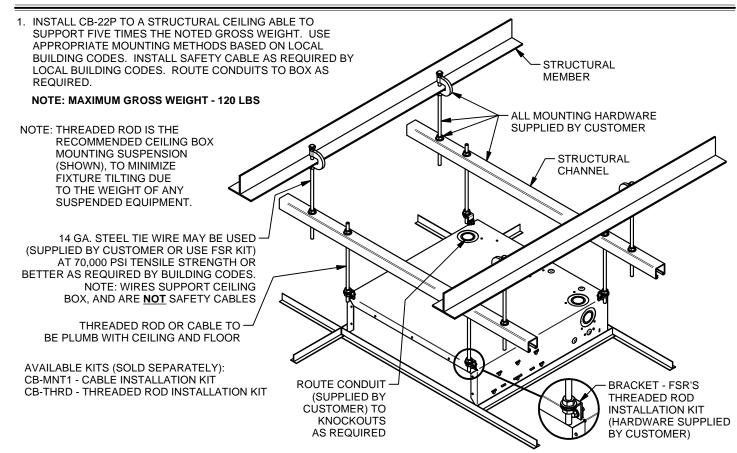


- 2. TO INSTALL AC MAIN POWER INTO THE UNIT, REMOVE THE AC ACCESS PLATE BY REMOVING (4) #8-32 SCREWS, AS SHOWN. WIRING MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN ONLY. WIRING MUST BE DONE IN ACCORDANCE WITH ALL NEC AND OTHER APPLICABLE CODES. RE-INSTALL AC ACCESS PLATE AFTER AC WIRING IS COMPLETE.
- 3. IF POLE MOUNT FLANGE IS TO BE LEFT AT FACTORY POSITION, PROCEED TO STEP 7. IF FLANGE IS TO BE RE-POSITIONED, OR IF INSTALLING FAN KIT, REMOVE CEILING BOX DOOR. LOOSEN SCREWS TO OPEN DOOR. (a) PUSH DOOR UP TOWARDS CEILING AND (b) PUSH TOWARDS SHELF REVERSE PROCEDURE TO INSTALL. DISCONNECT SAFETY CABLE TO COMPLETELY REMOVE DOOR.

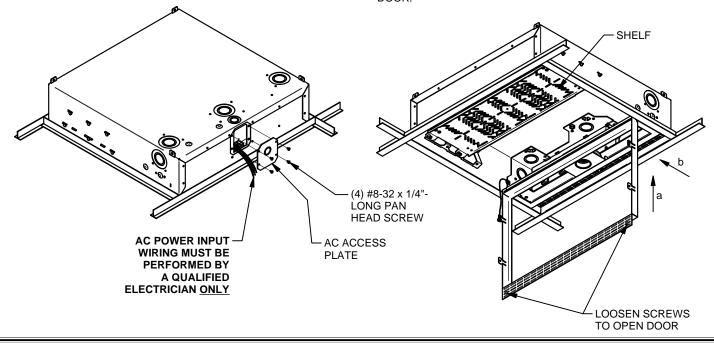

43195 LIT1326B

4. REMOVE (2) #8-32 SCREWS AS SHOWN, AND REMOVE ADJUSTMENT BAR COVER. SUPPORT ADJUSTMENT BAR COVER WHILE REMOVING SCREWS. POLE MOUNT FLANGE COVER IS NOT FASTENED AND JUST SLIPS OUT.

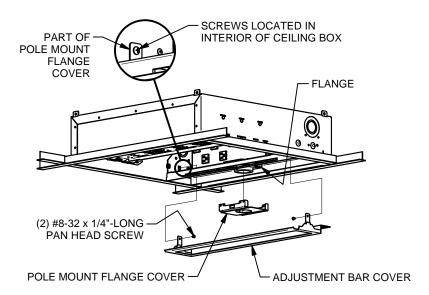


INSTALLING OPTIONAL FAN KIT:

5. DETERMINE LOCATION OF POLE MOUNT FLANGE. LOOSEN (4) #10-32 HEX SCREWS AND SLIDE POLE MOUNT FLANGE TO NEW POSITION AND TIGHTEN HEX SCREWS. IF INSTALLING FAN KIT PROCEED TO STEP 6. RE-INSTALL POLE MOUNT FLANGE COVER, ADJUSTMENT BAR COVER AND CEILING BOX DOOR BACK INTO CEILING BOX BY REVERSING THEIR REMOVAL STEPS. PROCEED TO STEP 7. 6. REMOVE (4) #8-32 SCREWS AS SHOWN, AND EXTRACT POLE ADJUSTMENT BAR. INSTALL FAN KIT PER INSTRUCTIONS. RE-INSTALL POLE ADJUSTMENT BAR, POLE MOUNT FLANGE COVER, ADJUSTMENT BAR COVER AND CEILING BOX DOOR BACK INTO CEILING BOX BY REVERSING THEIR REMOVAL STEPS. PROCEED TO STEP 7.

FLAT HEAD SCREW

CAUTION: ONCE THE LAST SCREW IS REMOVED


NOTE: MAXIMUM PROJECTOR LOAD INCLUDING MOUNTED **ACCESSORIES - 50LBS**

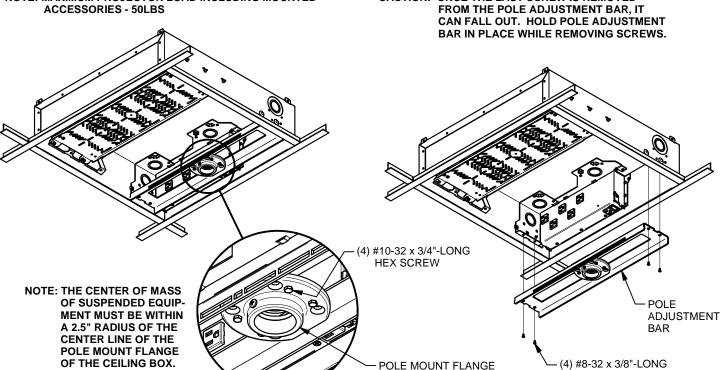

MOUNTING ELECTRONICS INSTRUCTIONS

7a. REMOVE SHELF. AND MOUNT ELECTRONICS TO SHELF. USE HOLE/SLOT PATTERN ON SHELF TO MOUNT EQUIPMENT... ADDITIONAL HOLES MAY BE REQUIRED (SEE 8b. FOR INSTALLING RACK MOUNTED UNITS). RE-INSTALL SHELF INTO CB-22P. MAKE ELECTRICAL CONNECTIONS AS REQUIRED.

NOTE: MAXIMUM LOAD PER SHELF - 20 LBS EACH

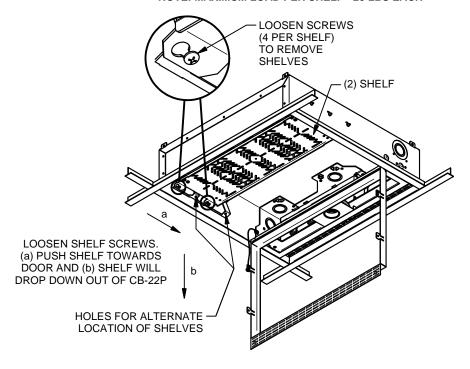

7b. FOR 1RU x 19" EIA RACK-SIZED ELECTRONICS, INSTALL RACK MOUNT BRACKETS AS SHOWN. ATTACH RACK UNIT, AND RE-INSTALL SHELF INTO CB-22P. MAKE ELECTRICAL CONNECTIONS AS REQUIRED.

NOTE: MAXIMUM LOAD PER SHELF - 20 LBS EACH

