
Model 8312 Through-Desk Mount*



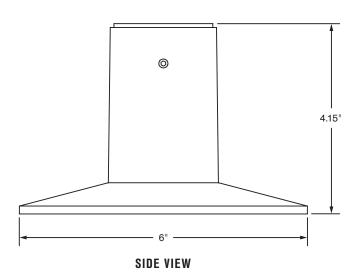







* Drilling required – bolts through your desk. Requires a 3/8" hole.

