
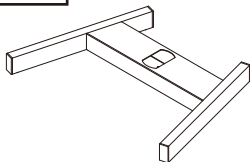



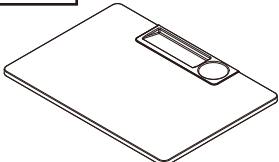




LUXOR

1x1		2x2		3x2		4x4		5x1		6x1		7x1		8x1			
Ax4		Bx6		Cx6		Dx4		Ex8		Fx8		Gx2		Hx2		Jx2	
for 3/8"		M5x15mm		for M5		M5x15mm		1/4"x15mm		for 1/4"		M4x8mm		M4x35mm		M4x12mm	

1

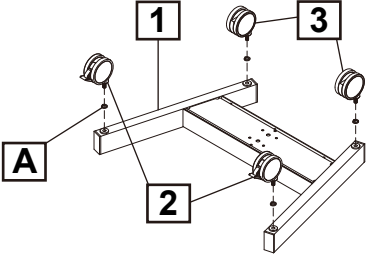


2

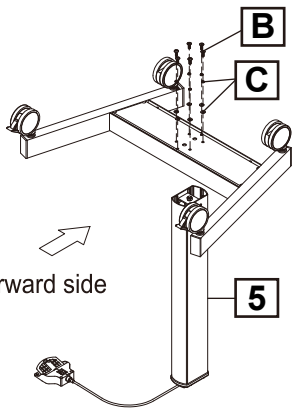


Forward side

5

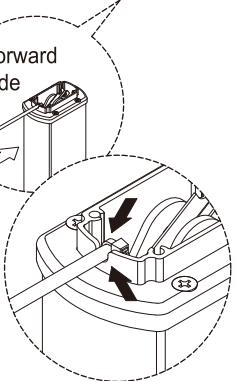


Cable tie must be fixed inside groove

3

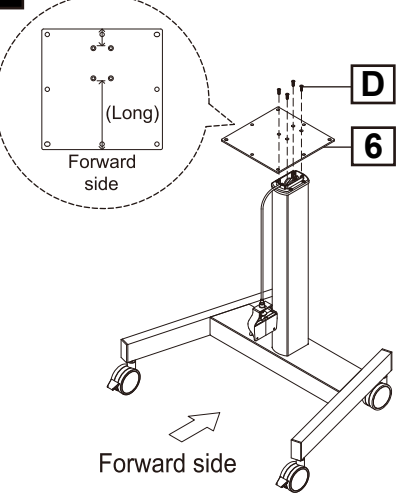


Forward side

4

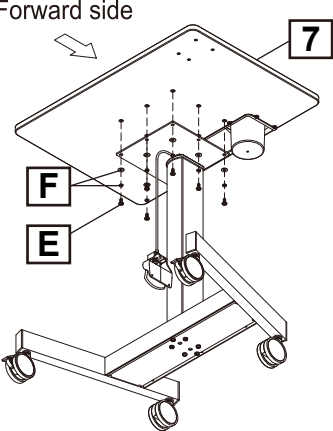


Forward side

5

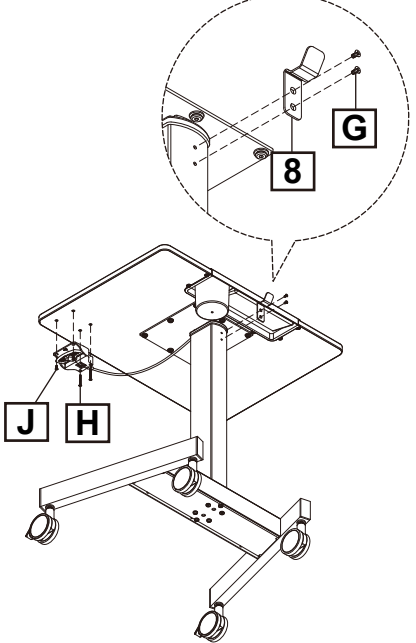

Forward side

6

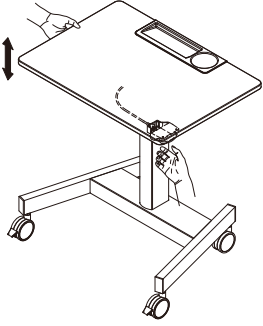

Spring washer must be between the washer and the screw

