


LUXOR

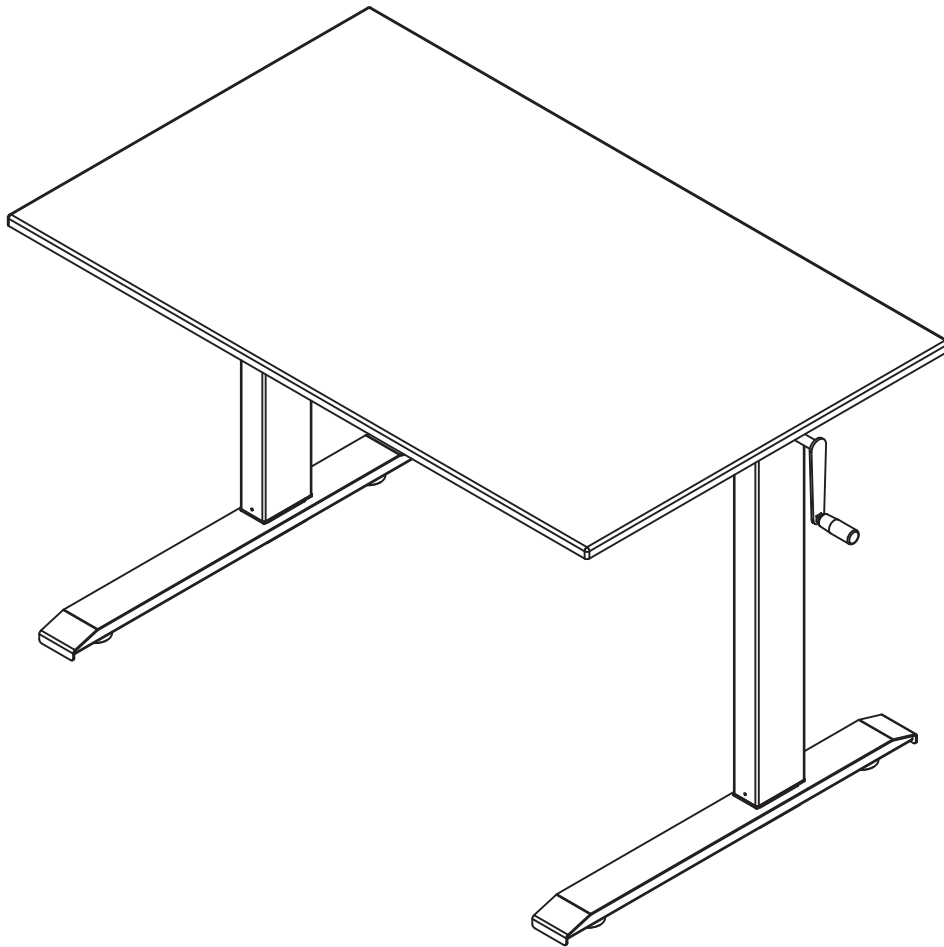

Questions or concerns?
Contact us directly!



1-800-323-4656
Info@LuxorFurn.com

High Speed Crank Desk

PARTS INCLUDED

NOT TO SCALE

A QTY: 1	B QTY: 1	C QTY: 1	D QTY: 1	E QTY: 2
F QTY: 2	G QTY: 1	H QTY: 1	I QTY: 1	J QTY: 2
K QTY: 4	L QTY: 2	M QTY: 2	N QTY: 1*	O QTY: 1
			 Ships separate box	



HARDWARE INCLUDED

NOT TO SCALE, COLOR MAY VARY





1 QTY: 8	2 QTY: 6	3 QTY: 6	4 QTY: 10	5 QTY: 22
M6-65 	M8-20 		M8-15 	M6-12

TOOLS INCLUDED



TOOLS REQUIRED

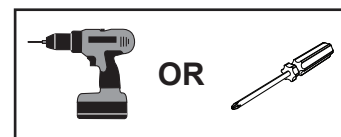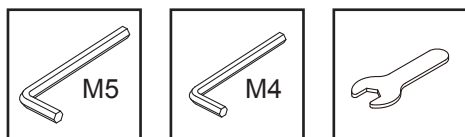



1

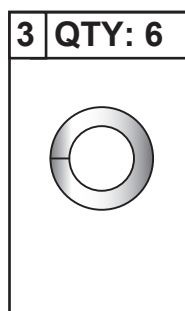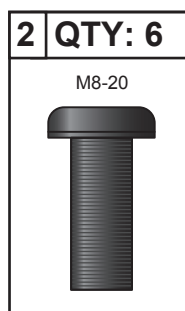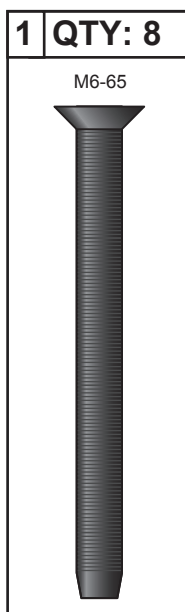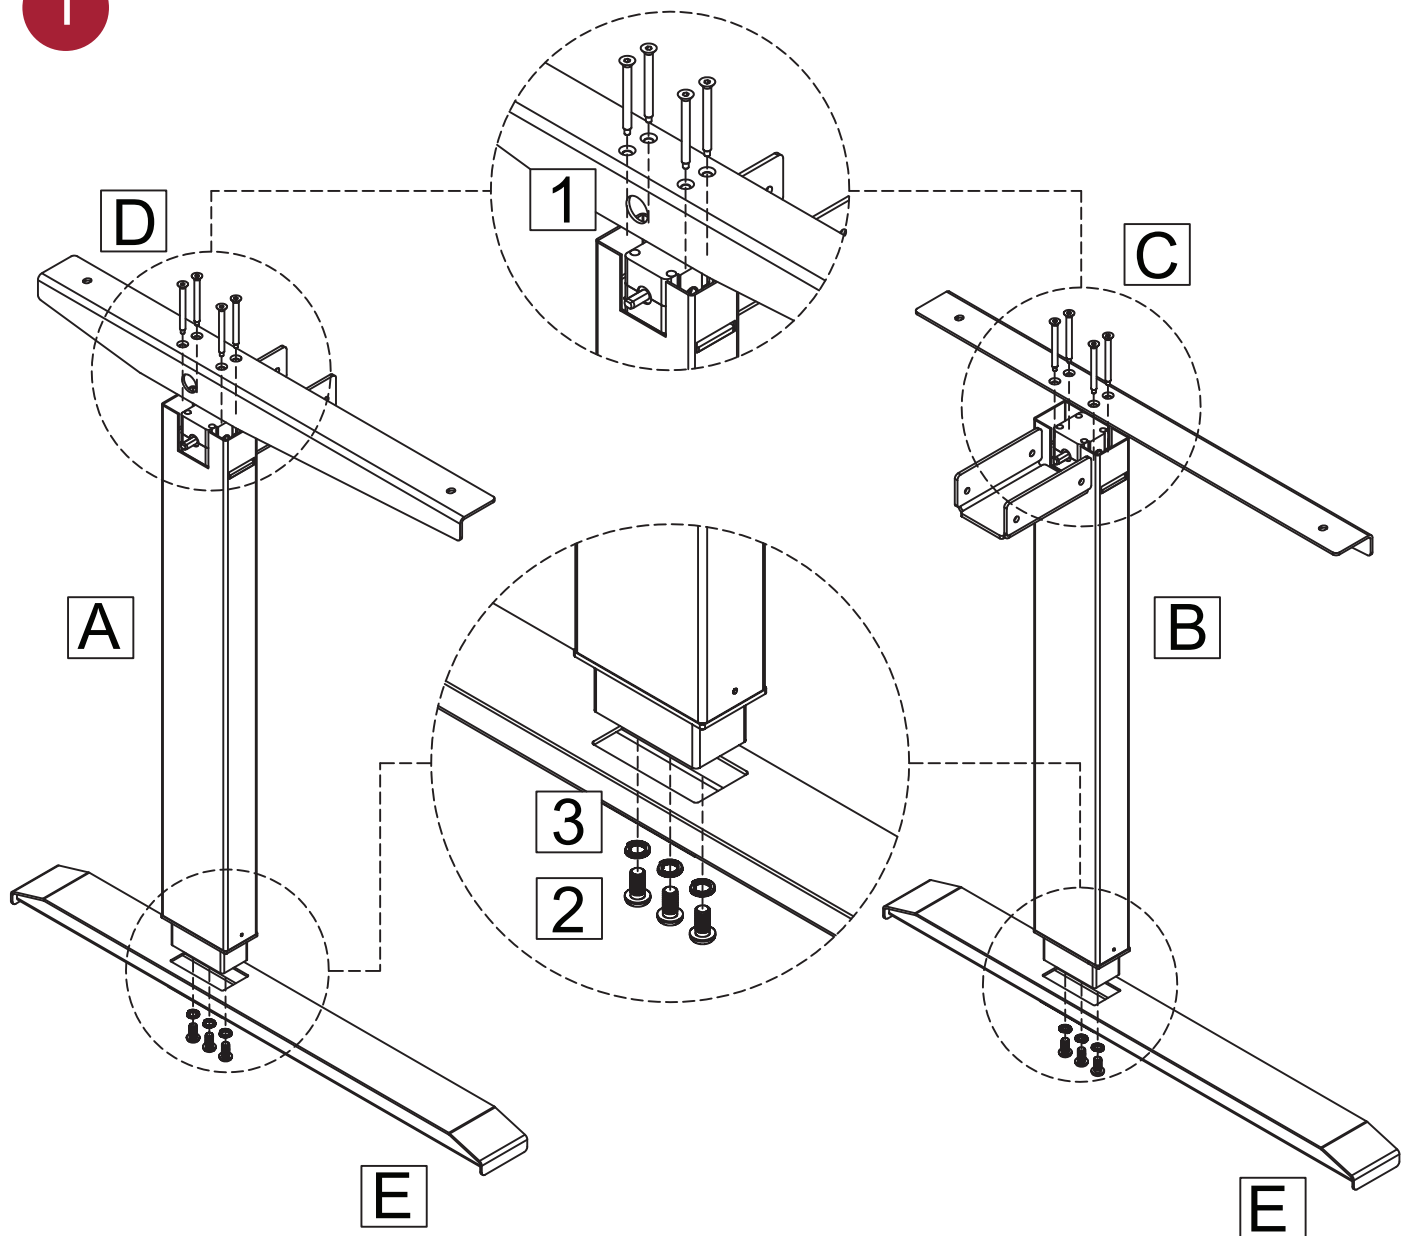



2

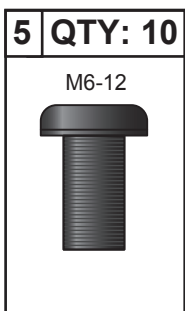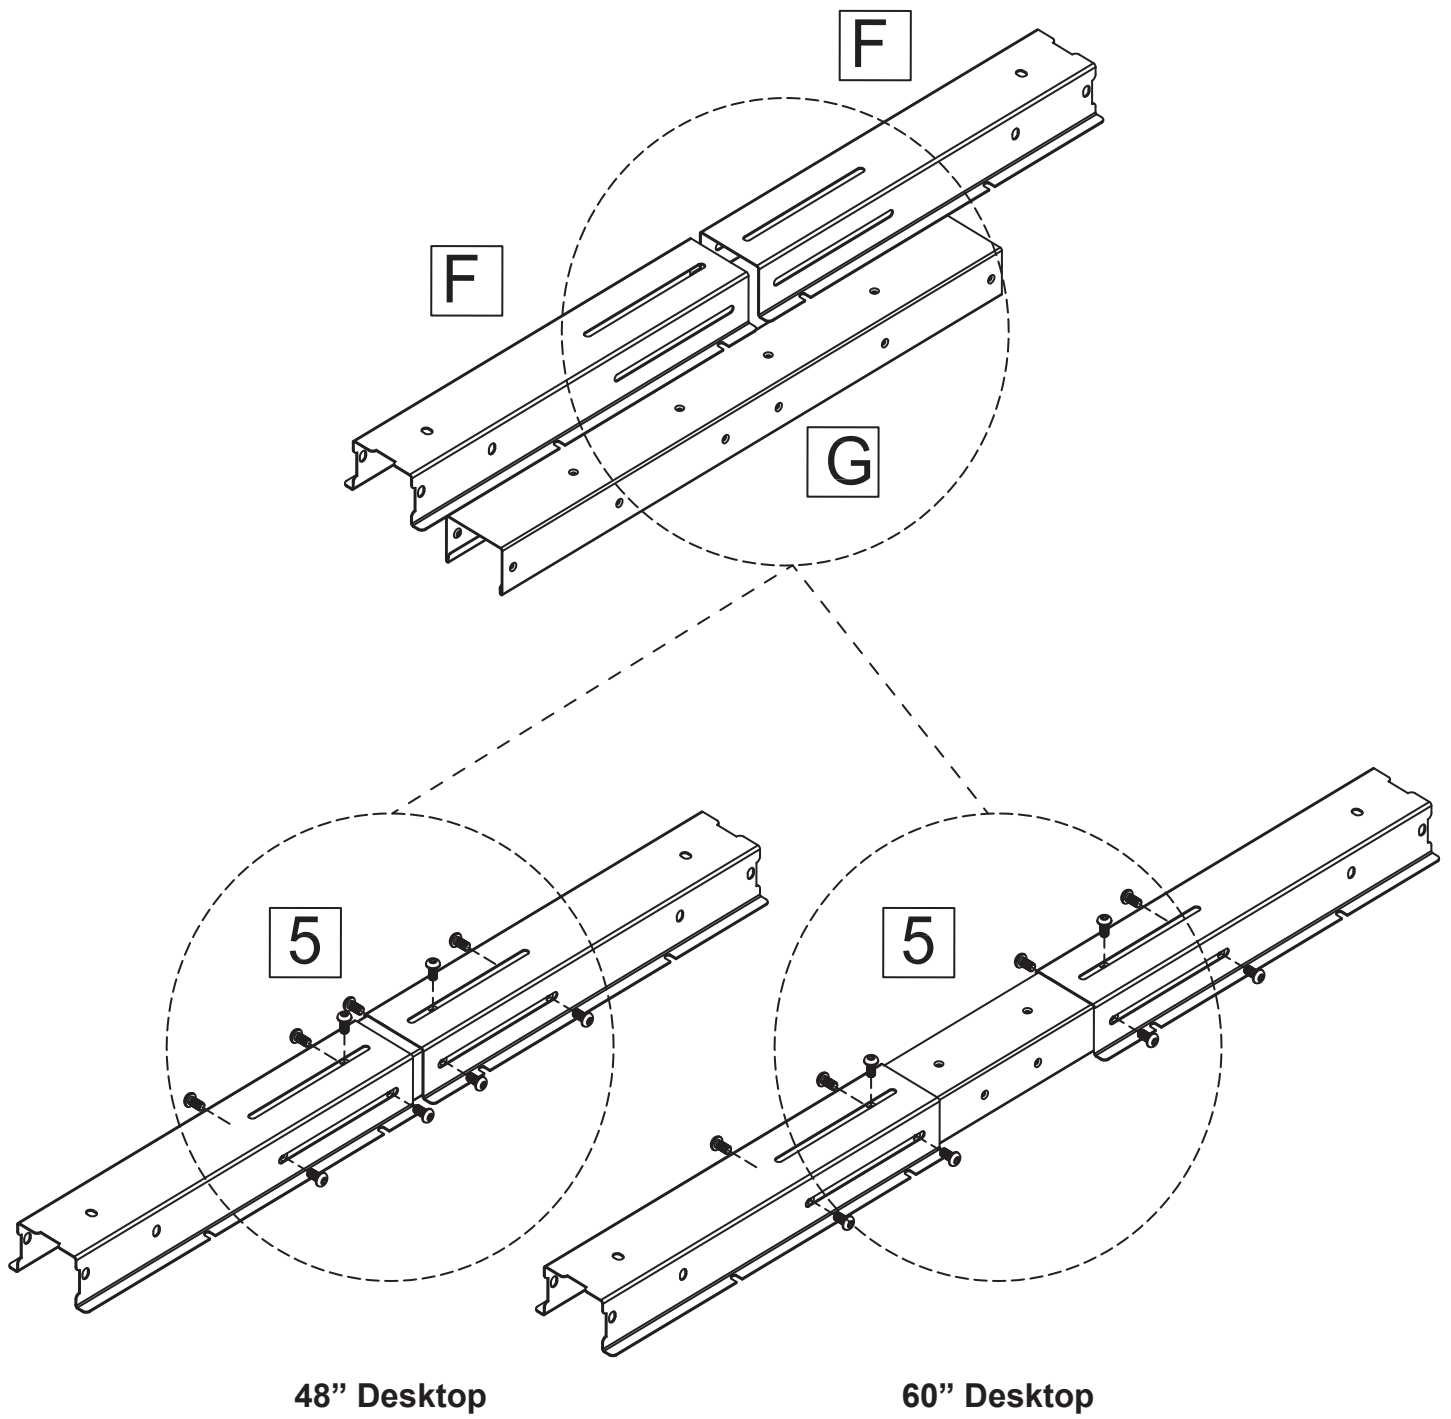

3

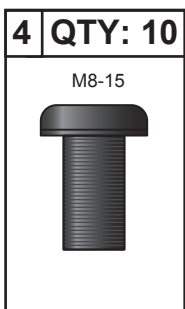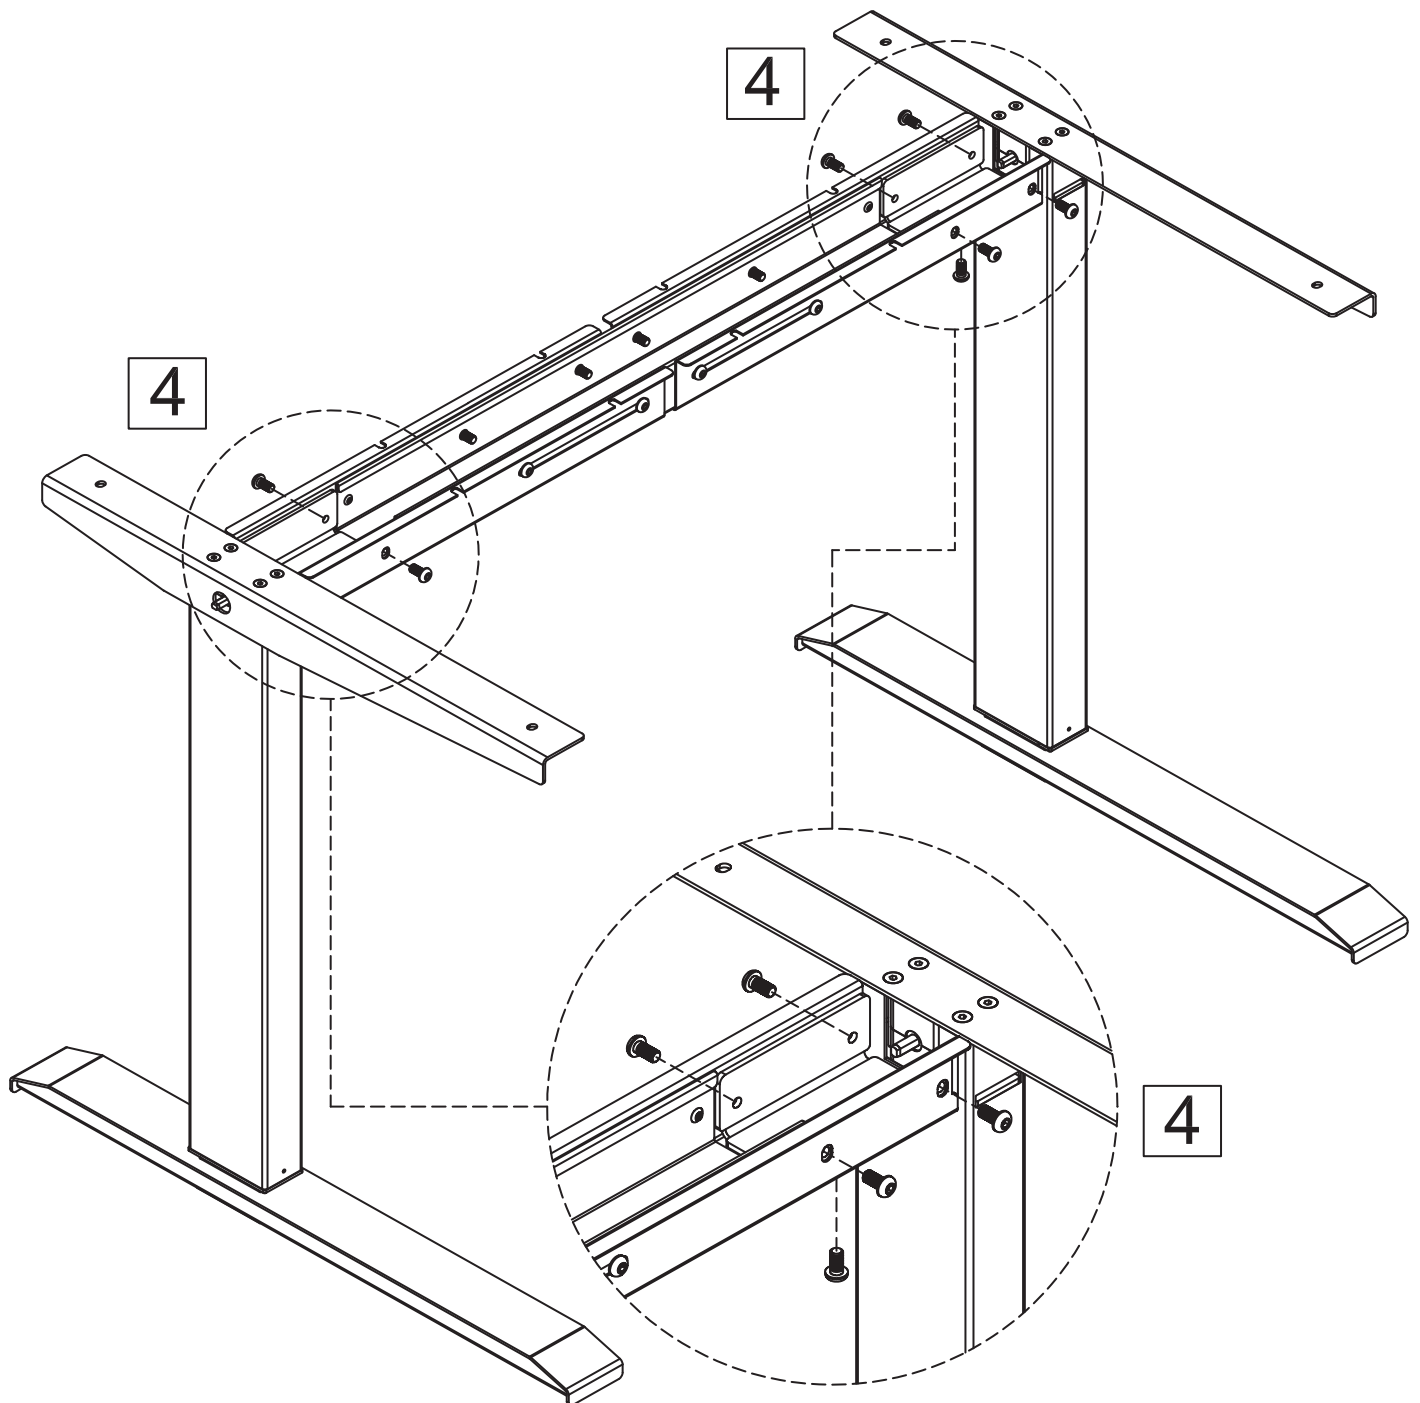



4

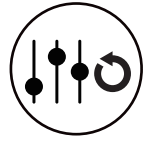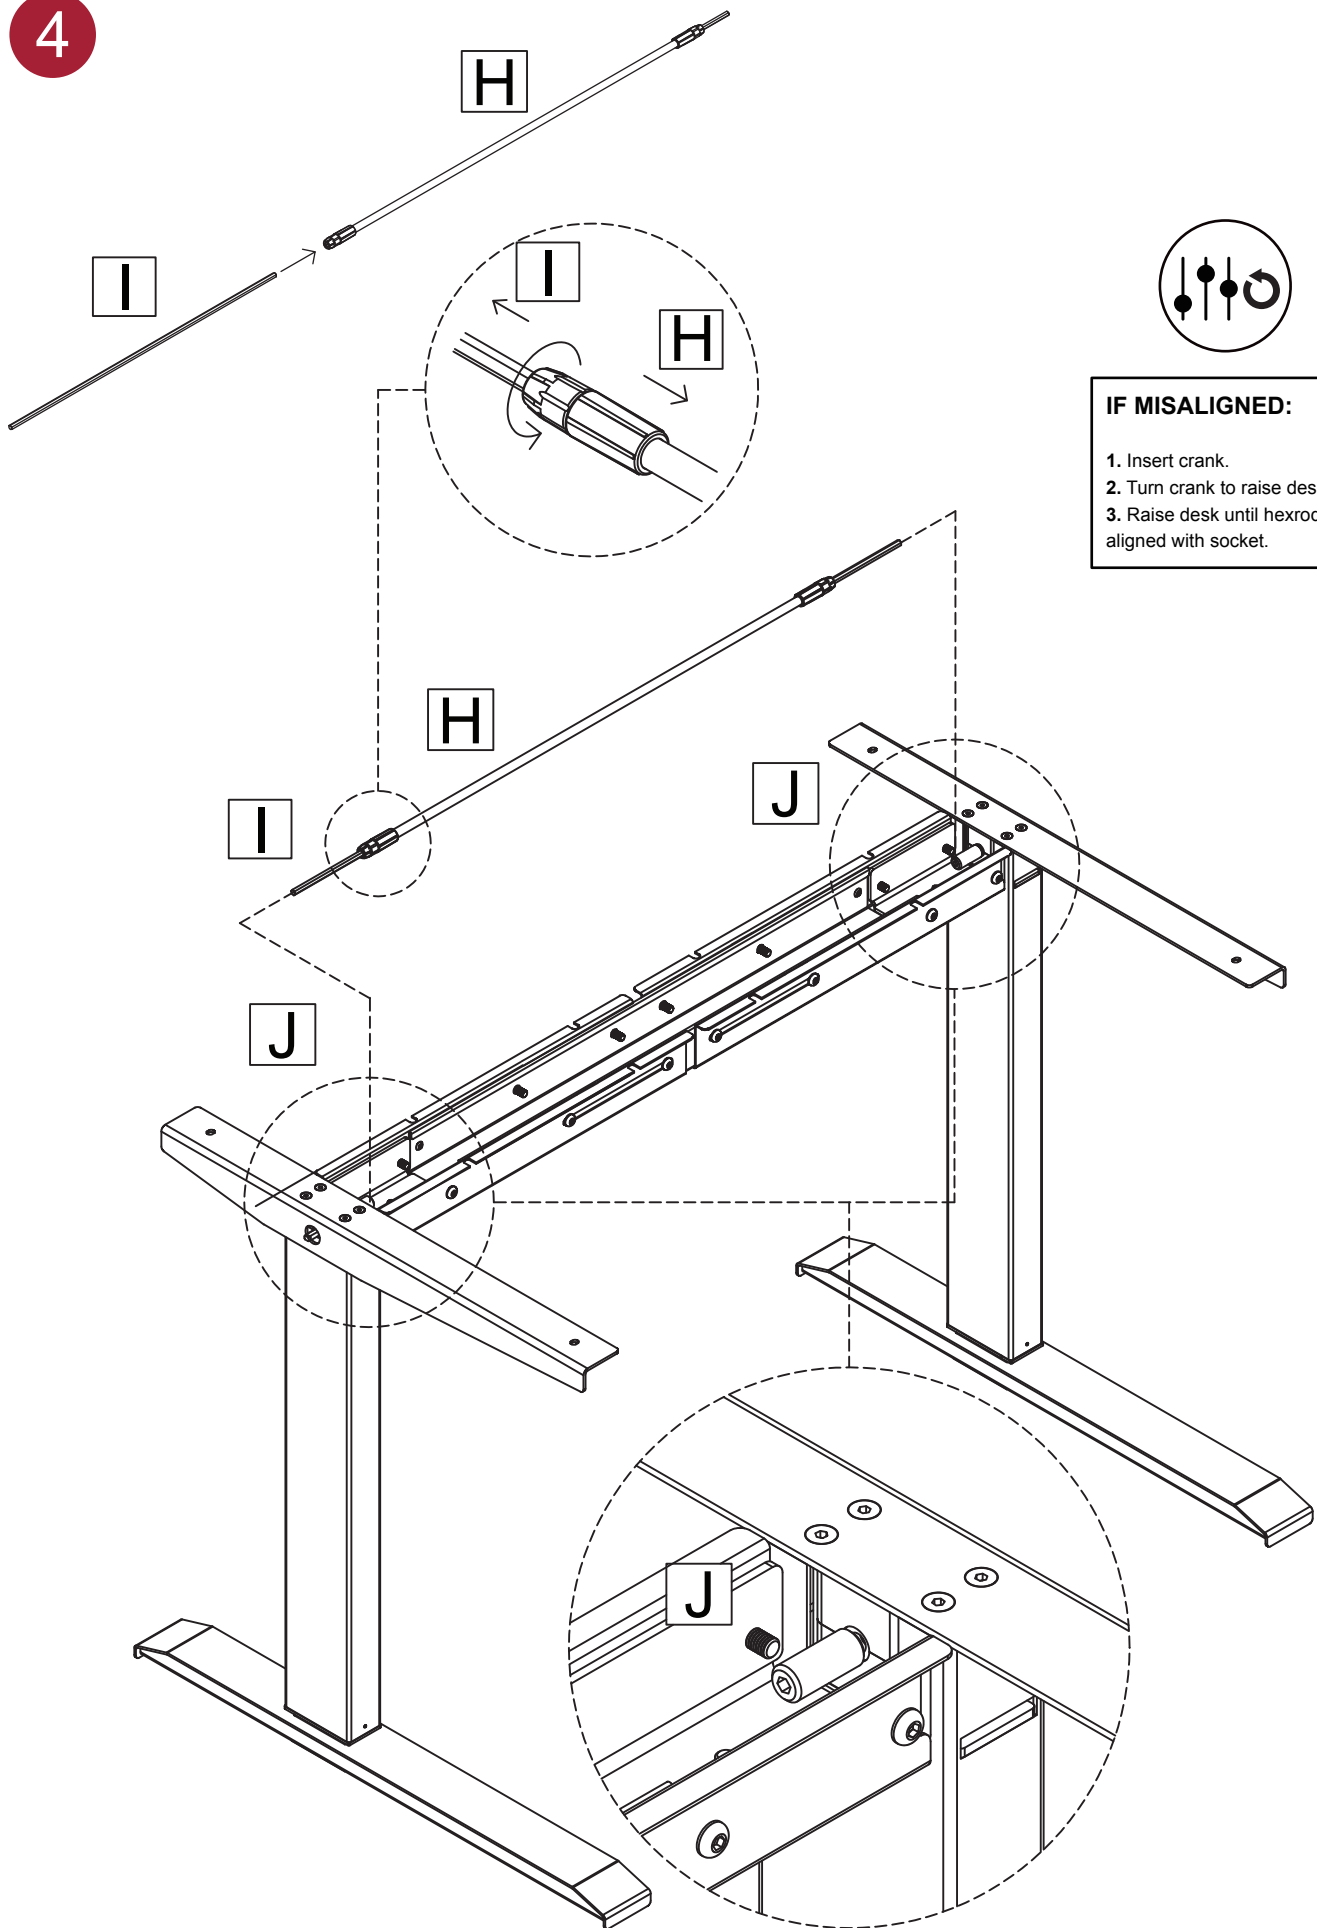

IF MISALIGNED:

1. Insert crank.
2. Turn crank to raise desk.
3. Raise desk until hexrod is aligned with socket.

5

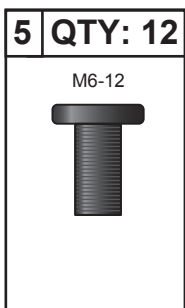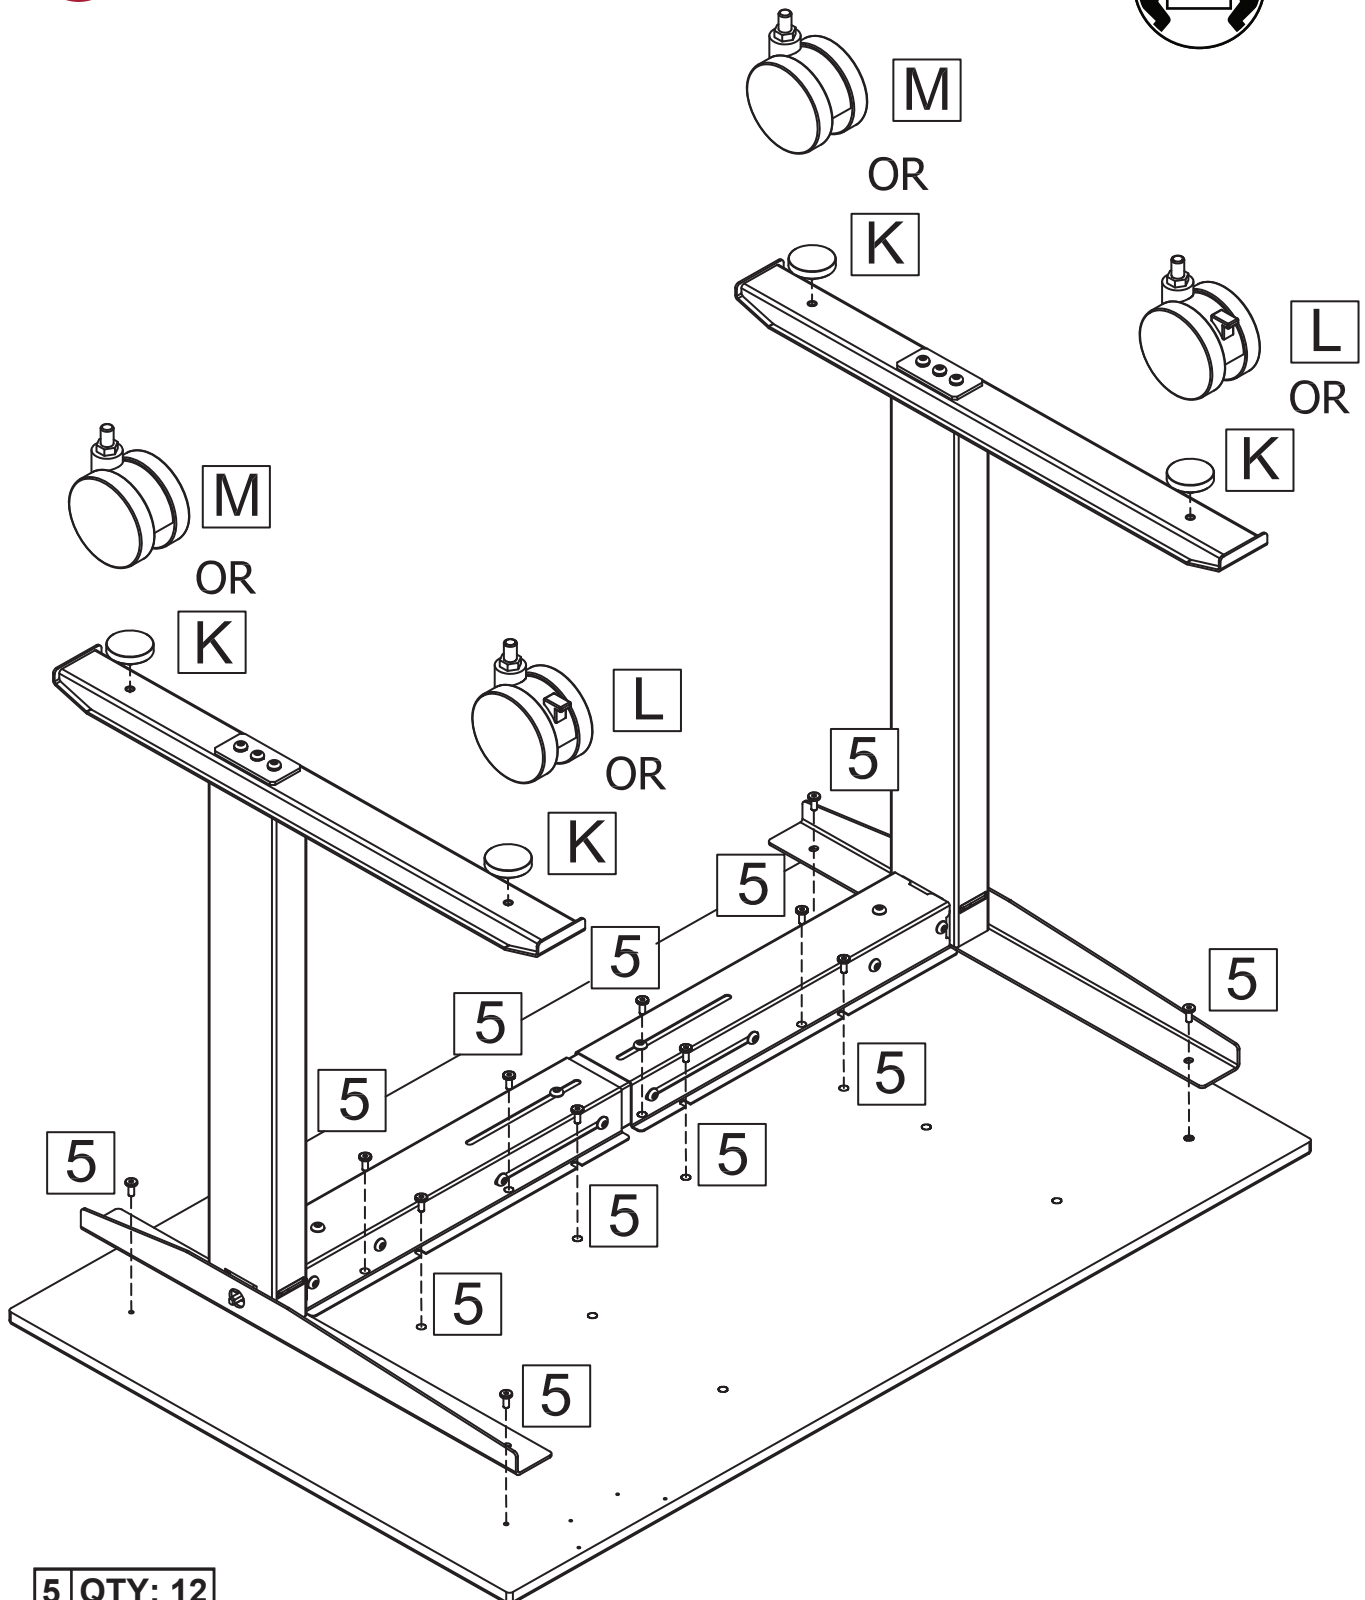

6

