


**Hardware:**



#8 Screw  
Qty. 4



Drywall Screw  
Qty. 1



Wall Anchor  
Qty. 4

**Installation Tips:**

- Preferred method of installation is to screw directly to wall studs.
- The provided anchors are intended for wall mounting when not utilizing wall studs. In this case, use of all four wall anchors are required.
- Ultimate holding value is determined by age, condition & capacity of wall material and installation type.

**Suggested Tools:**



3/16" Drill Bit




Bubble Level




Phillips Screwdriver

**Assembly:**

- 1 After removing contents from box, using a level, place the wall mount bracket at desired height and make sure it is level.

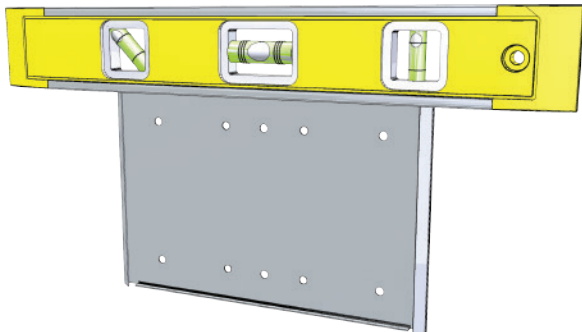

- 2 Using drywall screws secure wallmount plate to wall.

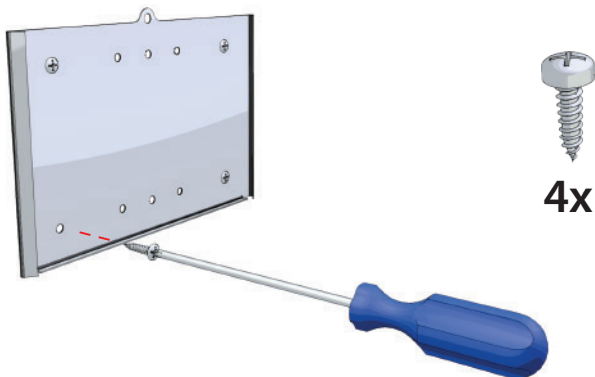


4x


\*Drywall anchors are optional in this step, but not required.\*

**Assembly Continued:**


- 3 Slide the charging station into the mount by guiding the technology box down into the mounting plate.

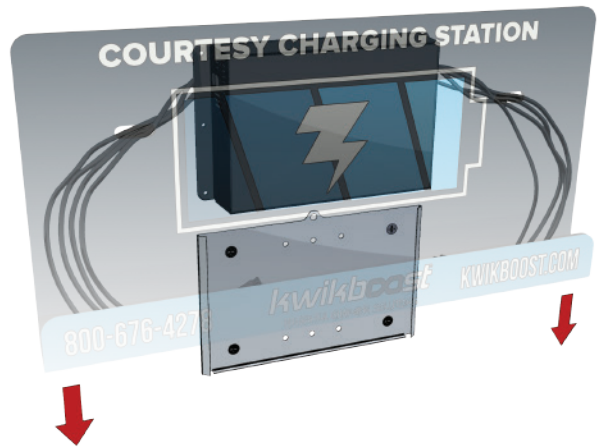

- 4 Secure the last screw into the hole on the mounting plate above the technology box.

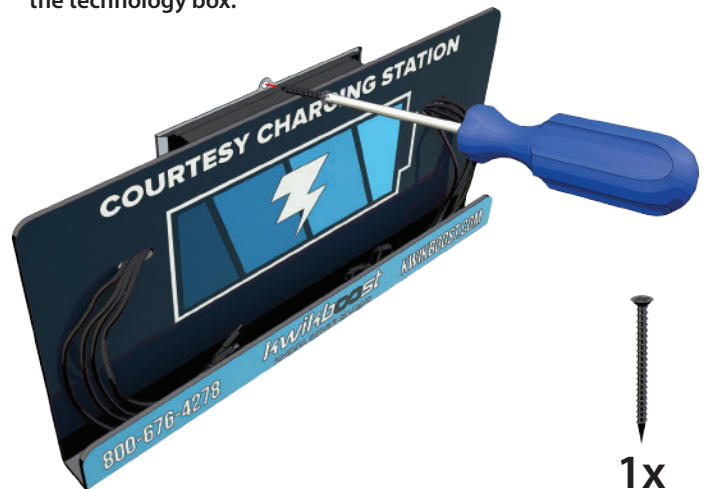

- 5 Now that the charger is secured to the wall, it can be plugged in. The power cable will plug into the bottom of the charging station and into any standard wall outlet or power strip.

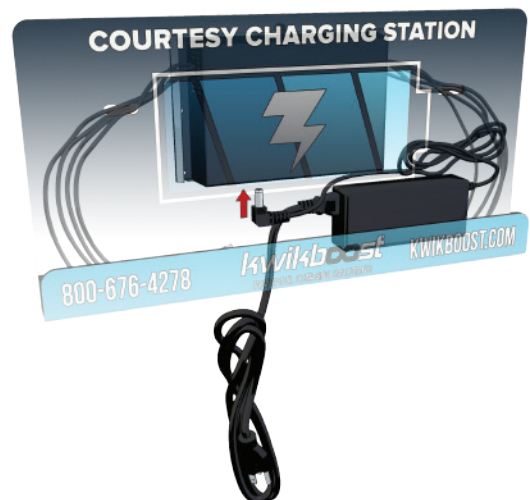

Need more info?