Assembly Instructions for SGRTP3/4 Guardrails


Tools needed: Wrench & Philips screwdriver

Step one- Using the 1 ¾" hex bolts in bag #1, attach the top of the long vertical tube (B) and the short vertical tube (C) to the holes on the horizontal tube (A). Use the nuts in bag #1 to tighten bolts.

Step two-Place the attached mounting bracket of the short vertical tube (C) over the frame on to the bottom level of the riser and the attached mounting clamp of the long vertical tube (B) over the frame on the highest level. **Important-** Be sure that the vertical tubes are parallel to the legs of the riser as follows: Short vertical tube (C.) aligned with the front leg of the lower riser; long vertical tube aligned to the rear legs of the highest riser. See Fig 1.

Step three- Place one set of the clamps (D) over the holes at the lower end of each vertical tube and on the legs of the riser. Tighten the two parts using the clamp wing nuts. See Fig. 2A. Use 1 ¾" bolts in bag #2 to keep clamps fastened to vertical tubes and tighten using the nut. See Fig. 2B.

Step four- Using a power tool; secure the mounting bracket of each vertical tube to the riser using one screw in bag #3 for each mounting bracket.

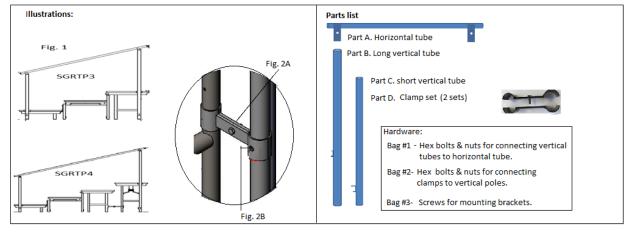

Thank you for your purchase. Although extreme care goes into manufacturing & packaging of this product, mistakes are possible. If you encounter any missing parts or difficulty in assembly. etc. Please call our customer service TOLL FREE at 1-800-261-4112 for courteous & immediate resolution to your problem.

CAUTION: Double check all screws to be tightened securely before use. Check all screws periodically.