




Installation and Assembly: Pole PC Mount

Model: ACC488

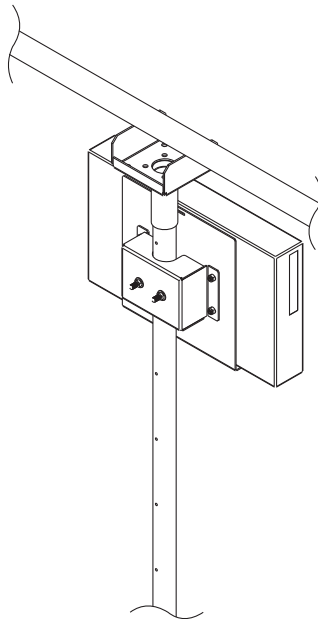

Max Load Capacity: 25 lb (11.3 kg)







Note: Read entire instruction sheet before you start installation and assembly.

⚠ WARNING


- Do not begin to install your Peerless product until you have read and understood the instructions and warnings contained in this Installation Sheet. If you have any questions regarding any of the instructions or warnings, please call Peerless customer care at 1-800-729-0307.
- This product should only be installed by a qualified professional.
- Make sure that the wall will safely support the combined load of the equipment and all attached hardware and components.
- Never exceed the Maximum Load Capacity of 25 lb (11.3 kg).
- Always use an assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not overtighten. Overtightening can damage the items, greatly reducing their holding power.

Note: Read instruction sheet before you start installation and assembly.


Parts List			
	Description	Qty.	Part #
I	3/8-16 hex nut	2	530-9310
N	washer	2	540-9407
Q	PC bracket	1	124-T1133
S	3/8-16 x 3.25" u-bolt	1	560-1060
T	1/4-20 nylock nut	4	530-9413
U	PC mounting bracket	1	124-T1134
W	bumper	6	590-1159
Y	1/4-20 x 5/8" carriage bolt	4	520-1175
Z	safety belt	1	170-8039-1

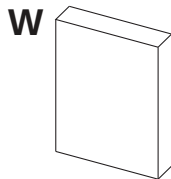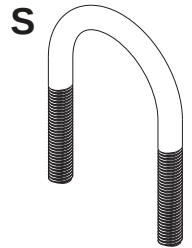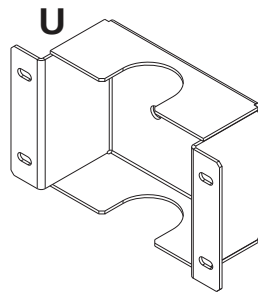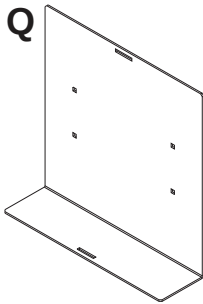


Safety Belt Kit (Z)




TRI-BAR BELT CLIP




CLEAR STRIPS



BELT GUIDE

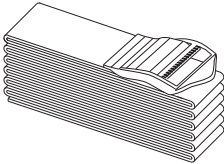

BELT WITH CINCH BUCKLE

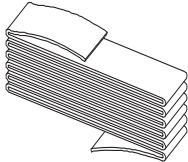


BELT WITHOUT CINCH BUCKLE

Note: Some parts may appear slightly different than illustrated.


⚠ WARNING

- Installer must verify that the supporting surface will safely support the combined weight of all attached equipment and hardware.


1 Attach PC mounting bracket (**U**) to existing pole using four washers (**N**) and four hex nuts (**I**).

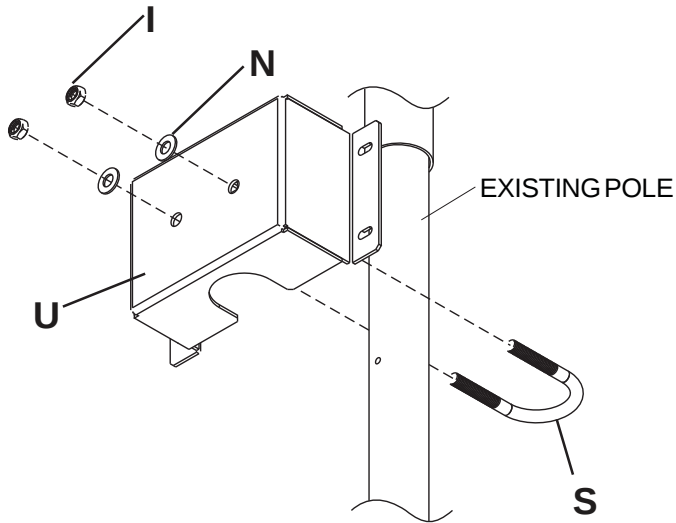

2 Attach six bumper strips (**W**) to PC bracket (**Q**).


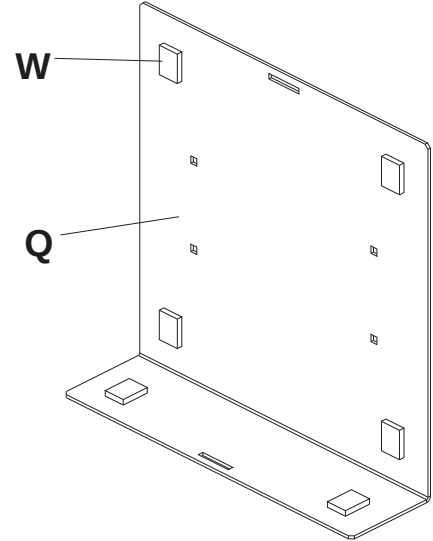


3 Attach PC bracket (**Q**) to PC mounting bracket (**U**) using four 1/4-20 nylock nuts (**T**) and four 1/4-20 x 5/8" carriage bolts (**Y**).

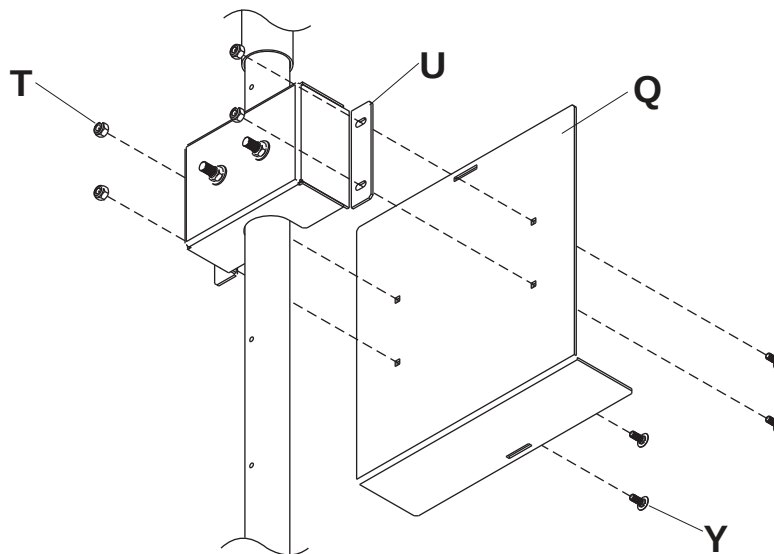

4 **NOTE:** Use safety belt (Z) instruction in conjunction with this step. Fasten clear strips to the two slots in PC bracket (Q). Set HD box into computer plate (B). Fasten belt with cinch buckle to belt without cinch buckle. Place tri-bar belt clips and belt guide onto belt as shown in the safety belt instructions. Feed the ends of the belt through the PC bracket (Q) slots and through tri-bar belt clip. Cinch the end of the belt so that the PC is securely held.

NOTE: Trim off the end of the belt if necessary, then lightly burn the end of the belt to prevent fraying.

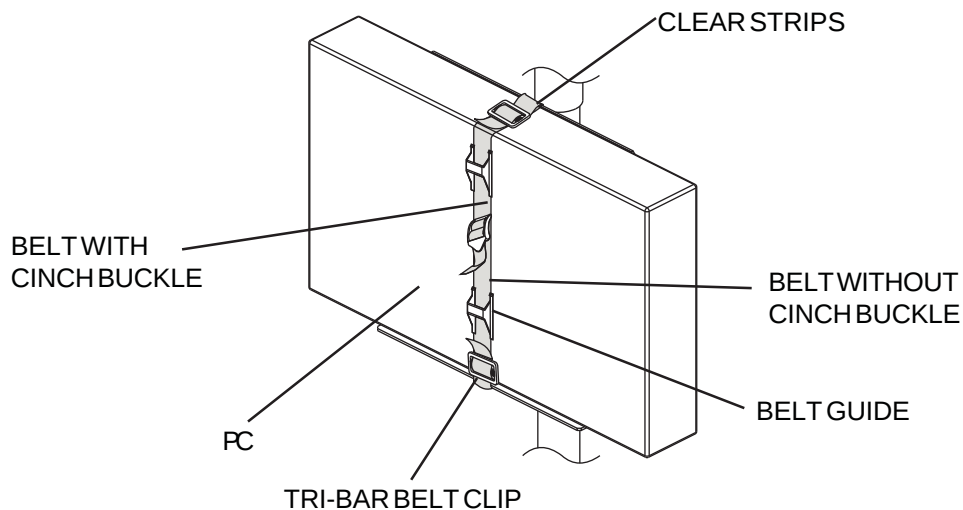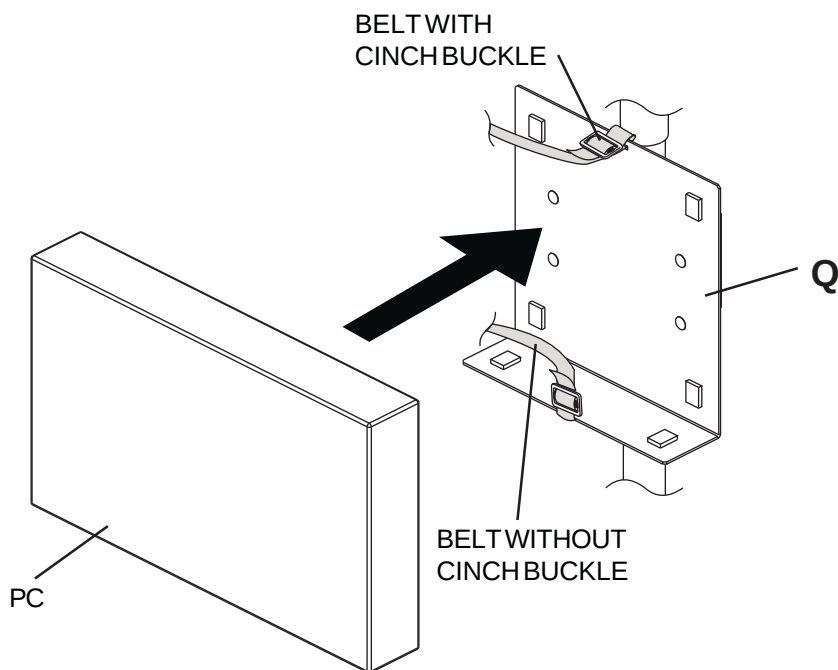

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com