


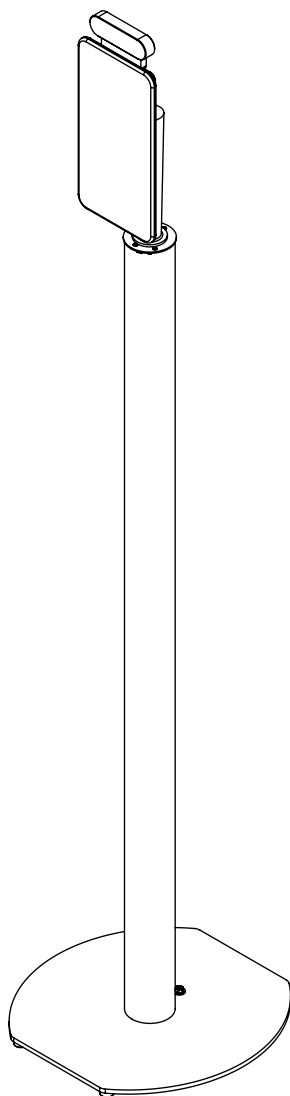




THR-200-STAND



⚠ WARNING

ENG - This product is designed to be installed on wood stud or solid concrete floors. Hardware is included for wood stud and solid concrete installation. Before installing make sure the supporting surface will support the combined load of the equipment and hardware. Screws must be tightly secured. Do not overtighten screws or damage can occur and product may fail. Never exceed the Maximum Load Capacity. Always use an assistant or mechanical lifting equipment to safely lift and position equipment. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury. Be careful not to pinch fingers when operating the mount. For support please call customer care at 1-800-865-2112.

ENG Tools Needed for Assembly.

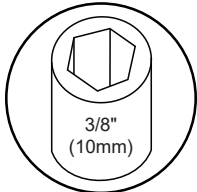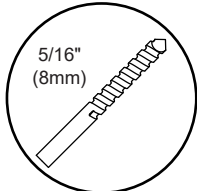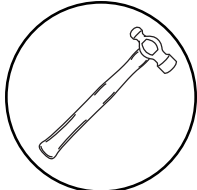


ENG Symbols




ENG WARNING



ENG Screws must get at least three full turns and fit snug.

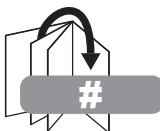

ENG Skip to step.

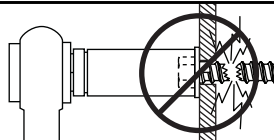


ENG Do not overtighten screws.




ENG To properly tighten screws: Tighten until screw head makes contact, then tighten another 1/2 turn. Do not overtighten screws.


1



2



3




4




ENG Parts (Before beginning, make sure you have all parts shown below).

Parts List		
Description		THR-200-STAND
	Qty	Part #
A	base weldment	1 147-4791
B	tube weldment	1 147-4790
C	mounting plate	1 147-4794
D	M3 x 6mm screw	5 520-2153
E	3/32" allen wrench	1 560-1097
F	adhesive rubber feet	4 570-1036
G	wood screw	1 5S1-015-C04
H	concrete anchor	1 590-0320


B (1)
tube weldment



C (1)
mounting plate



A (1)
base weldment

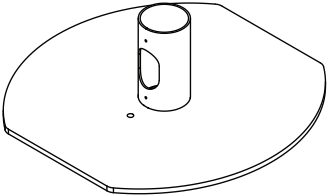

E (1)
3/32" allen wrench




D (5)
M3 x 6mm




F (4)
rubber feet







H (1)
8mm concrete anchor





G (1)
#14 x 2-1/2" wood screw

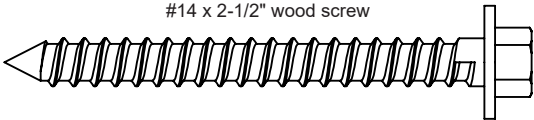

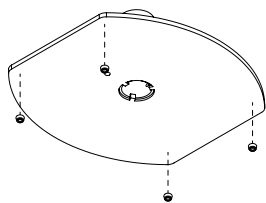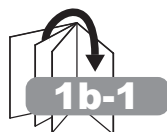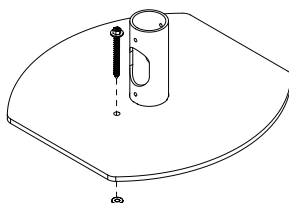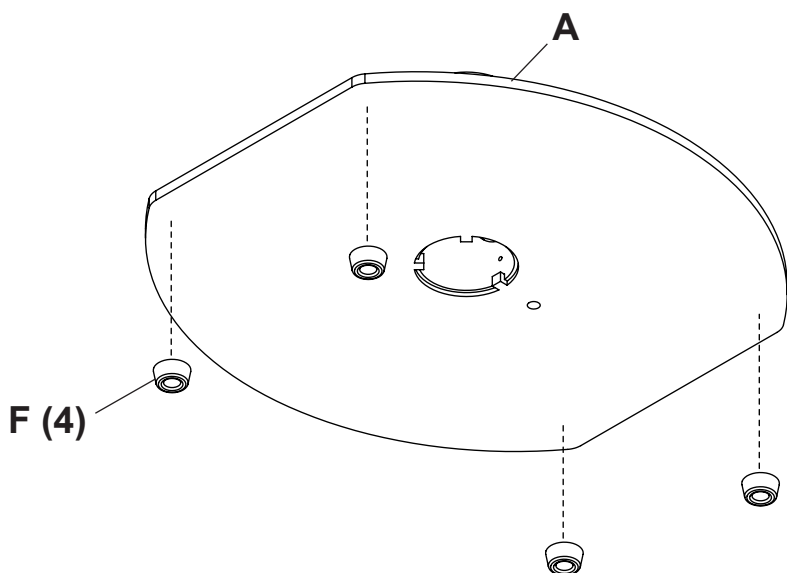1**ENG** Free standing**ENG** Secured**1a**




1b-1

ENG Drill mounting holes into supporting surface (2.5" (64mm) minimum depth required).

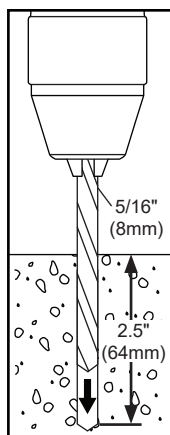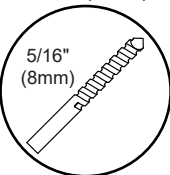



1b-2



ENG Insert anchor flush to concrete.

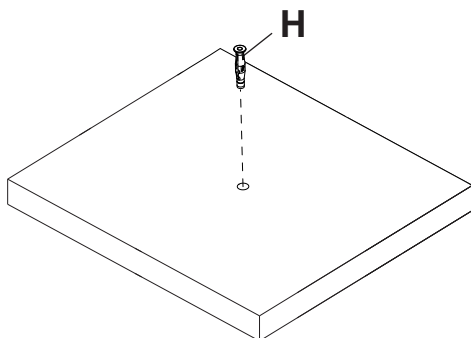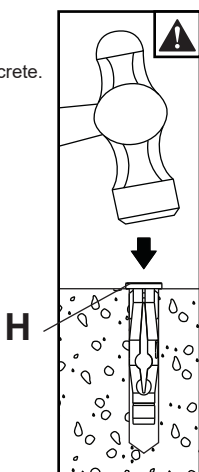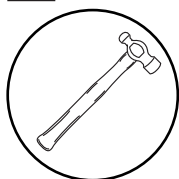


1b-3

ENG Install using concrete anchors and wood screws provided.

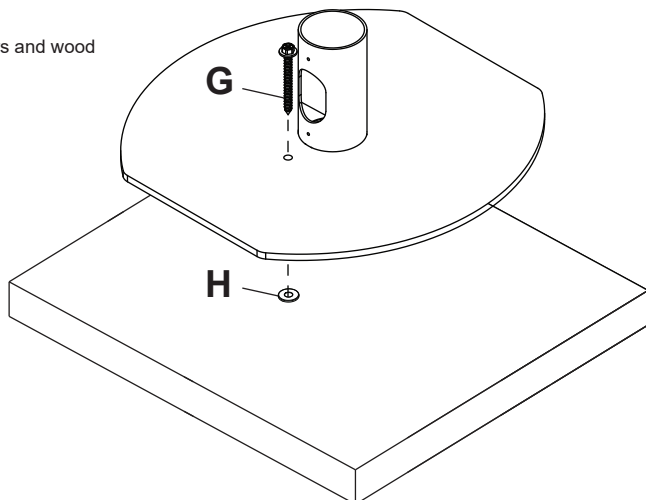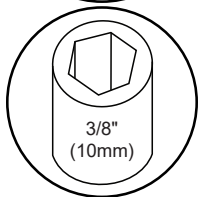

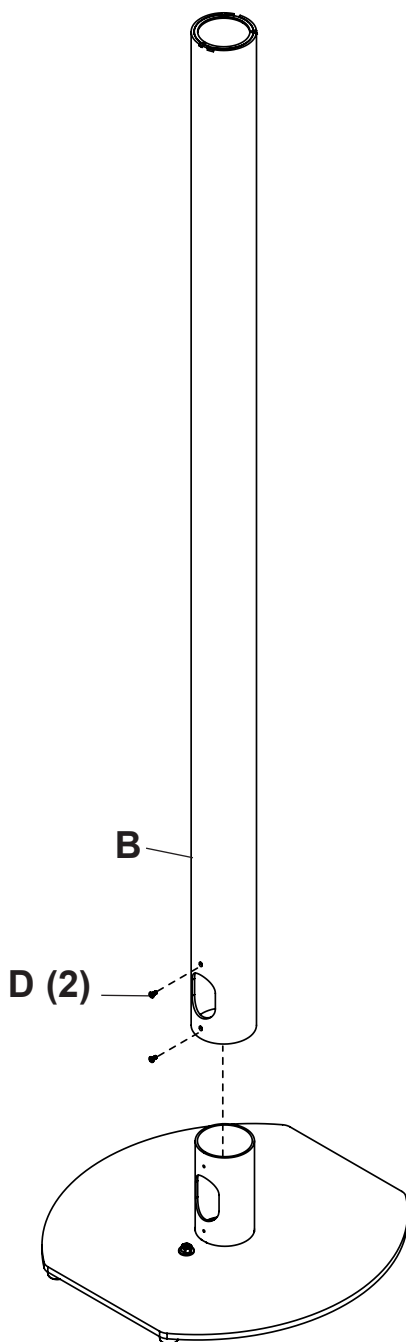
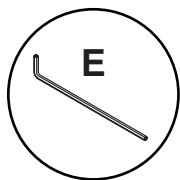


3

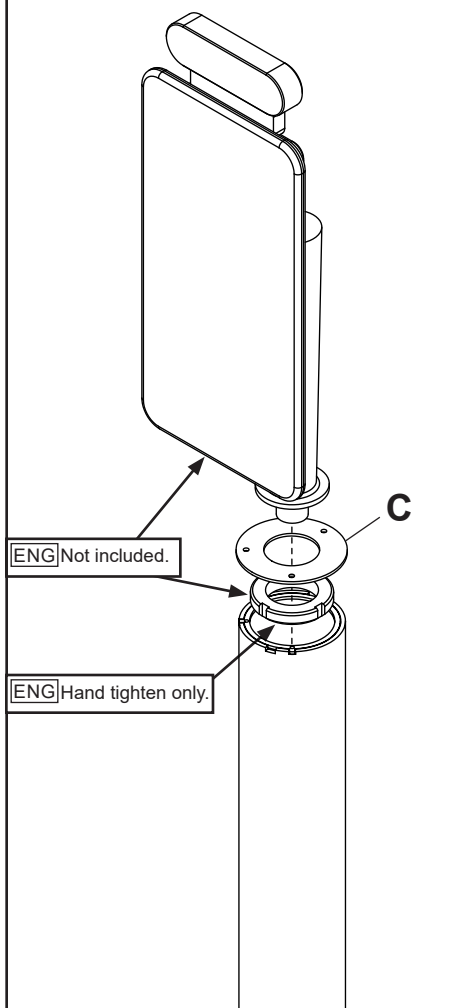

4

ENG To avoid stripping screws, do not install at an angle.

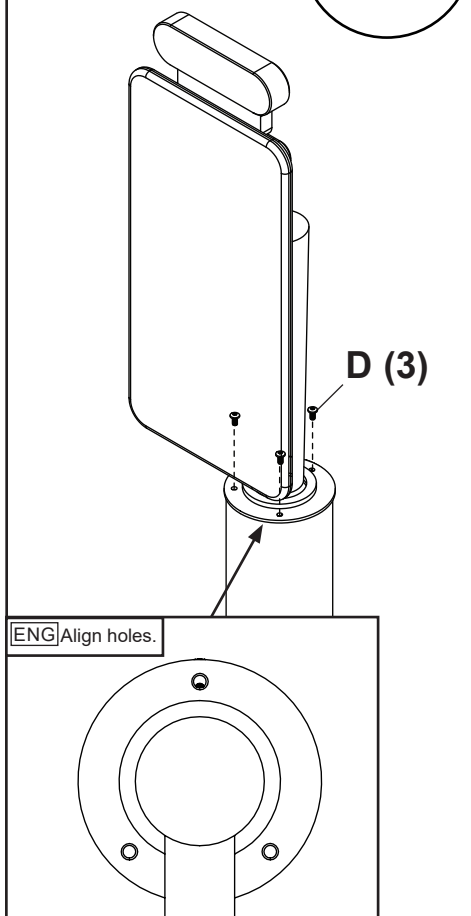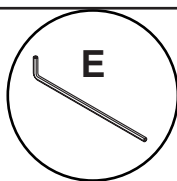

ENG	Warranty	ESP	Garantía	FRN	Garantie	DEU	Garantie	NEL	Garantie
ITL	Garanzia	ČES	Záruka	SLK	Záruka	POR	Garantia	TÜR	Garanti

www.peerless-av.com/warranty

peerless-AV®

Peerless-AV

2300 White Oak Circle
Aurora, IL 60502
Email: tech@peerlessmounts.com
Ph: (800) 865-2112
Fax: (800) 359-6500
www.peerless-av.com

© 2020, Peerless Industries, Inc.

Peerless-AV Europe

Unit 3 Watford Interchange,
Colonial Way, Watford, Herts,
WD24 4WP, United Kingdom
Customer Care
44 (0) 1923 200 100
www.peerless-av.com

© 2020, Peerless Industries, Inc.

Peerless-AV América Latina

Av. de las Industrias 413
Parque Industrial Escobedo
General Escobedo N.L., México 66062
Servicio al Cliente
01-800-849-65-77
www.peerless-av.com

© 2020, Peerless Industries, Inc.