


CMCP420VT SERIES INSTALLATION AND ASSEMBLY

1. REMOVE ANY DEBRIS FROM THREADED HOLE DRILLED INTO MOUNTING SURFACE.
2. INSTALL SENSOR SETSCREW (CMCP230-XX) INTO THREADED HOLE.
3. THREAD MOUNTING PAD ONTO SETSCREW UNTIL CONTACT WITH MOUNTING SURFACE.
4. THREAD CMCP420VT ONTO SETSCREW UNTIL IT IS IN CONTACT WITH MOUNTING PAD.
MAX TORQUE 30 INCH-POUNDS
5. INSTALL CMCP420EL ONTO SENSOR.
6. IF USED, USE WRENCH TO HOLD CMCP420VT WHILE TIGHTENING ELBOW.
6. IF USED, INSTALL THE CMCP420WF FITTING ON THE ELBOW.
7. REMOVE ELBOW COVER AND MAKE TERMINAL CONNECTIONS.

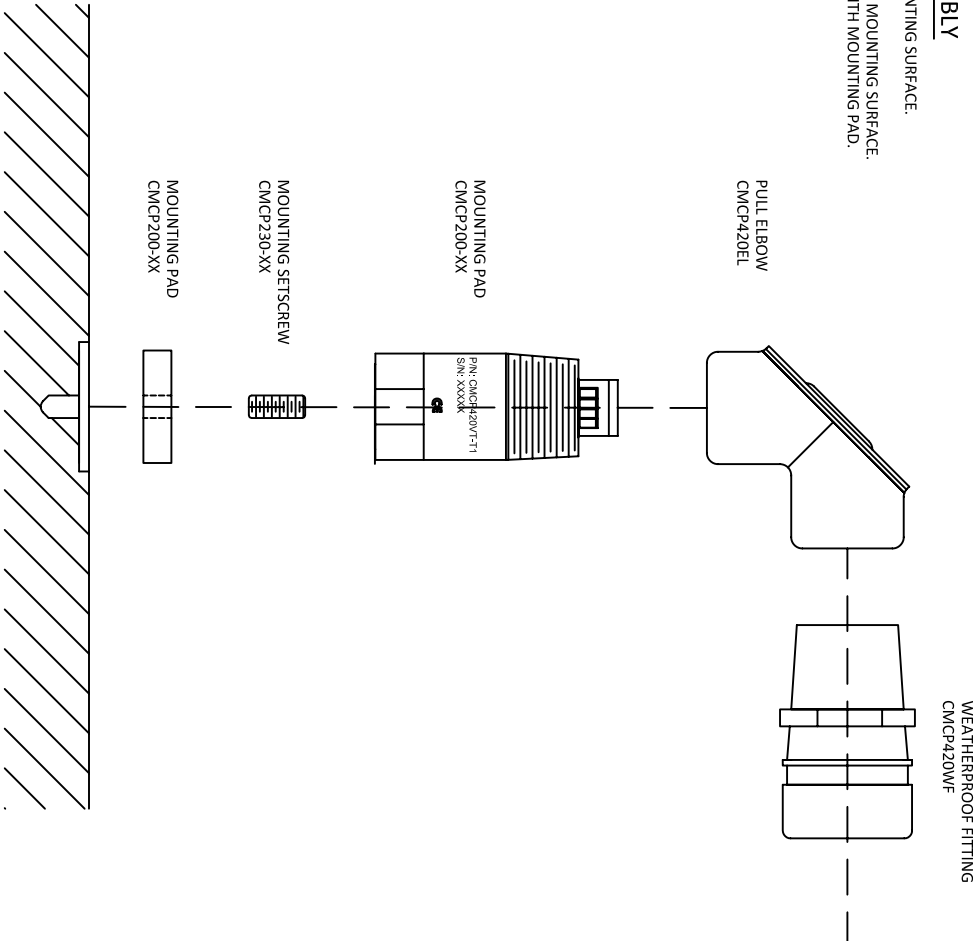

THIS DOCUMENT IS PROPERTY OF STI AND CANNOT BE UNDER ANY
CIRCUMSTANCES COPIED OR USED FOR ANY UNAUTHORIZED PURPOSE
WITHOUT THE WRITTEN PERMISSION OF STI. IT IS TO BE RETURNED
TRANSFERRED TO ANY THIRD PARTY WITHOUT APPROVAL FROM STI.

REV.	DATE	DESCRIPTION
1	11/18/09	ORIGINAL DRAWING
2		
3		
4		
5		
6		
7		
8		

CUSTOMER		STI		Sales Technology Inc.	
LOCATION		DATE		League City, Texas	
ORDER NO.		DATE		VTINSTALL001	
SR. NO.		DATE		SHEET 1 OF 1	
UNLESS OTHERWISE SPECIFIED		DATE		SCALE: NONE	
ALL DIMENSIONS ARE INCHES.		DATE			
TOLERANCES:		DATE			
FRACTIONS .XX ± 0.01		DATE			
DECIMALS .XXX ± 0.005		DATE			
ANGLES ± 1/64		DATE			



Notes:
1. OPTIONAL INSTALLATION TOOL KIT - CMCP720-01
2.
3.
4.
5.