






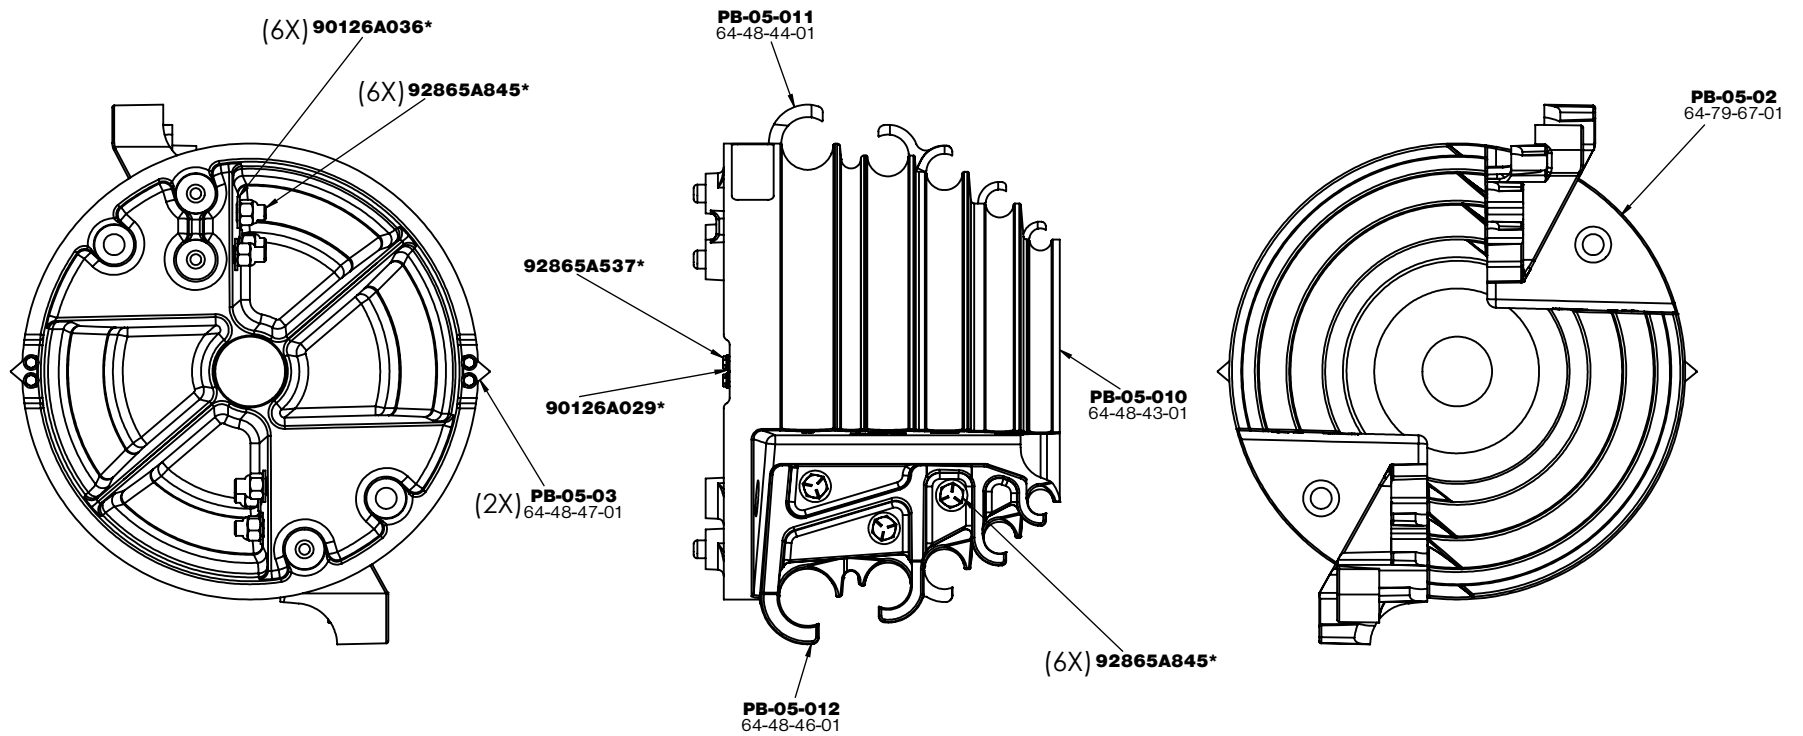


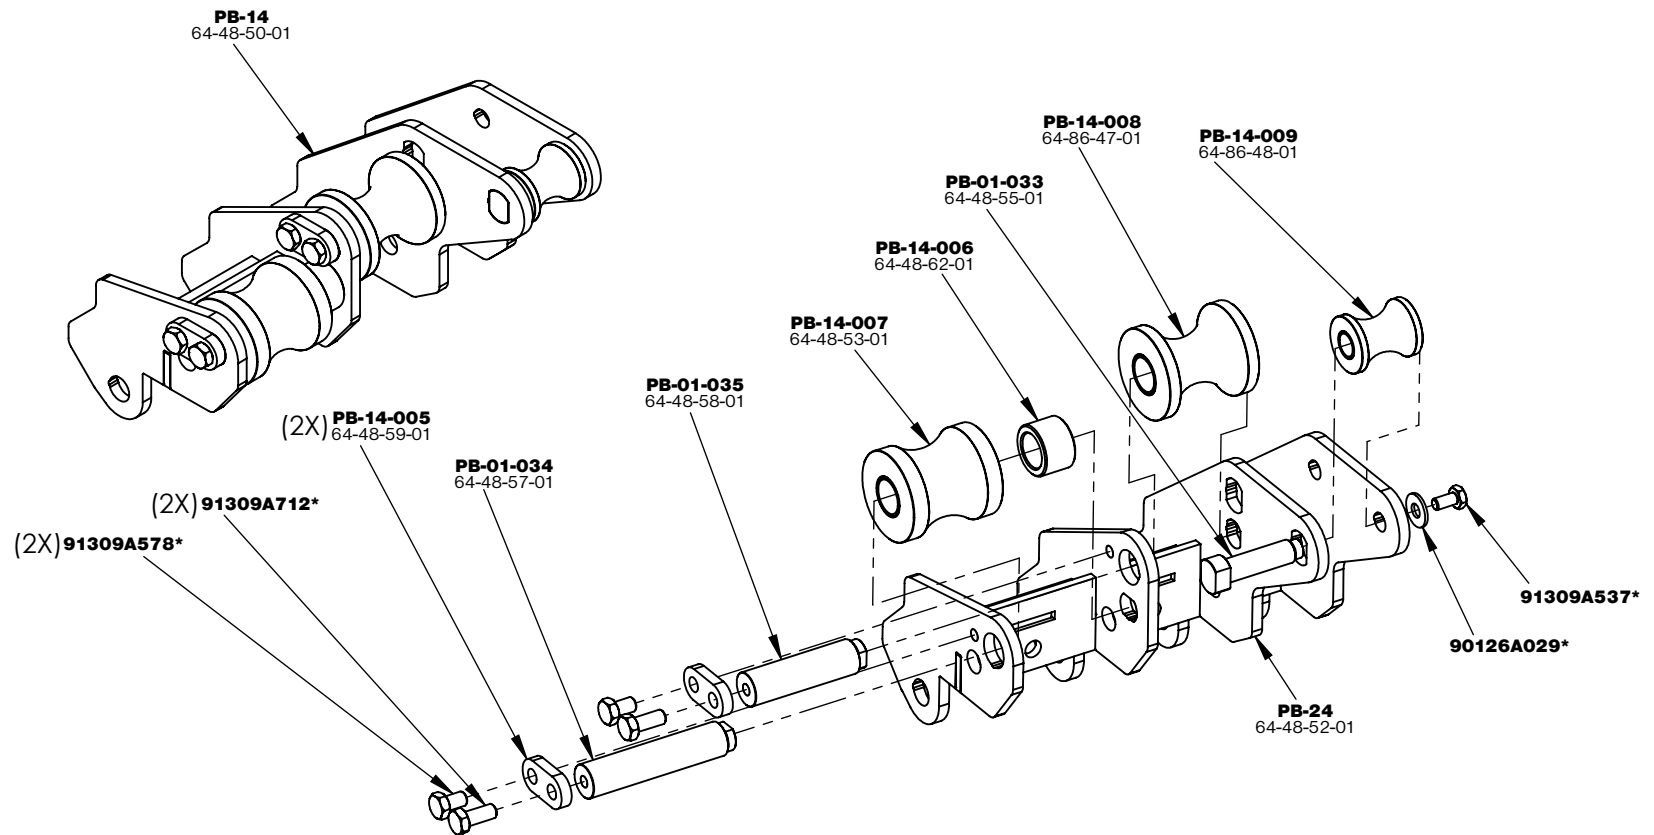


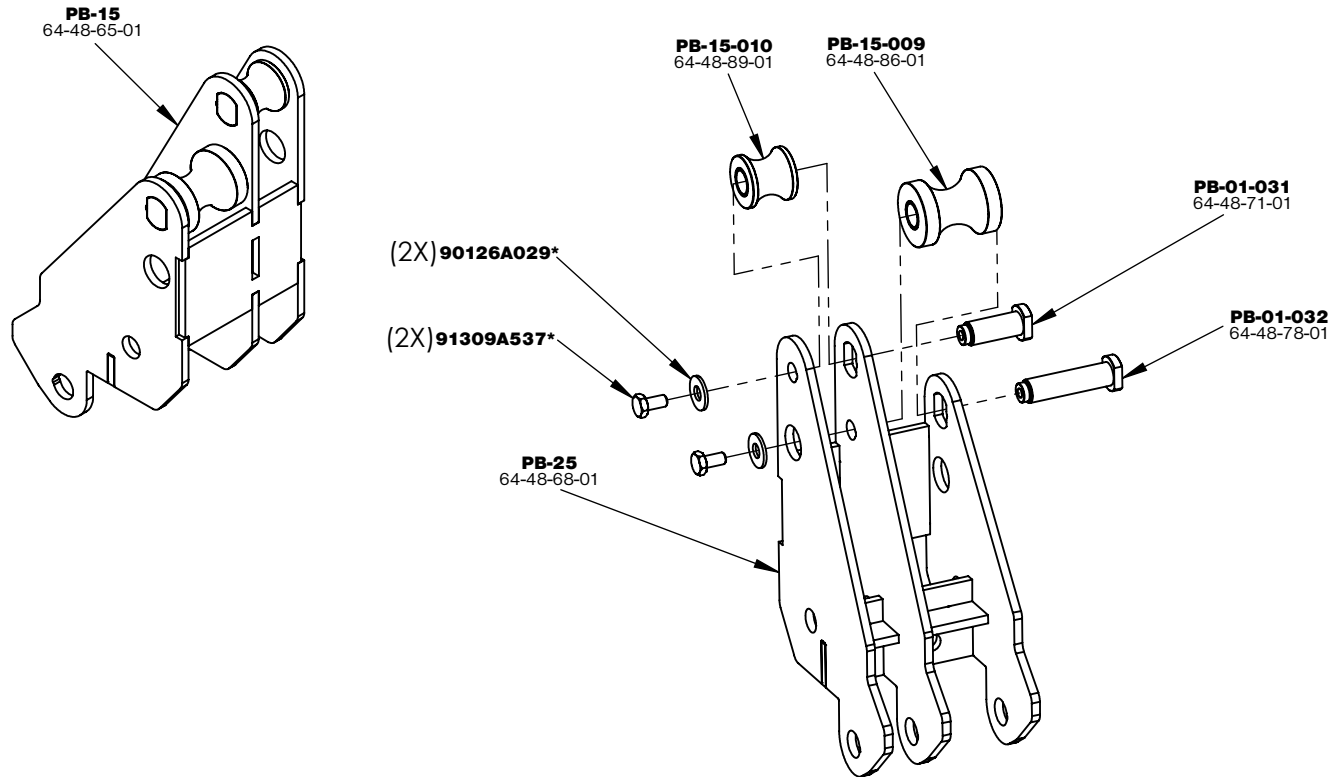


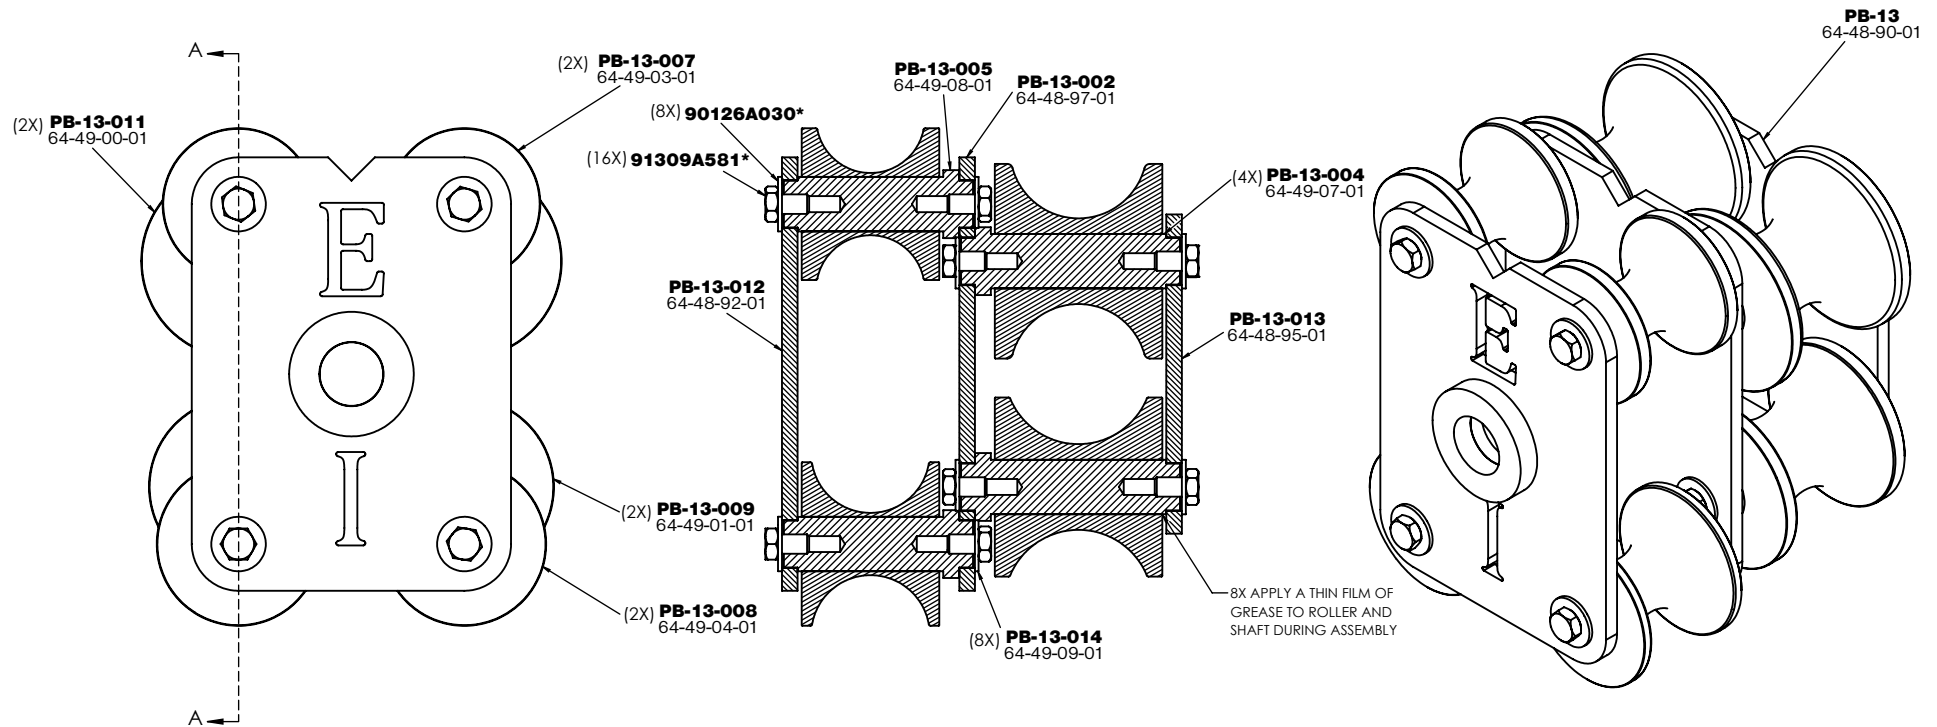

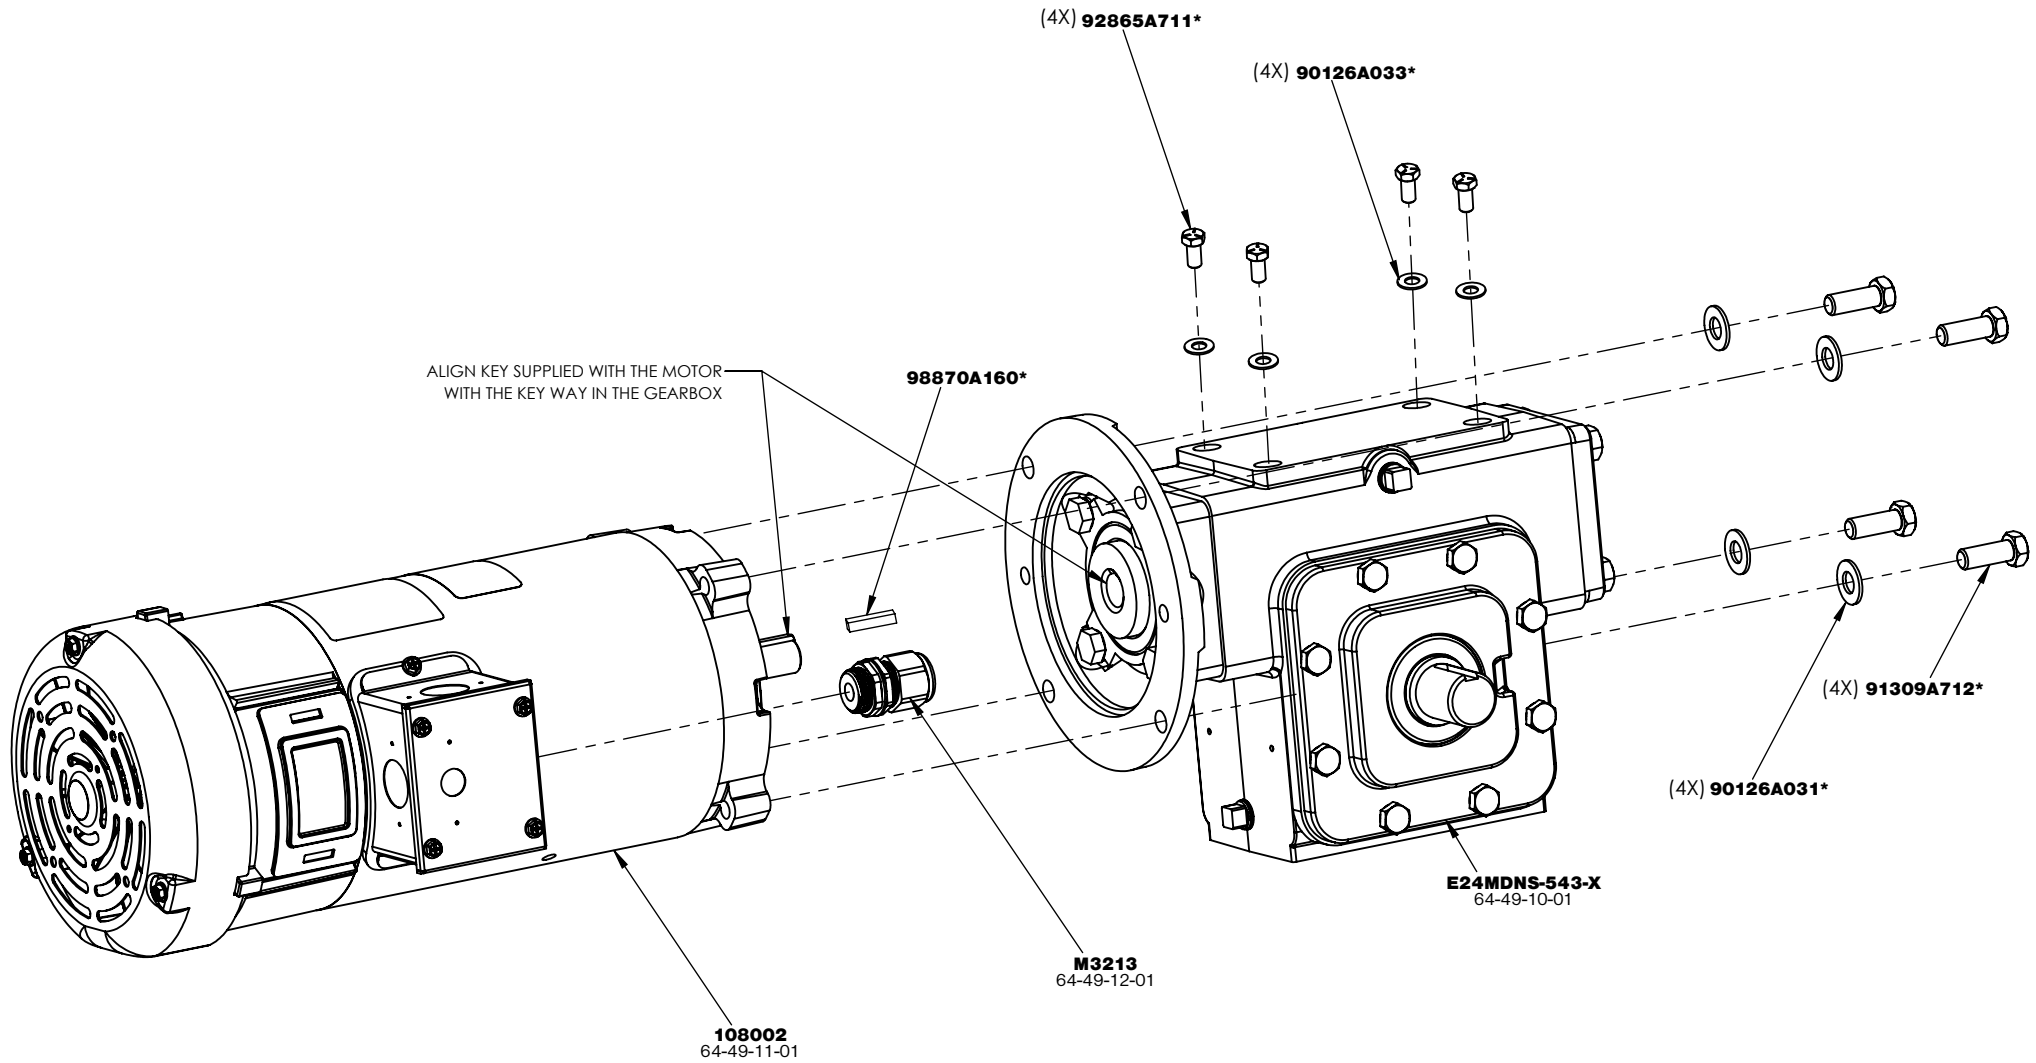

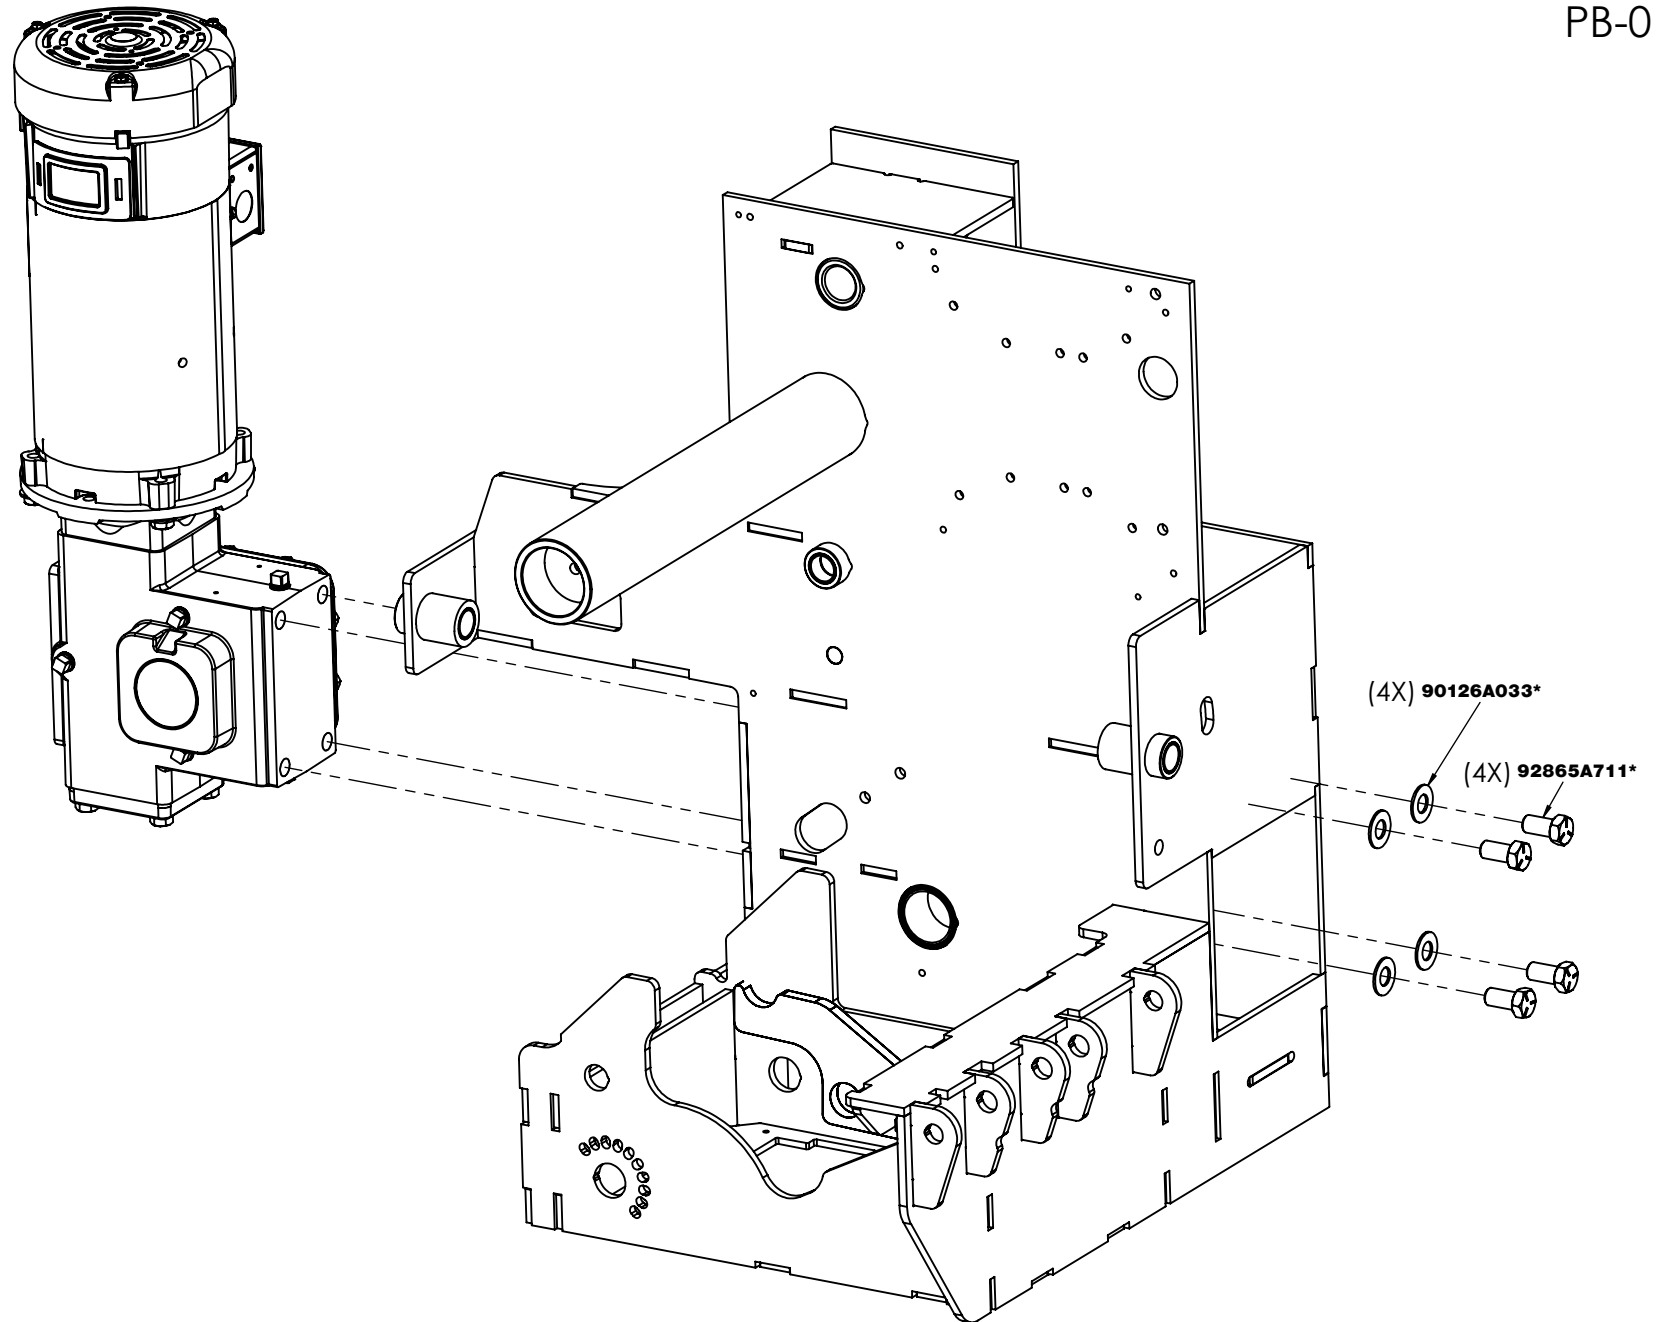


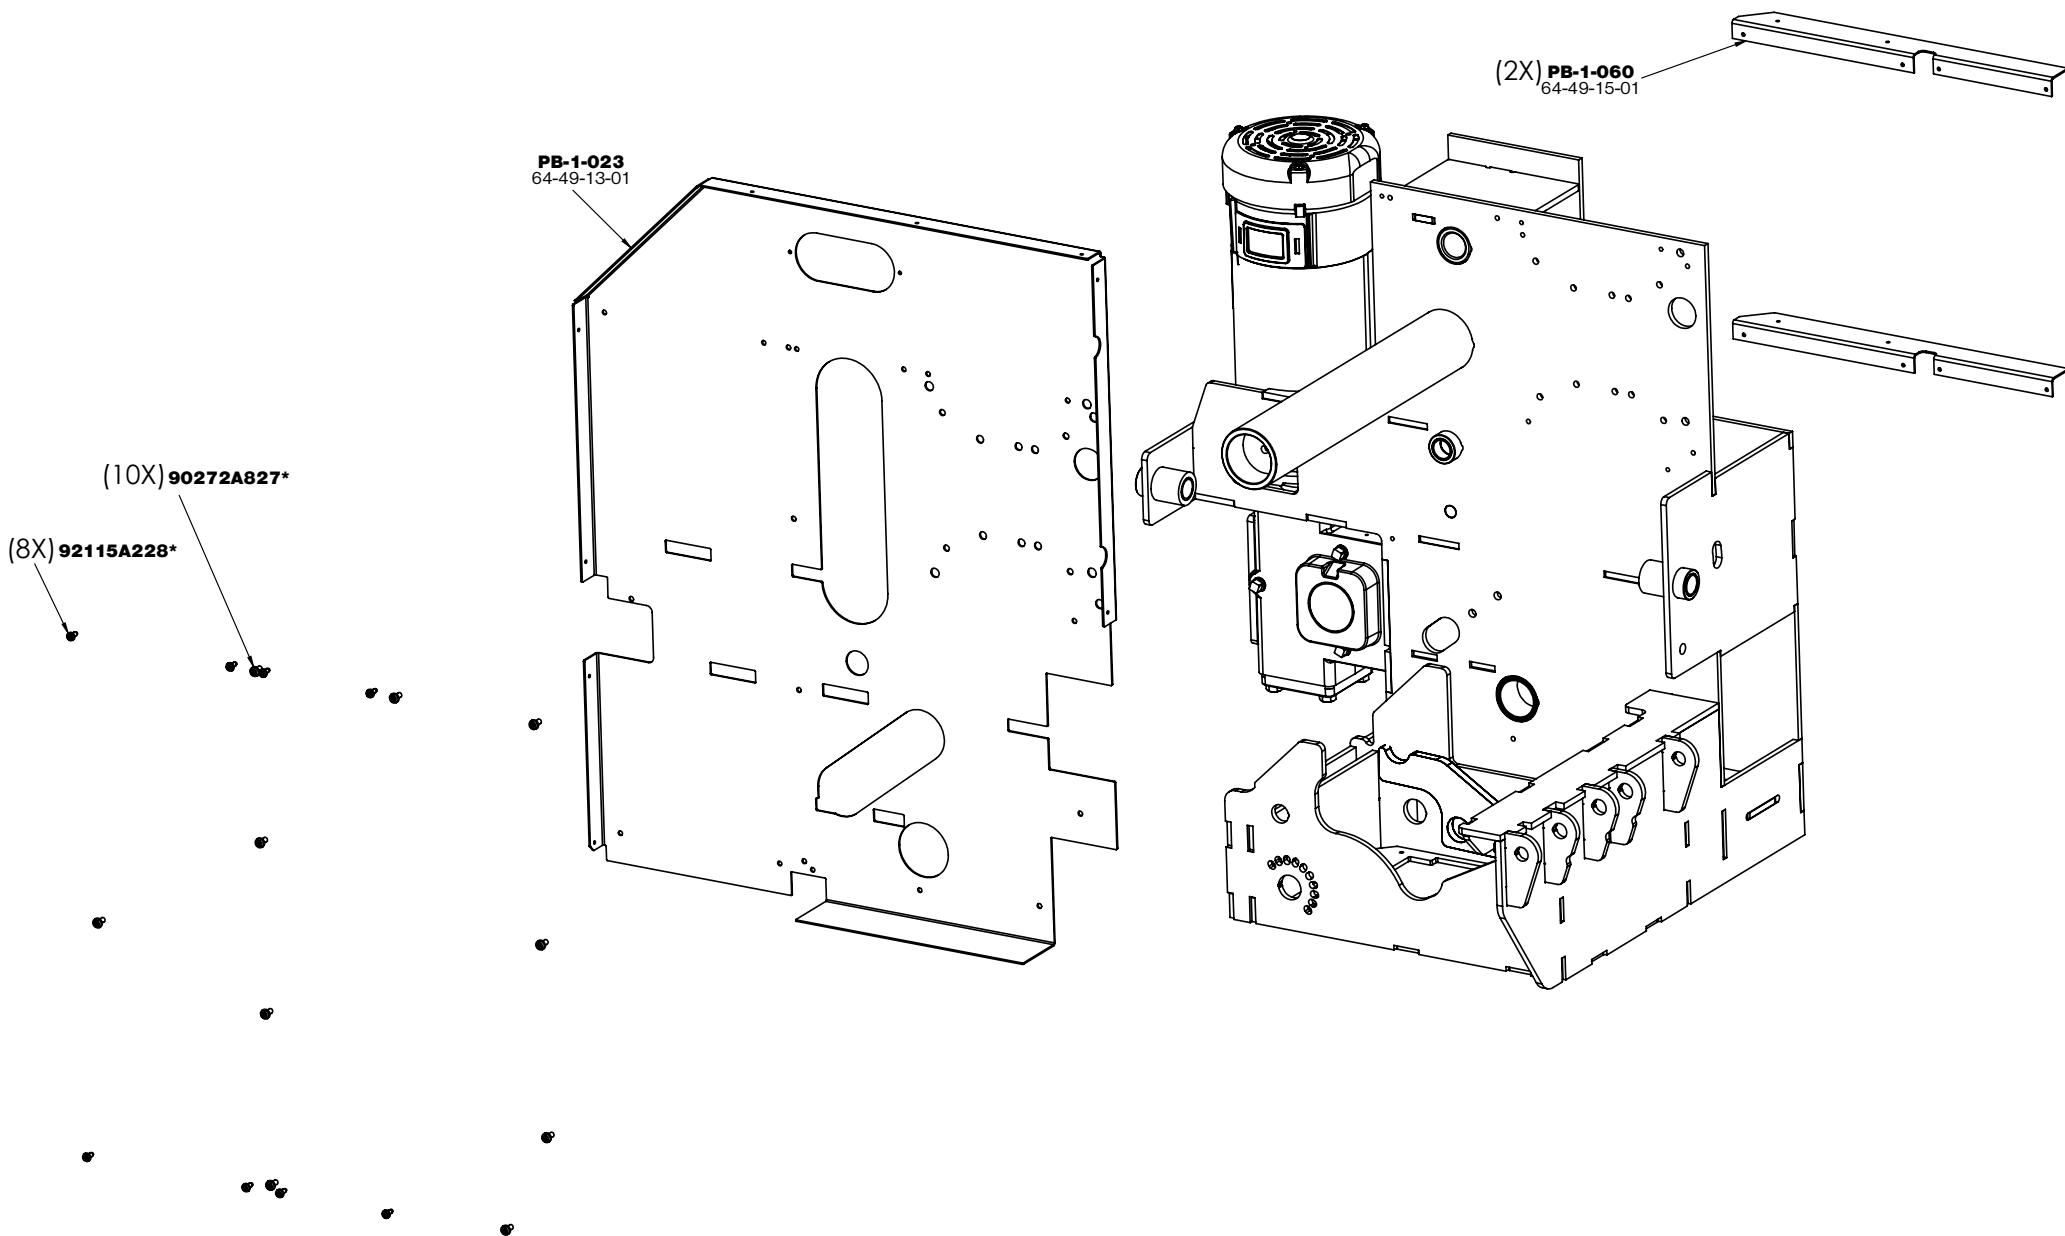

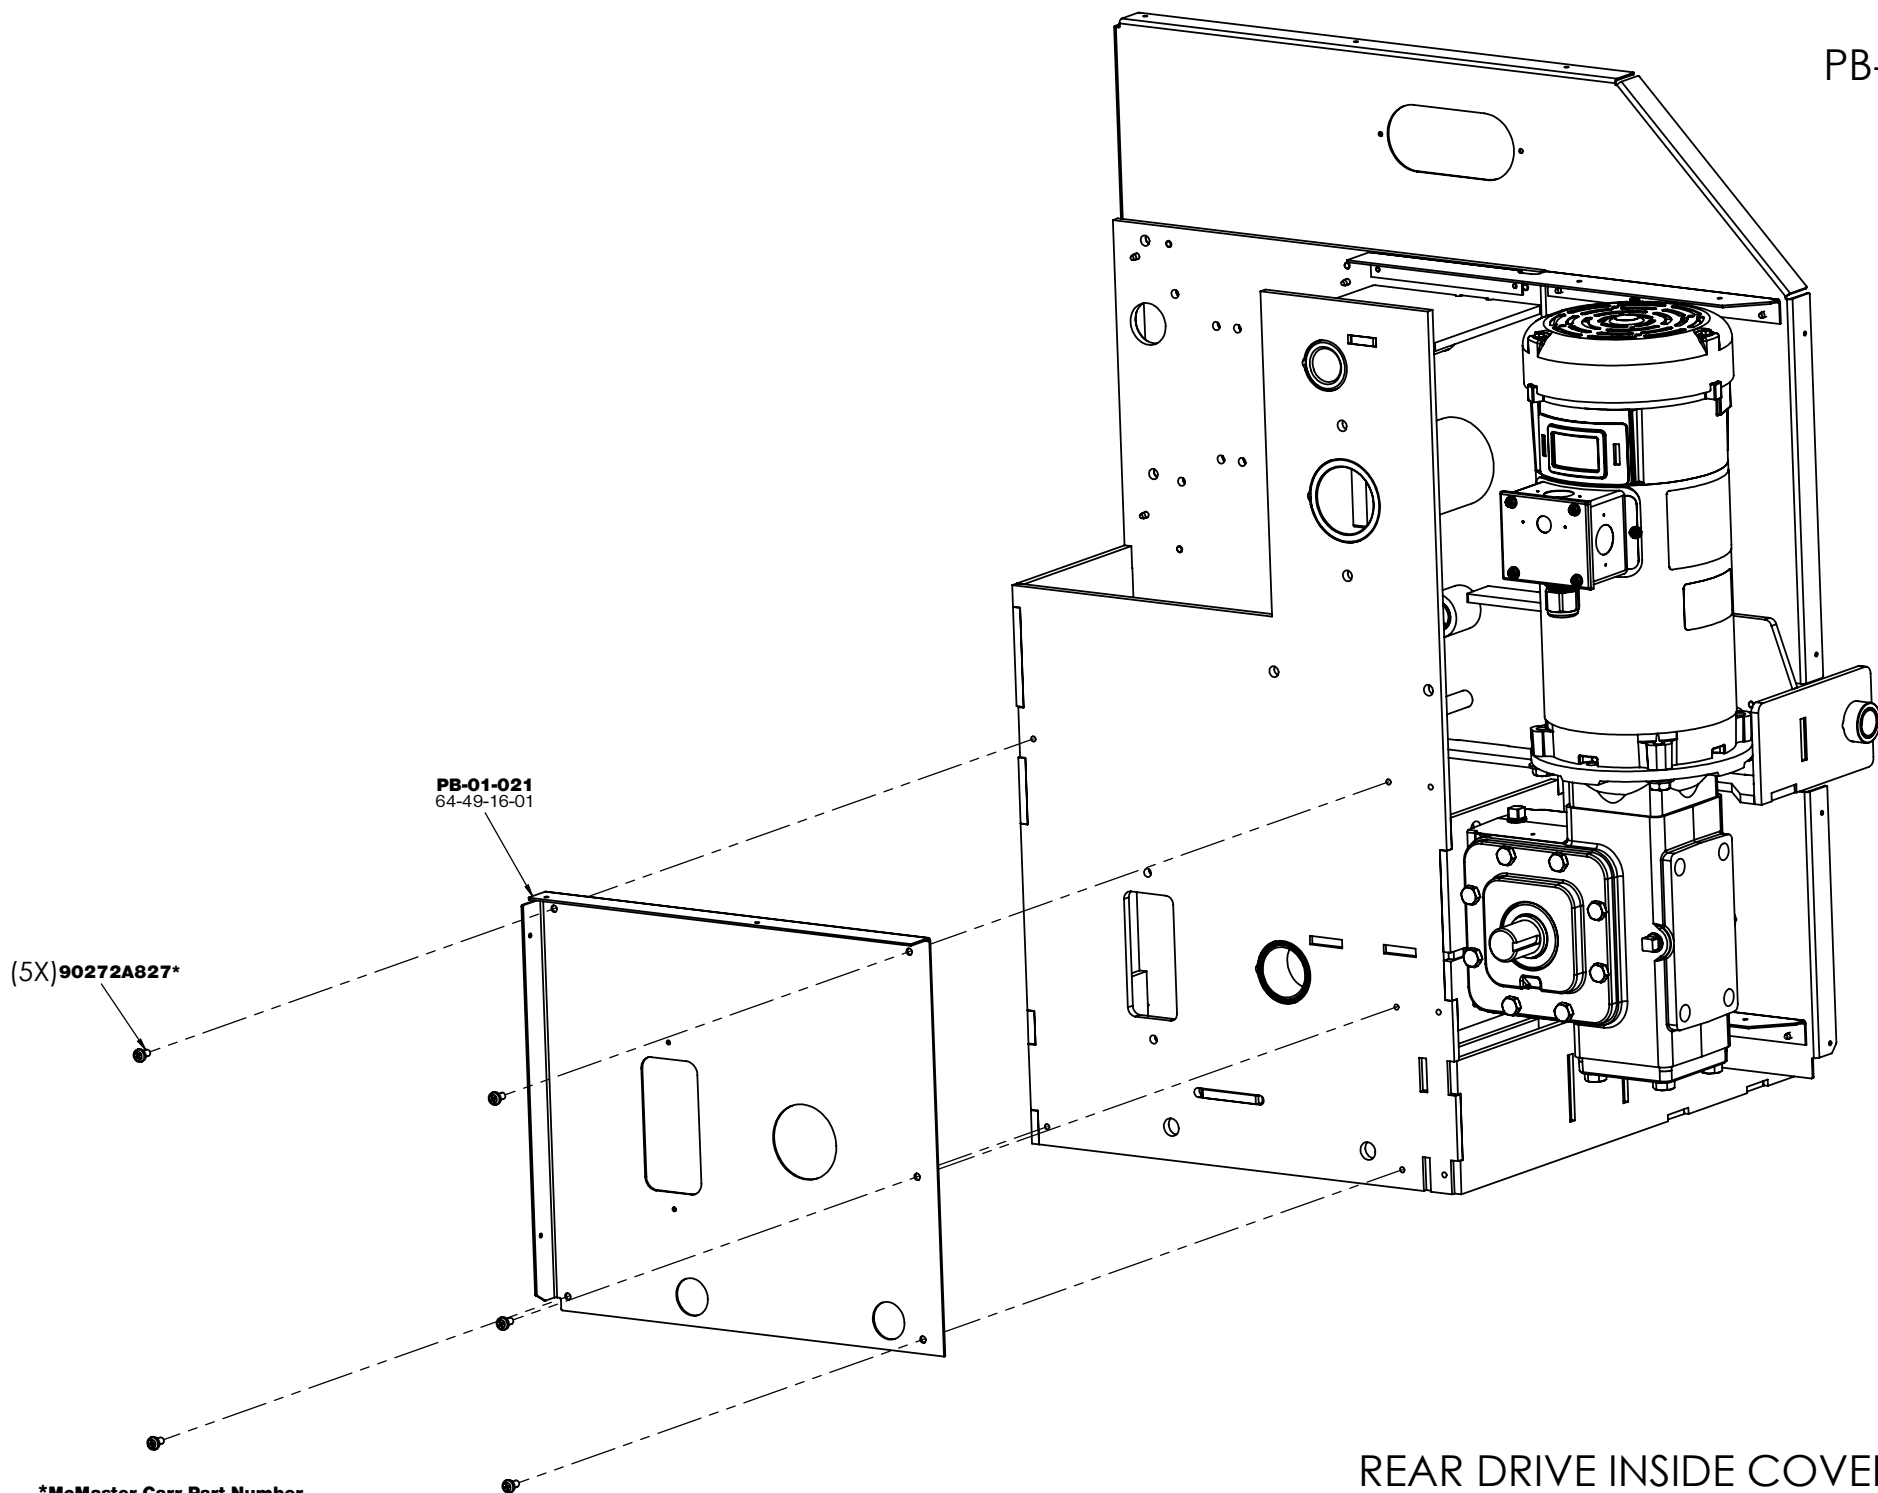



*McMaster Carr Part Number

REAR DRIVE INSIDE COVER

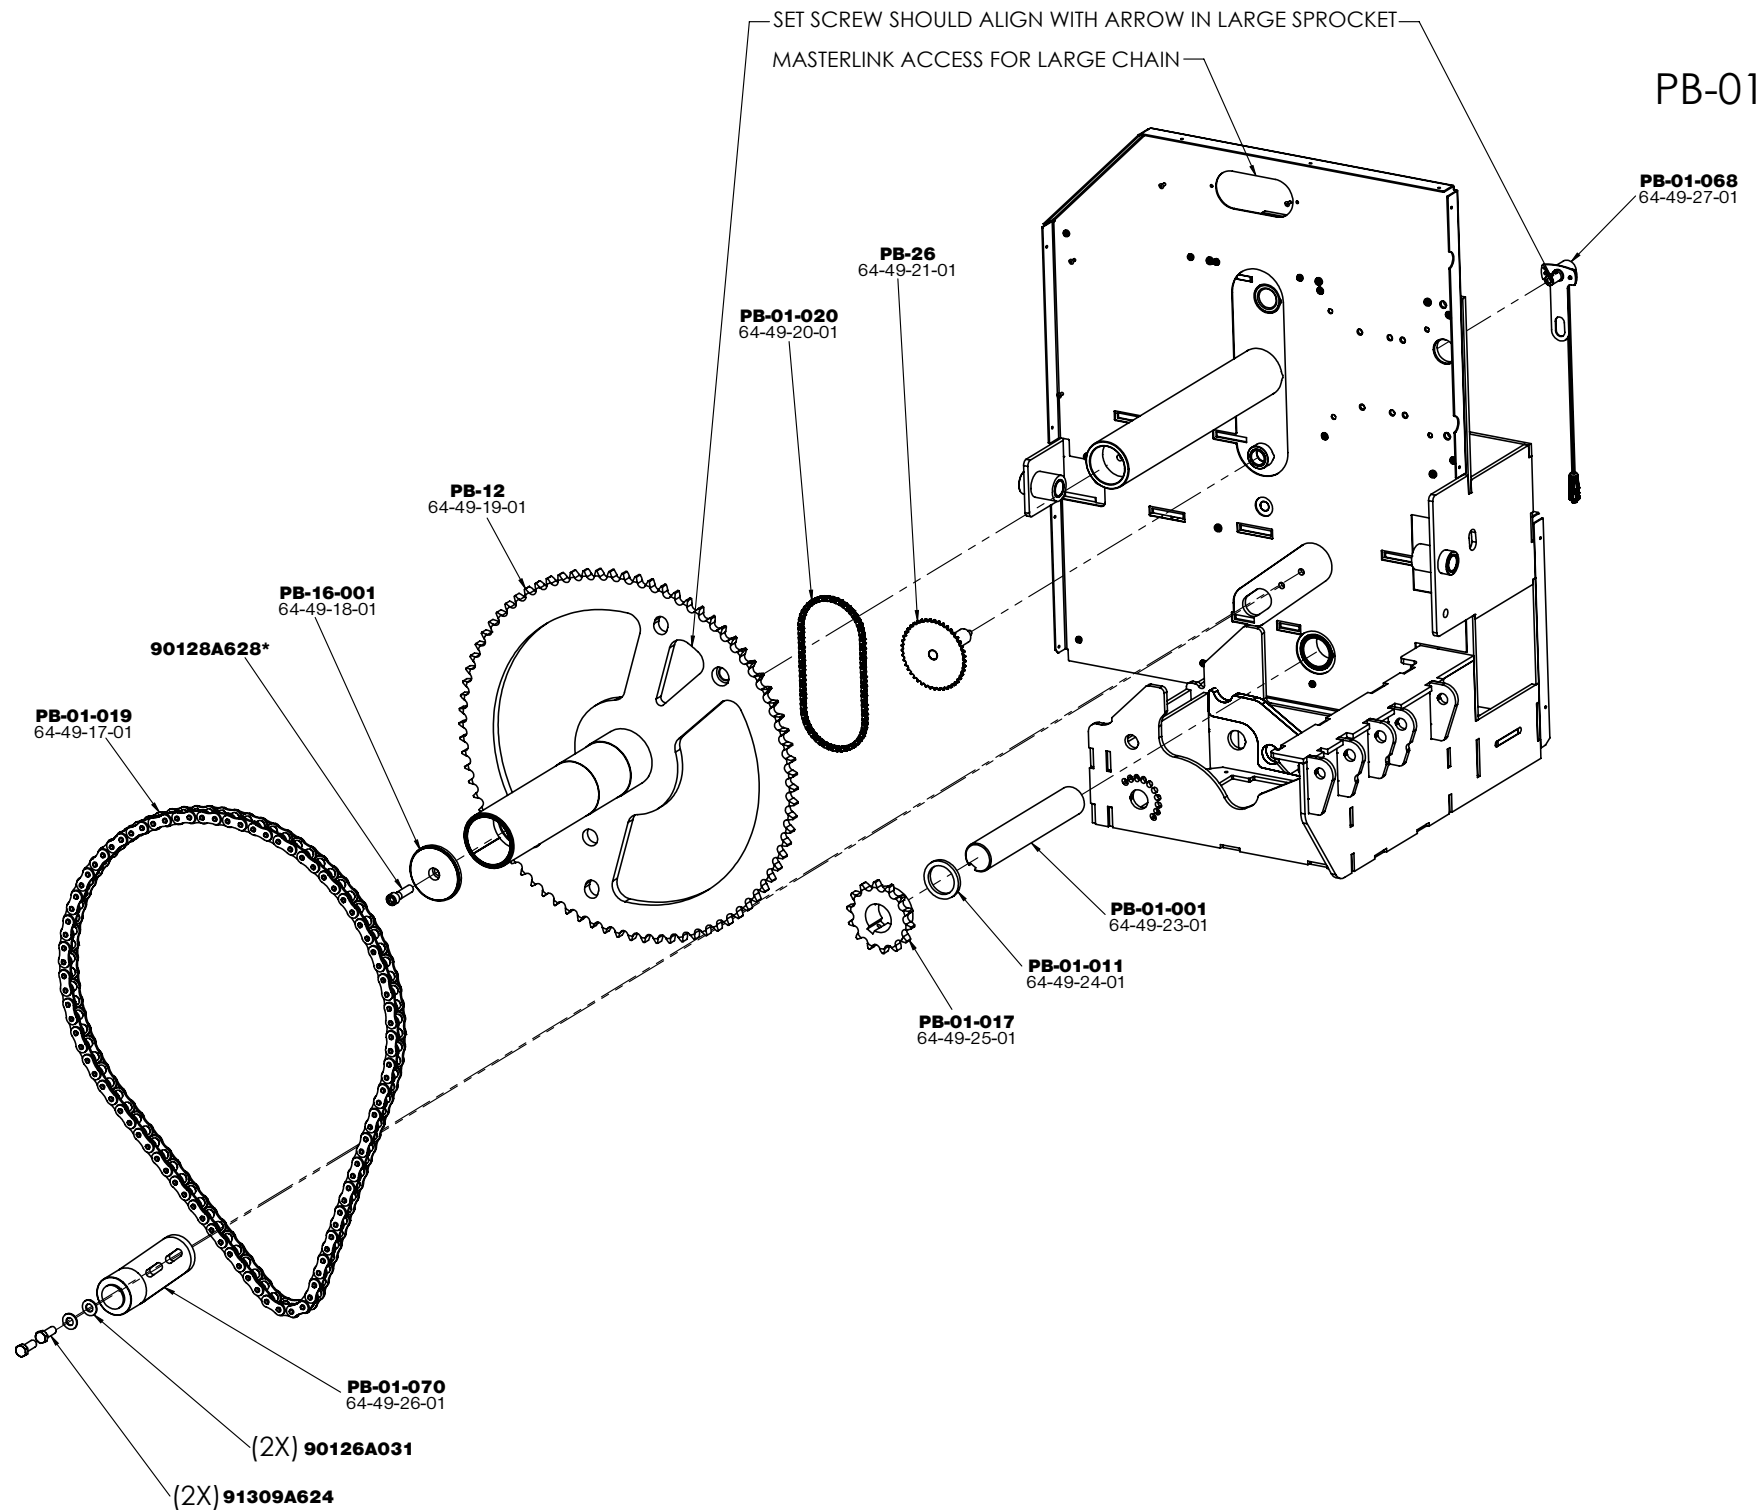


*McMaster Carr Part Number

DRIVELINE, FRONT

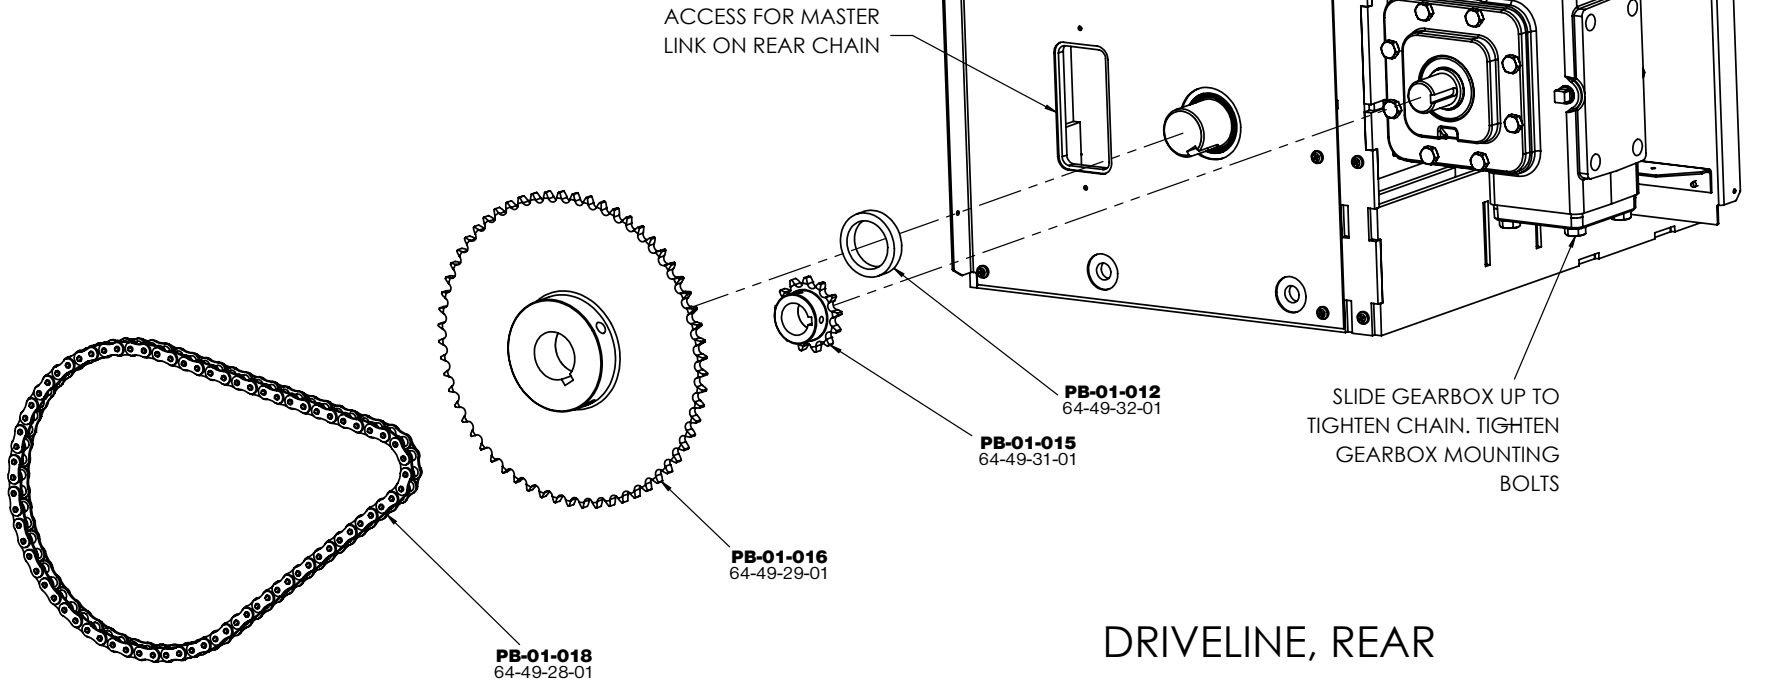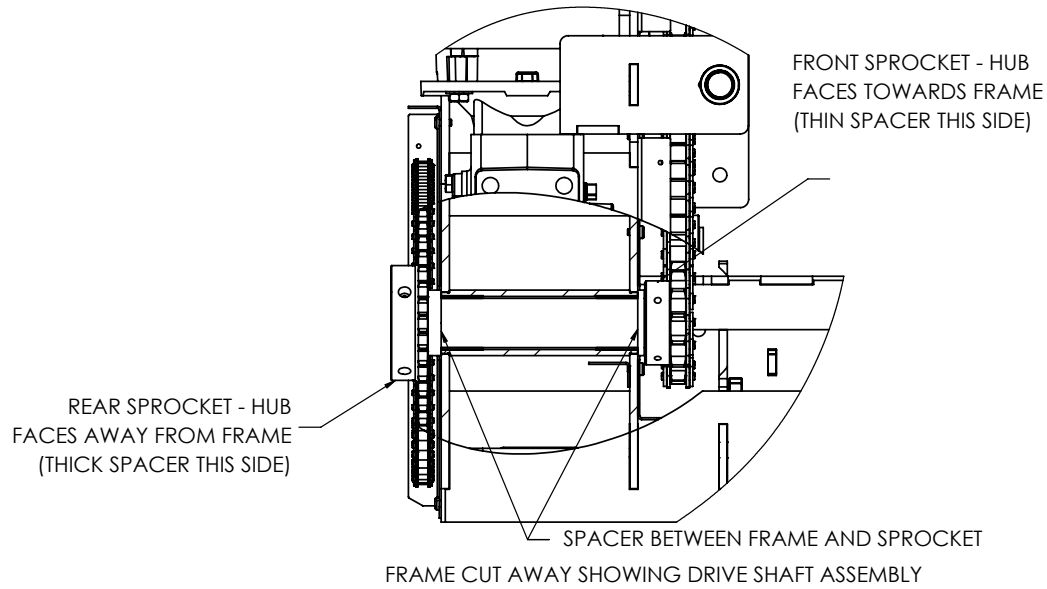


DRIVELINE, REAR


PB-01-6

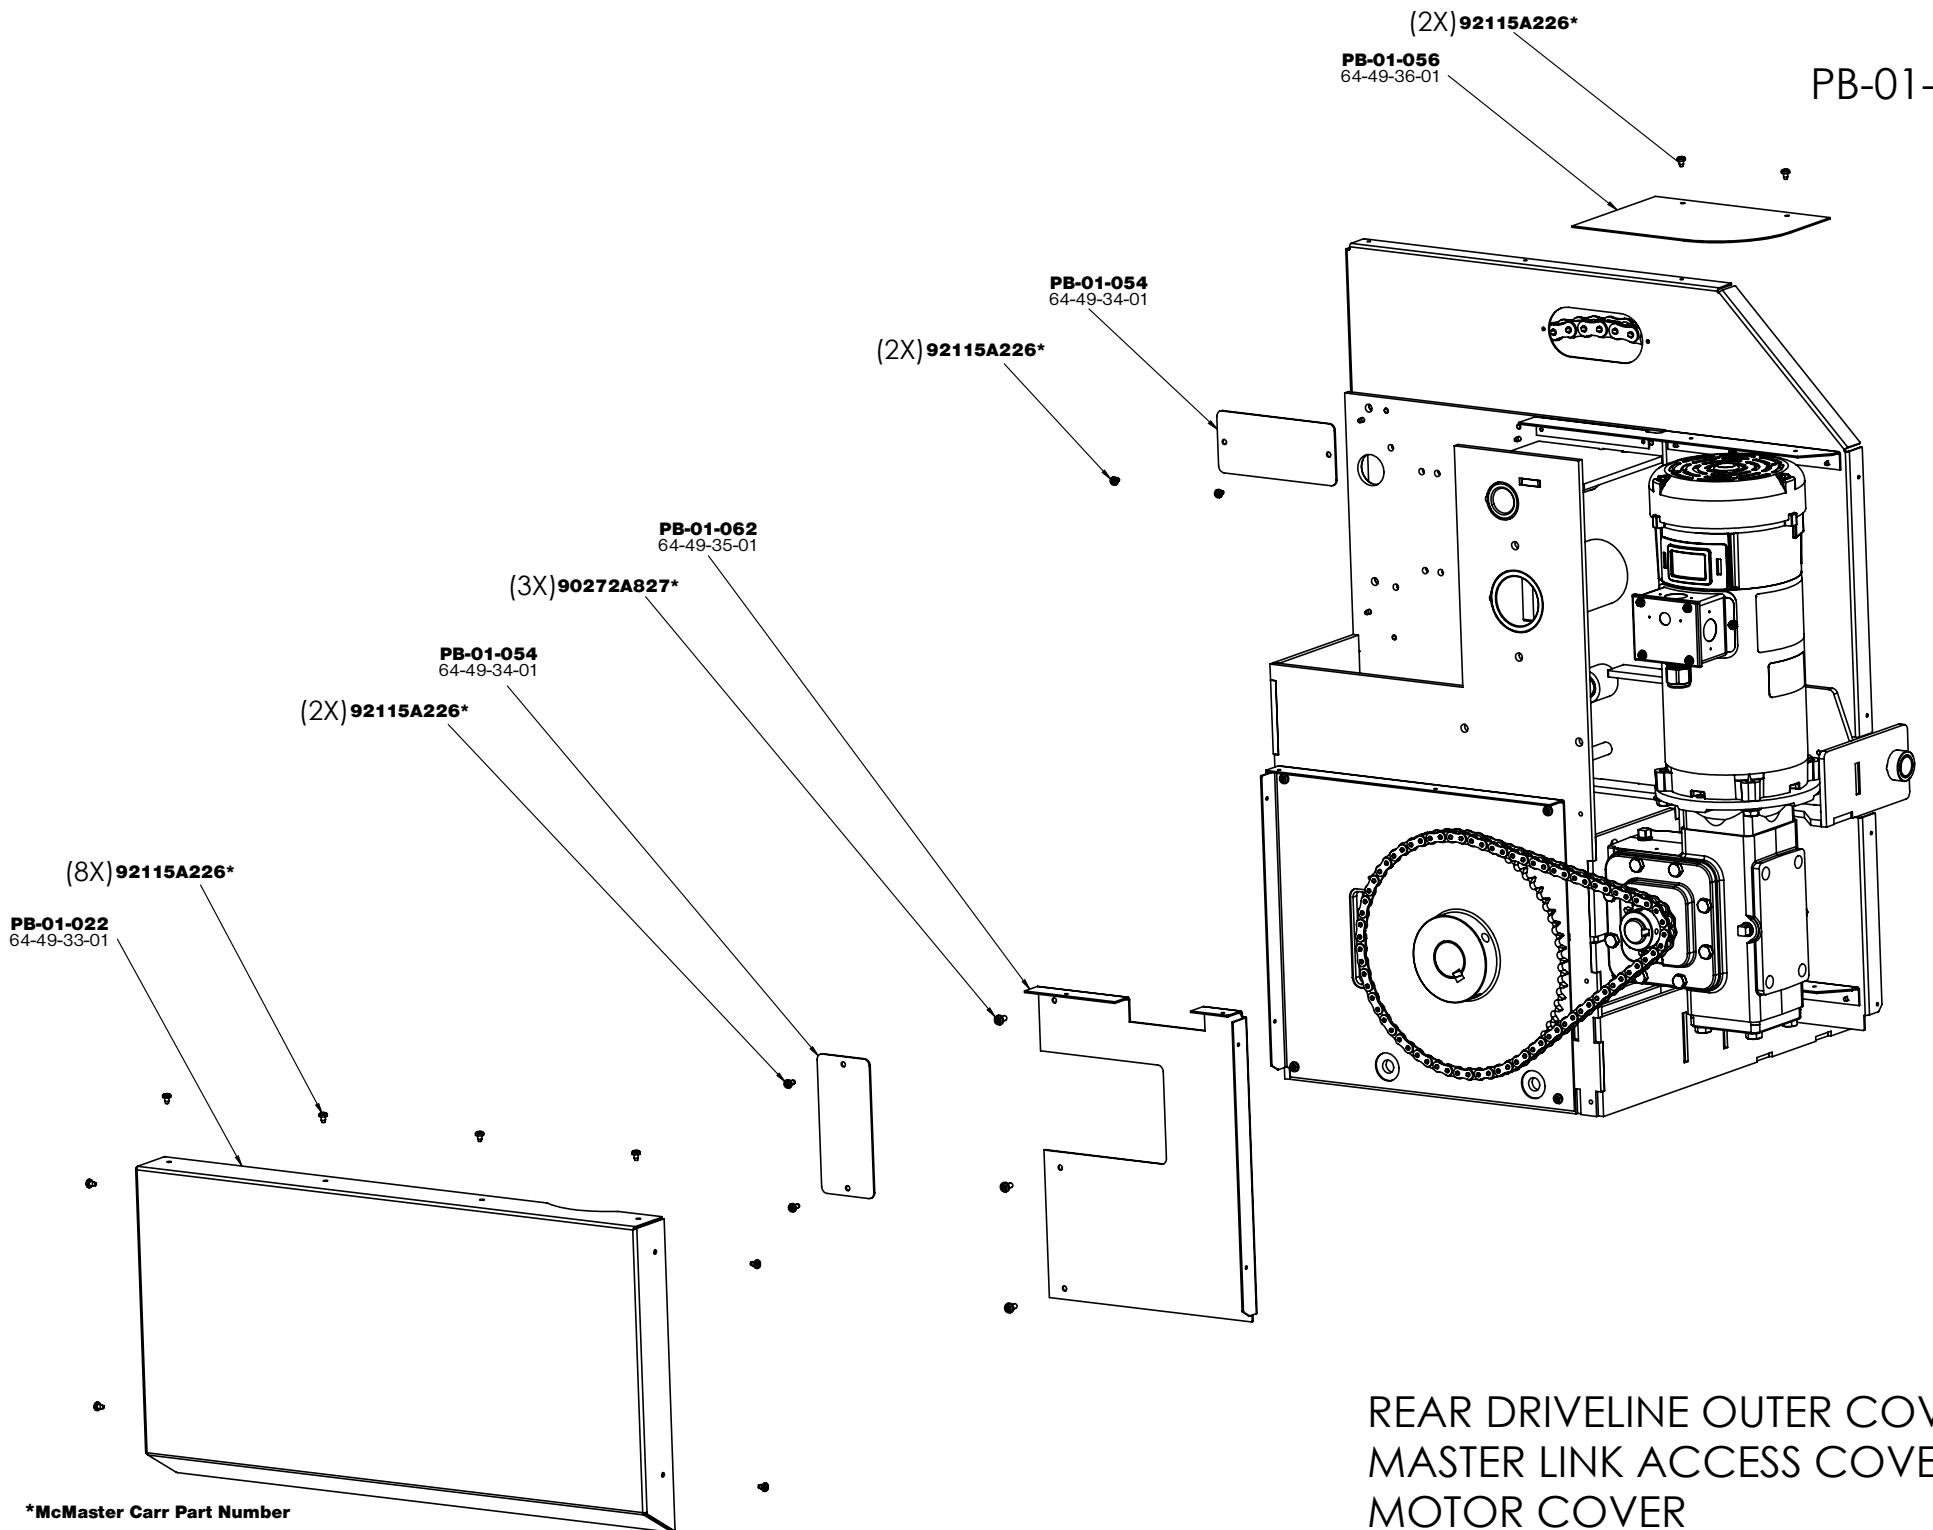


REAR DRIVELINE OUTER COVER
MASTER LINK ACCESS COVERS
MOTOR COVER


*McMaster Carr Part Number

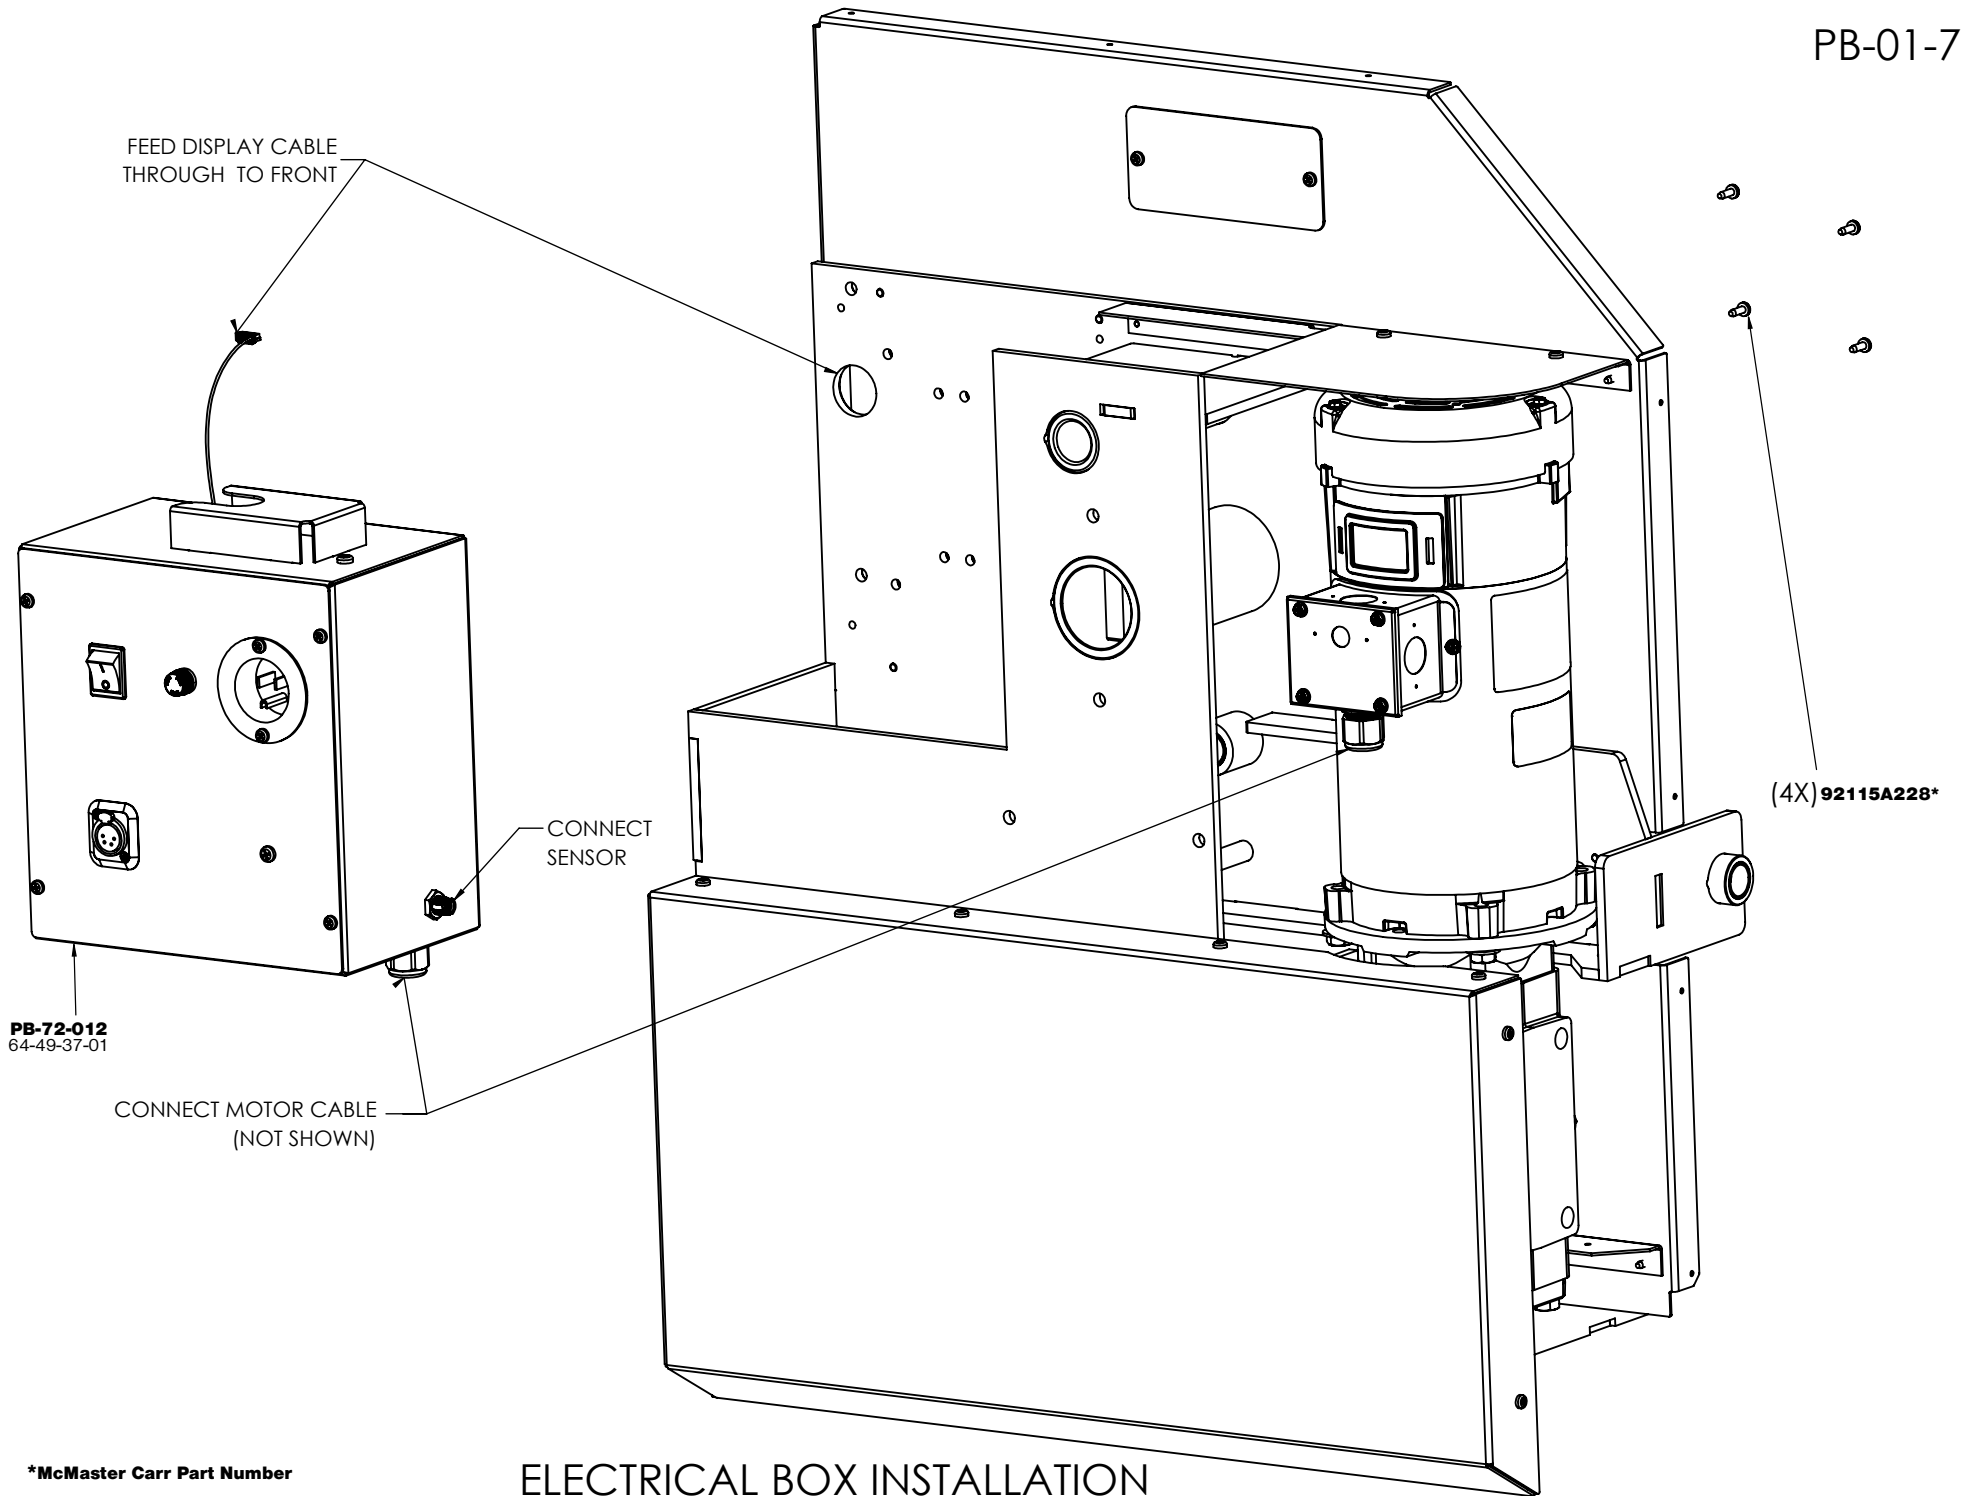


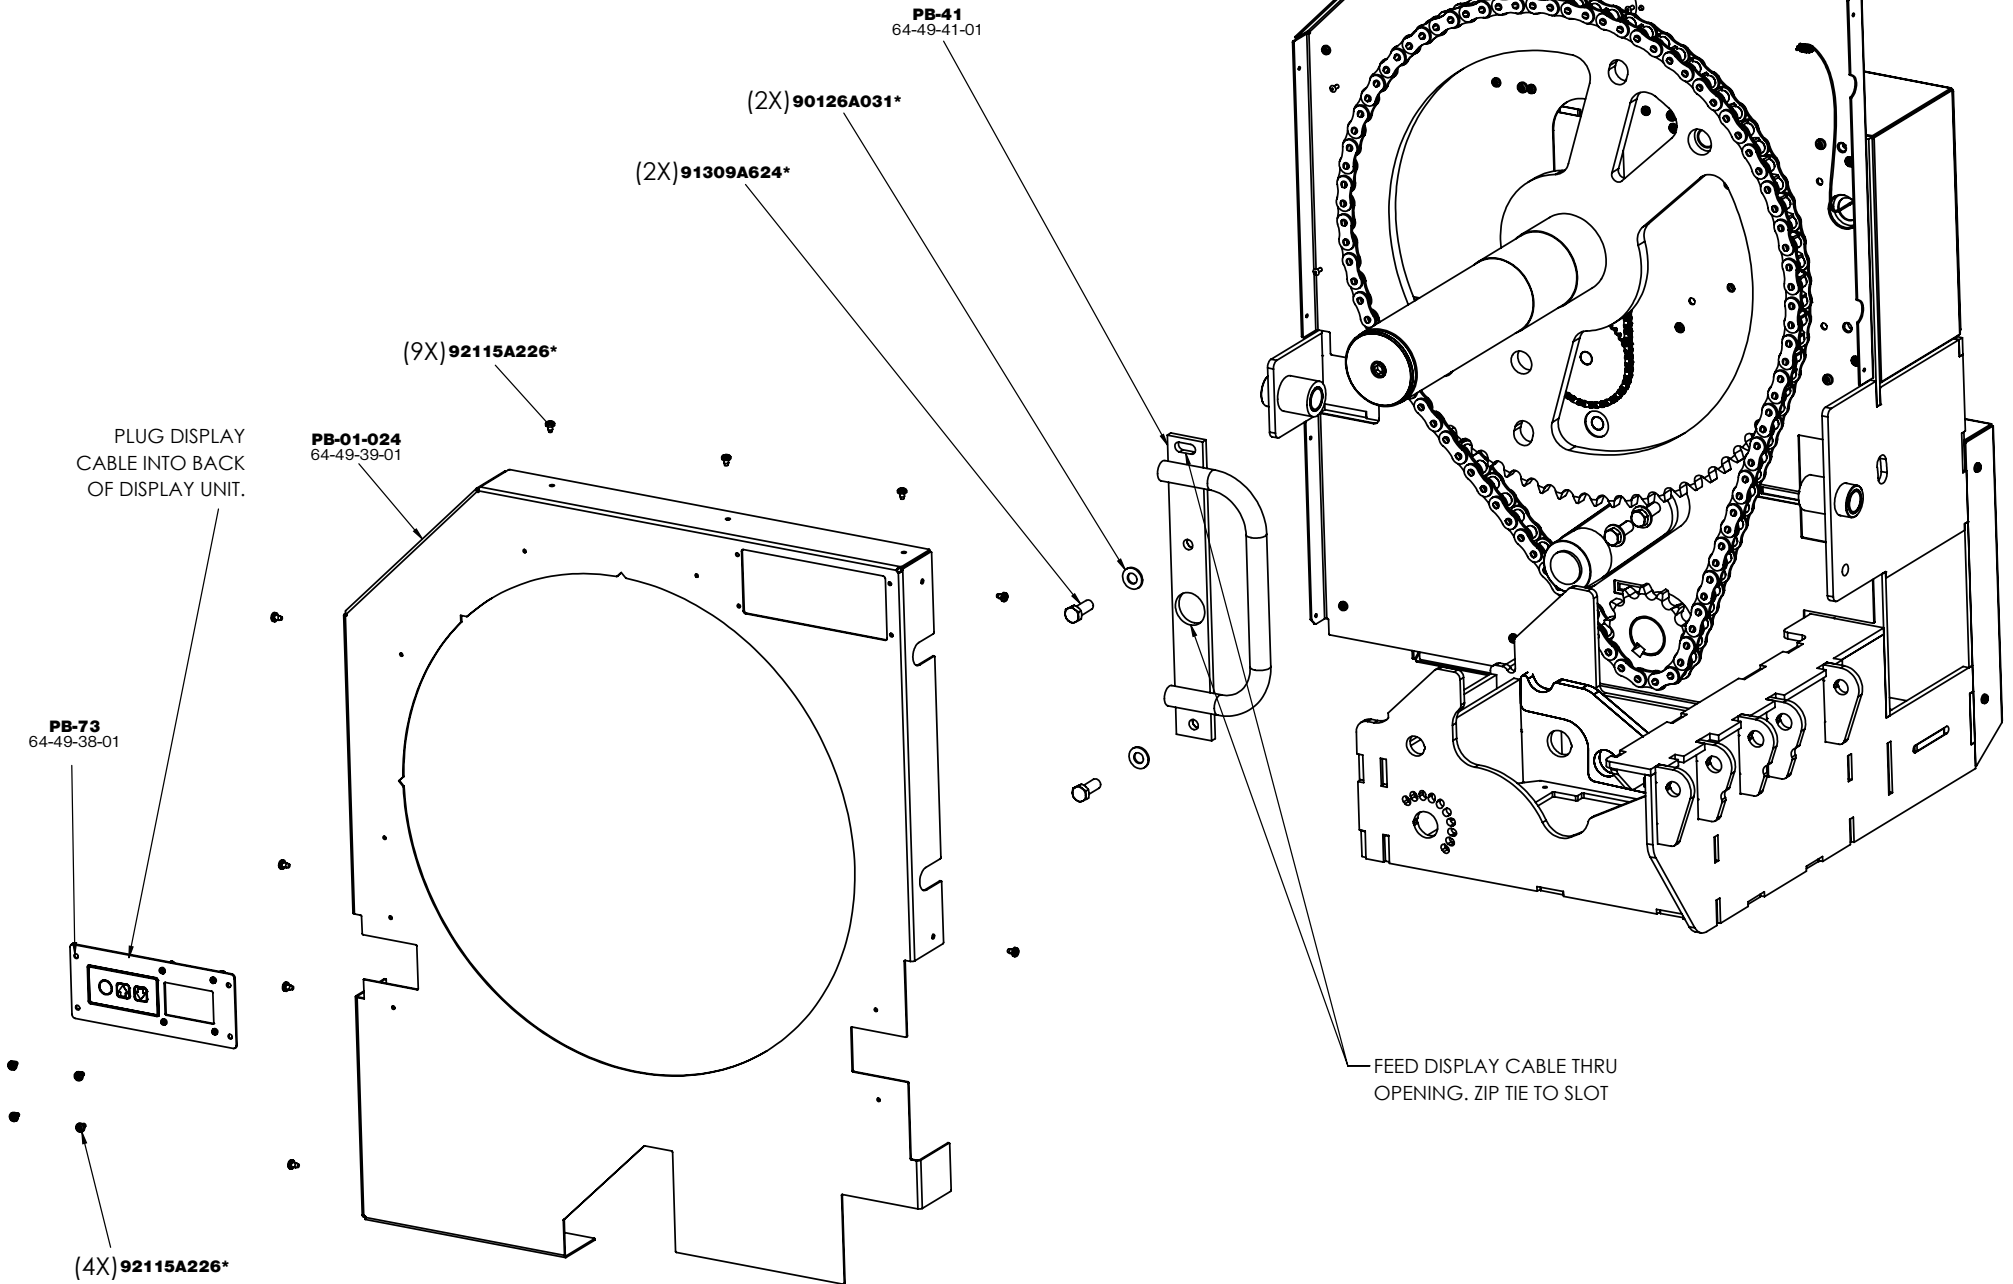


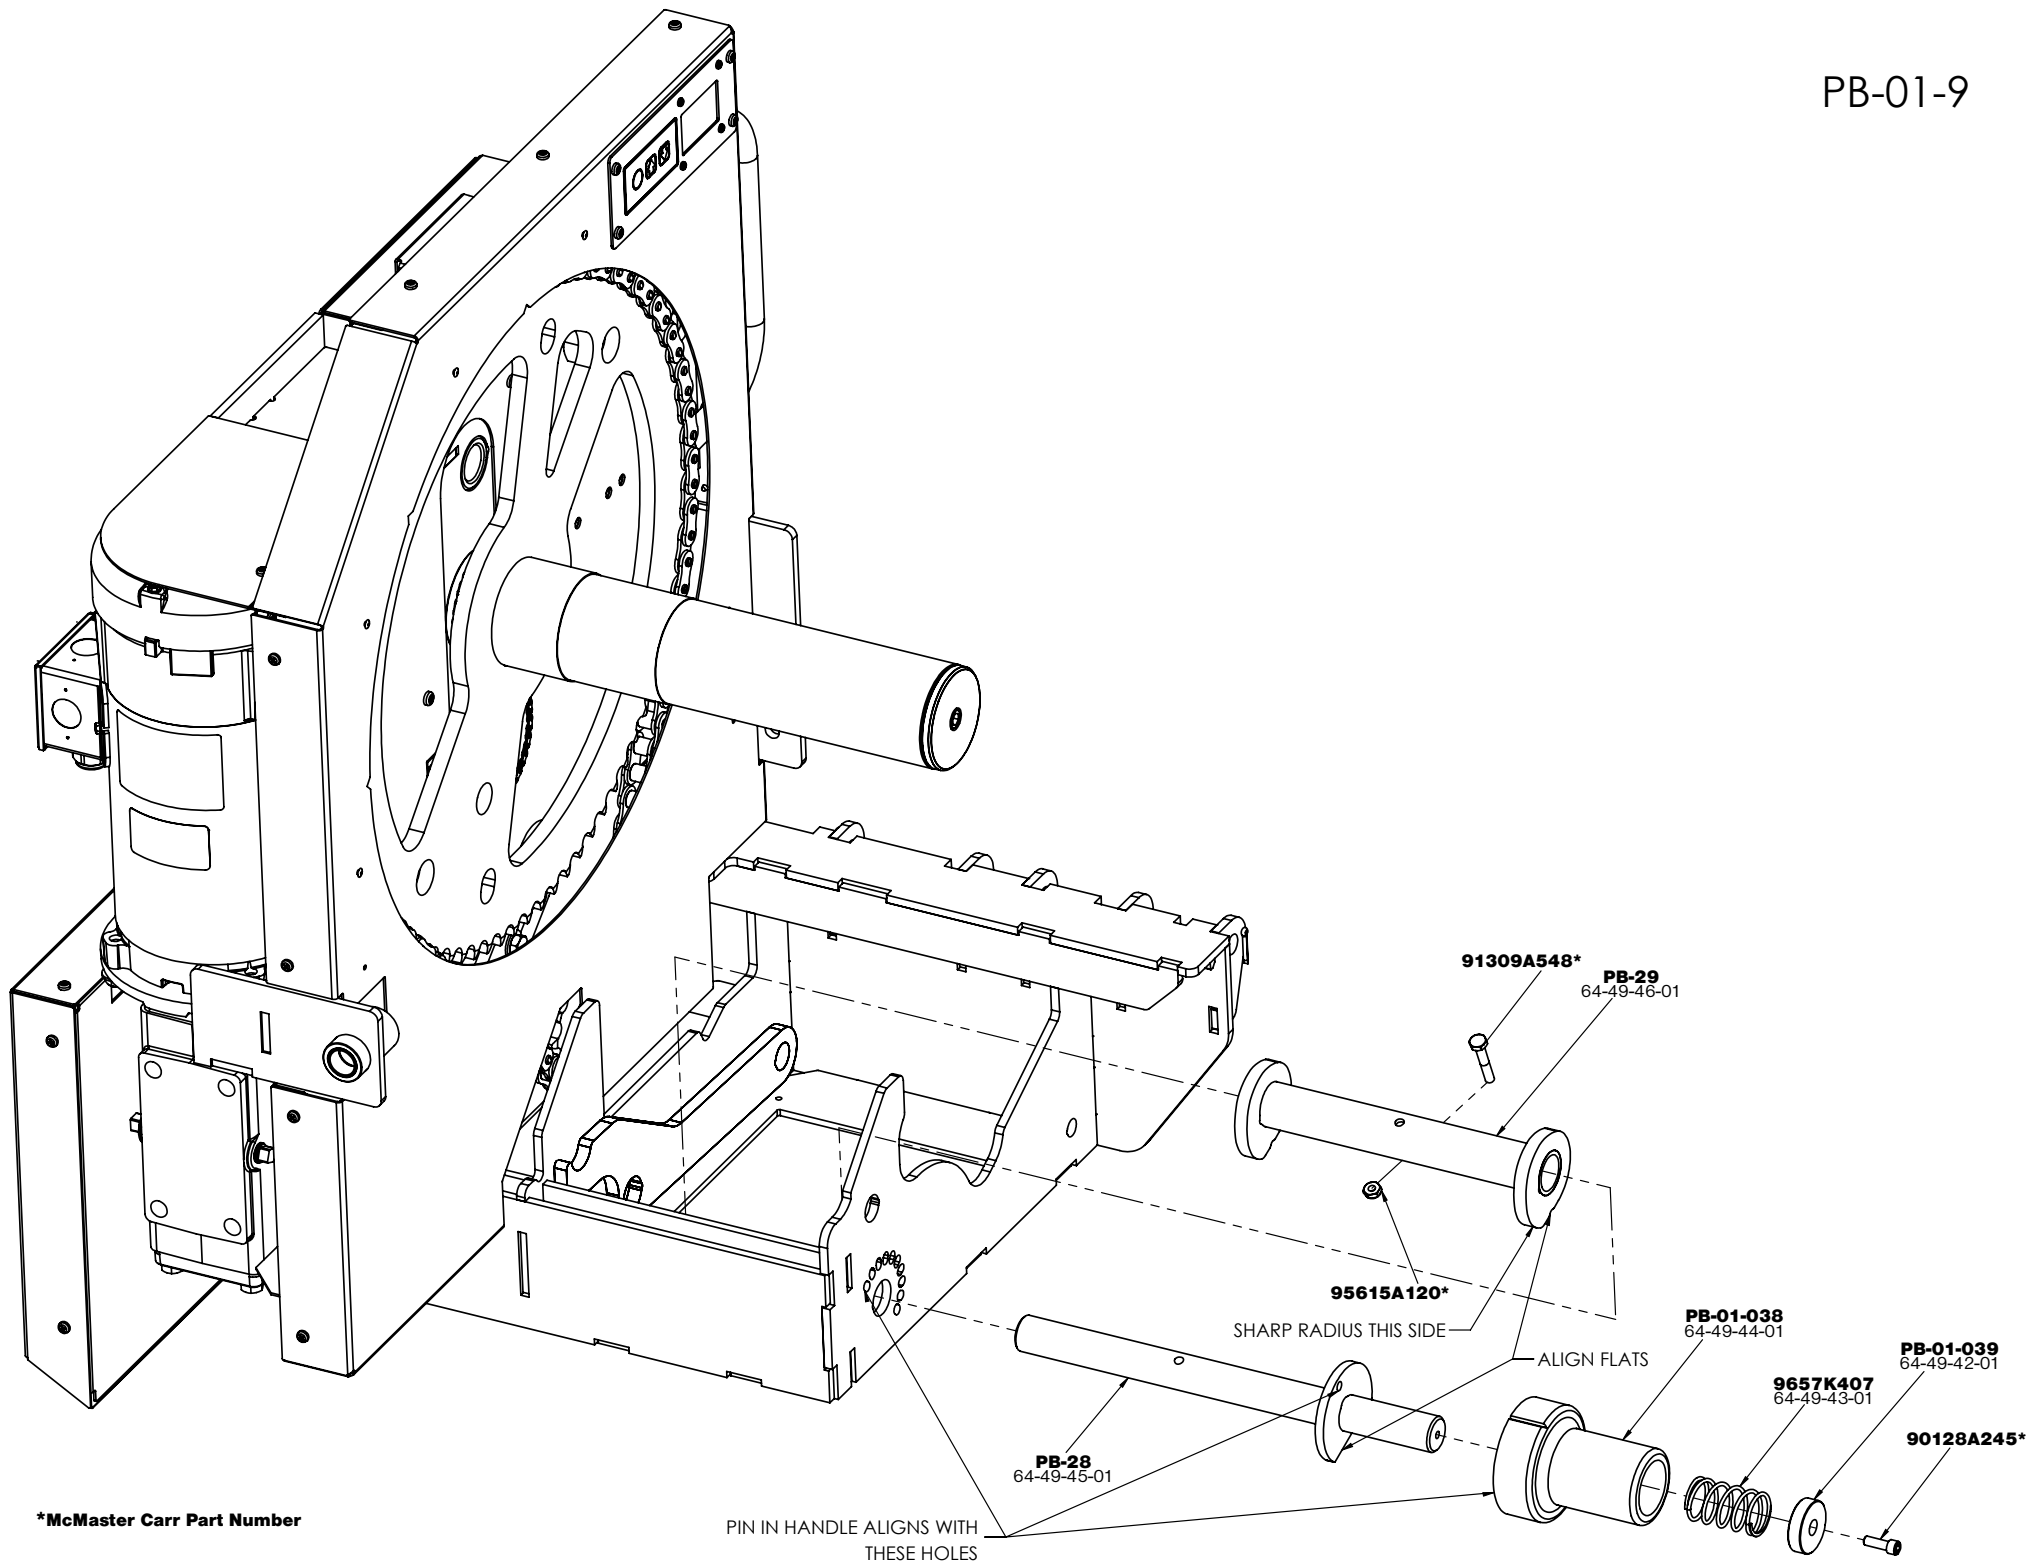




*McMaster Carr Part Number

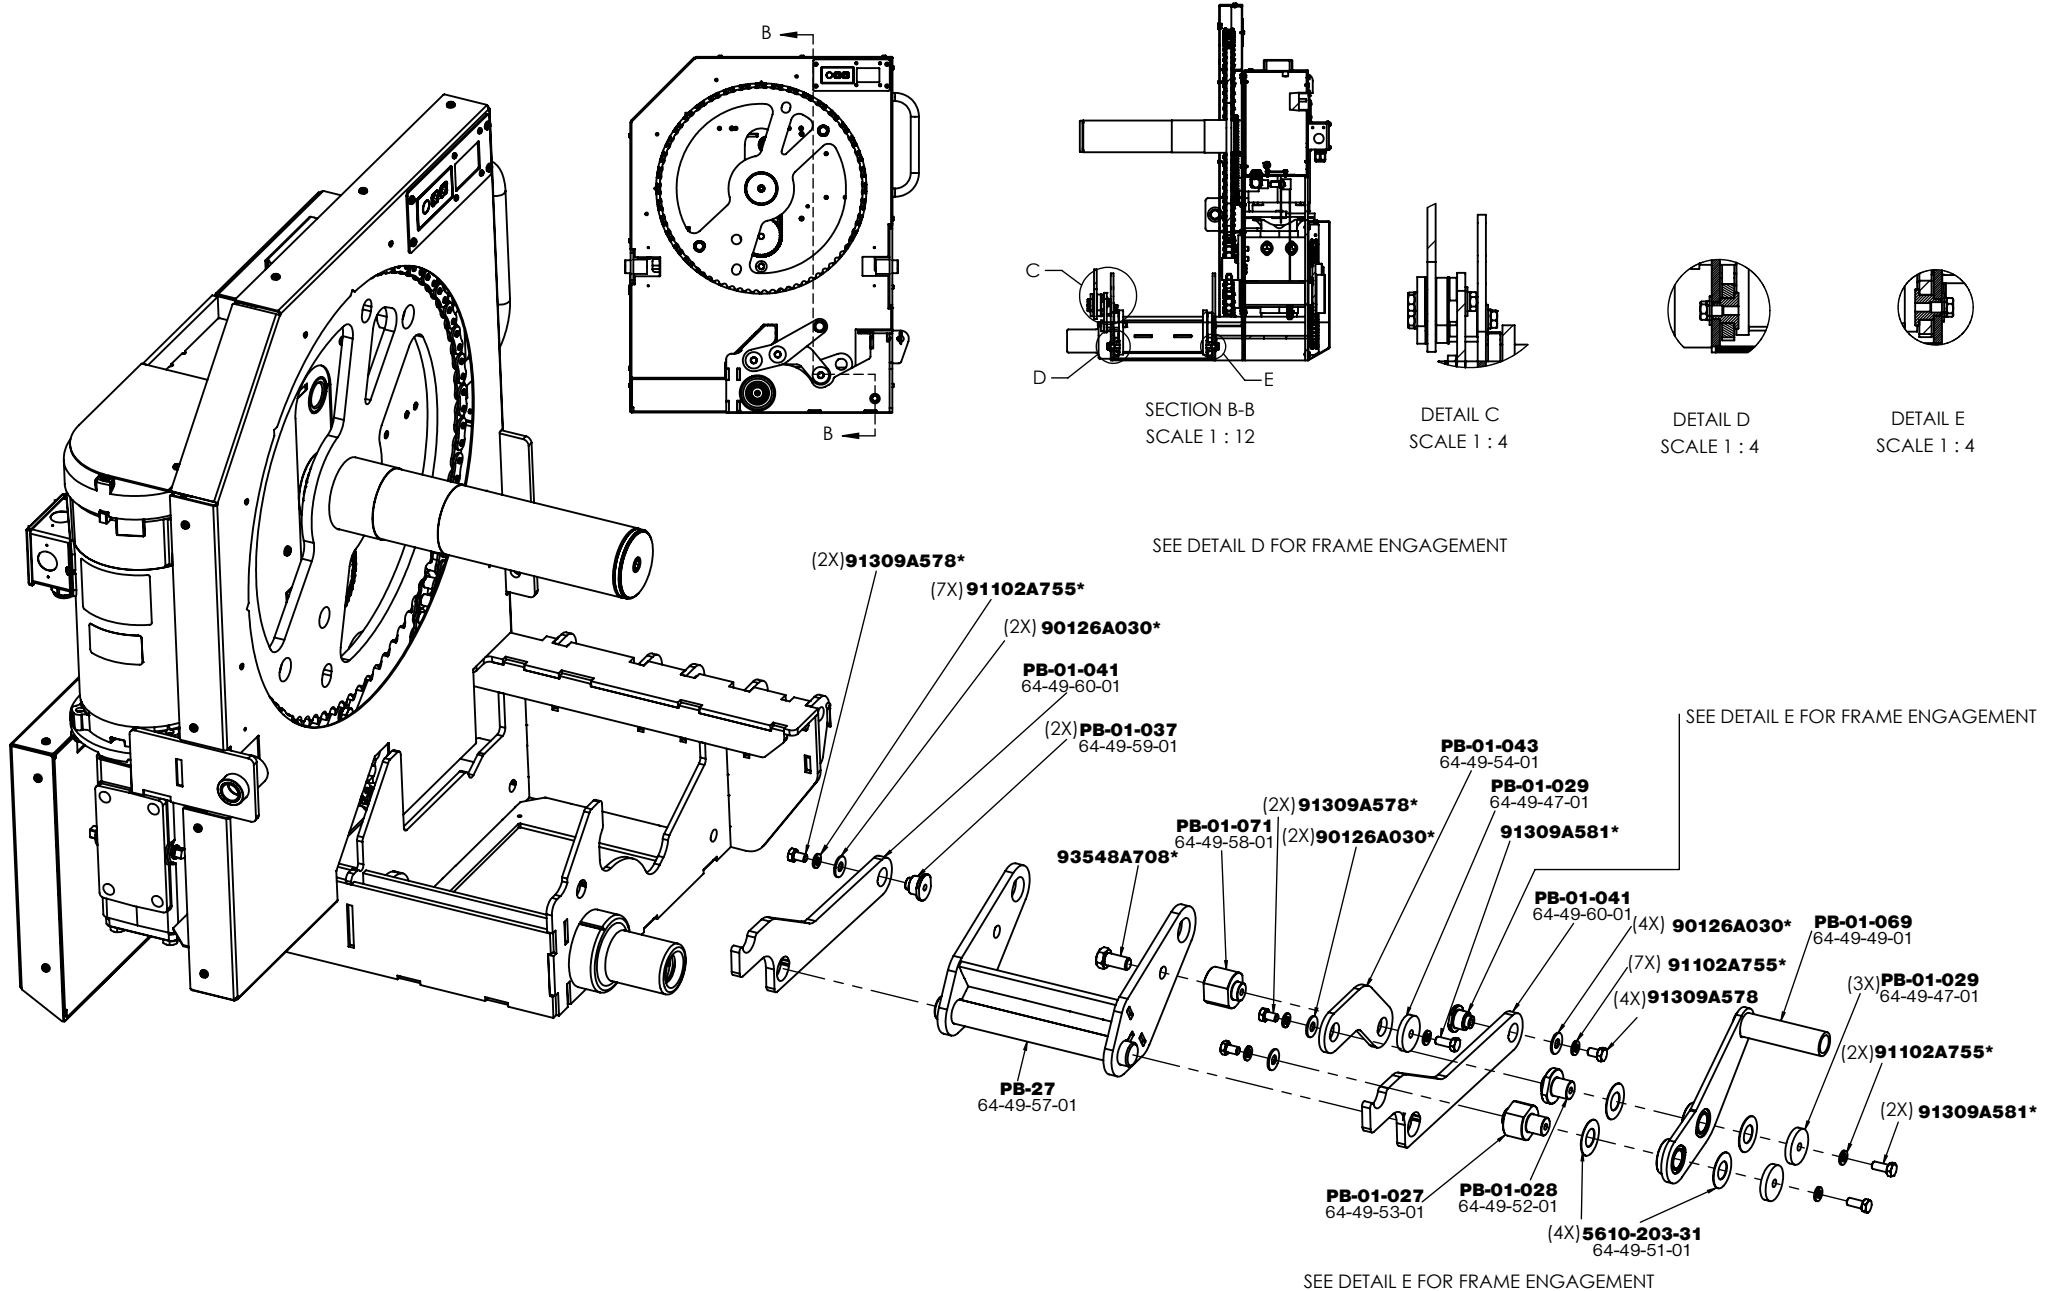




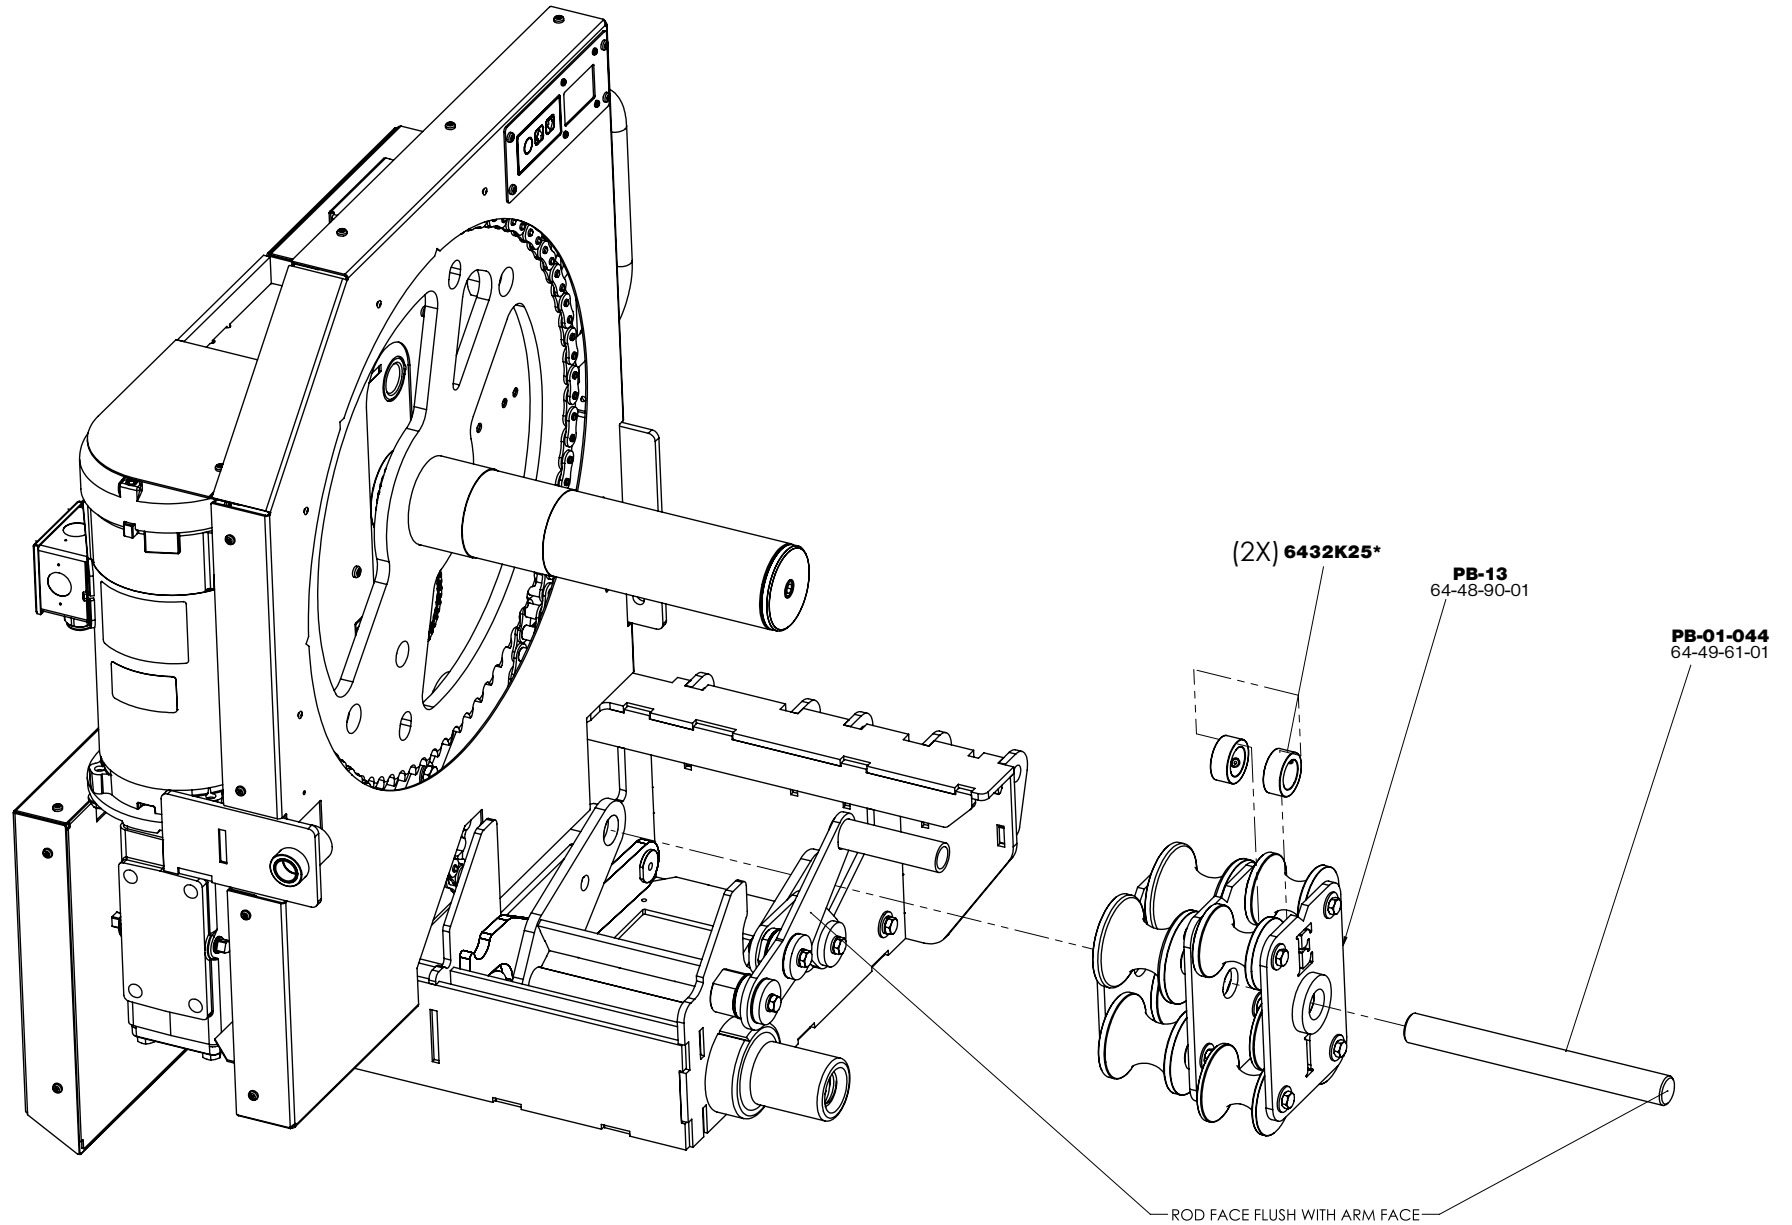


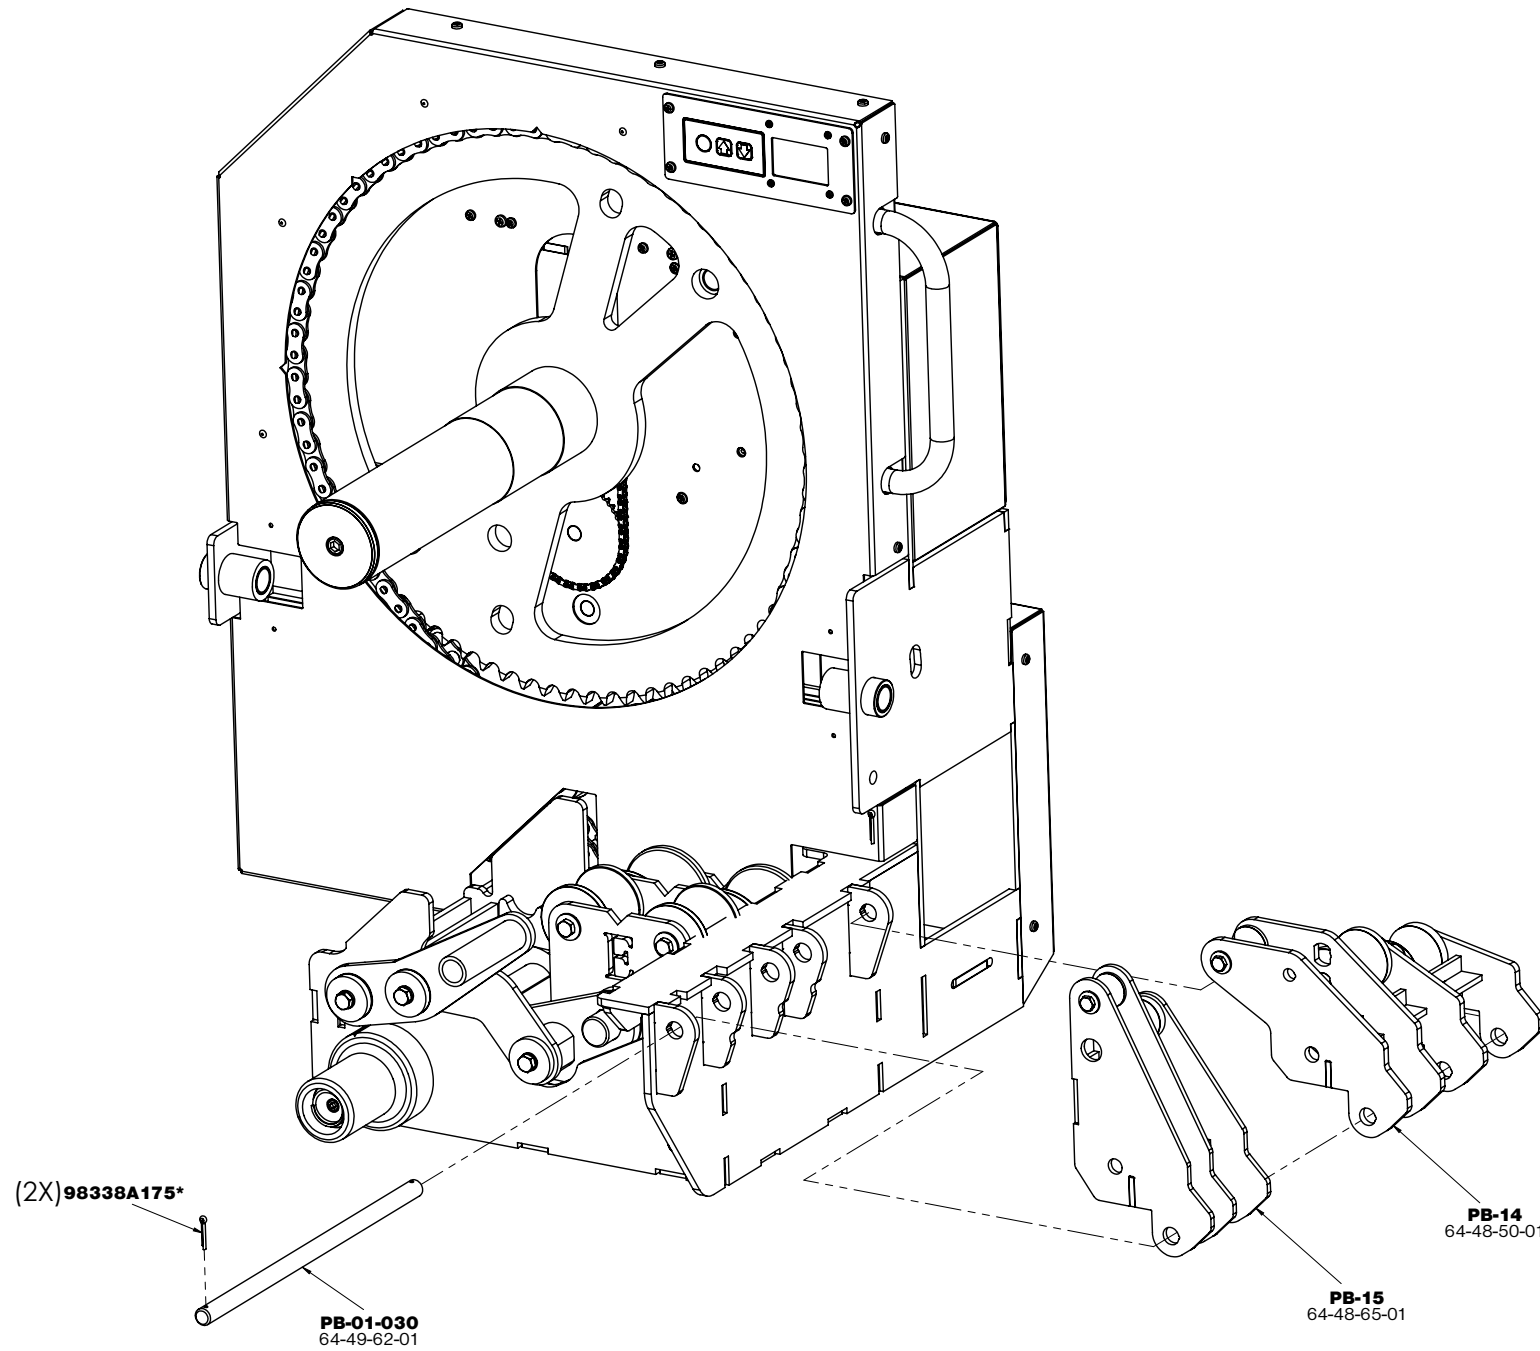

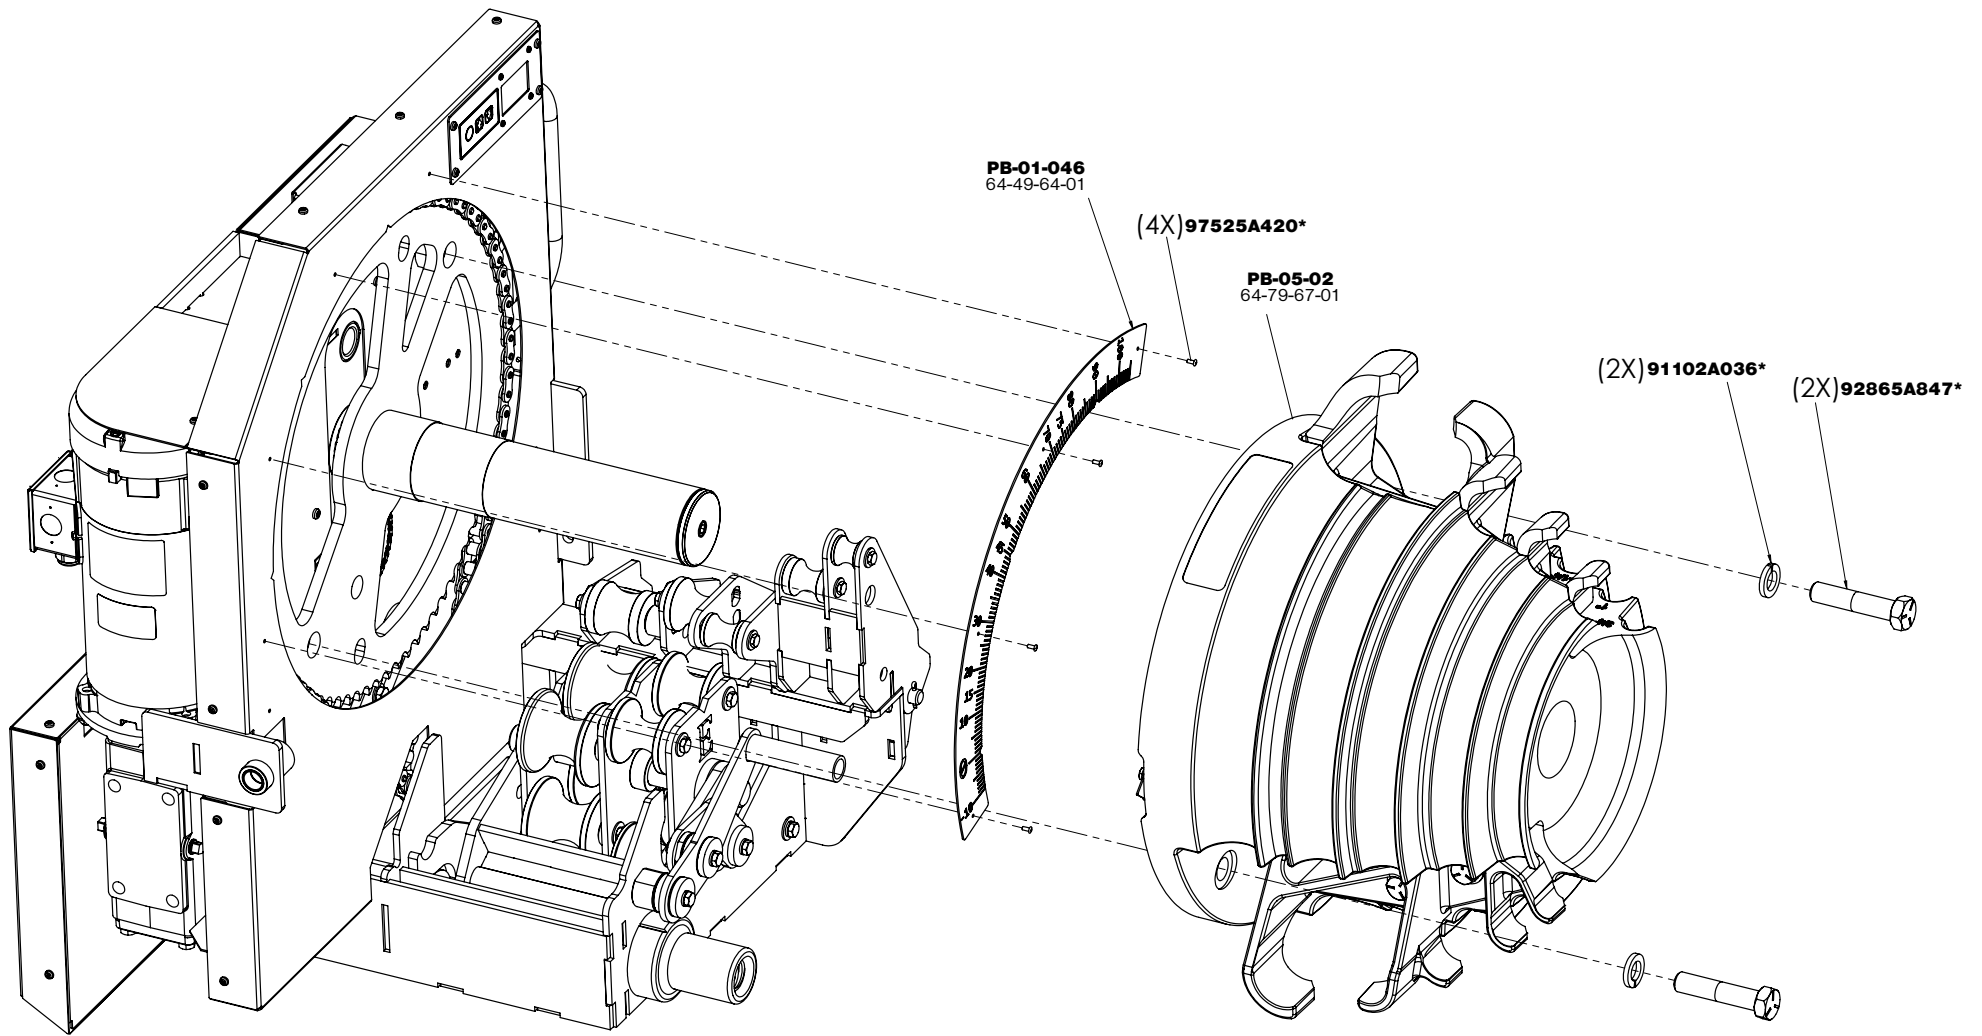

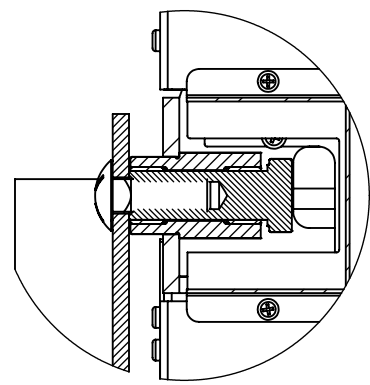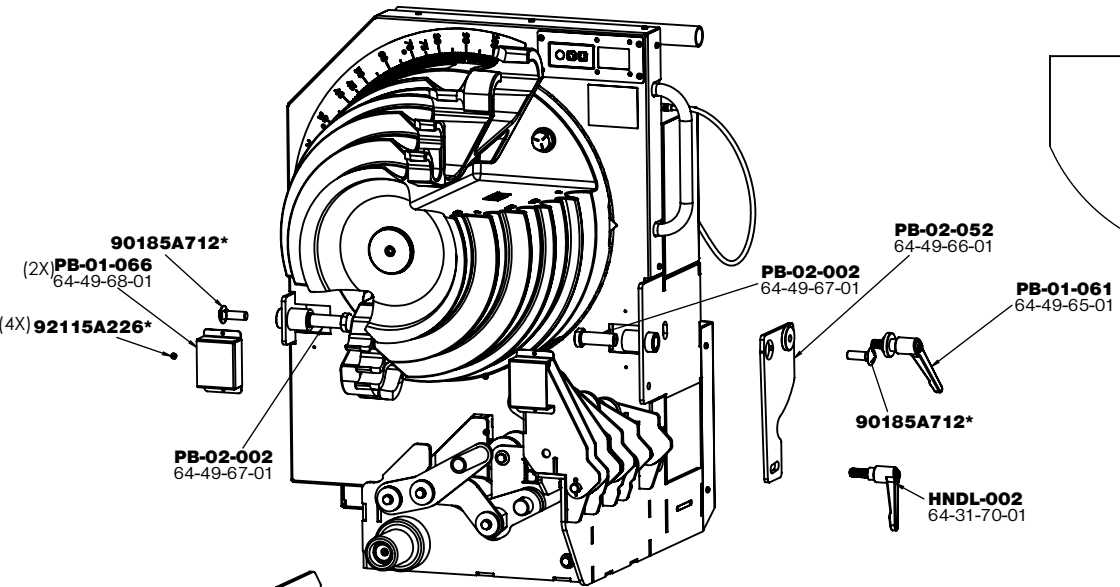



DETAIL B
SCALE 1 : 2

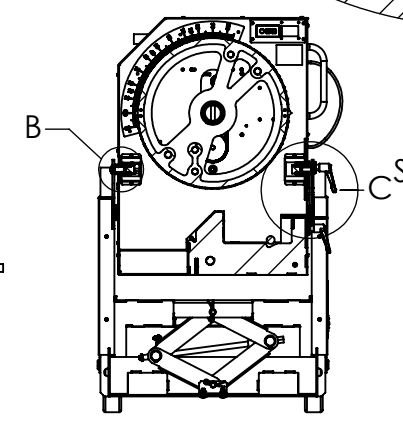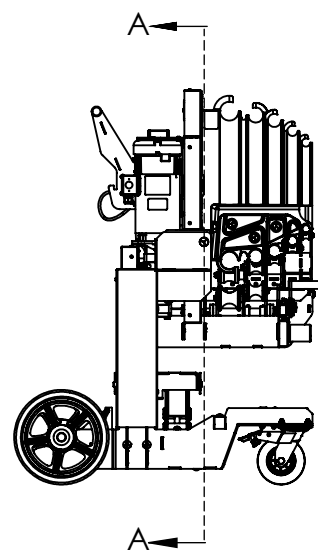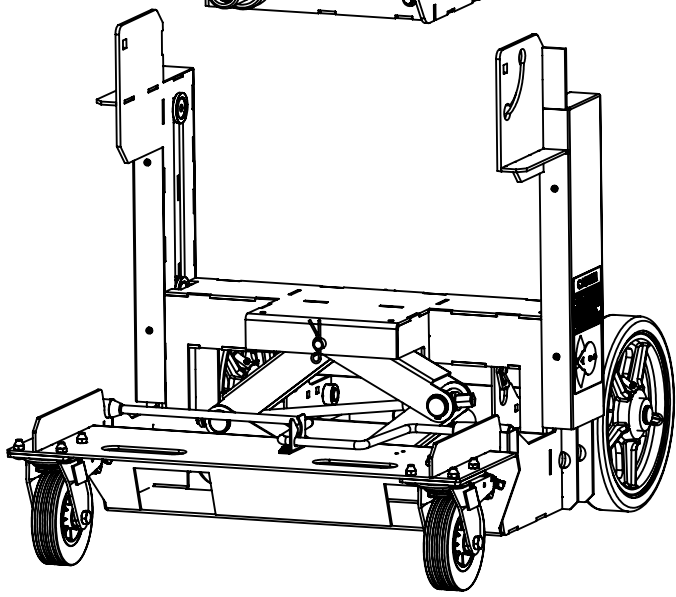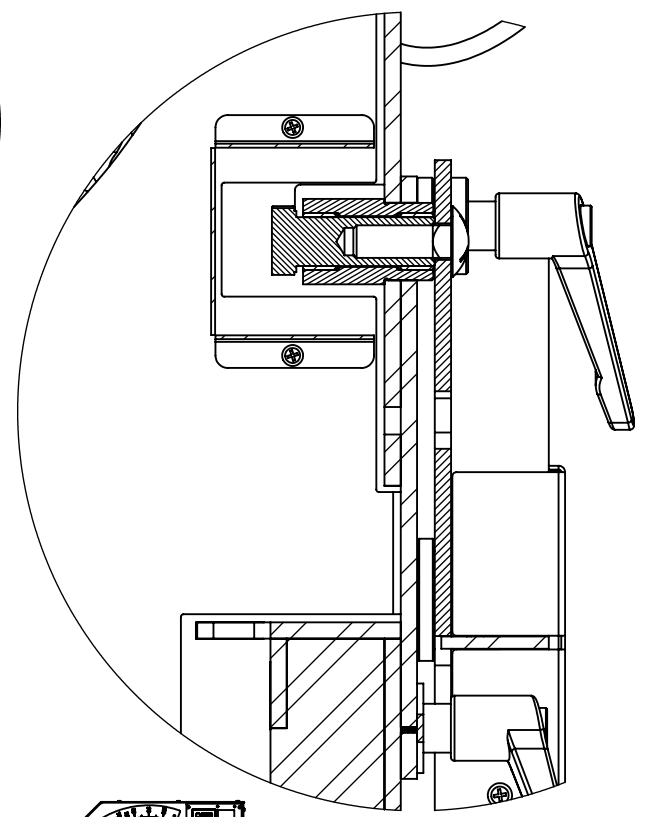


DETAIL C
SCALE 1 : 2


SECTION A-A
SCALE 1 : 24

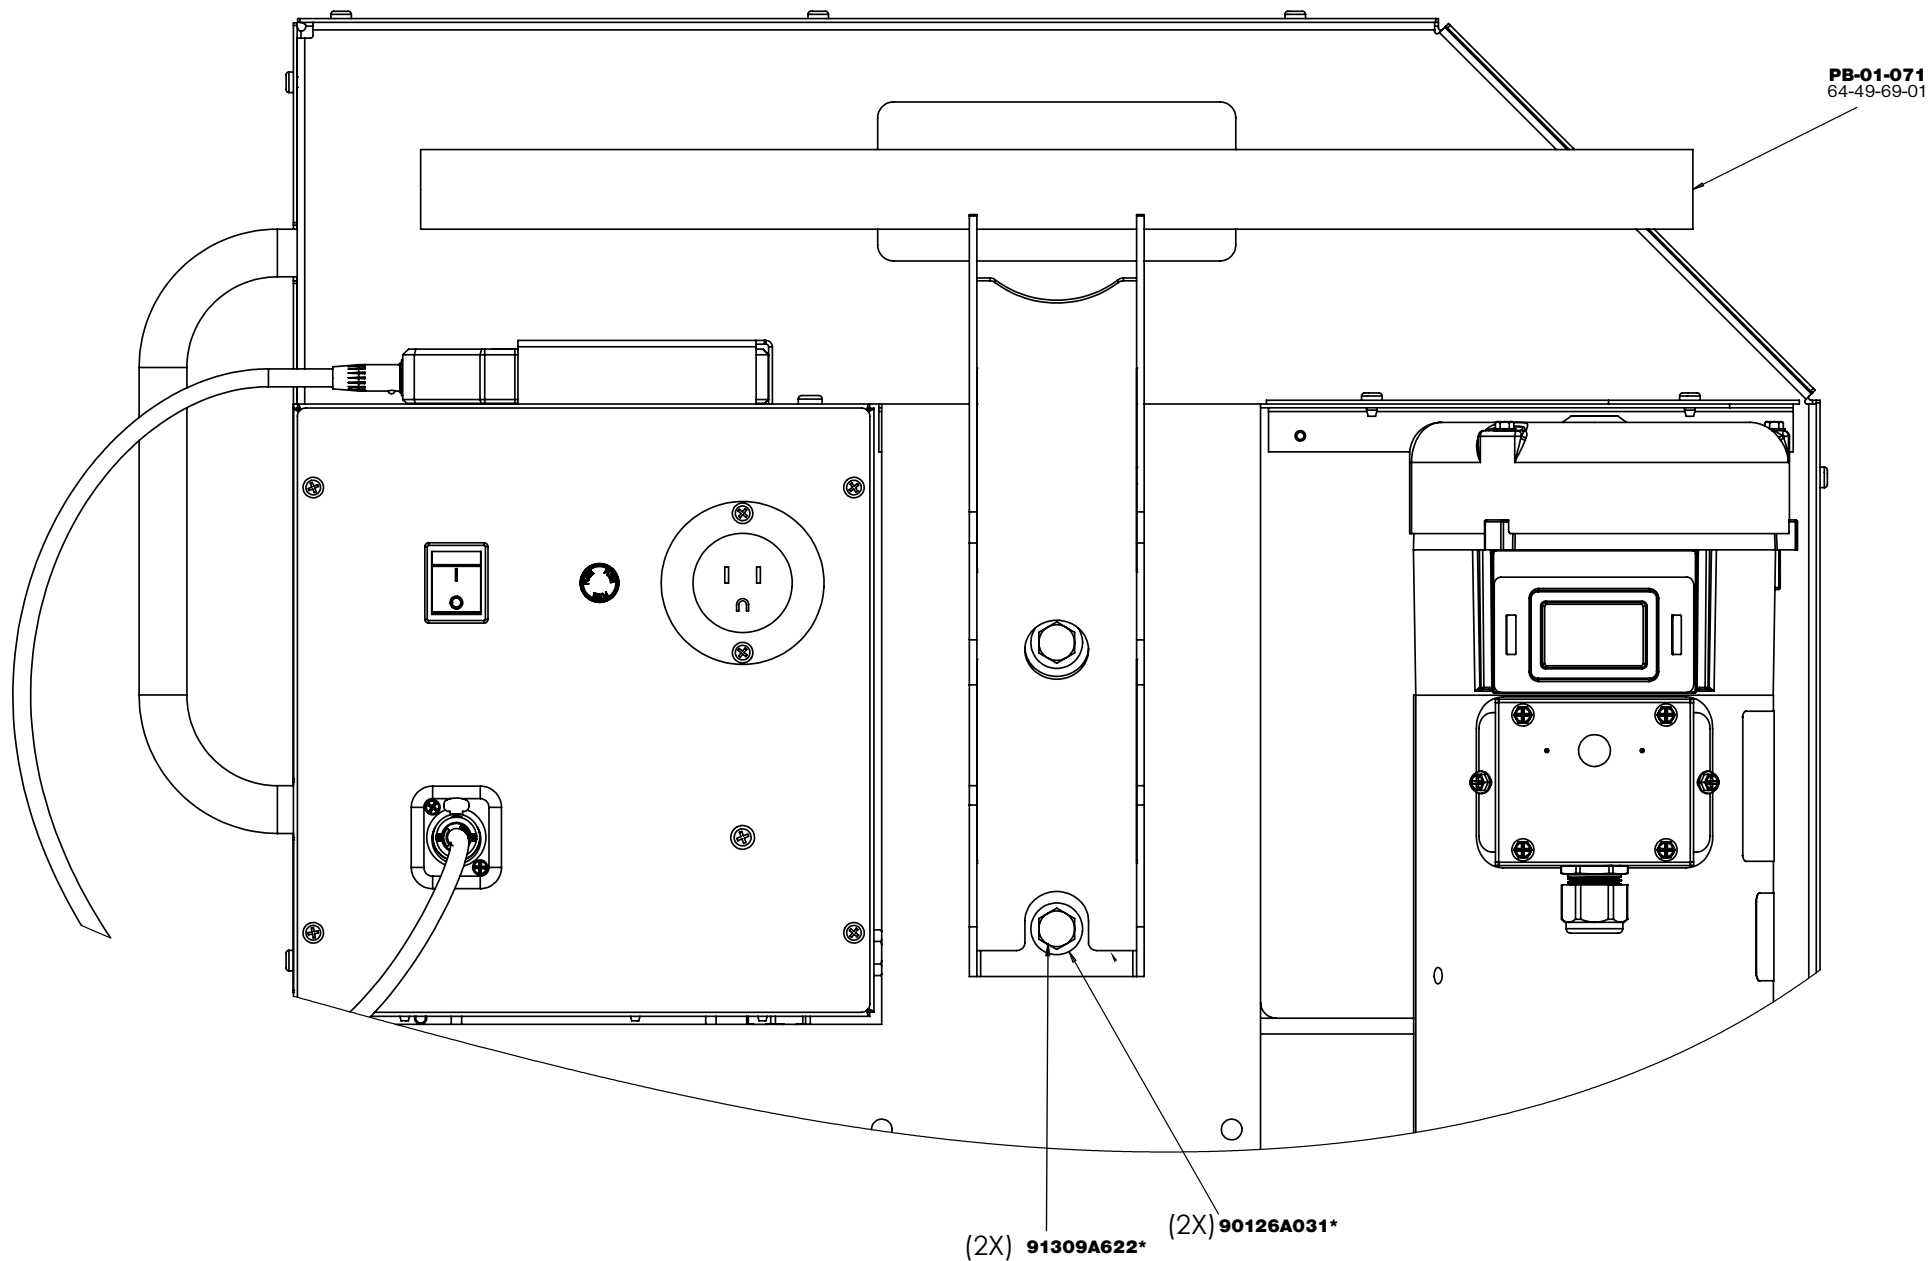


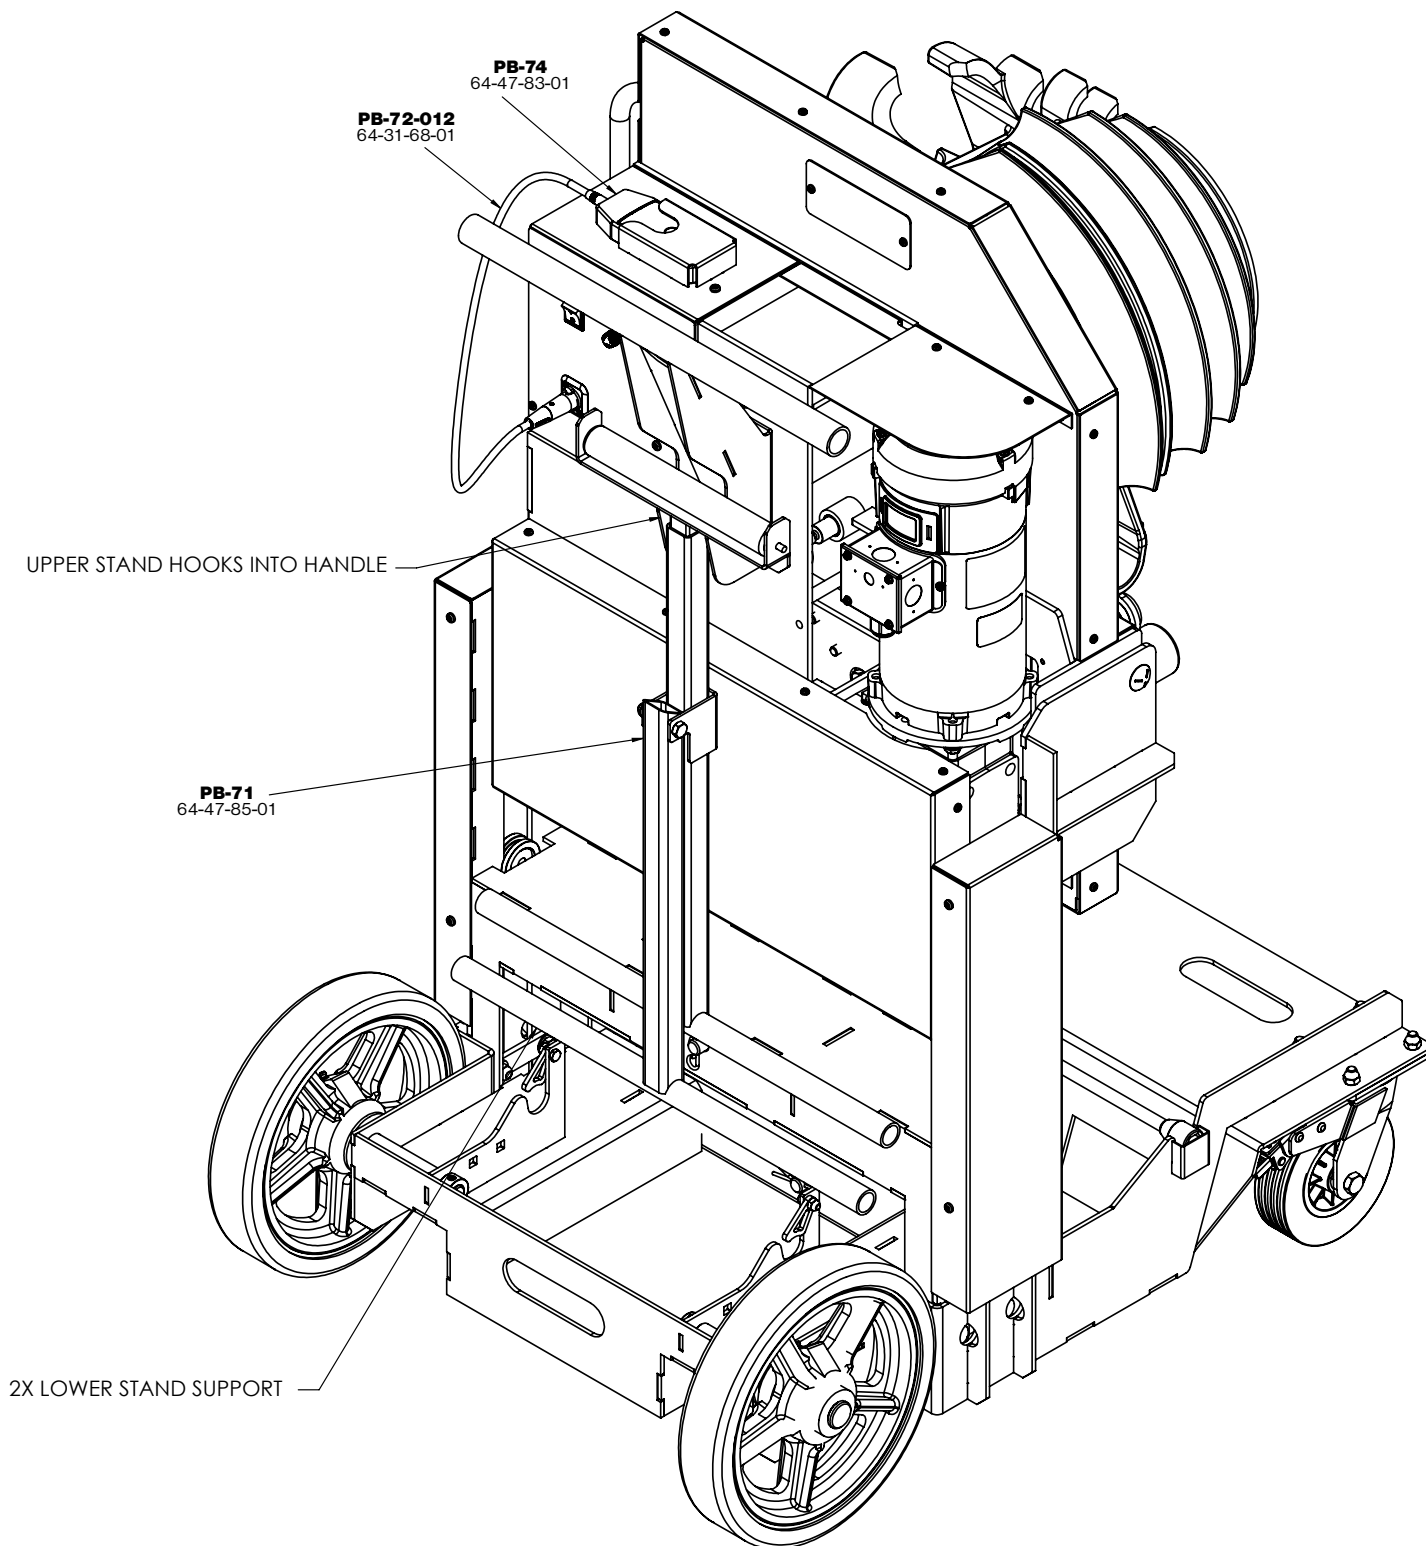

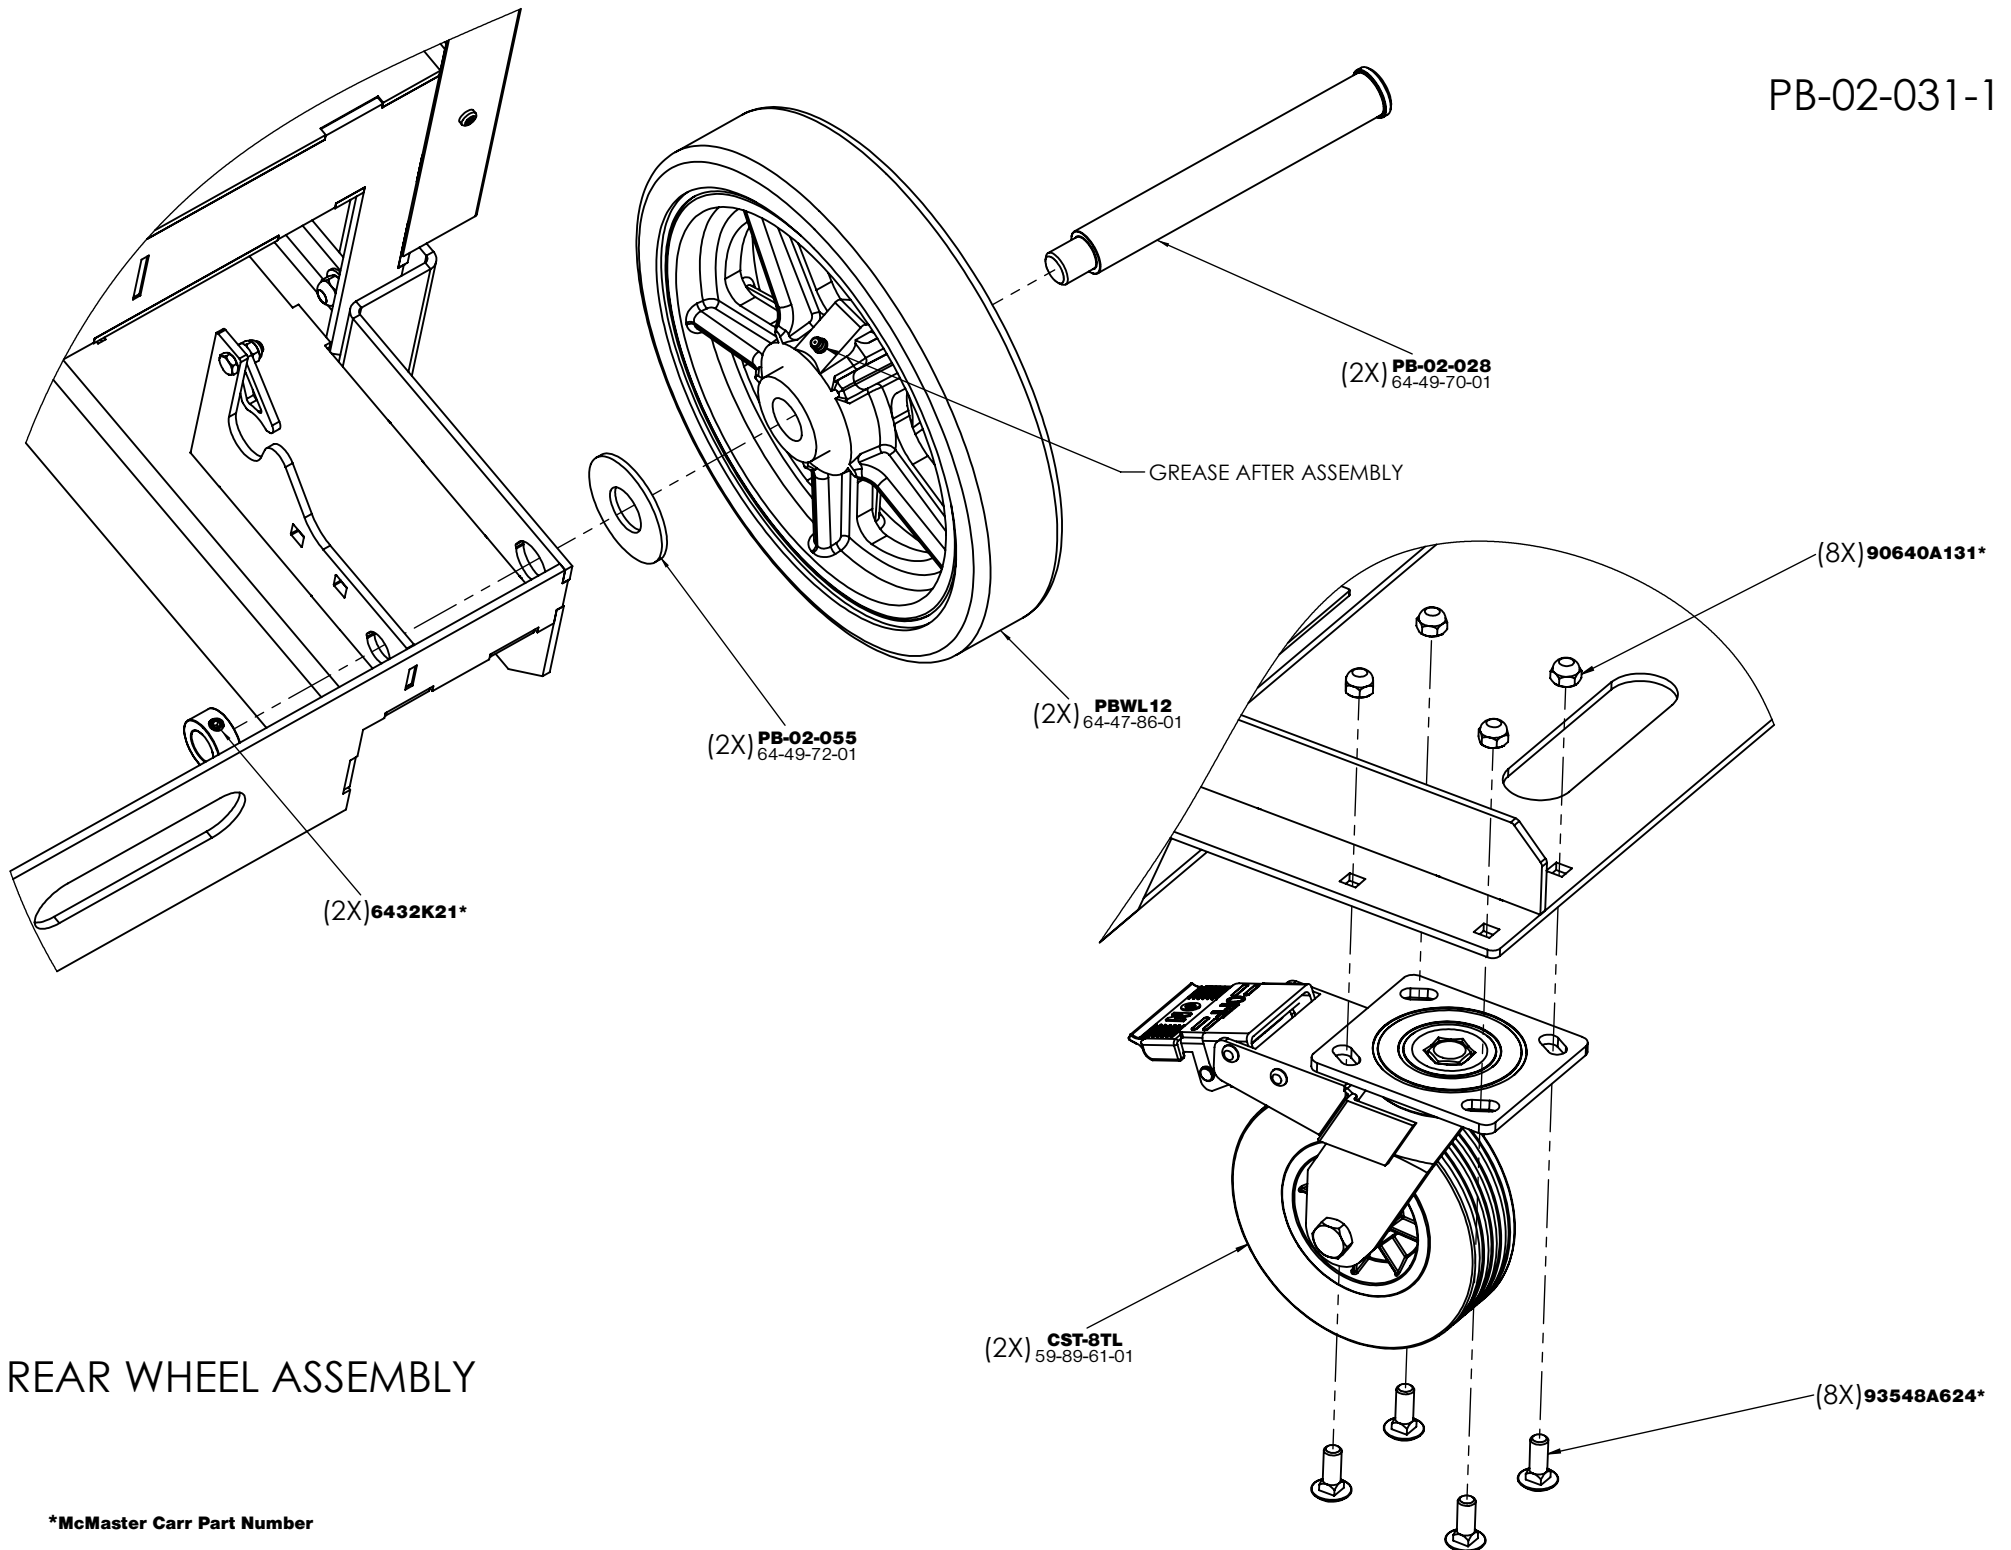


REAR WHEEL ASSEMBLY

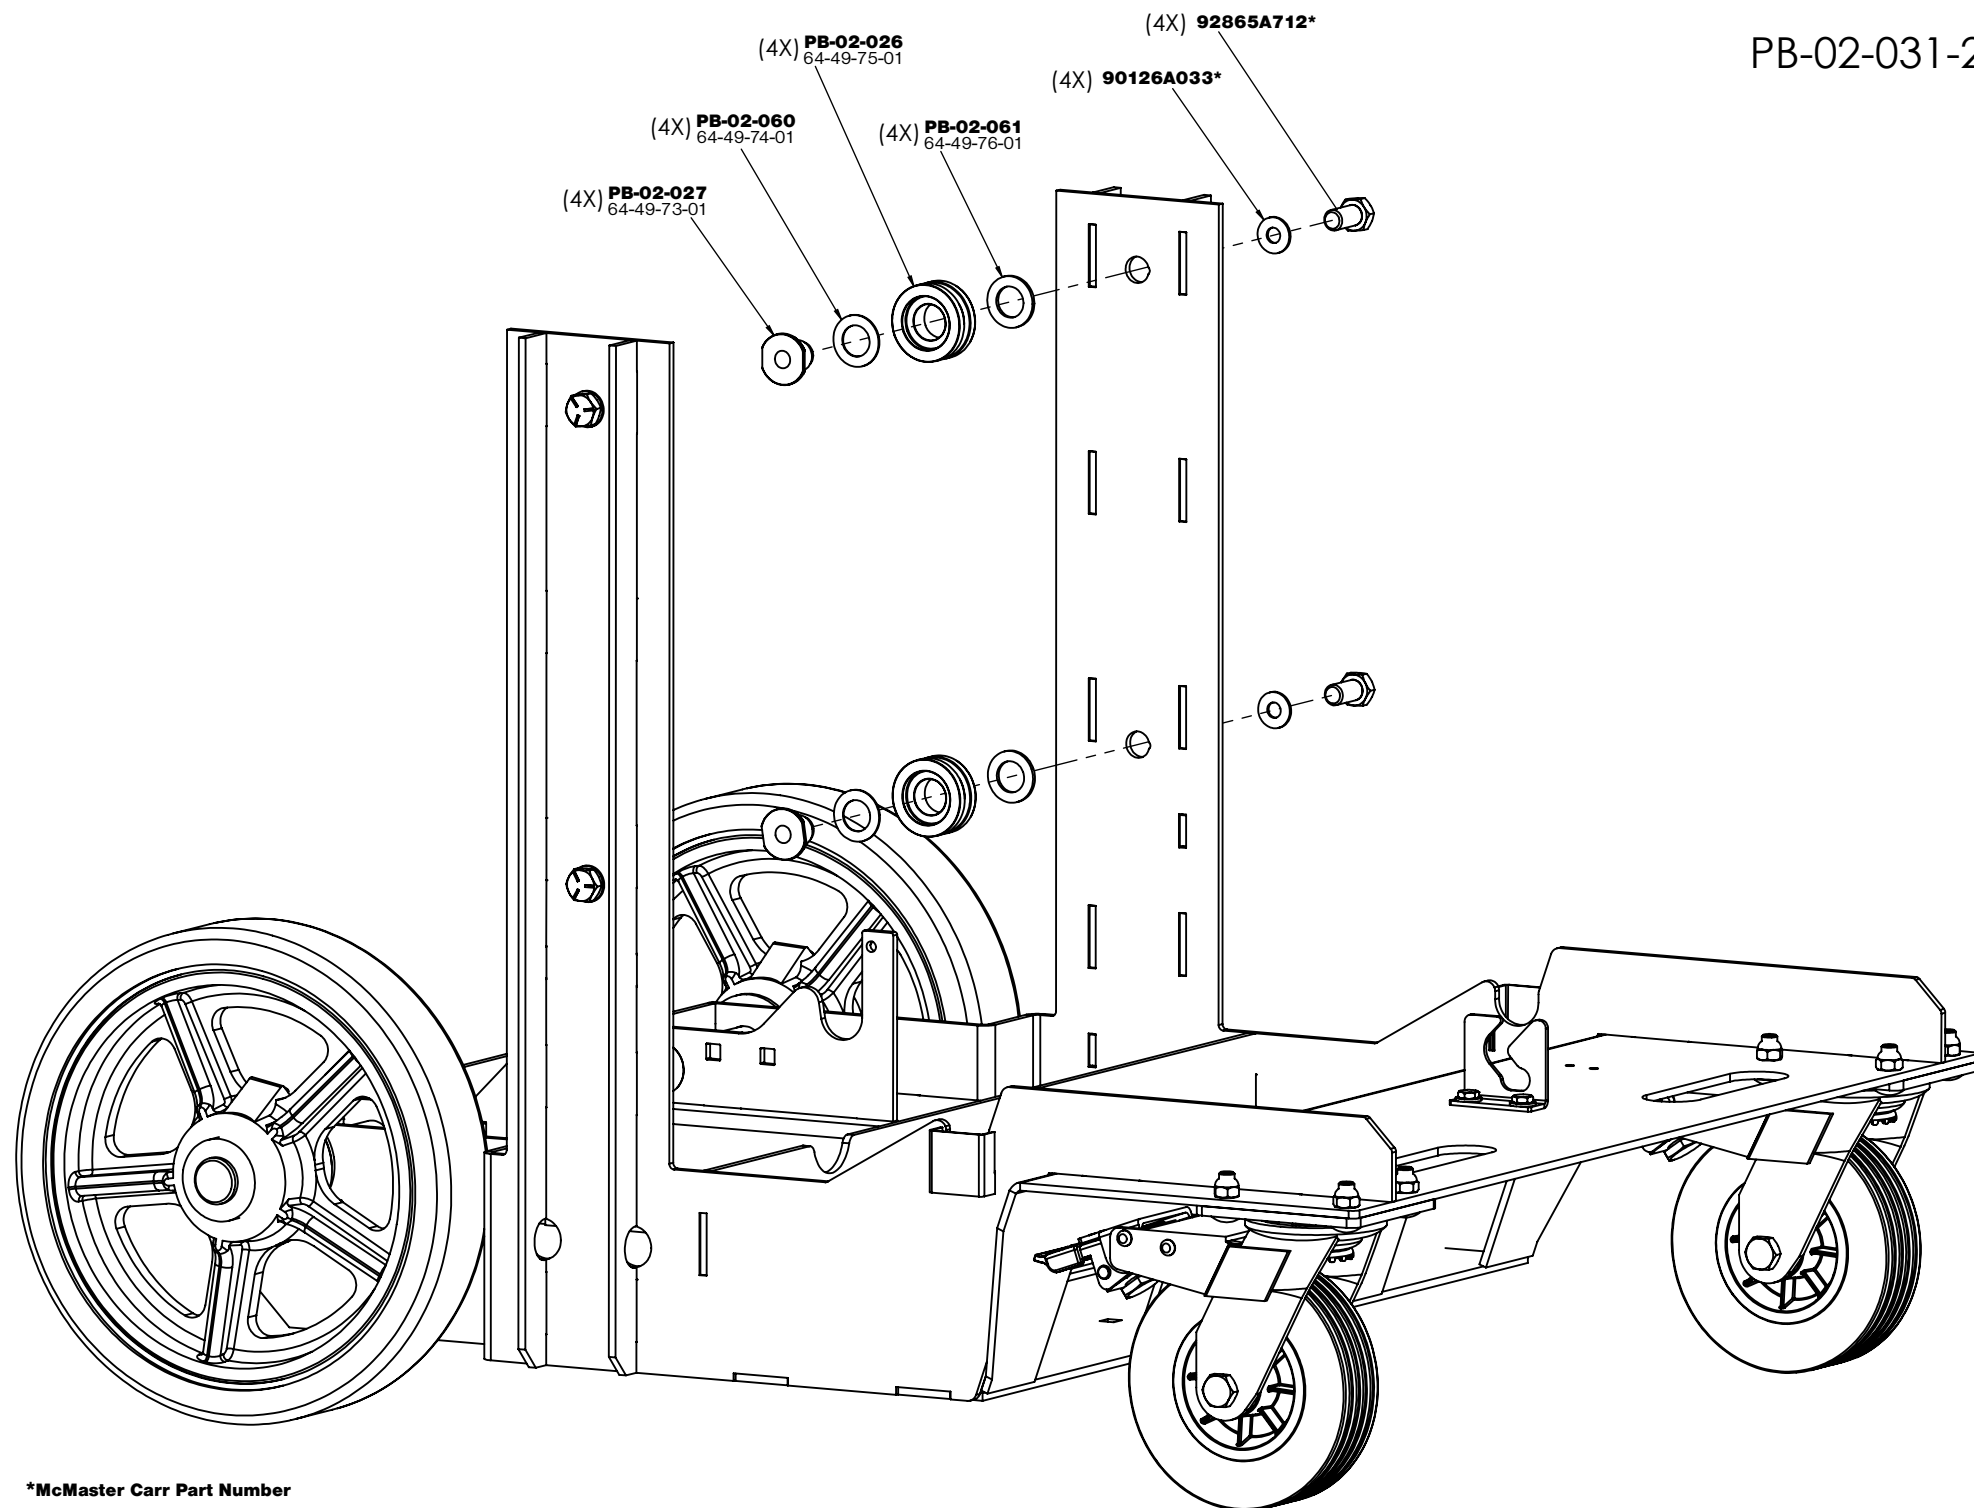


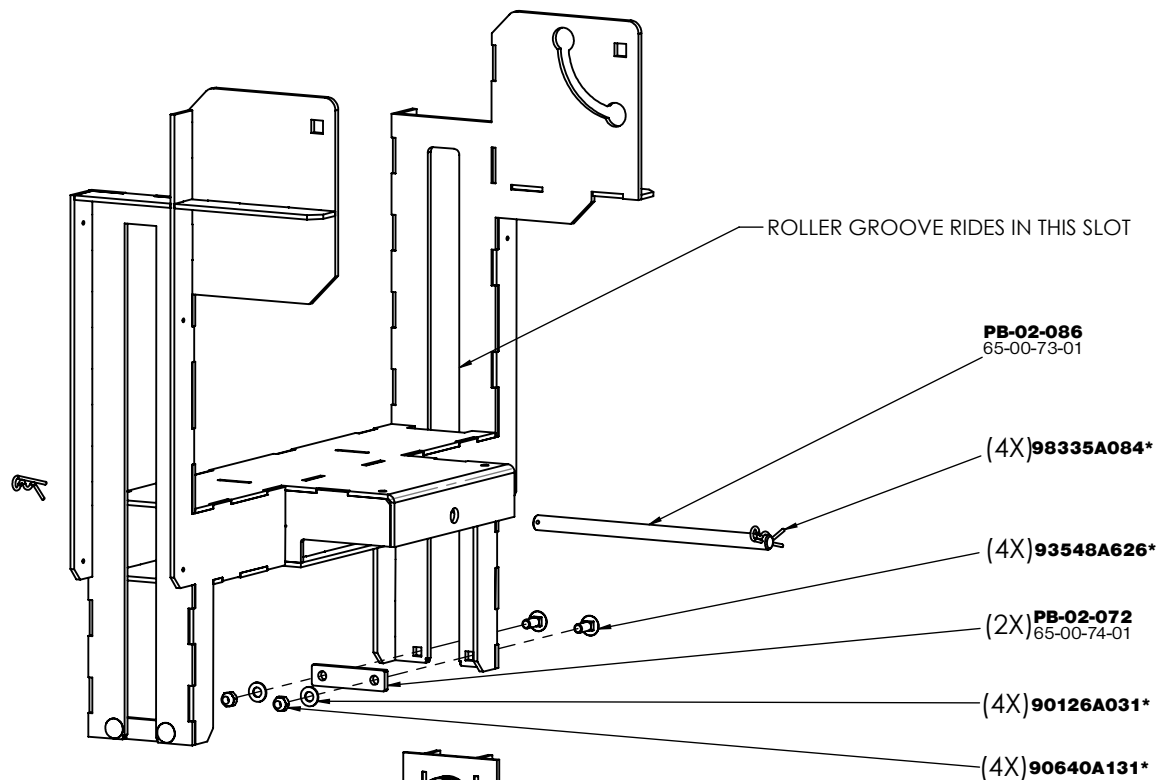


ATTACH AFTER THE UPPER
ASSEMBLY IS LOWERED
INTO PLACE

CUT AWAY SHOWING
JACK AND UPPER
FRAME ASSEMBLY

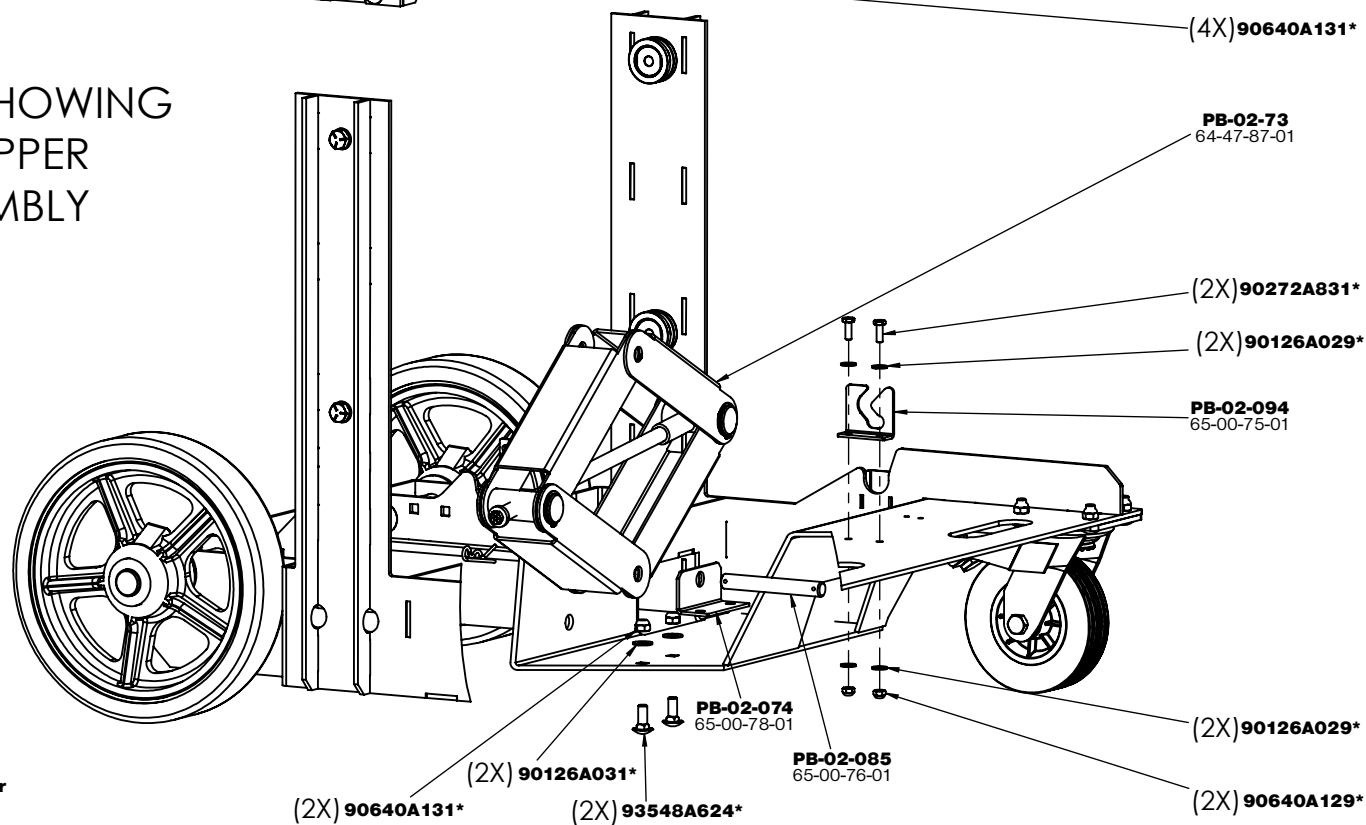

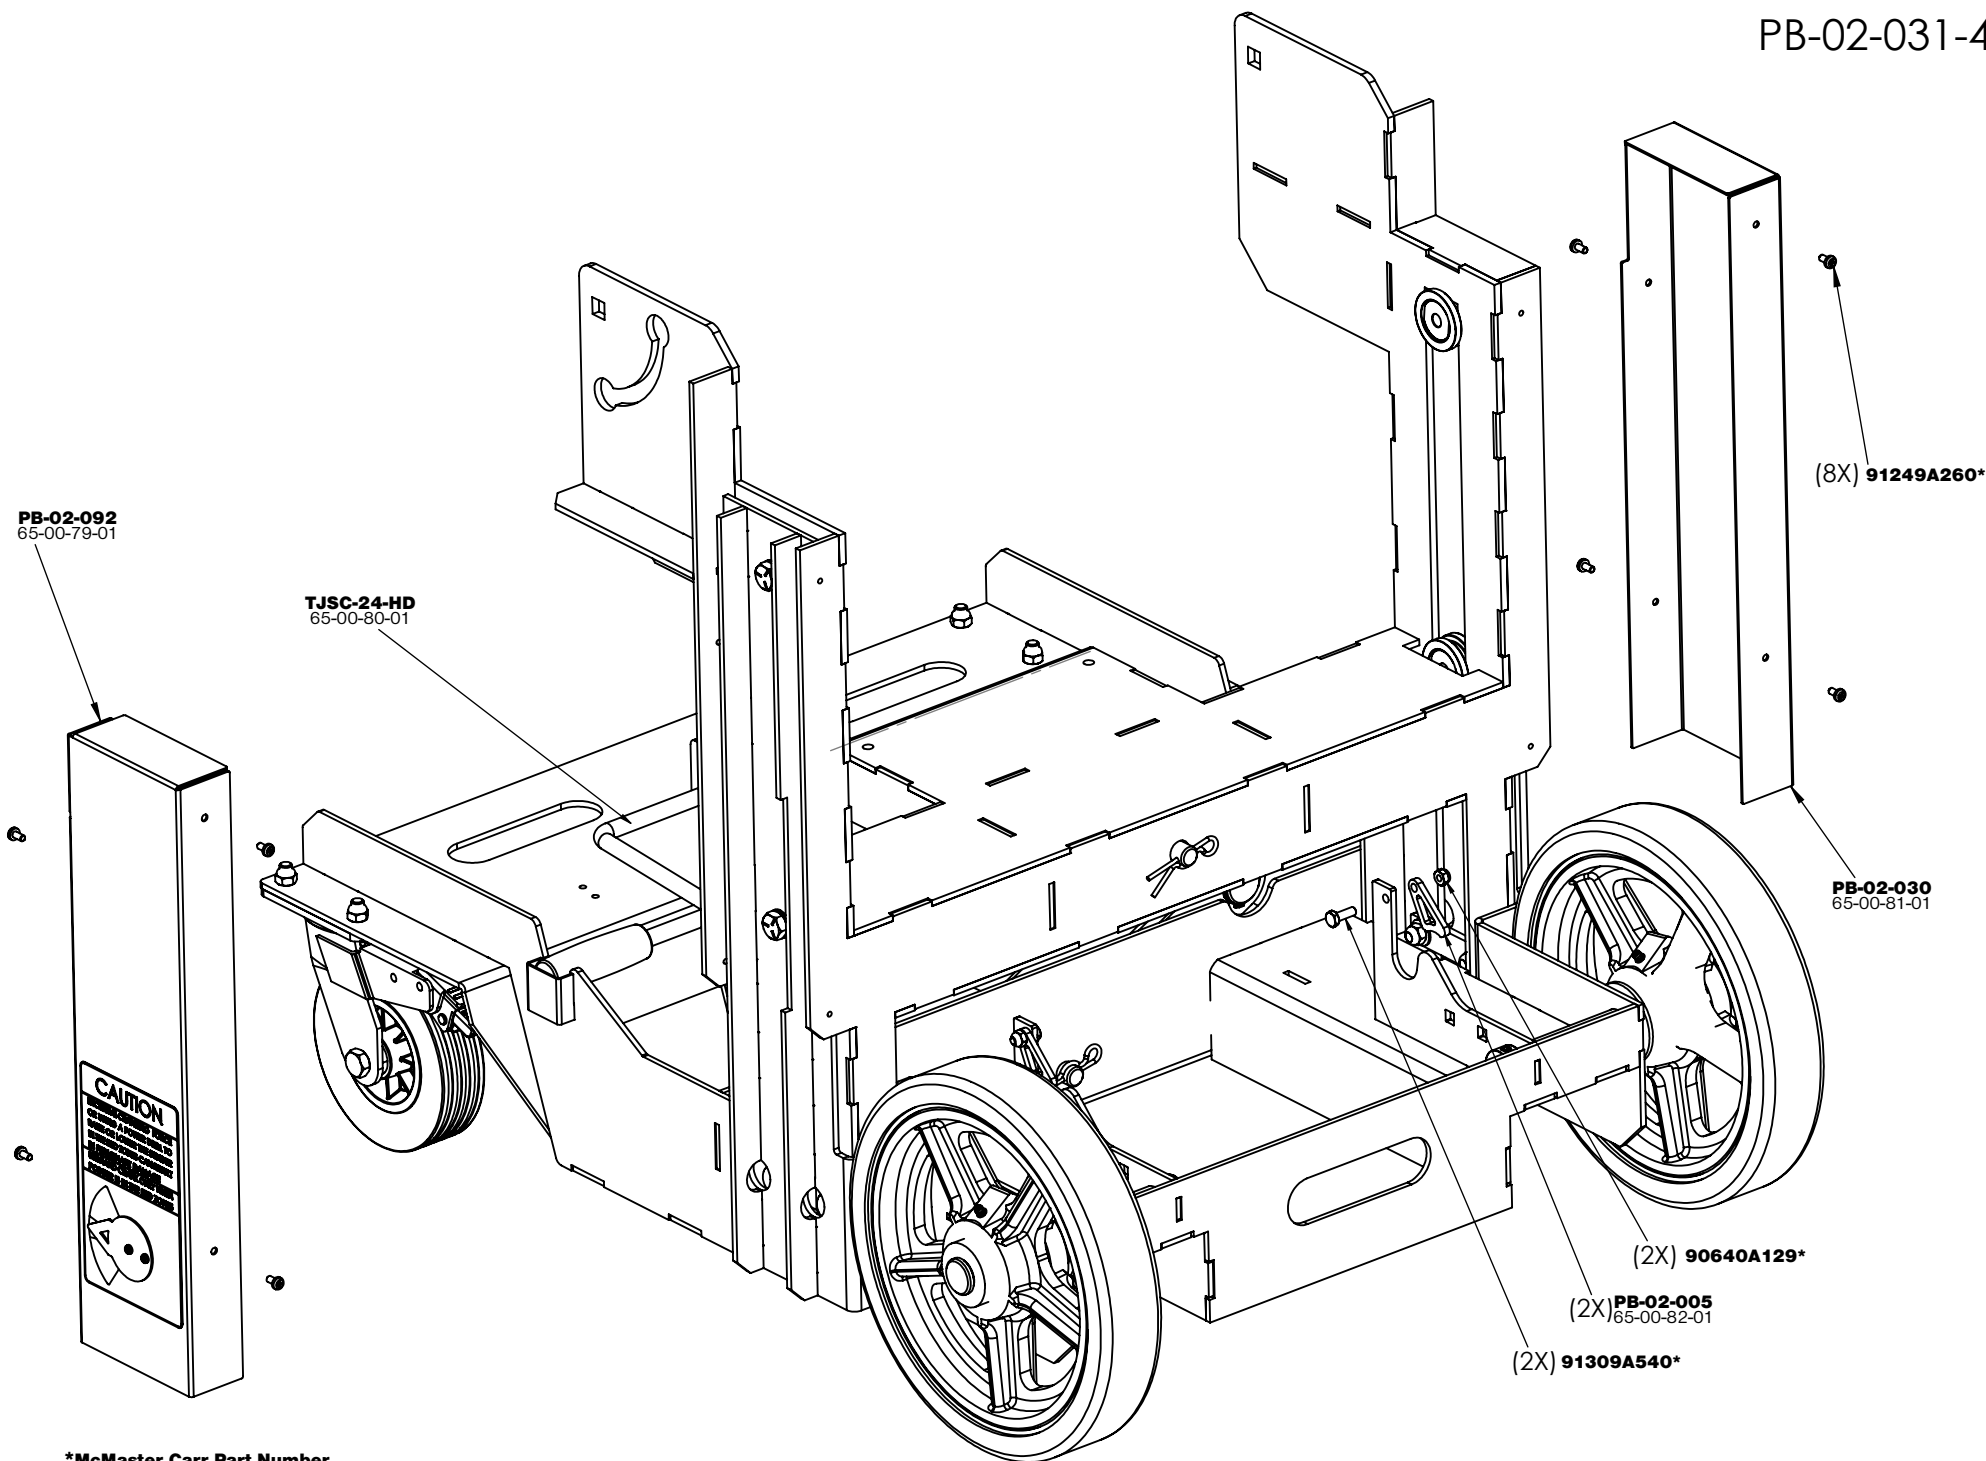

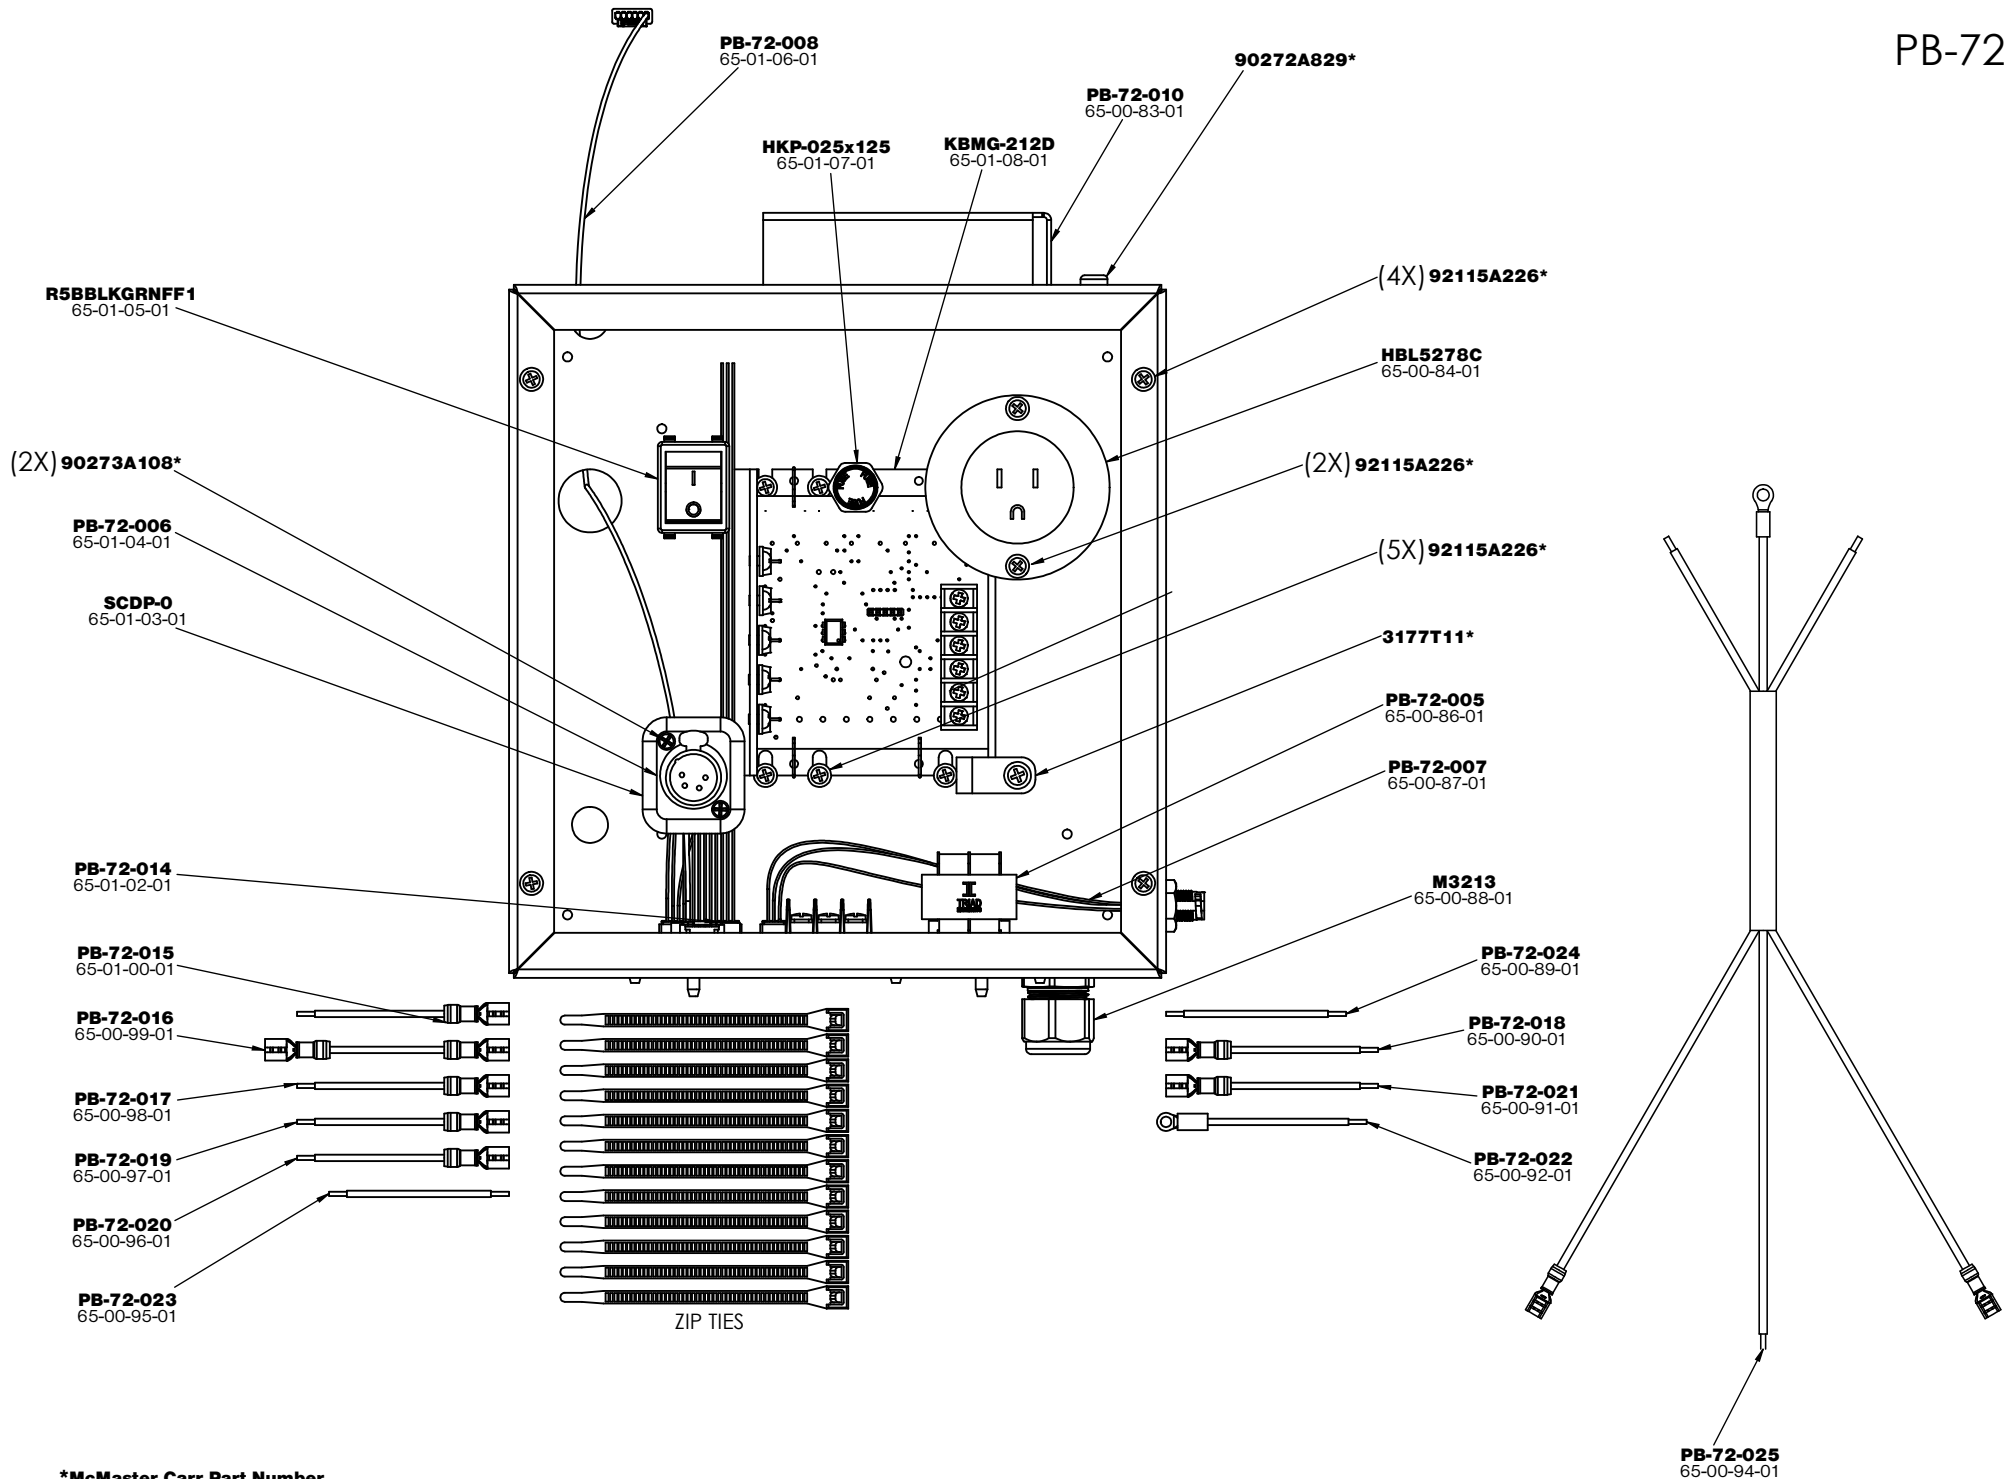

*McMaster Carr Part Number

FRONT COVER NOT SHOWN