

# Assembly Instructions:

To purchase parts or accessories, please contact us at  
[www.spectrumfurniture.com](http://www.spectrumfurniture.com)  
1-800-235-1262  
Thank you for choosing Spectrum products!



(6) 026064  
1/4-20 x 5/8" PHMS



Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding damages or if you have any questions, please call 1-800-235-1262.



## Rear Rack Rail Kit for Flat Panel Monitor Cart V2

#55274 - 42"

#55275 - 36"

Tools Required:  
Phillips screwdriver

### 1. Attaching rack rails

- A. Open rear door of cart.
- B. With a Phillips screwdriver, attach the wide side of each rear rack rail to the inner frame with (3) 1/4-20 x 5/8" PHM screws and tighten securely. (The narrow sides of the rack rails will point inward when mounted correctly.) **Figure 1.**

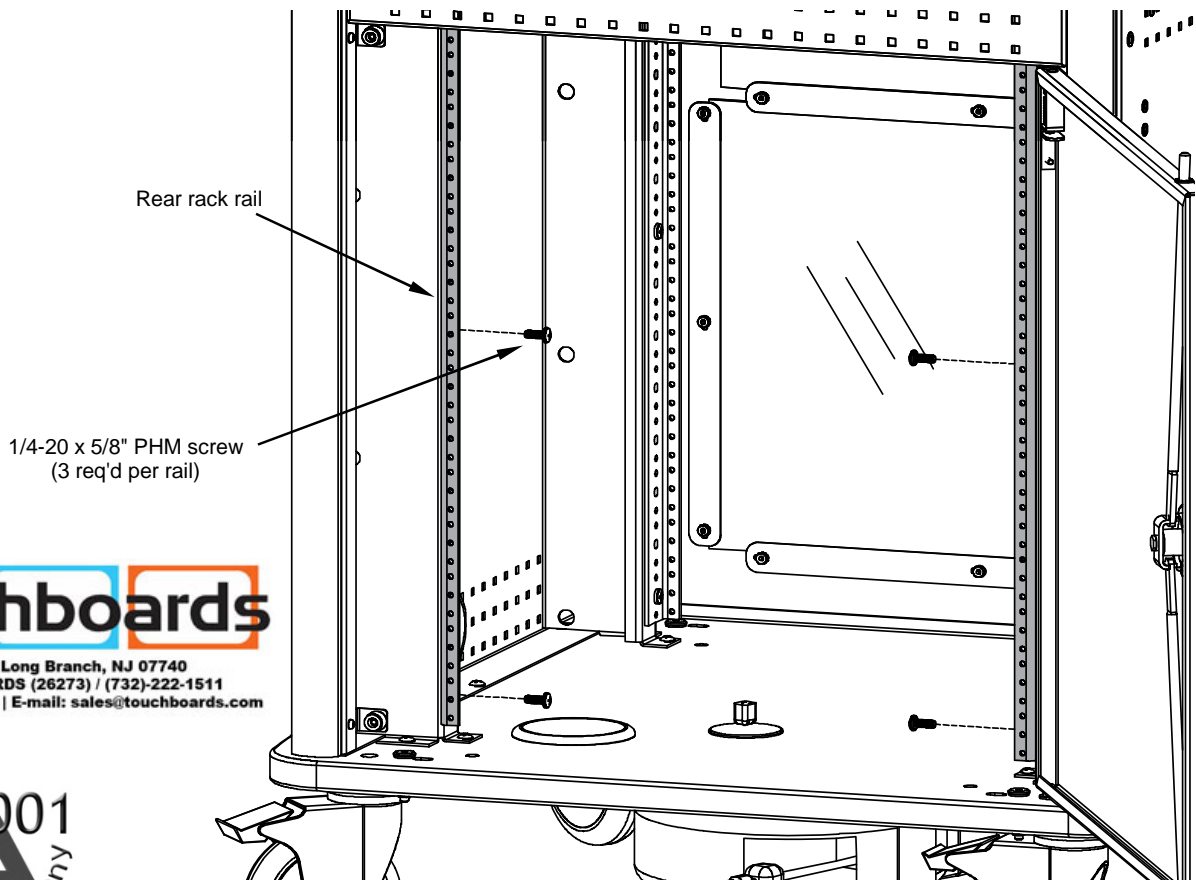


Figure 1

# Touchboards

205 Westwood Ave, Long Branch, NJ 07740  
Phone: 866-94 BOARDS (26273) / (732)-222-1511  
Fax: (732)-222-7088 | E-mail: [sales@touchboards.com](mailto:sales@touchboards.com)



**SPECTRUM**  
INDUSTRIES INC.

925 First Avenue, PO Box 400, Chippewa Falls, WI 54729 Ph: 1-800-235-1262 Fax: 1-800-335-0473

E-mail: [spectrum@spectrumfurniture.com](mailto:spectrum@spectrumfurniture.com) web: [www.spectrumfurniture.com](http://www.spectrumfurniture.com)