





Assembly Instructions:

SMALL PARTS LIST (per desk)



 1/4-20 X 5/8"
 Pan Head Machine Screw
 (10) #026064 (Black)
 (12) for 48", 60" & 72"
 Desks



 Glide Wrench
 (1) #025069


 1/4-20 X 1-3/4"
 Pan Head Machine Screw
 (4) #041289 (Silver)



 Chair Rail Bracket
 (1) #051024P
 for 48" 60" & 72" Only


 Glide
 5/16-18 x 1-5/8"
 (4) #025068



 1/4-20 x 2"
 Flat Head Machine Screw
 (2) #043771
 (3) for 48", 60" & 72"
 Desks



Rear Unit to
 Unit
 Bracket
 (1) #052463


 Dual Unit-to-unit
 Bracket
 (1) 036281

TOOLS REQUIRED FOR ASSEMBLY:
 #2 phillips screwdriver

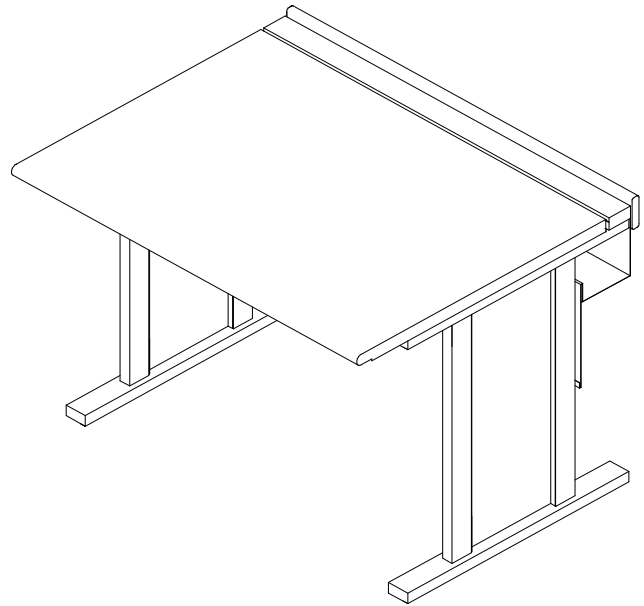

36 - 72 EVOLUTION DESK


Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding damages or if you have any questions, please call 1-800-235-

1 ATTACHING LEGS TO WORKSURFACE

A: Position legs, attach with
 4 of the **1-3/4" silver screws**
 (do not tighten screws
 completely at this point).
 See Figure 1.

For 48", 60" & 72" desks only...

B: Attach chair rail bracket
 with 2 of the **5/8" screws**
 (Tighten these screws).

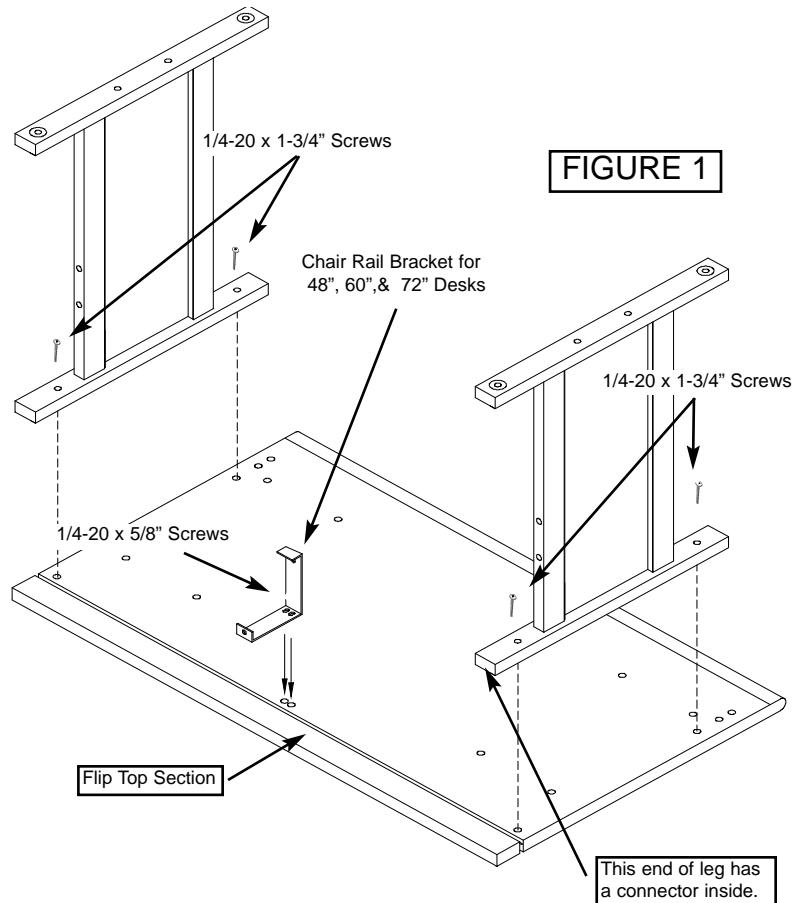

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

SPECTRUM
INDUSTRIES INC.

1600 Johnson St. P.O. Box 400 Chippewa Falls, WI 54729 Ph. 1-800-235-1262 Fax. 1-800-335-0473
 email spectrum@spectrumfurniture.com www.spectrumfurniture.com


2 ATTACHING MODESTY PANEL/CORD CHANNEL TO LEGS

A: Attach Modesty Panel/Cord Channel to back of legs as shown in FIGURE 2 with 4 of the **5/8"** screws.

B: Install **glides** in bottom of leg at this point.

Tighten all screws now.

NOTE: If using chair rail bracket, slide cord channel over bracket, then attach to legs. Bracket will rest **inside** of cord channel.

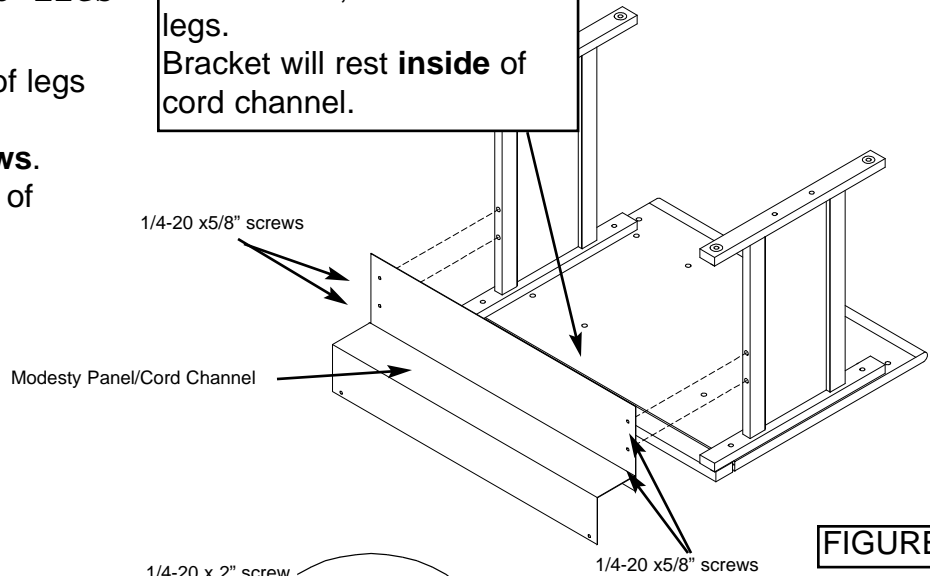

3 ATTACHING CHAIR RAIL



A: Stand desk upright. Attach chair rail using 2 of the **2" flat head screws** into the connectors in back of legs (the countersunk holes are down and out). See FIGURE 3 & FIGURE 4.

For 48", 60" & 72" desks only...

B: Attach chair rail to **chair rail bracket** with 1 - **2" flat head screw**.

(Chair rail bracket may require adjustment for proper alignment.)

C: Tighten screws.

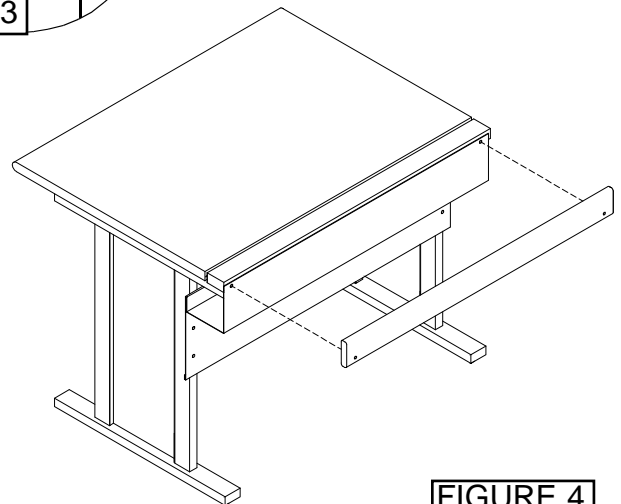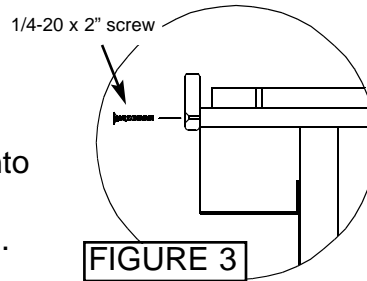

4 ATTACHING DESKS TOGETHER

A: The unit to unit brackets secure one desk to another, the front side is attached using 4 of the **5/8" screws** for the **dual unit to unit bracket**. See FIGURE 5.

B. The rear attachment is done by backing out the leg screw part way and sliding the **rear unit to unit bracket** under the screw head and tighten. See FIGURE 6.

