


205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

2. Work surface Installation

- A. Set the work surface onto the installed 29" wall filler panel(s) and the stepped-height bracket as shown in Figure 2.B. Align the mounting holes and attach the work surface to the bracket with (2) 1/4-20 x 15mm JC bolts.

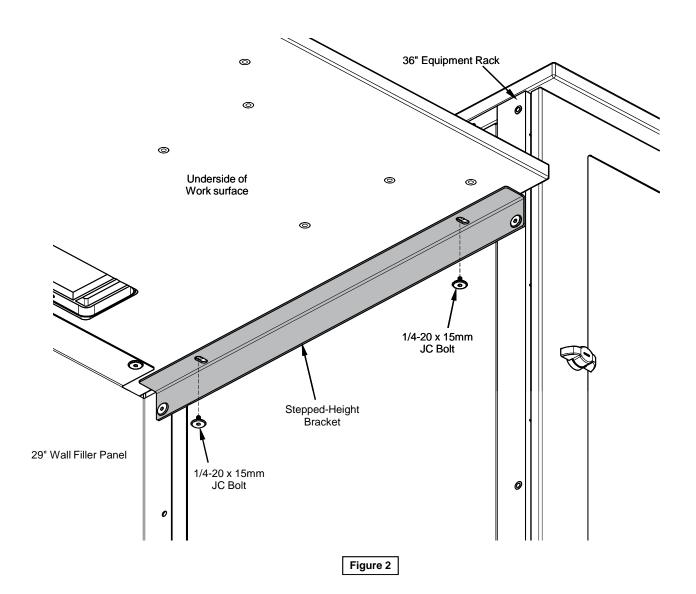



SPECTRUM 925 First Avenue, PO Box 400, Chippewa Falls, WI 54729 Ph: 1-800-235-1262 Fax: 1-800-335-0473 E-mail: spectrum@spectrumfurniture.com web: www.spectrumfurniture.com