



## Schematic

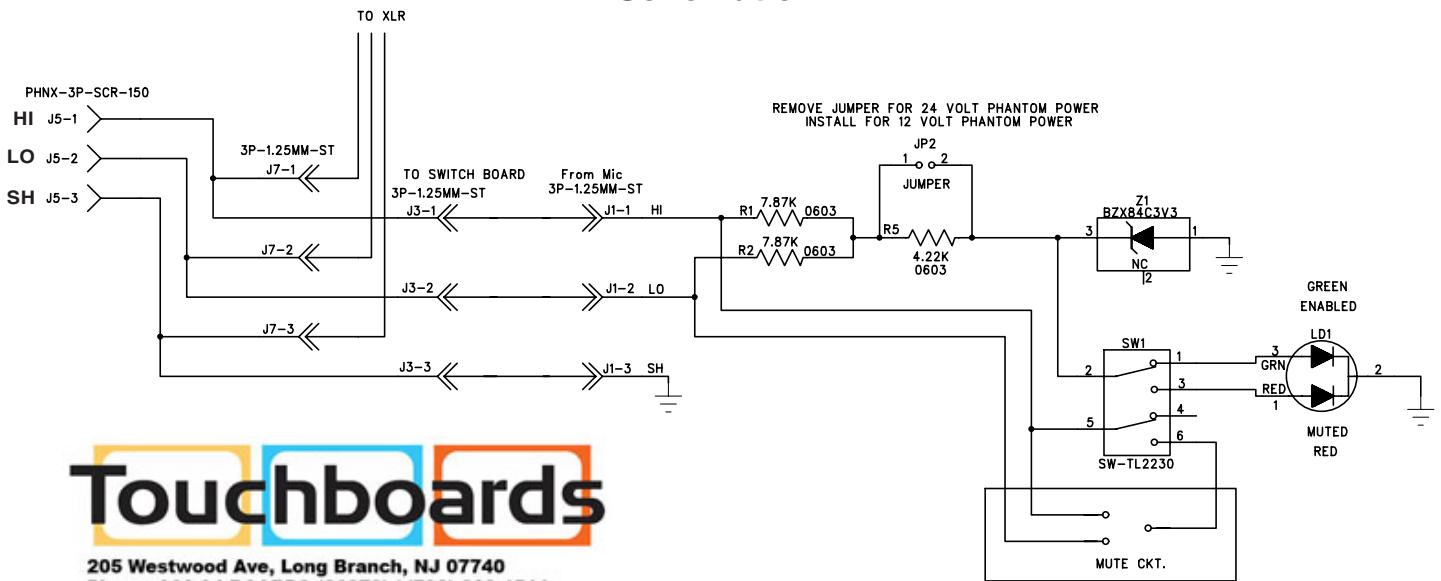

**Touchboards**

205 Westwood Ave, Long Branch, NJ 07740  
 Phone: 866-94 BOARDS (26273) / (732)-222-1511  
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

## Schematic

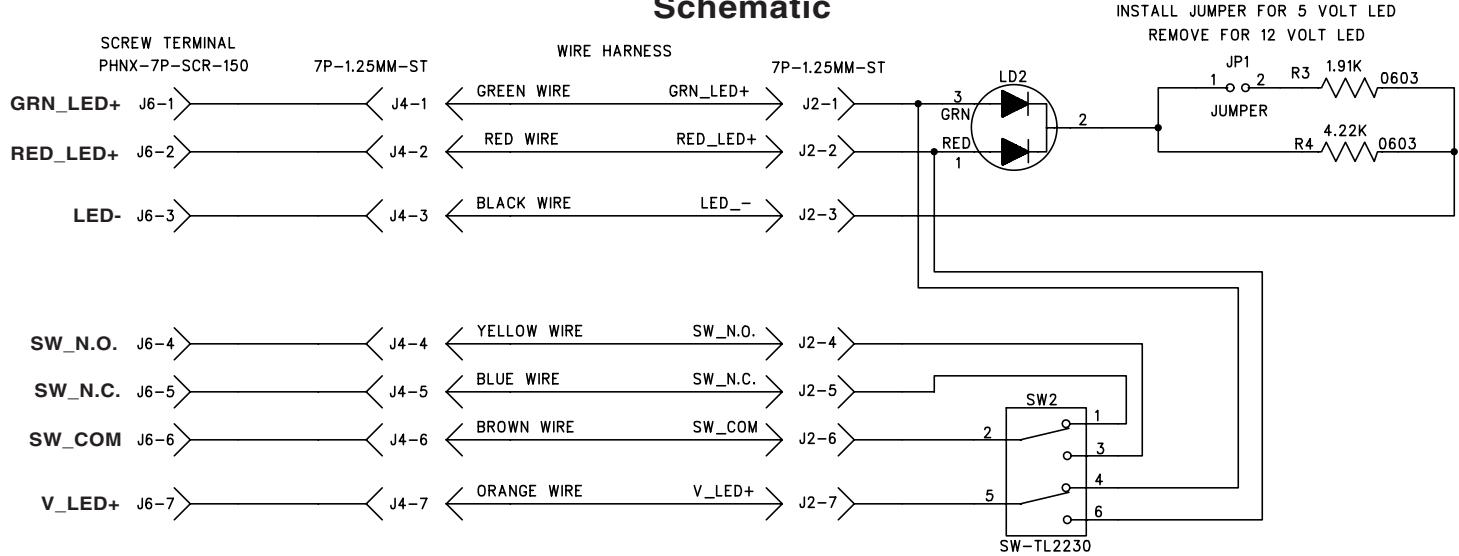


For Led drive use one or the other only:  
 Connect to J6 Pin 1&2 for external led drive,  
 or connect to J6 Pin 7 for self generated feedback.

**FSR**


244 BERGEN BLVD.  
 W. PATERSON, NJ 07424  
 TEL. (973) 785-4347

## T3-MJ-2B WITH MUTE

REV. LEVEL	REF. ECO	REV. DATE	APPROVED	DESCRIPTION	PRODUCT: T3-MJ-2B MUTE	PART# 17244
					DRAWN BY: AB	DATE: 11-04-2011
					APPROVED BY:	DATE:
					DWG.# C-1160	REV. PAGE 1 OF 2

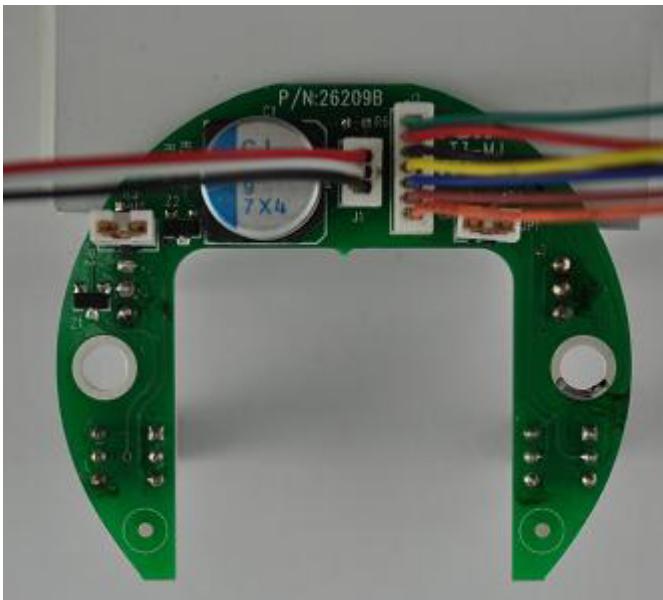

After installing the cover in the table, insert wire harnesses into this hole.

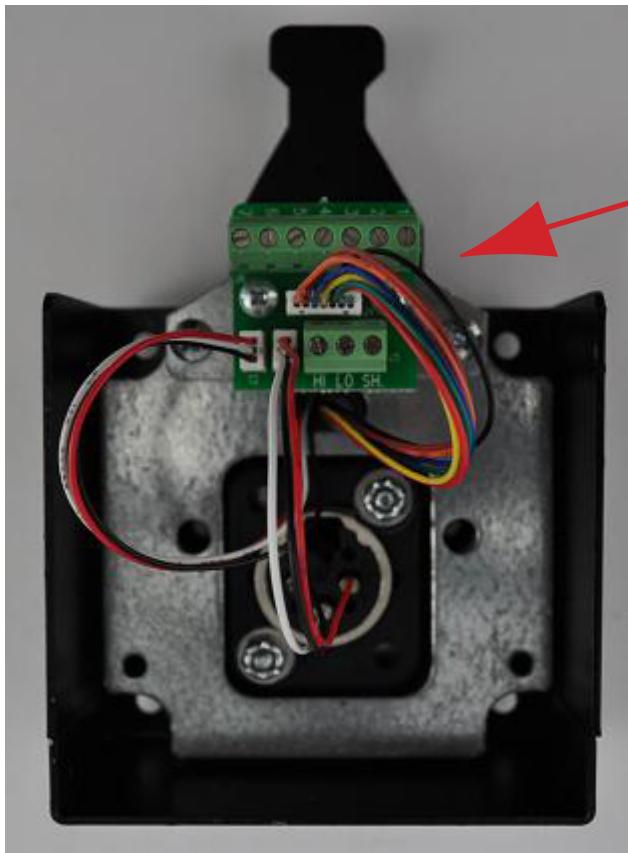

Plug the wire harnesses to PCB headers as shown.

**NOTE: PCB HEADERS ARE FRAGILE,  
ONCE INSTALLED, DISCONNECTING  
IS NOT RECOMMENDED.**

**FSR**

244 BERGEN BLVD.  
W. PATERSON, NJ 07424  
TEL. (973) 785-4347

**T3-MJ-2B WITH MUTE**

REV. LEVEL	REF. ECO	REV. DATE	APPROVED	DESCRIPTION	PRODUCT: T3-MJ-2B MUTE	PART# 17244
					DRAWN BY: AB	DATE: 11-04-2011
					APPROVED BY:	DATE:
					DWG.# C-1160	REV. PAGE OF 2 2