
TH-1040-CTS TH-1040-CTL TH-1040-CTSW TH-1040-CTLW

Installation Instructions 4telehook

Ceiling Tilt Short Mount / Ceiling Tilt Long Mount

Component Checklist

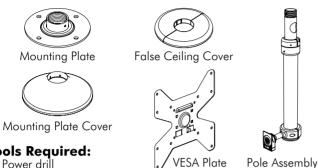

Tools Required:

- Power drill
- 7mm (1/4") drill bit
- 12mm (½") masonry drill bit
- Phillips head screw driver
- 17mm ($^{11}/_{16}$ ") Socket Wrench or Shifter

Hardware M4x16/25mm (x4 each) 2.5/3/5mm Coach Screw (x4) Allen Key M5x16/25mm (x4 each) M4/5/10 Washer Nylon Anchor (x4) (x4 each) M6x16/30mm (x4 each) M4/5 Spacer (x4) M5/6 Spacer (x4) **Display Mounting Screws** (optional) Security Screw Set Screw


IMPORTANT INFORMATION:

- IMPORTANT Install Telehook 1040 Ceiling Tilt Mount (Short/Long) as per Installation Instructions.
- This product supports a maximum load of 25kg (55lbs).
- This product supports VESA mounting hole configurations 75x75mm, 100x100mm, 200x100mm, 200x200mm.
- The manufacturer accepts no responsibility for incorrect installation.


Step 1. Check Components

Check you have received all parts against the Component Checklist and Hardware above.


Step 2. Install Mounting Plate

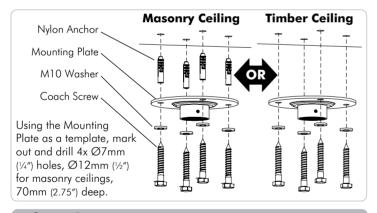


Step 3. Install Mounting Plate Cover

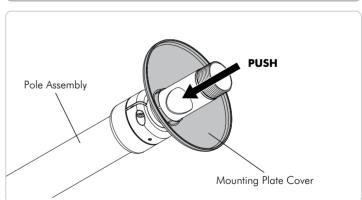


Step 4. Attach Pole Assembly to Mounting Plate

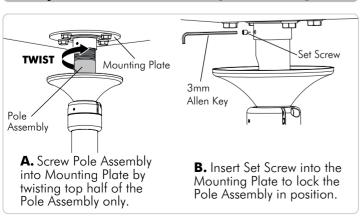


Step 5. Position Mounting Plate Cover

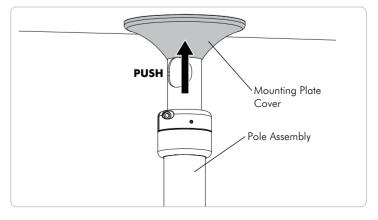


Step 6. Set Height of Pole

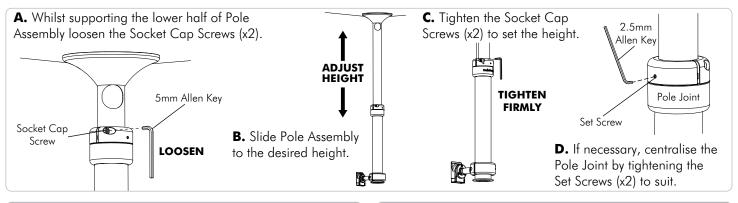


Step 7. Attach VESA Plate to Display

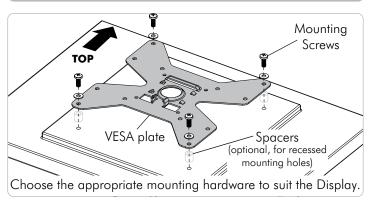


Step 8. Attach Display to Pole Assembly

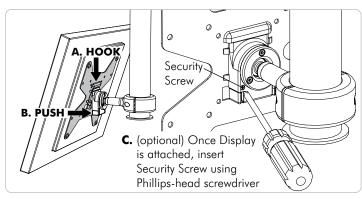


Step 9. Cable Management

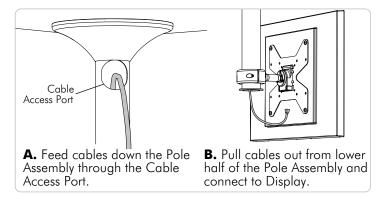


Step 10. Height Adjustment

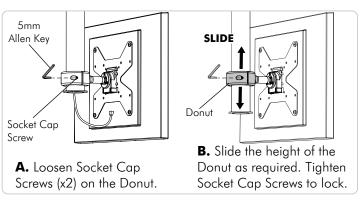

Step 11. Final Adjustment

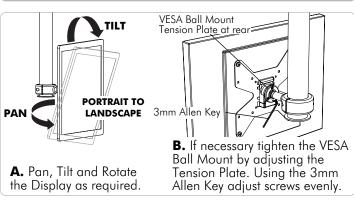

Step 12. Install False Ceiling Cover

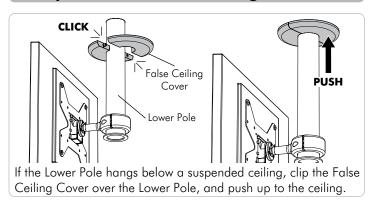





No portion of this document or any artwork contained herein should be reproduced in any way without the express written consent Atdec Pty Ltd. Due to continuing product development, the manufacturer reserves the right to alter specifications without noticed. Published 29.09.11 ©