


Installation Instructions

telehook


Raked Ceiling Accessory For TH-1040-CTS and TH-1040-CTL

Components Checklist

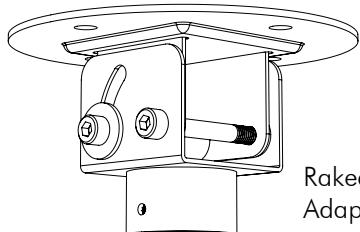

Raked Ceiling Adapter

Hardware



6mm Allen Key

(use hardware from
TH-1040-CTS or TH-1040-CTL)

Tools Required:

- Power Drill
- 7mm (0.25") drill bit
- 12mm (0.5") masonry drill bit
- 17mm (0.69") Socket Wrench or Shifter

IMPORTANT INFORMATION


- ! **IMPORTANT - Install Telehook 1040 Raked Ceiling Accessory as per Installation Instructions.**
- ! This product is to be installed in conjunction with TH-1040-CTS and TH-1040-CTL Ceiling Mounts only.
- ! Supports maximum angle of 45°.
- ! The manufacturer does not accept responsibility for incorrect installation.

Step 1. Check Components


Check you have received all parts against the component checklist and Hardware above.

Step 2. Mount Ceiling Adapter to Ceiling

Masonry Ceiling

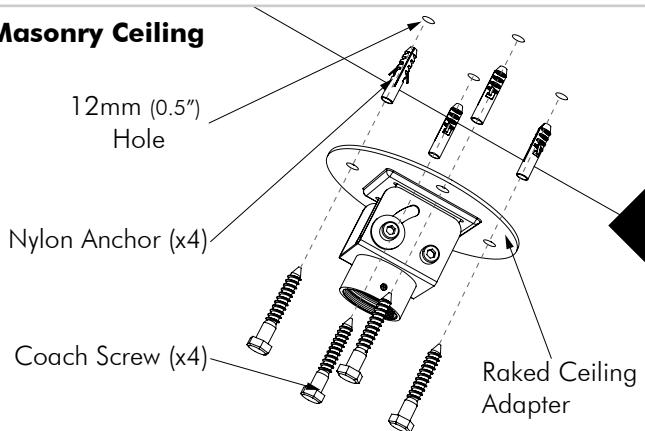


Timber Ceiling

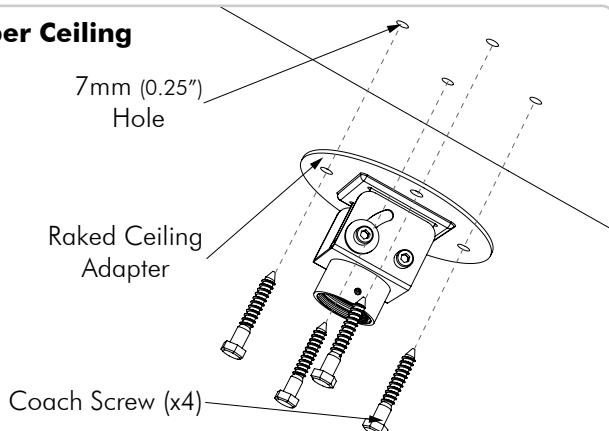


Step 3. Install Pole

Set Screw and 3mm Allen Key from TH-1040-CTS or TH-1040-CTL

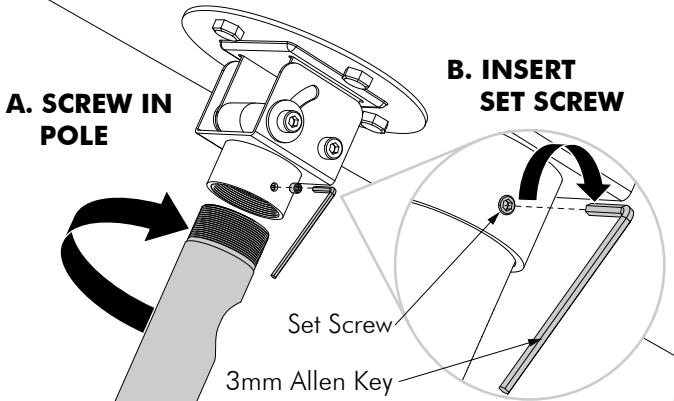

Step 4. Adjust Angle

A. LOOSEN SOCKET CAP SCREW

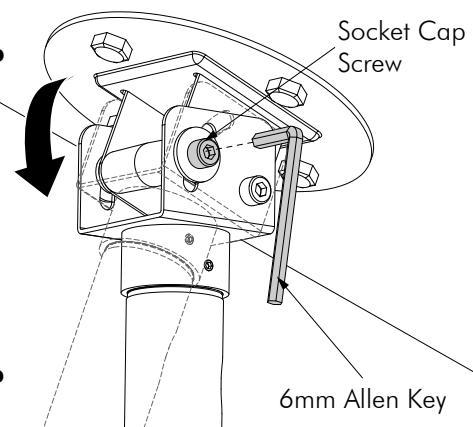

B. SET ANGLE OF POLE

C. TIGHTEN SOCKET CAP SCREW

Installation Complete, continue with installation of TH-1040-CTS/TH-1040-CTL from Step. 6 onwards.

