




Step 4 set next panels in bottom trim and slide over to engage the spline from the previous panel then install the next spline as in step 3



Step 5 set last panel in bottom trim and slide over to engage the spline from the previous panel then tap the edge trim over the end of the panel




Step 6 tap top trim down over top of panels

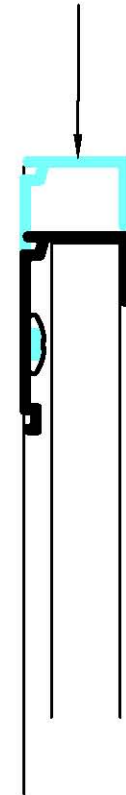






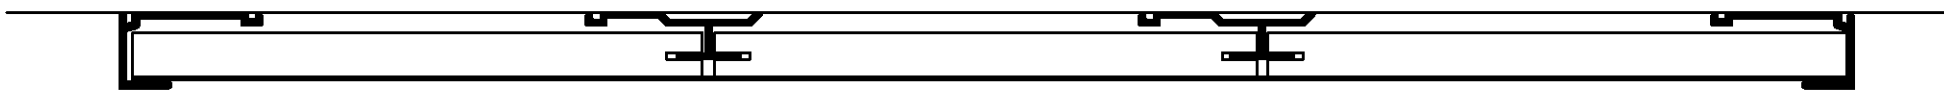


Width - 1"

PANEL INFO

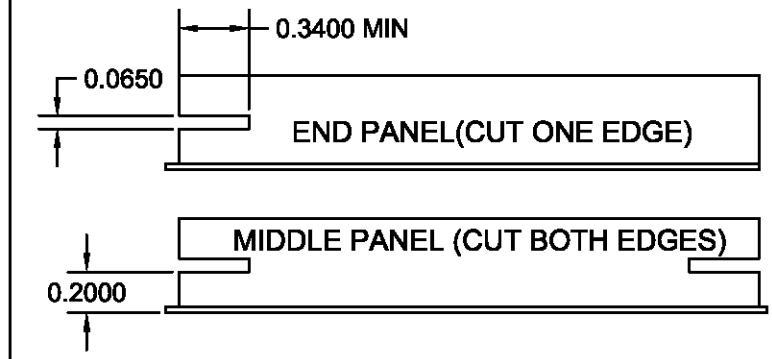

24 guage porcelain steel face laminated to $\frac{7}{16}$ " MDF core with a foil vapor barrier backing

EXTRUSION INFO

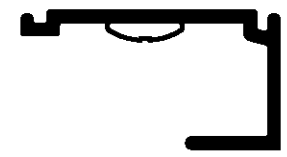

Bestrite AL-45 Markerwall trim with screw head recess . Factory notched and slotted on 16" centers



Bestrite AL-SP Markerwall spline trim with screw head recess , pre drilled at factory for wall attachment to prevent middle panel bowing and bounce .

All extrusions are :
6063-T5 Aluminum

Height

Width