


WaveJet Rackmount Installation Instructions

Tools required:

- 1) Philips Screwdriver for M3 screws
- 2) Soft work surface

Instructions:

- 1) Place the WaveJet face down on a soft work surface.
- 2) Remove four M3 x 8 screws at location 1 as shown below.
- 3) Remove four M3 x 16 screws at location 2 as shown below.

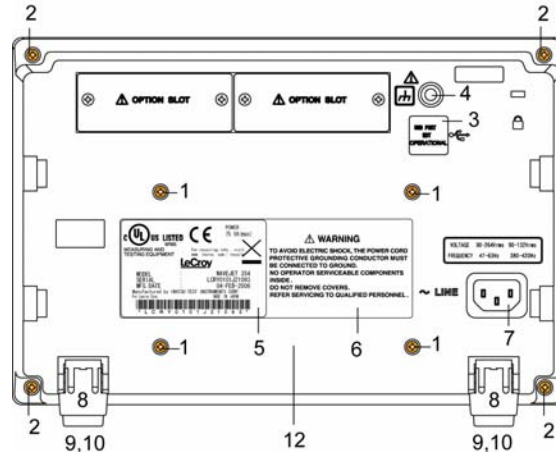

- 4) Slide rear plastic case up and off of WaveJet.
- 5) Remove two rubber feet which are installed in the bottom of the front bezel.
- 6) Place rackmount plate overtop of exposed metal shield of WaveJet so that the bent top and bottom of plate face towards the rear of the WaveJet.
- 7) Make sure that rackmount plate sits flush with the WaveJet front bezel (the lip on the front bezel should fit inside the opening in the rackmount plate).
- 8) Replace the rear plastic cover onto the WaveJet and secure using the 4 screws removed in steps 2 & 3 above.

