


## LLMC10 Modular Charging Cabinet Assembly Instructions


### Parts Key

A x1

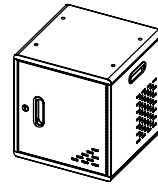


Charging Cabinet

B x1

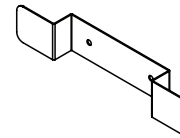

Cord Wrap

C x2

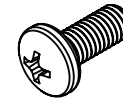


Bolt,  
Phillips Head

D x4




Thumbscrew


Tools Required:  
Phillips Head  
Screwdriver




- 1** Position cord wrap on the rear of the cabinet, over the corresponding threaded mount holes.

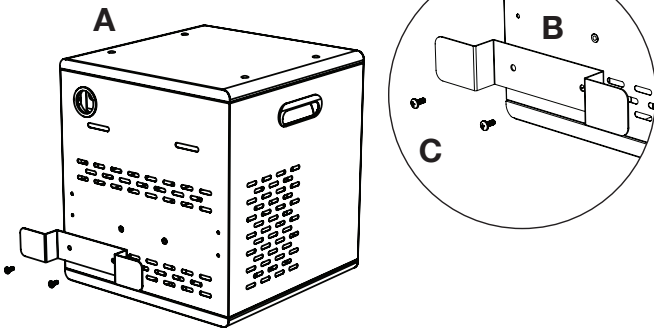


- 2** Insert each bolt into a lock washer, then a flat washer, then use to attach the casters to the Dolly.

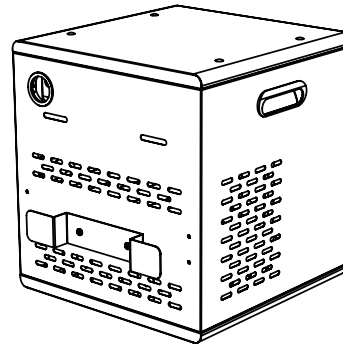


- 3** Remove the drawer from the bottom/lower cabinet by pressing the release lever on each side of the drawer track.

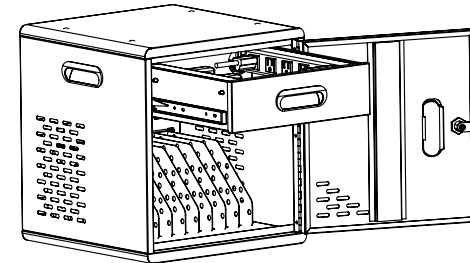

- 4** Remove the rubber caps from the top of the cabinet.

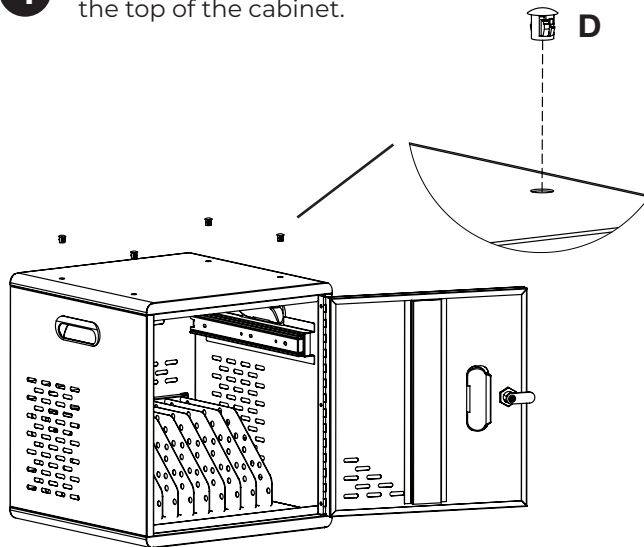

- 5** Position a second cabinet on top, aligning the threaded mount holes.

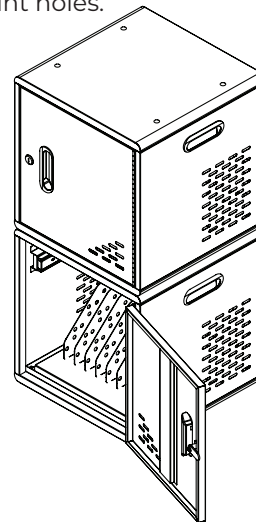

- 6** Using the thumbscrews attach the lower Cabinet to the upper Cabinet.

