
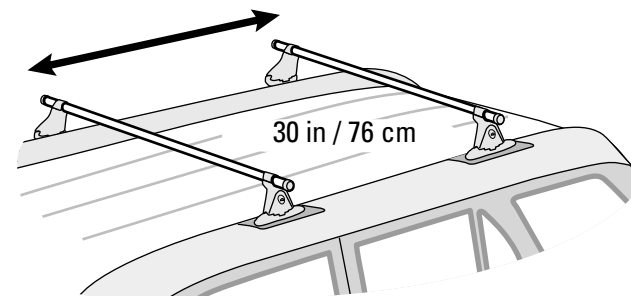



# YAKIMA LandingPad #9

US

**TOOL:**  
**5 mm Allen wrench**  
(included in Control Tower kit)

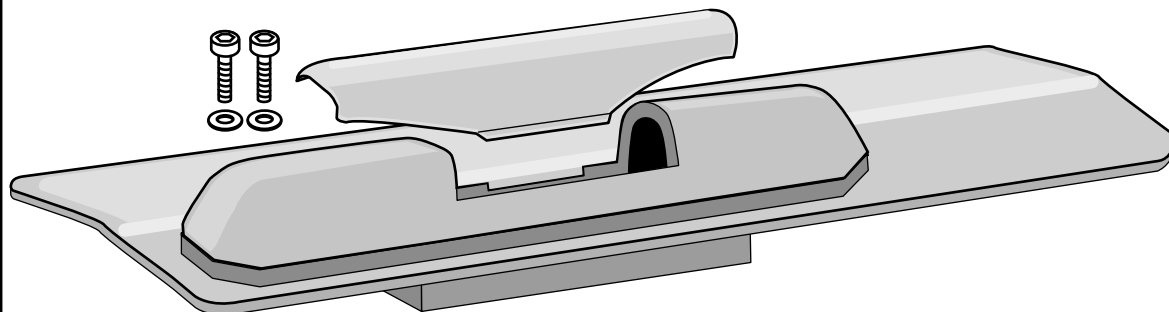

**Note: Crossbar spread for this vehicle is fixed at 30 inches.**

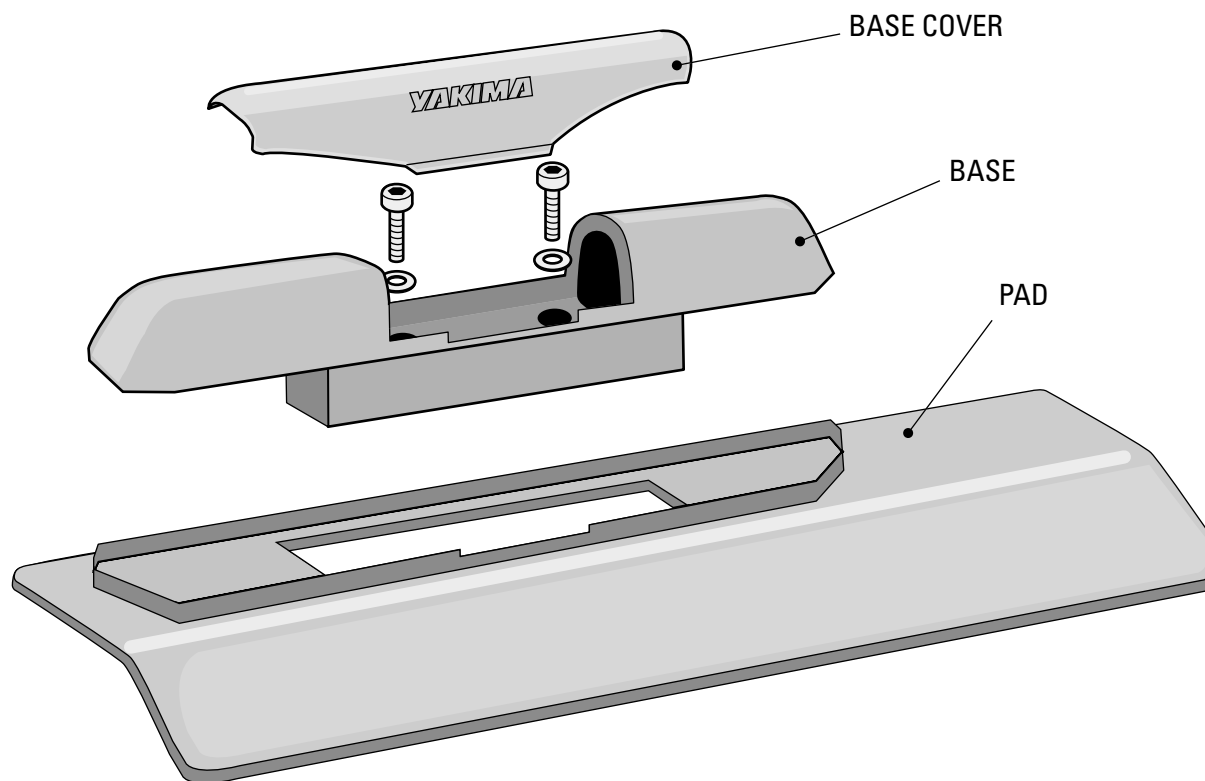

*Refer to YAKIMA Control Tower instructions for important warning and load limitations, and YAKIMA's limited warranty.*

Part #1033281 Rev.A


**1**

**If your vehicle has factory crossbars, remove them now.**


**2**

## REMOVE THE FOUR COVER-PLATES.

*Use a flat tool to pry them off.*

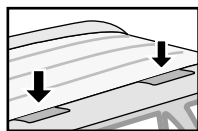


*Access the small depressions on the inside edge of the plates.*

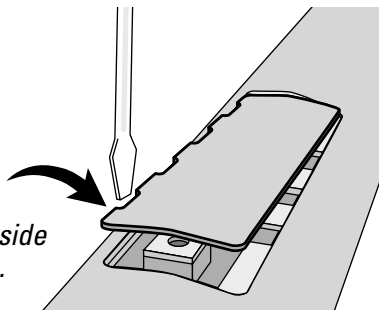**3**



## LOCATE SCREW HOLES.

*You may want to prepare holes by installing and removing screws until holes are free of debris.*


**FRONT OF CAR:**  
*Use the two holes closest to the front of the vehicle.*

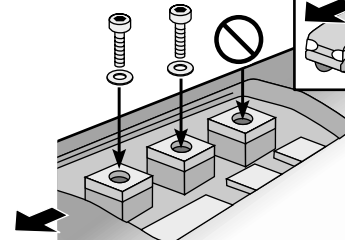

**REAR:**  
*Use the two holes closest to the rear of the vehicle.*

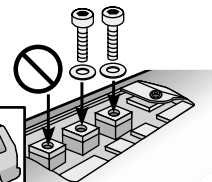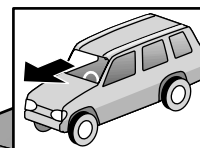**4**

**Remove the covers from the bases.**


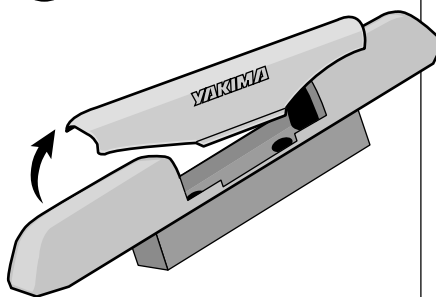


*When the racks are not installed, use the covers to keep the bases free of debris.*


**5**

## COMBINE PADS TO BASES, INSTALL INTO TRACK.

- Match the shape of the base to the pad opening
- Pads are labeled L and R to correspond to vehicle left and right, when sitting in the vehicle.
- Install screws and washers into correct holes (refer to Step 3).

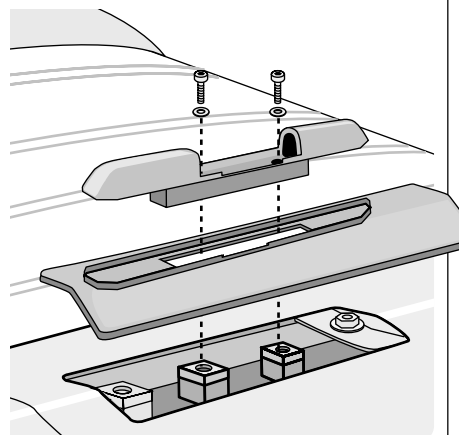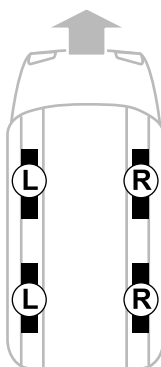**6**

**Using wrench from Control Tower kit, tighten screws completely.**

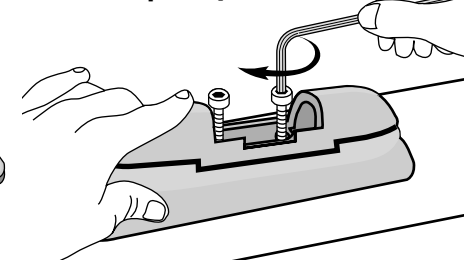

***Make sure bases and pads are fitting tightly into track.***

**7**

## READ THESE WARNINGS!



***Be sure all hardware is secured according to instructions. Failure to perform safety checks before driving away can result in property damage, personal injury, or death.***

***Attachment hardware can loosen over time. Check and tighten if necessary, before each use.***



- **DO NOT EXCEED WEIGHT LIMIT:**  
125 lbs. (57 kg)
- **Consult your YAKIMA dealer or fit list to see load limitations for accessories.**

***Remove your YAKIMA rack and accessories before entering automatic car washes.***

**8**

**Continue with Control Tower installation.**