


MONTAGEANLEITUNG – MA0115

SERVIERWAGEN AVENTURO

EN Assembly instruction Serving trolley Aventuro · FR Notice de montage Chariot de service Aventuro · IT Istruzioni d'assemblaggio Carrello di servizio Aventuro
ES Indicaciones de montaje Carrito de servicio Aventuro · NO Monteringsanvisning Serveringsvogn Aventuro · DK Monteringsvejledning Serveringsvogn Aventuro
SE Monteringsanvisning Serveringsvagn Aventuro · NL Montage instructies Serveerwagen Aventuro · PT Instruções de montagem Carrinho de servir Aventuro
HR Upute za sastavljanje Kolica za posluživanje Aventuro

VEGA




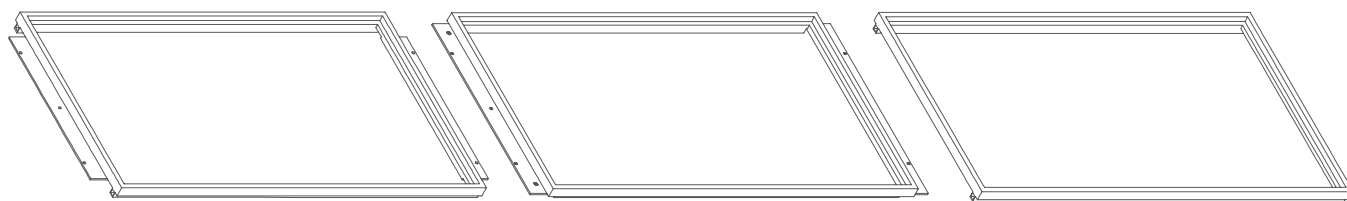


A - 1x

B - 1x


C - 1x

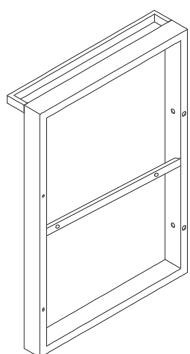

D - 1x

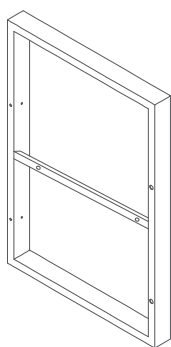

E - 1x

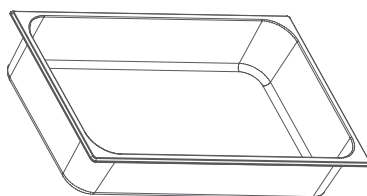


F - 1x




G - 4x




H - 4x

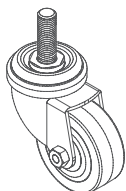


I - 2x

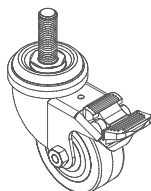


J - 2x

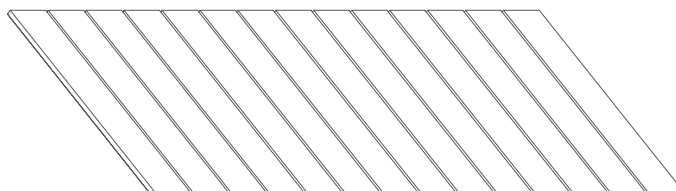


K - 2x

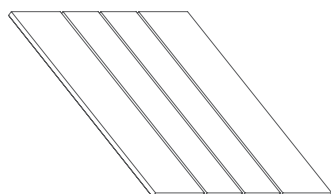

L - 2x



M - 4x
M6x25





N - 12x
M6x16





O - 16x
M6






P - 1x

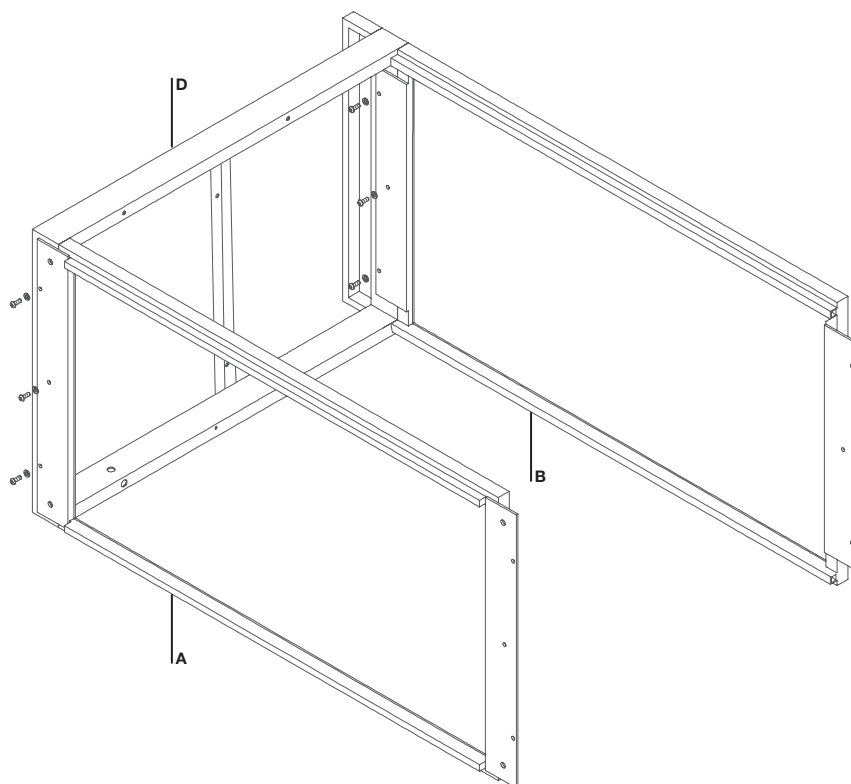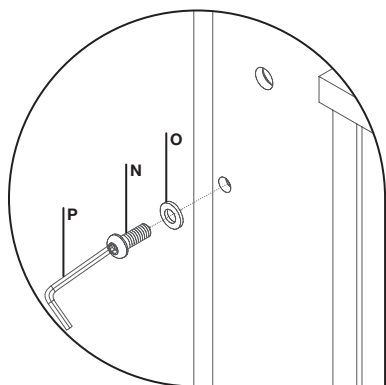




1

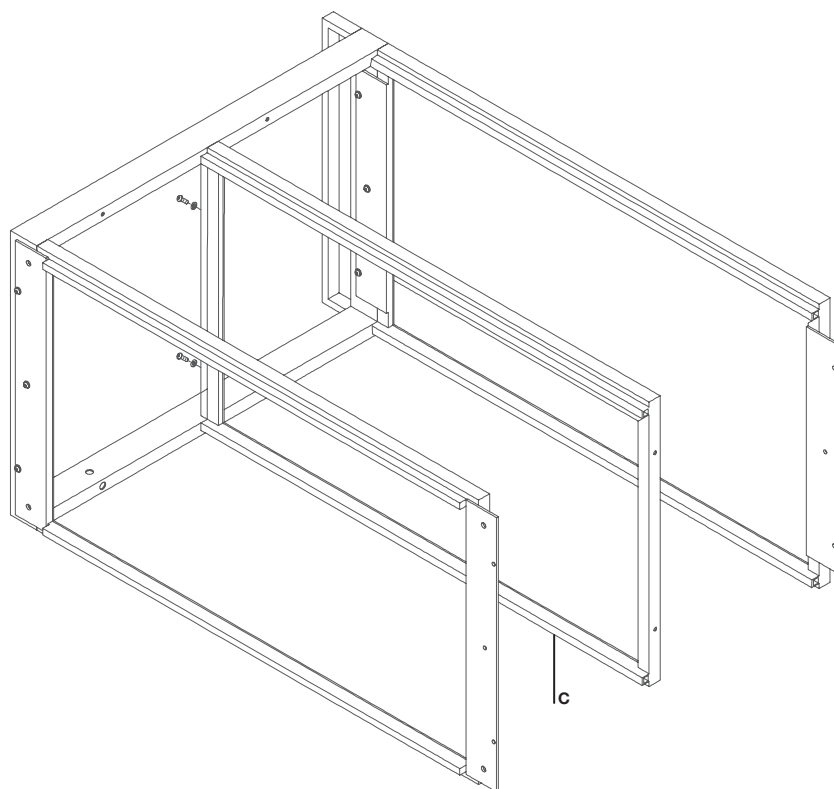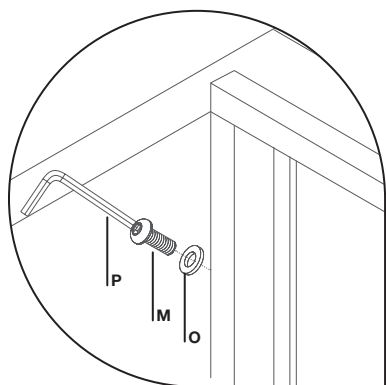


2

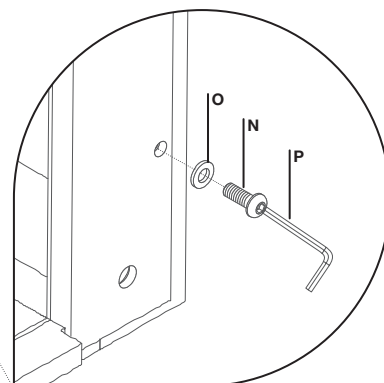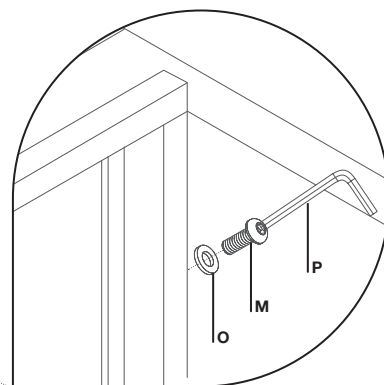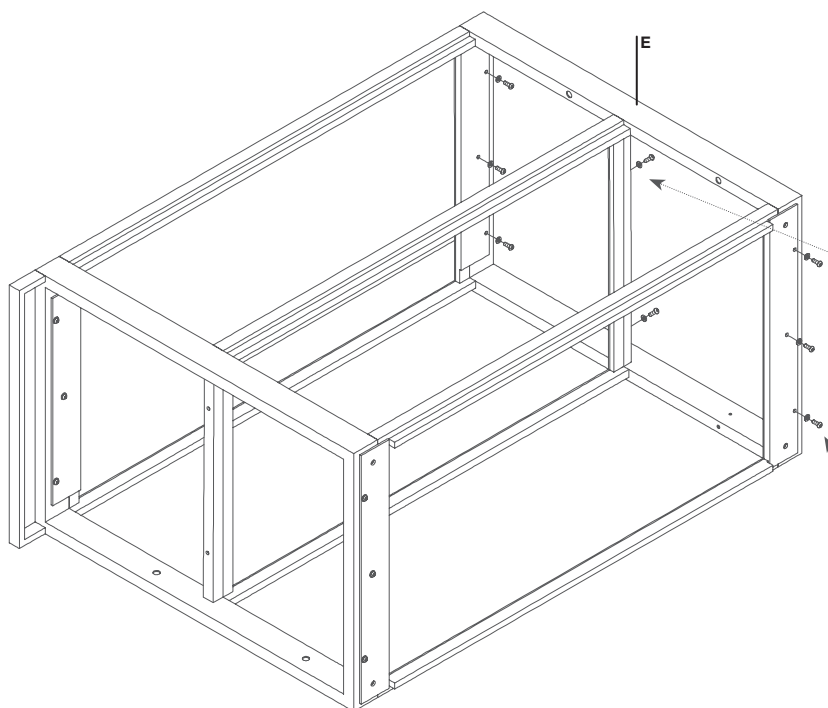

3

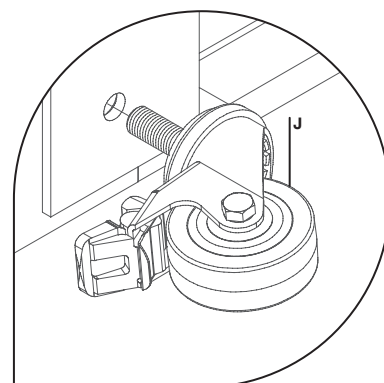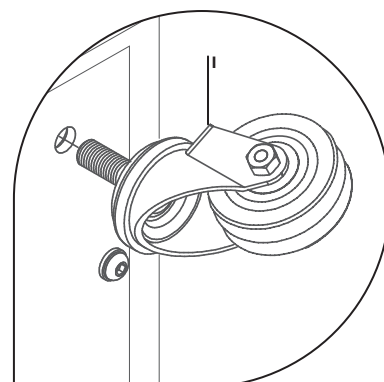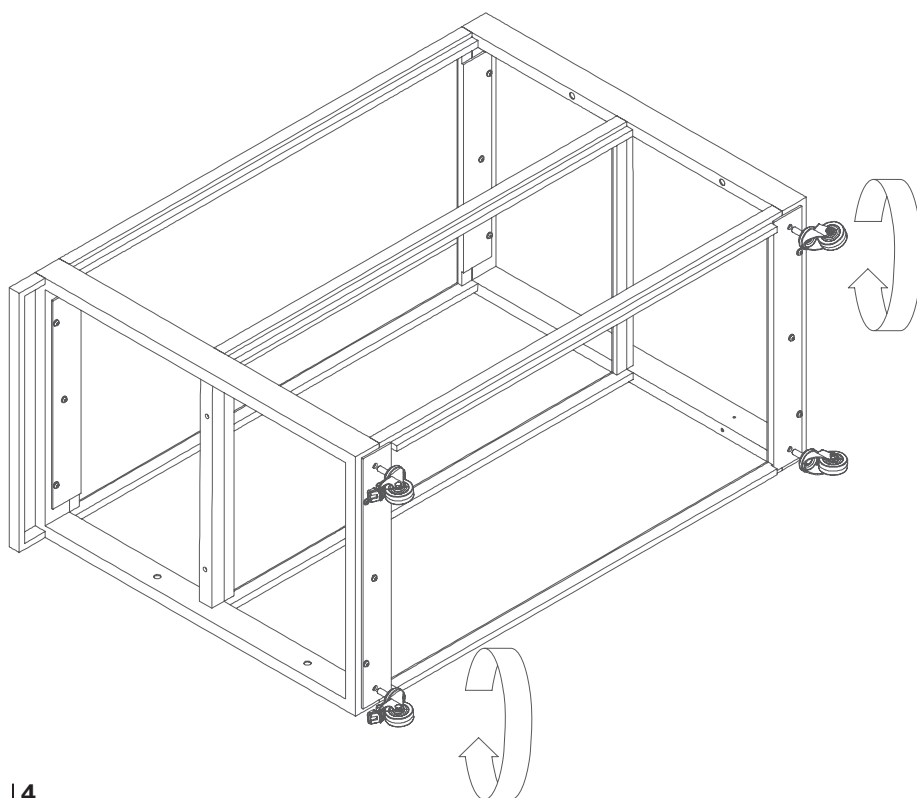

4

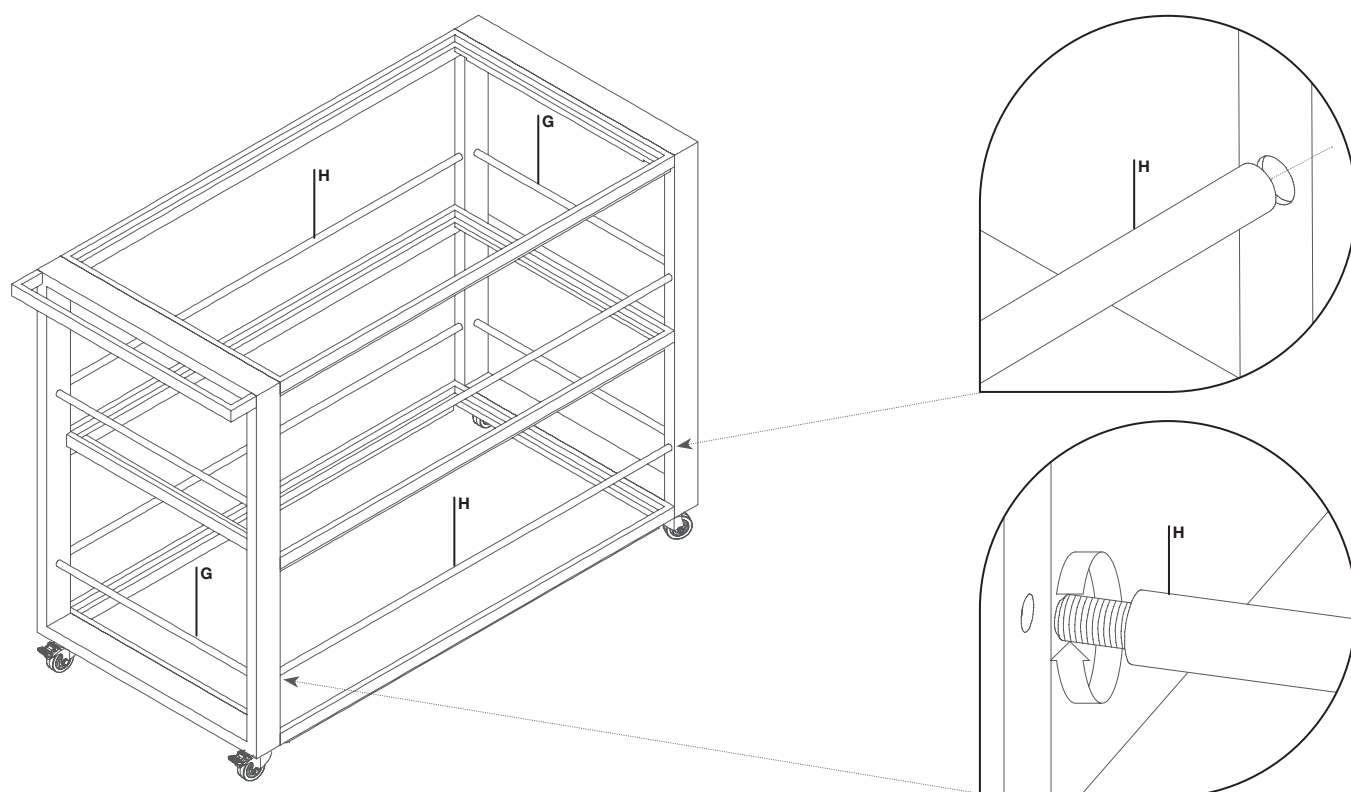

5



6