
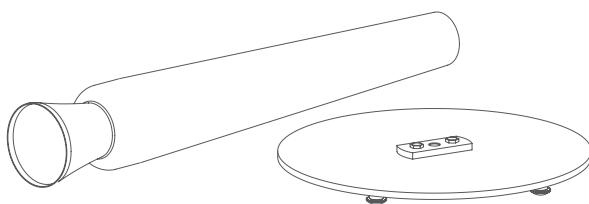


MONTAGEANLEITUNG – MA0109

TISCHSÄULE BAROCK


EN Assembly instruction Table column Barock · FR Notice de montage Colonne du tableau Barock · IT Istruzioni d'assemblaggio Colonna della tabella Barock
ES Indicaciones de montaje Columna de tabla Barock · NO Monteringsanvisning Tabellkolonne Barock · DK Monteringsvejledning Tabell kolonne Barock
SE Monteringsanvisning Tabell kolumn Barock · NL Montage instructies Tabel kolom Barock · PT Instruções de montagem Coluna da tabela Barock
HR Upute za sastavljanje Stupac tablice Barock

VEGA

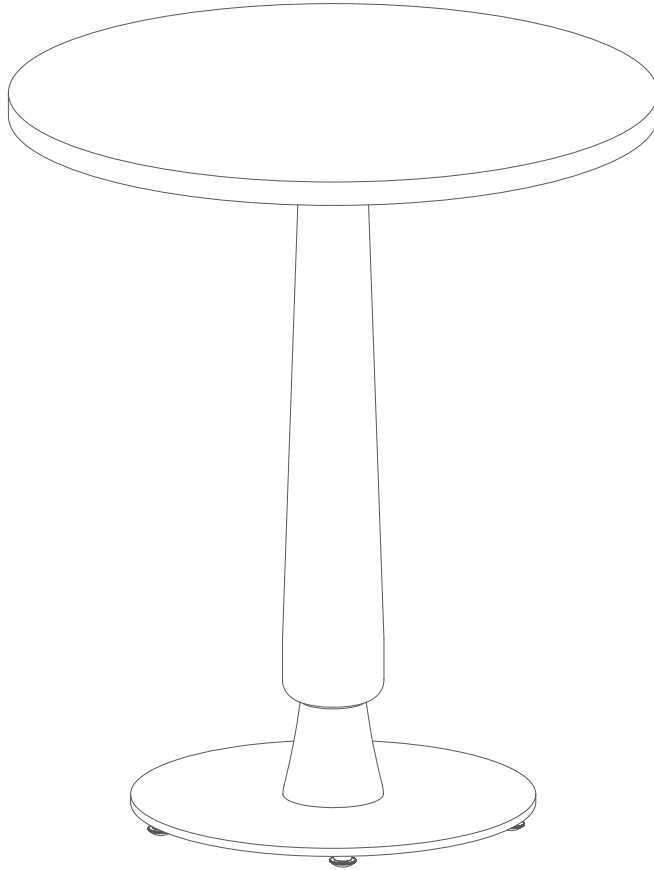


A - 1x


B - 1x



C - 1x

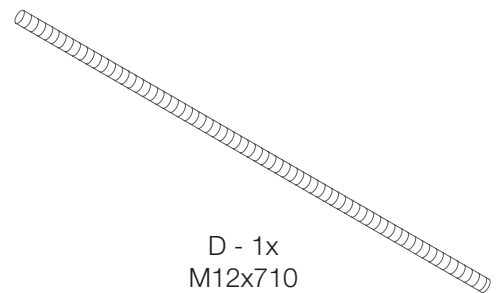

D - 1x
M12x710



E - 1x
M12x30




F - 1x
M12




G - 1x
M12




H - 1x
M12



I - 8x
M5x16

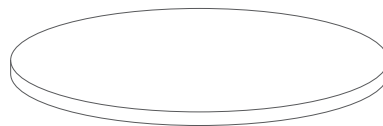

J



19 mm



