
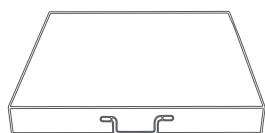


MONTAGEANLEITUNG – MA0067


SONNENSCHIRMSTÄNDER SOLA

VEGA

EN Assembly instruction parasol stand Sola · FR Notice de montage pied de parasol Sola · IT Istruzioni d'assemblaggio supporto per ombrellone Sola
 ES Indicaciones de montaje soporte para sombrilla Sola · NO Monteringsanvisning parasollstativ Sola · DK Monteringsvejledning parasol stativ Sola
 SE Monteringsanvisning parasollställ Sola · NL Montage instructies parasolstandaard Sola · PT Instruções de montagem suporte de guarda-sol Sola
 HR Upute za sastavljanje stalak za suncobran Sola

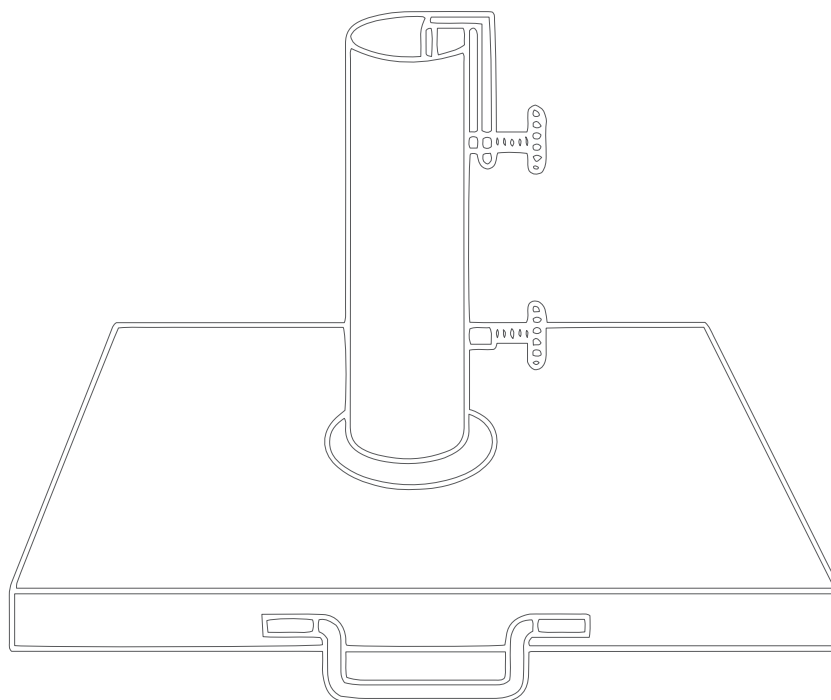

A - 1x




B - 2x
M8x15




C - 1x




D - 1x



E - 2x
M8x25

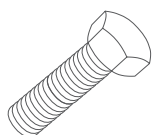

F - 1x
M12x70




G - 1x




H - 1x





I - 1x

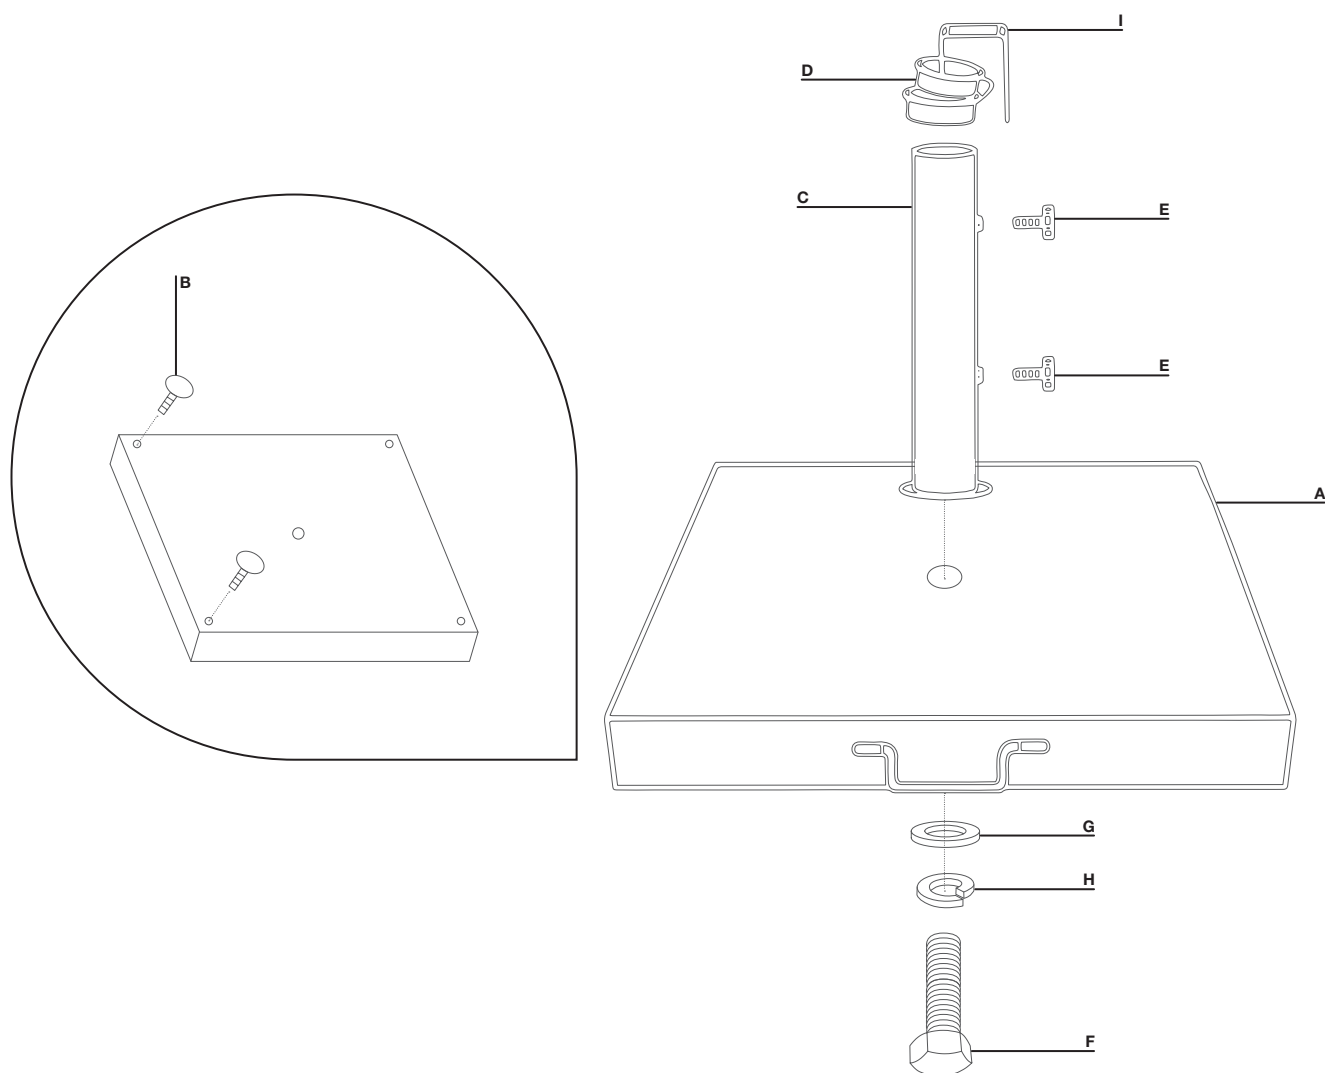

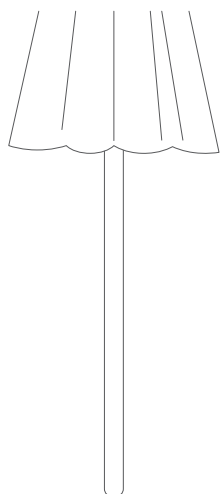

ø 48 mm

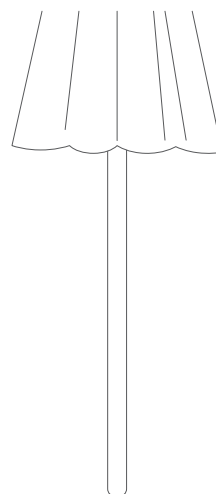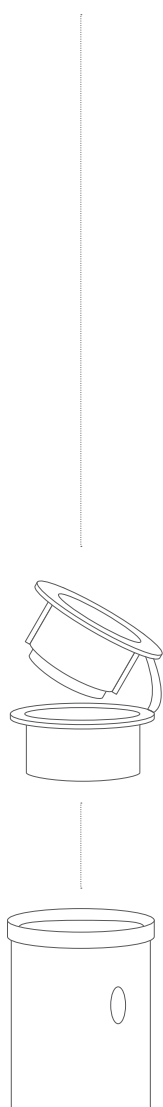

ø 38 mm

