
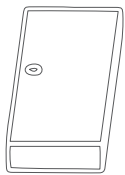


# MONTAGEANLEITUNG – MA0066


## SONNENSCHIRMSTÄNDER GARDO

**VEGA**

EN Assembly instruction parasol stand Gardo · FR Notice de montage pied de parasol Gardo · IT Istruzioni d'assemblaggio supporto per ombrellone Gardo  
 ES Indicaciones de montaje soporte para sombrilla Gardo · NO Monteringsanvisning parasollstativ Gardo · DK Monteringsvejledning parasol stativ Gardo  
 SE Monteringsanvisning parasollställ Gardo · NL Montage instructies parasolstandaard Gardo · PT Instruções de montagem suporte de guarda-sol Gardo  
 HR Upute za sastavljanje stalak za suncobran Gardo

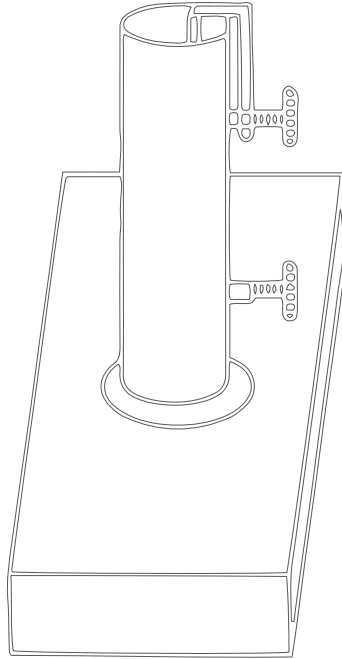

A - 1x



B - 4x  
M8x15




C - 1x



D - 1x



E - 2x  
M8x25

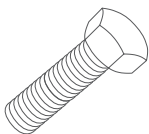

F - 1x  
M12x70




G - 1x  
M12




H - 1x  
M12





I - 1x

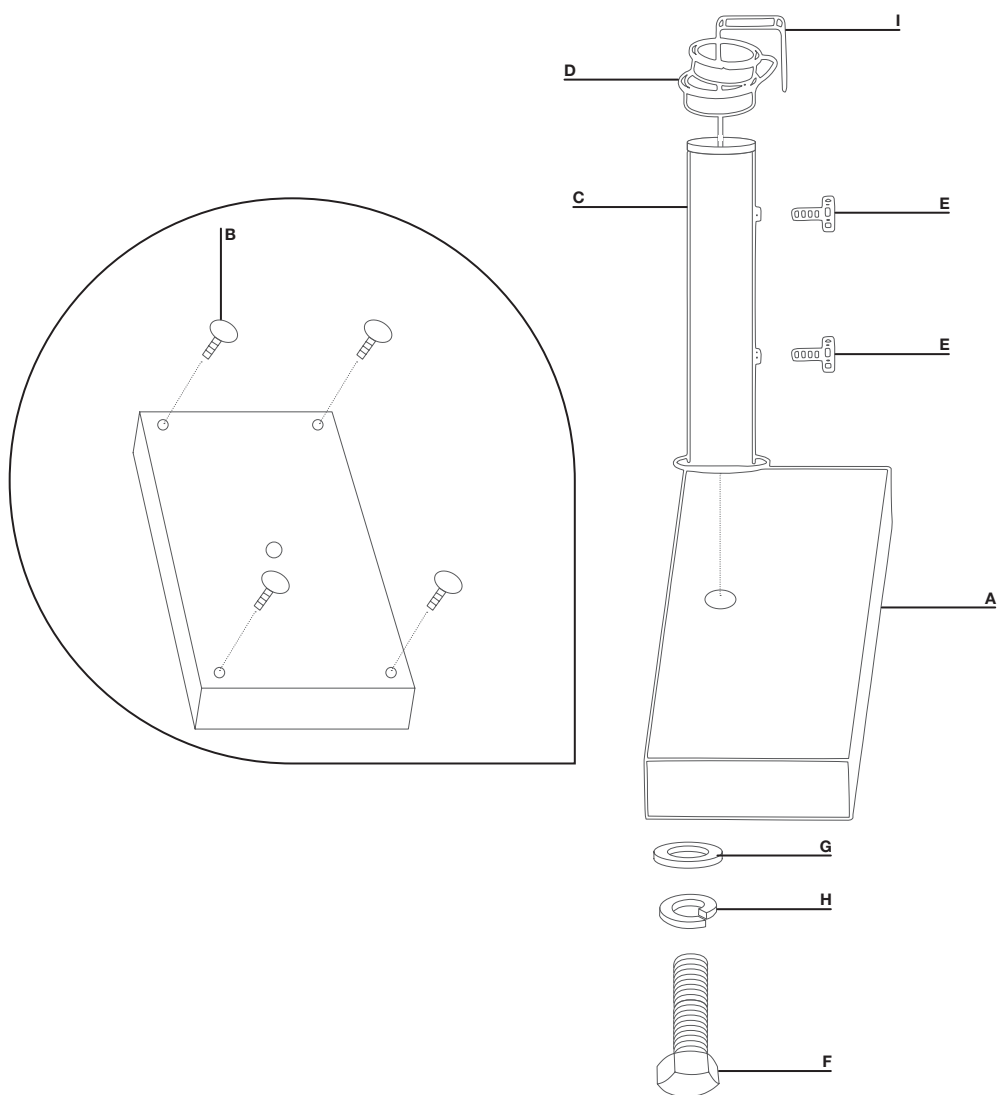

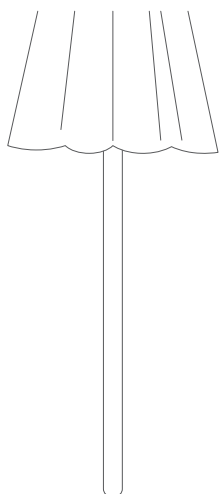

ø 48 mm

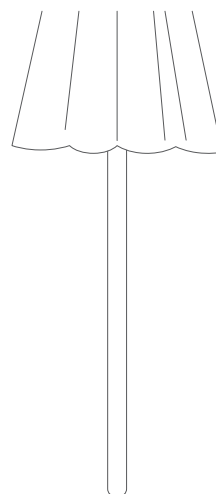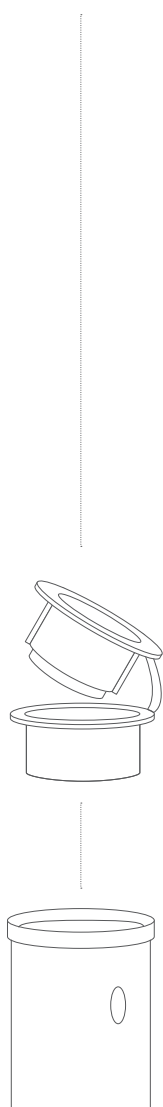

ø 38 mm

