
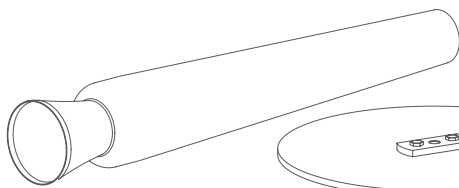


MONTAGEANLEITUNG – MA0109


TISCHSÄULE BAROCK

EN Assembly instruction Table column Barock · FR Notice de montage Colonne du tableau Barock · IT Istruzioni d'assemblaggio Colonna della tabella Barock
ES Indicaciones de montaje Columna de tabla Barock · NO Monteringsanvisning Tabellkolonne Barock · DK Monteringsvejledning Tabell kolonne Barock
SE Monteringsanvisning Tabell kolumn Barock · NL Montage instructies Tabel kolom Barock · PT Instruções de montagem Coluna da tabela Barock
HR Upute za sastavljanje Stupac tablice Barock


VEGA

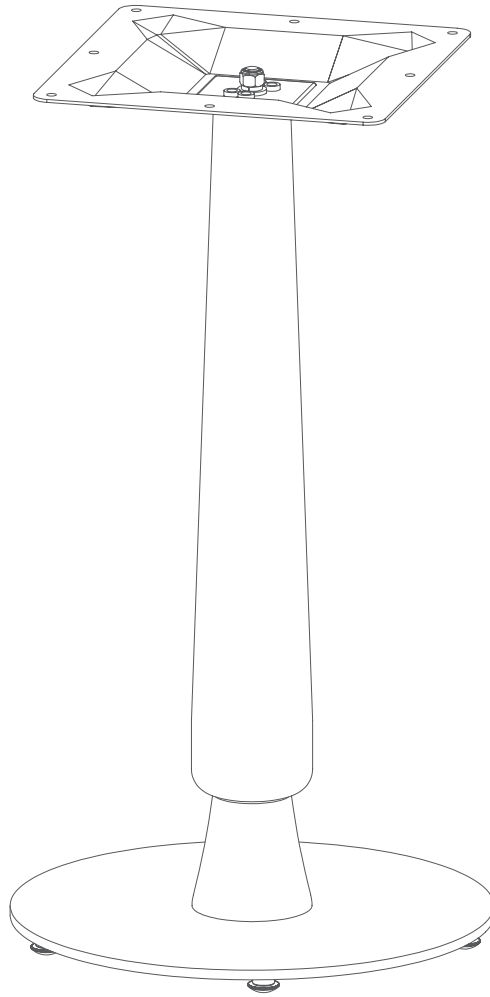


A - 1x



B - 1x



C - 1x

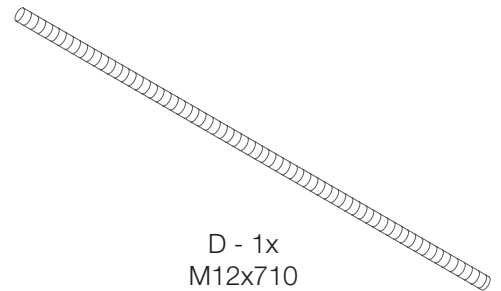

D - 1x
M12x710




E - 1x
M12




F - 1x
M12



G - 1x
M12

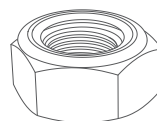

H - 1x
M12



19 mm

