
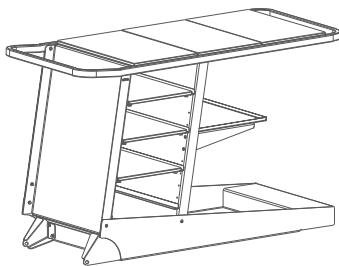


MONTAGEANLEITUNG – MA0019


SERVIERWAGEN SPRINTER

VEGA

EN Assembly instruction Service trolley Sprinter · FR Notice de montage Structure de desserte Sprinter · IT Istruzioni d'assemblaggio Carrello Sprinter da montare
ES Indicaciones de montaje Carrito de servicio Sprinter · NO Monteringsanvisning Serveringsvogn Sprinter · DK Monteringsvejledning Serveringsvogn Sprinter
SE Monteringsanvisning Serveringsvagn Sprinter · NL Montage instructies Serveerwagen Sprinter · PT Instruções de montagem Carrinho de servir Sprinter
HR Upute za sastavljanje Kolica za posluživanje Sprinter

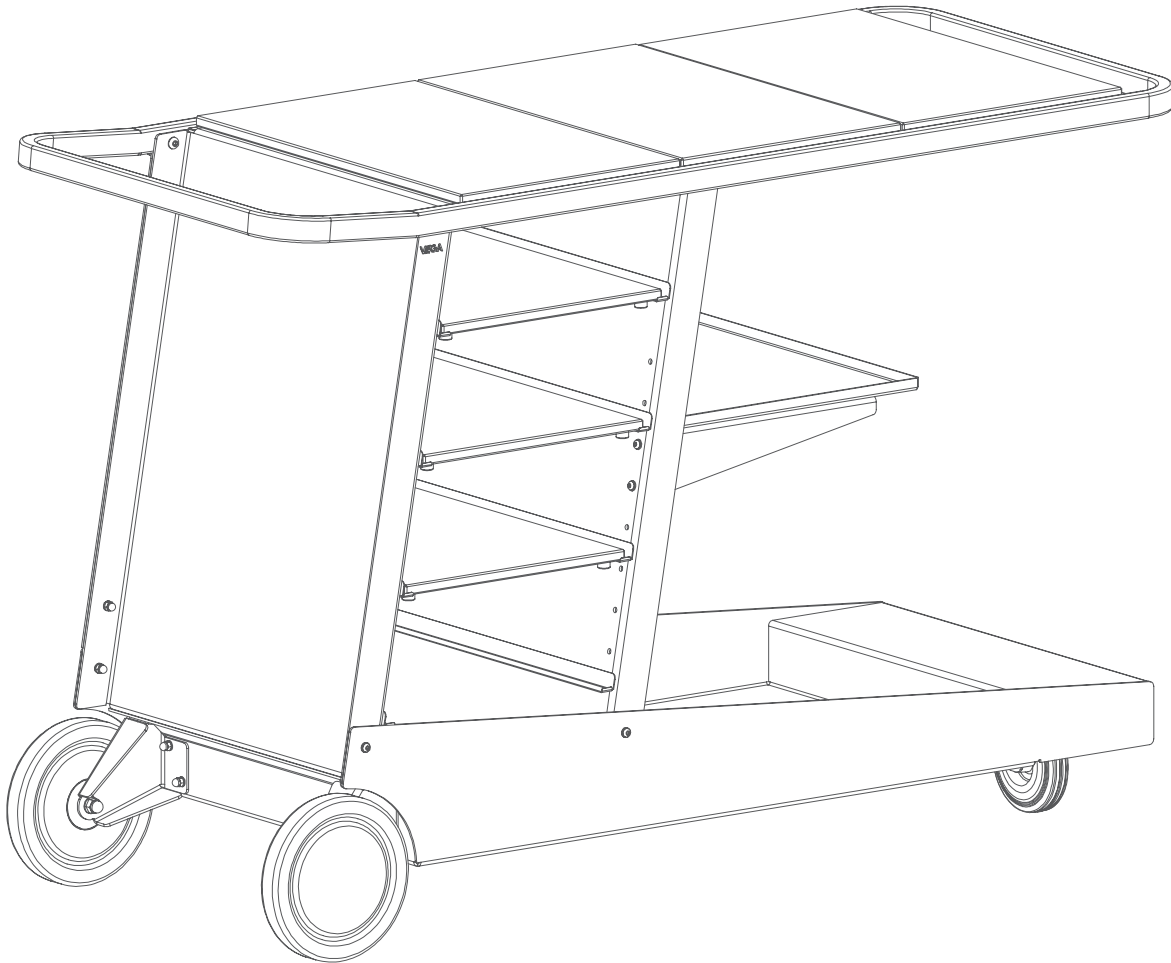


A - 1x

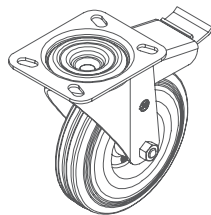

B - 2x



C - 2x



D - 8x
M8x18



E - 10x
M8



F - 14x
M8




G - 2x
M8




H - 1x




I - 1x

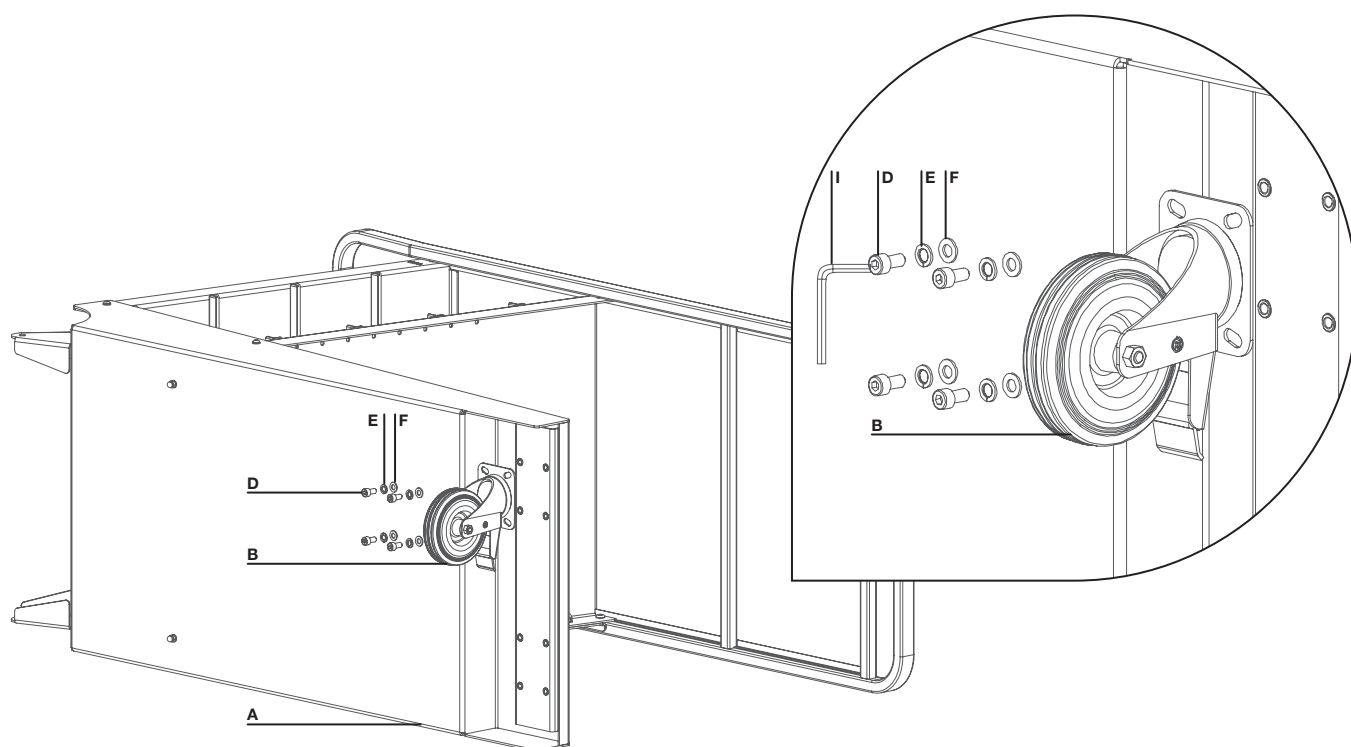


1

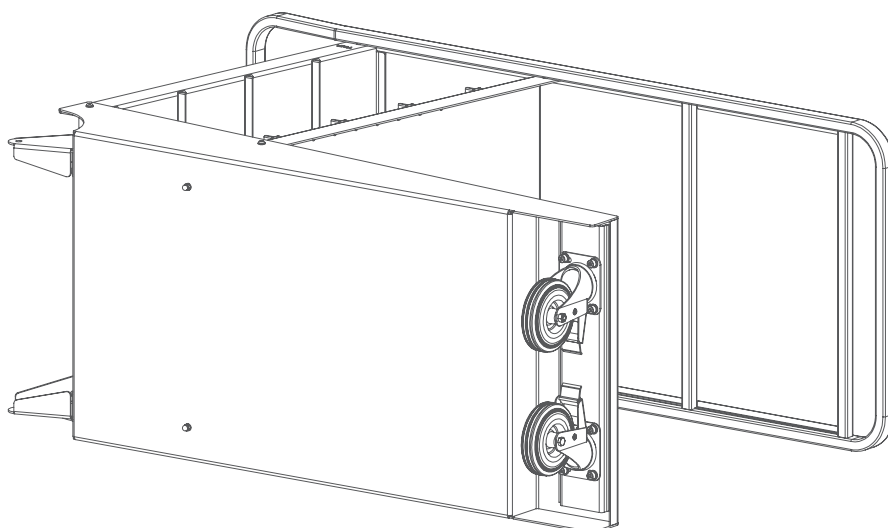

2

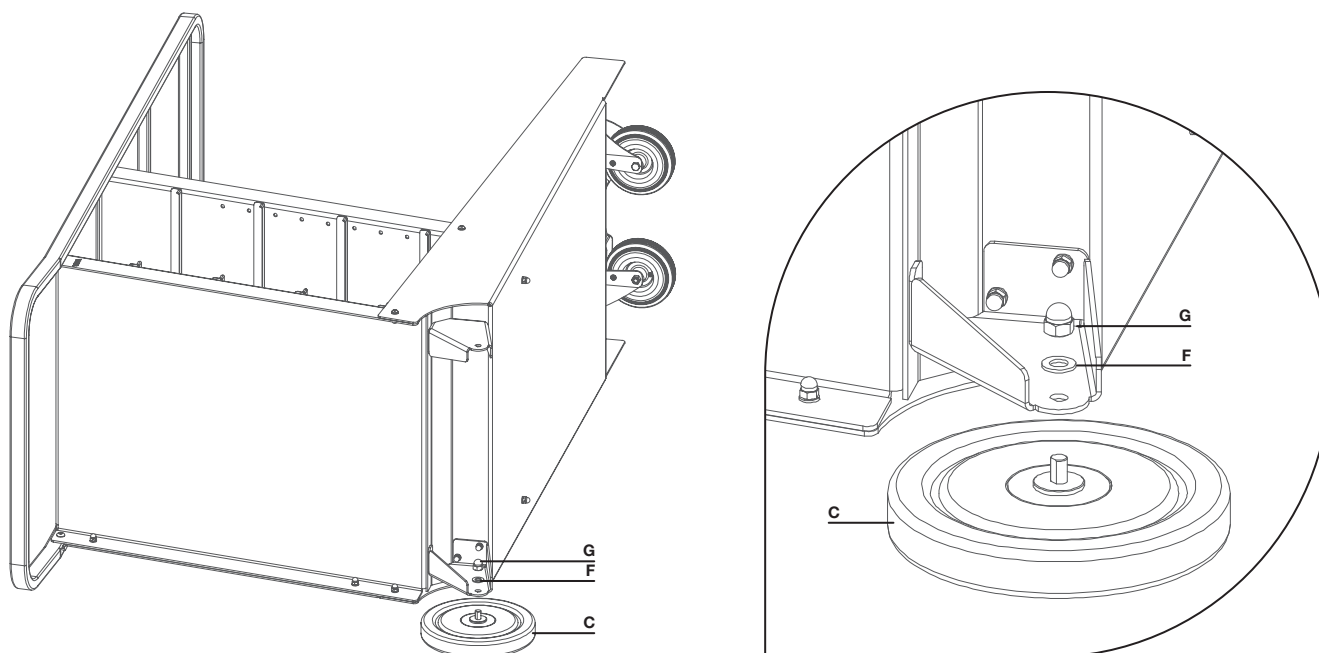

3

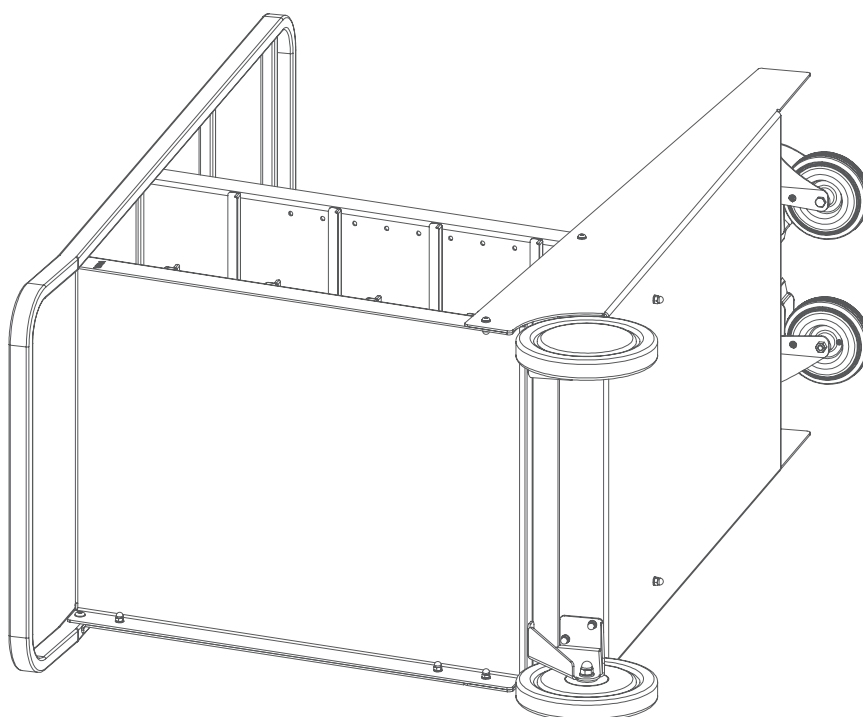

4