



MONTAGEANLEITUNG – MA0077

SONNENSCHIRM TERRADO


EN Assembly instruction Parasol Terrado · FR Notice de montage Parasol Terrado · IT Istruzioni d'assemblaggio Parasole Terrado
ES Indicaciones de montaje Sombrilla Terrado · NO Monteringsanvisning Parasoll Terrado · DK Monteringsvejledning Parasol Terrado
SE Monteringsanvisning Parasoll Terrado · NL Montage instructies Parasol Terrado · PT Instruções de montagem Sombrinha Terrado
HR Upute za sastavljanje Suncobran Terrado

VEGA

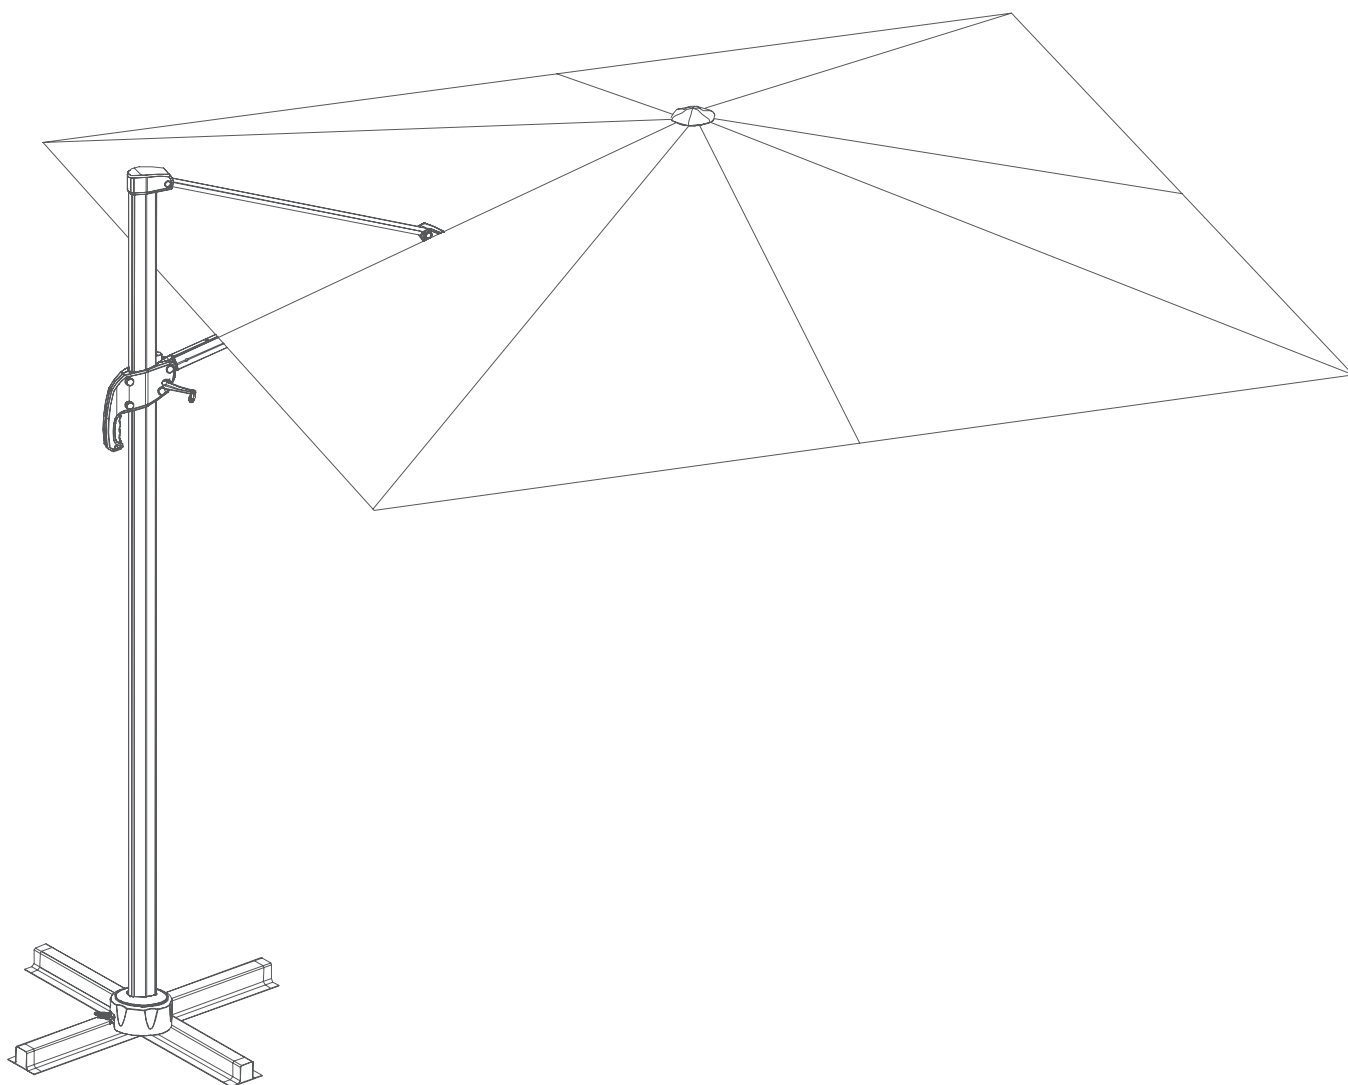


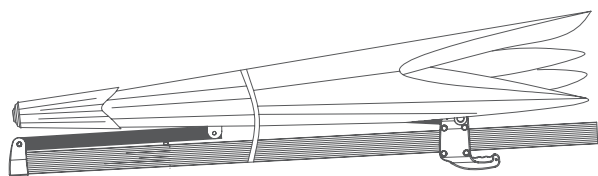


A - 1x



B - 1x




C - 1x




D - 1x



E - 1x



F - 1x



G - 1x



H - 4x
M10x20



I - 4x
M8x25




J - 1x




K - 1x




L - 1x

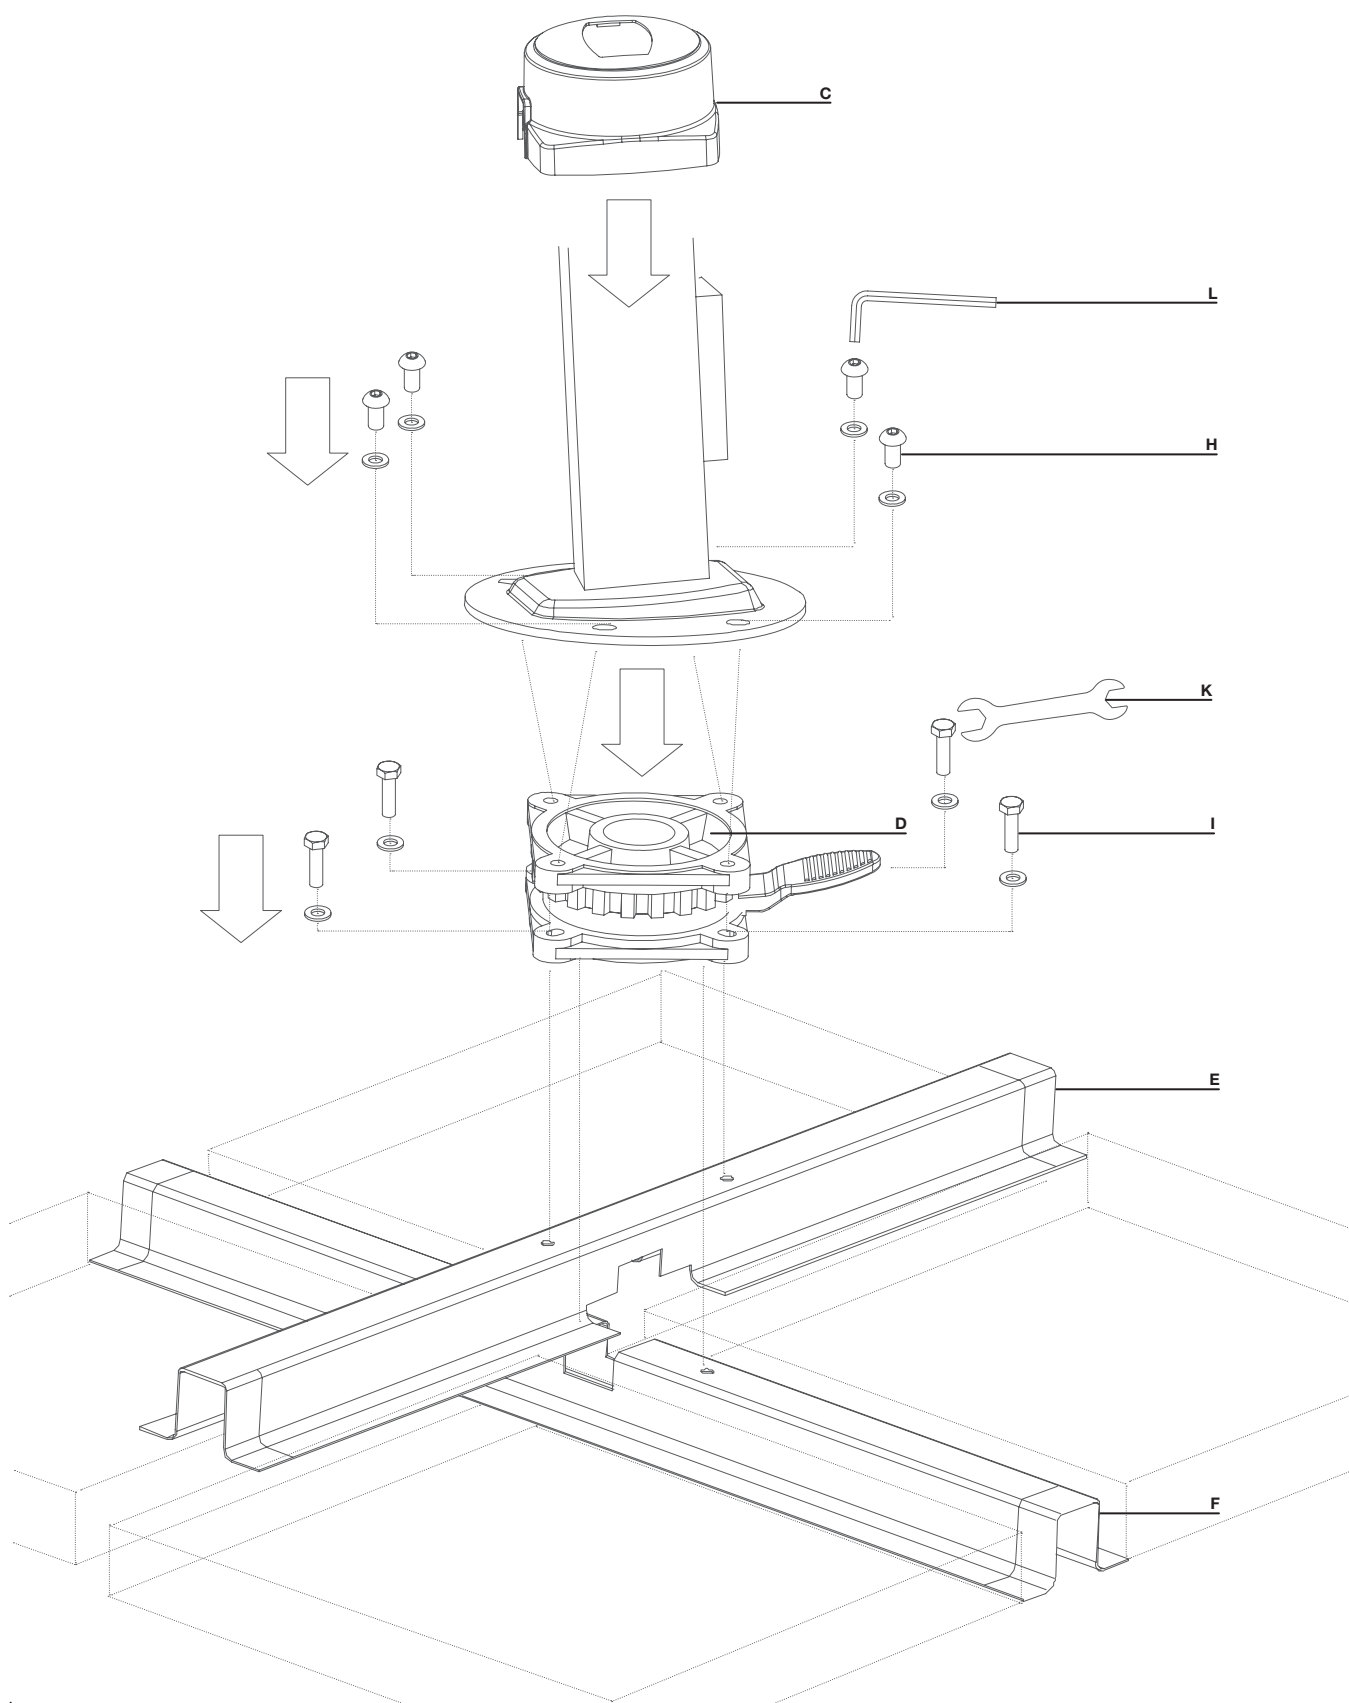


1

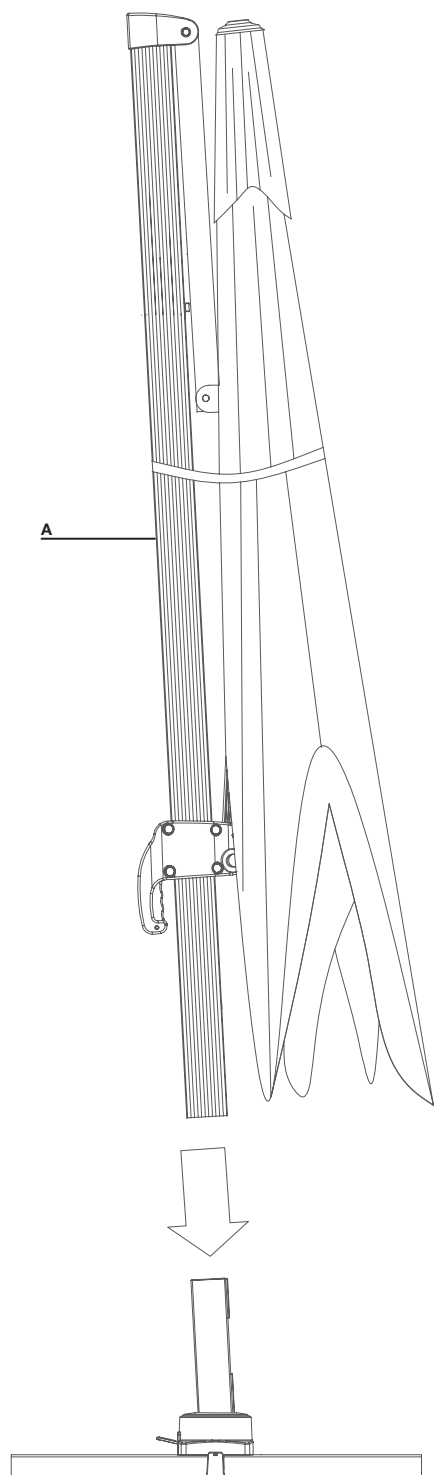


2

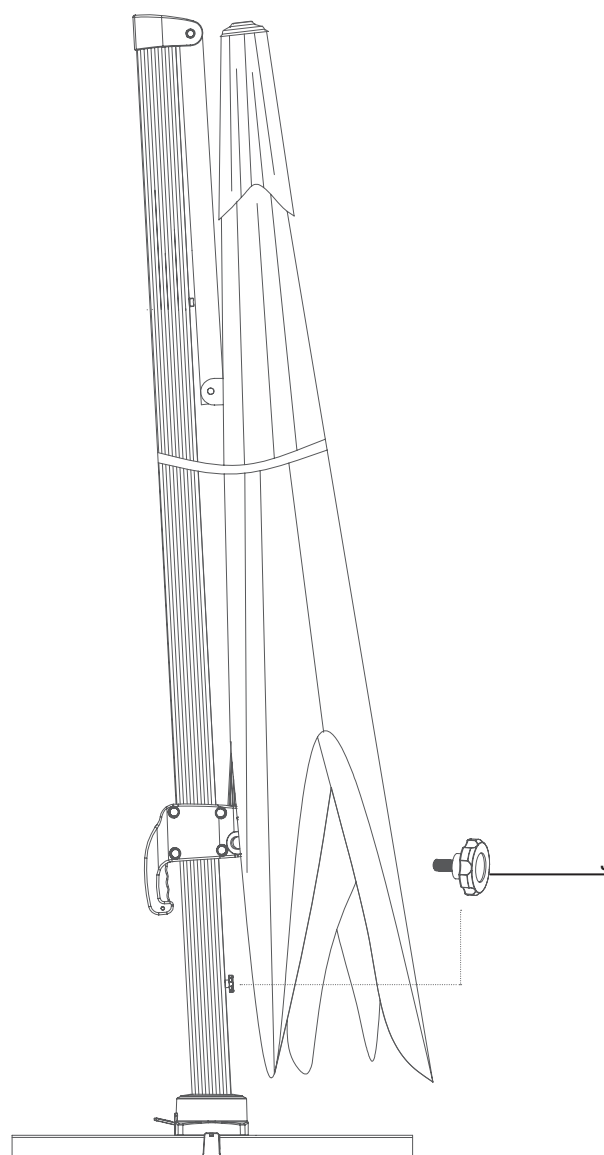


4

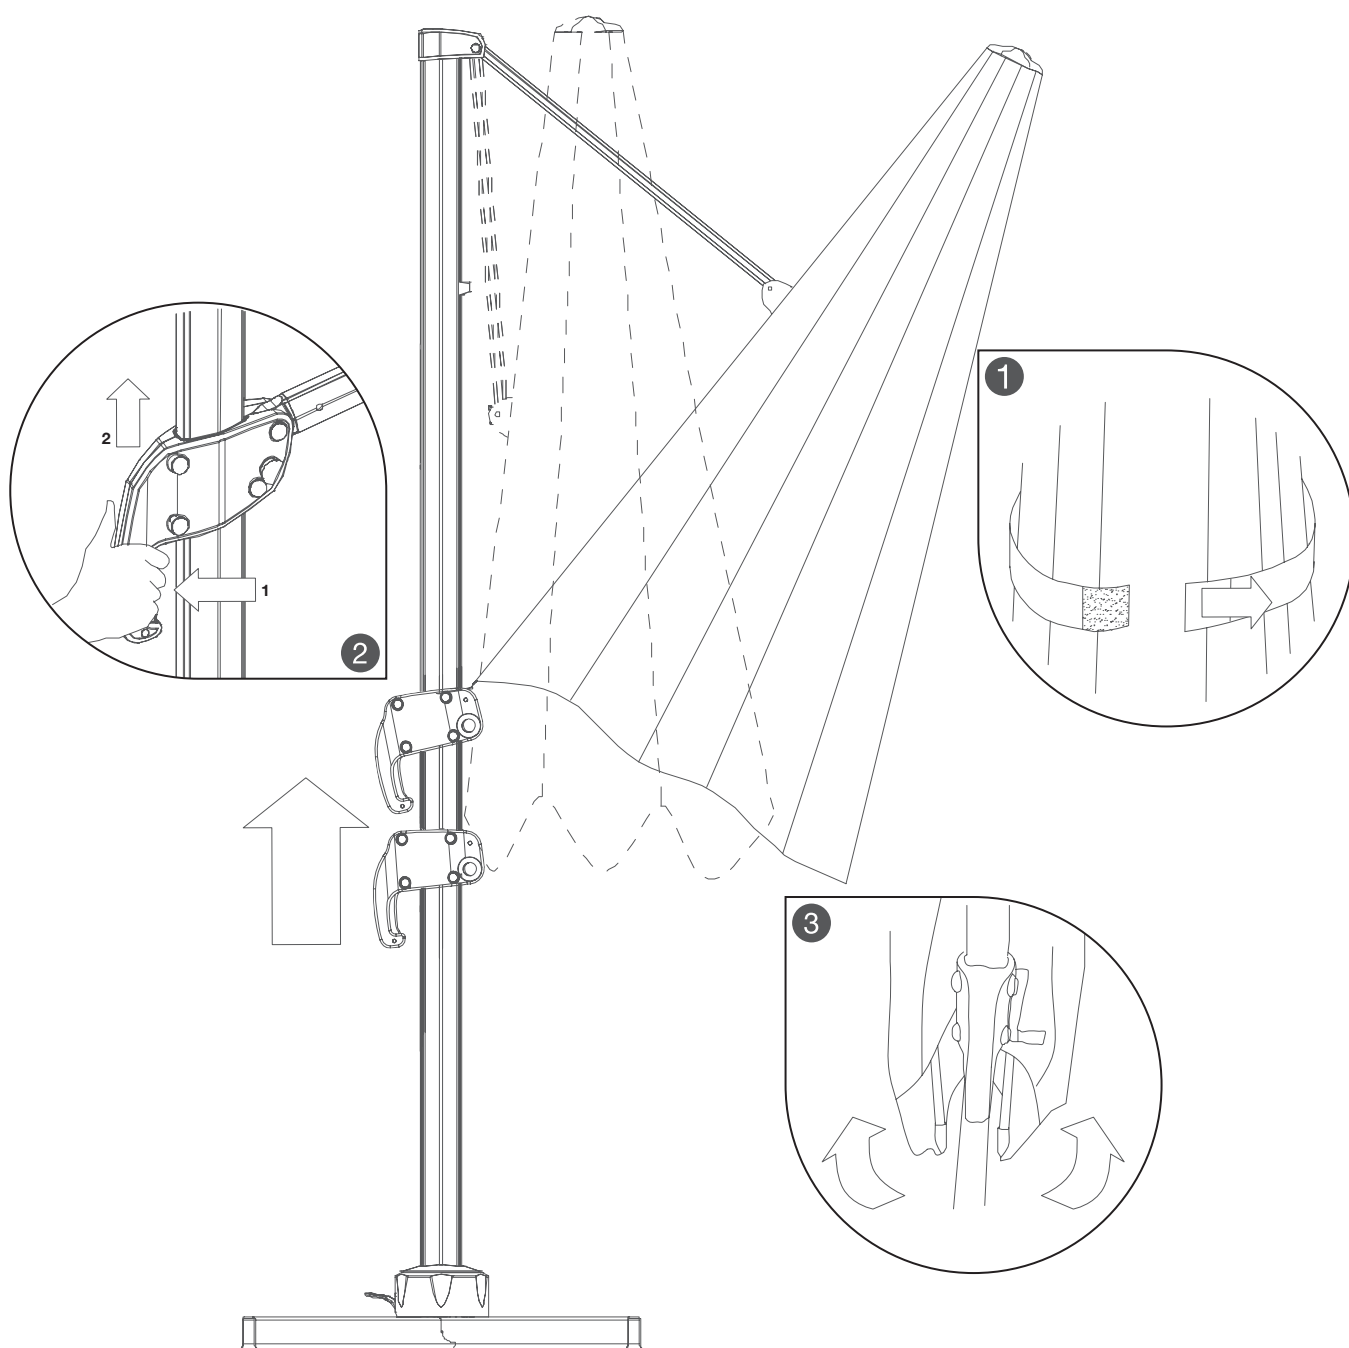

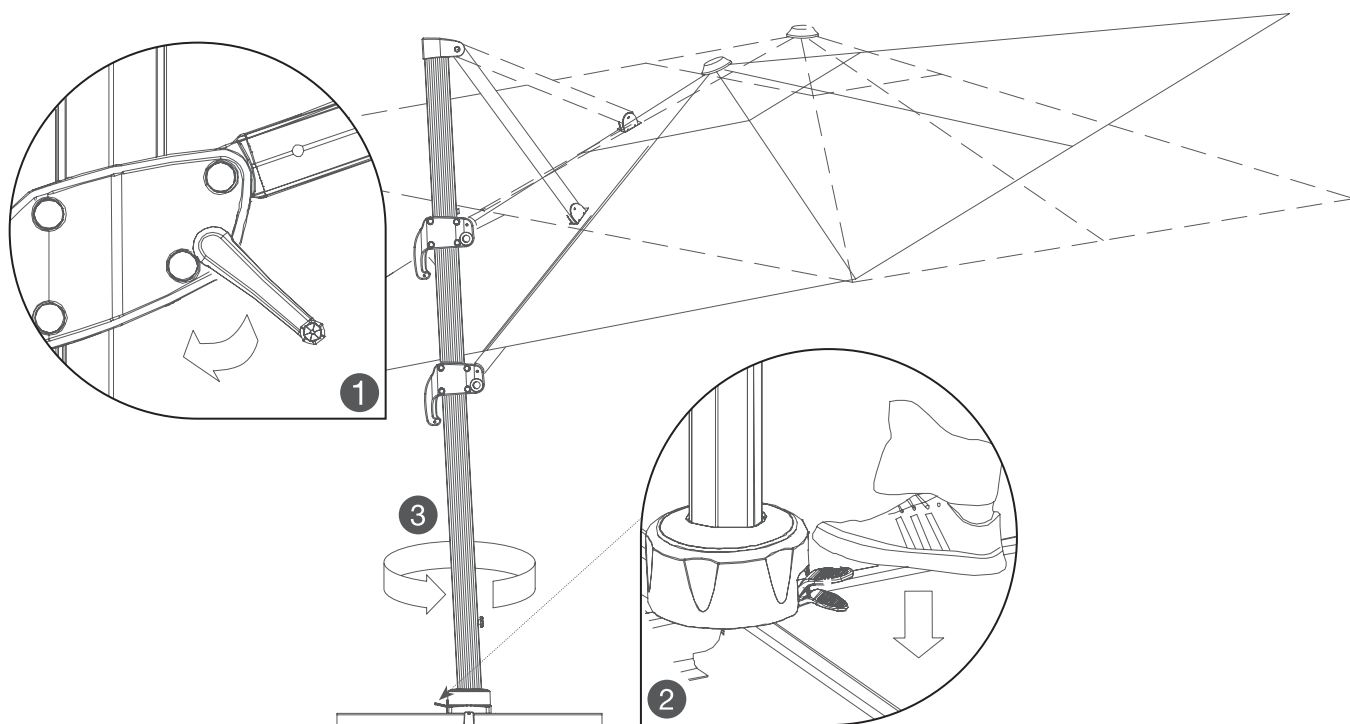

4

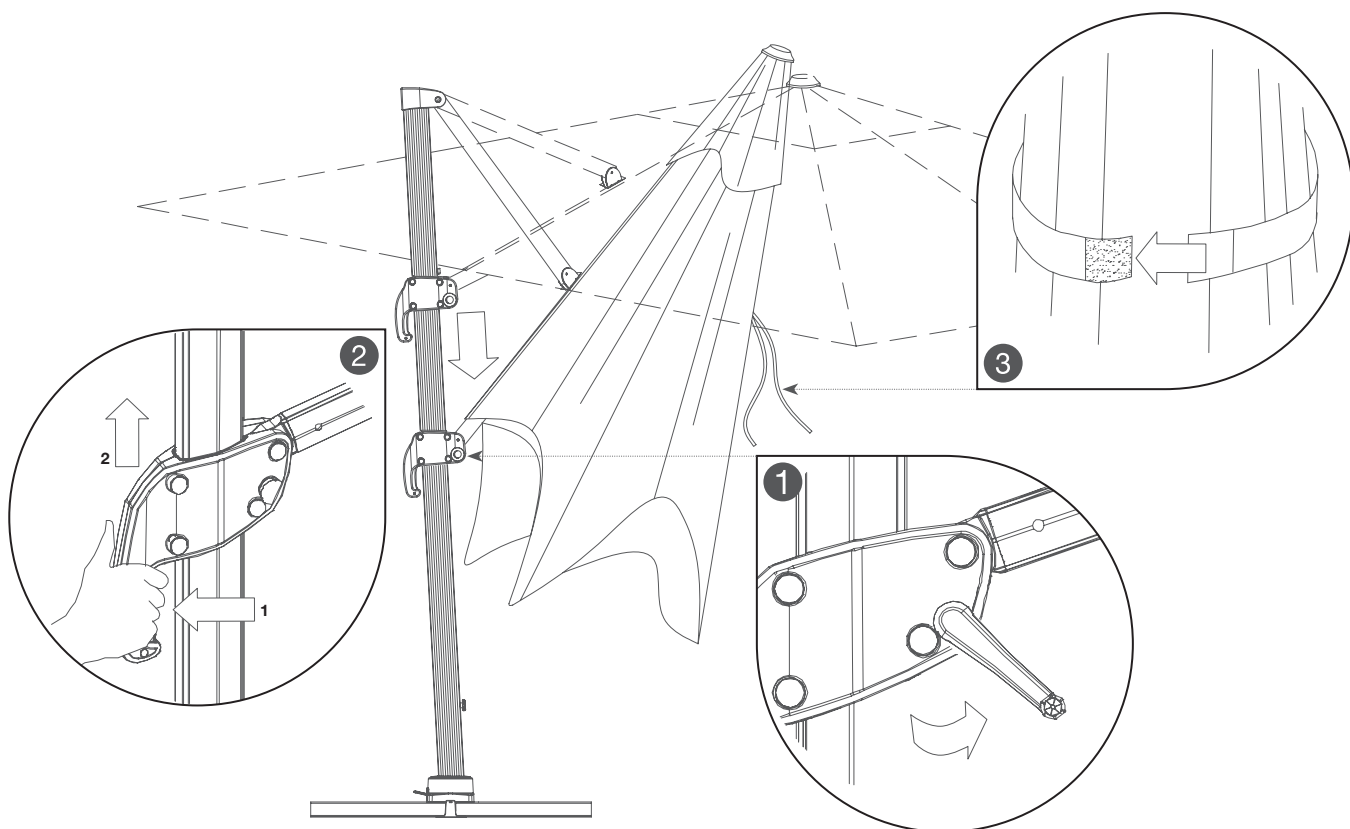

5