


Forlengelse av Fast Trac / SMT kjetting Extension of Fast Trac / SMT chains

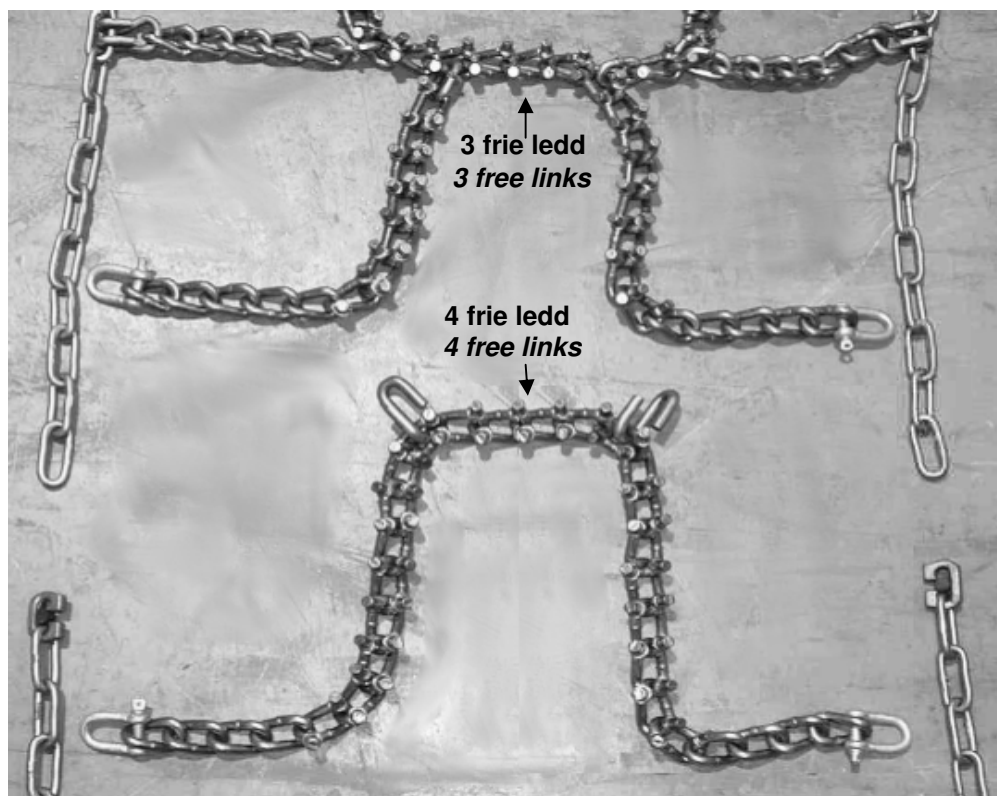

Settet består av:


- 2 stk broddlenker.
- 4 stk S-kroker med gummi knott.
- 4 stk Sjakler.
- 4 lengder m/sidekjetting.
- 4 stk Flexiledd eller stiftekoblinger for skjøting av sidekjetting.

The kit consists of:

- 2 pcs Studded chains.
- 4 pcs S-hooks w/ rubber tips.
- 4 pcs shackles.
- Side chain, 4 pre cutted lengths.
- 4 pcs Flexi links or pin connectors

1. Fest S-krokene på forlengelses seksjonen slik at antall frie ledd mellom de er **ETT LEDD MER** enn på tilsvarende sted på kjettingen som skal forlenges.
2. Kapp vekk overskytende kjetting i begge ender av broddenken.
3. Monter sidekjettingen ved hjelp av Stiftekoblingene / Flexileddene. (Se illustrasjonsbildet under.)
4. Press gummi knotten inn i senter av S-krokene for å låse skjøten.

1. **Fasten the S-hooks with ONE MORE free link between them, than it is on the chain pattern that are to be extended.**
2. **Remove eventually free links in each end.**
3. **Extend the side chain by using the pin connectors/ Flexi links as illustrated below.**
4. **Press the rubber tips in between the ends of the S-hooks sto lock the connections.**

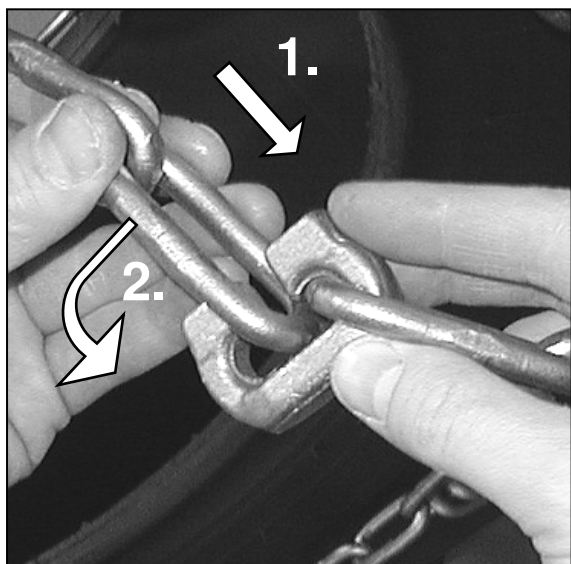

Flexileddet monteres slik:

1. Kjettingløyken som skal monteres stikkes inn i leddet.
2. Vri kjettingen deretter 90 grader.

Flexi link mounting.

1. **Insert the chains end link into the Flexi link.**
2. **Then turn the chain link 90 degrees.**