

## HARDWARE INCLUDED




Dual-Lock™ Disc  
Model 2062  
4 Sets Included



Dual-Lock™ Pad  
Model 2060  
5 Sets Included



Self Tapping Screw  
Model 6700  
5 Sets Included

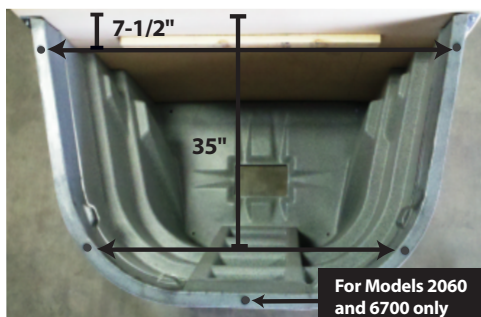

1. You will be installing 4 or 5 Dual-Lock™ discs to your well based on model. Models 2060 and 6700 have 5 anchor points and model 2062 has four.




### 2. MODELS 2060 AND 6700

Measure out from the foundation 7-1/2" and place a mark on both sides of the well. Then measure out 35" from the foundation and mark the location. The final Dual-Lock™ disc will be placed at the center front of the well (as shown above).

#### MODEL 2062

Measure out from the foundation 7" and place a mark on both sides of your well. Then measure out 32" and mark the location.

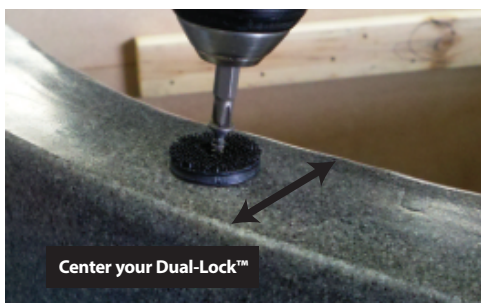

3. Place your cover over the well. Use a marker to mark the location of the Dual-Lock™ disc. You will use this mark to attach the corresponding Dual-Lock pad to the underside of your cover. Clean the area under the cover before you adhere the Dual-Lock Pads.



4. Using the provided self tapping screws, attach all the hardware for your cover. Be certain to attach the Dual-Lock™ in the center of the well wall.



5. Once you have attached all four self-adhesive Dual-Lock™ pads to the underside of your cover place the cover over your well. Line up the Dual-Lock's and press down to secure the cover. **NOTE:** Cover must be at room temperature for adhesive to adhere properly.

**CLEANING:** Window well covers may be cleaned with a mild solution of window cleaner and a soft cloth. **Do not use** of harsh chemicals and scouring powders. For paint splatters use ALCOHOL ONLY. No paint thinners or solvents!