

Westbury Wraps (Cap & Base Sets)

(4-inch, 6-inch, 8-inch)


Installation Instructions



WRAPS

- It is the responsibility of the installer to meet all code and safety requirements, and to obtain all required building permits. The installer should determine and implement the installation techniques appropriate for each unique installation situation. Digger Specialties, Inc. and its distributors shall not be held liable for improper or unsafe installations.
- These instructions must be followed exactly as written and the materials used must be exactly as shown in the instructions. Any deviation from the instructions or variation in the materials used/installed may result in an unsuccessful installation and will void the warranty.

Parts List

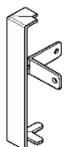 <p>Optional Cap & Base Set Each Set includes (8)</p>	<p>Corners (8 Required)</p>  <p>Screws #10 x 5/8" (16 Required)</p> 
--	--

Tools Required

- # 2 Bit
- Drill
- Square
- Bungee


Note: This base is for our non-load bearing wraps. Designed for:

- 4" – Cap/Base will go around a 4" wrap.
- 6" – Cap/Base will go around a 6" wrap.
- 8" – Cap/Base will go around a 8" wrap.



Wrap Cap & Base (Level)

Note: For uneven surfaces, position the first corner at the highest point. Utilize a square to determine the height for the remaining corners. **It is recommended that both the cap and base be installed level.** The base can accommodate installation on a slope of up to 2° degrees.

- On the bottom, attach 4 corners with 2 screws (#10 x 5/8") on the corners of your wrap. **Note:** Before attaching the 2nd screw make sure corners are tight against wrap. (Example 1)
- Repeat step 1 above for the top of wrap. Use a small bungee or rope wrapped around wrap, if needed to help hold corners in place. **Note:** Corners will be turned upside down for top of column.
- When facing the wrap (Bottom) look to the right corner. You will see a spring under the corner (cover). (Example 2)

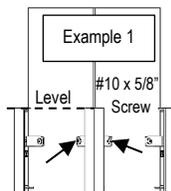

Note: If screws are used to fasten wrap staves to wood post, position them 1" up to keep head of screw from hitting ribs on base.

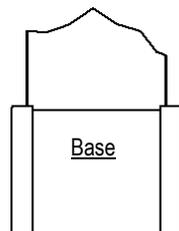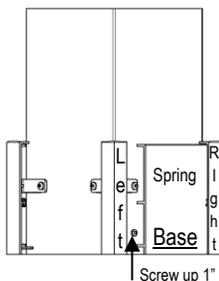

Wrap Cap & Base cont'd

- Take base and insert to spring side. Insert until the left side of base can be inserted under left corner (cover). Base will snap left due to pressure from the spring. Note: If base is too long, shave off one end of base with chopsaw.
- Repeat steps 3 & 4 on each side of the column.
- Repeat steps 3, 4 & 5 above for top side of column. Note: Your spring will be to the left. Insert base to the spring side until opposite side can be inserted into corner.

Care and Cleaning

Remove all particles and residue from Westbury aluminum components by referring to the Care and Cleaning requirements on the DSI website. Scan Below:



Warranty

For product Warranty and Registration please scan below:

