



Base Cabinet


(Drawer, Open Top, 5 Legs) Fitting Guide

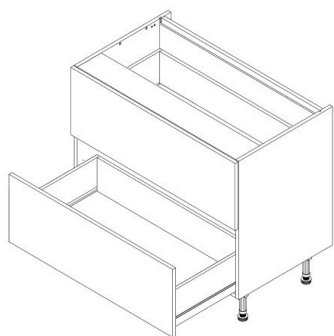

2 drawers

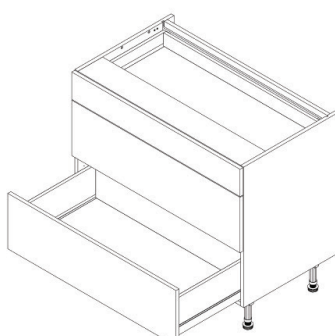

3 drawers

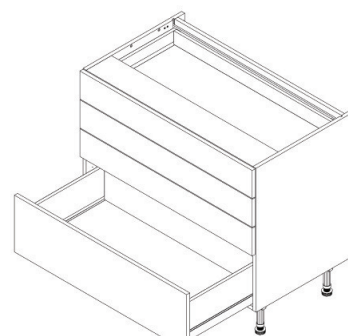


4 drawers

Cabinet Parts




32x
5/8" Screws




6x
1 1/4" Screws




18x
Cover Caps



5x
Legs




2x
Toe Kick Clips



2x
Space Plug



5x
Door Buffers




2x
L-Brackets



Drawer Cover Caps


Tools Required

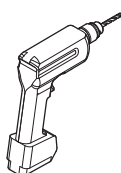


Drill




Stud Finder

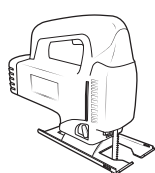


Jigsaw



Mallet




Screwdriver



Clamp



Spirit Level



Tape Measure


Remember to take care when unpacking. Please keep your workspace clean, clear, and tidy when working. This will help keep all items safe from damage. Any waste cardboard or plastic should be flattened down and placed in the trash can.

A minimum of two people will be needed to lift the cabinet.

Removing the drawers, fixtures, and fittings

Remove all fixtures and fittings from the drawer and keep these on a clean, level surface.

Also, remove all drawers from the cabinet by pulling the drawer all the way out of the cabinet and lifting the drawer upwards.

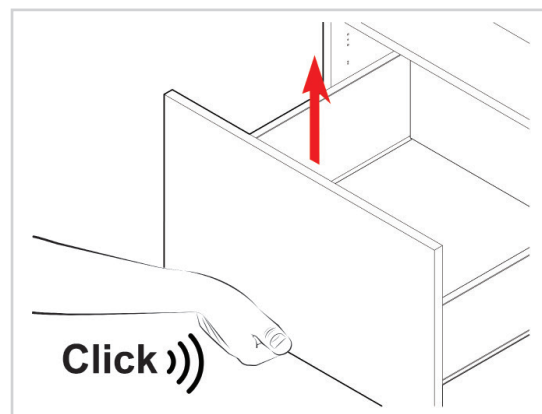


Securing the legs

Secure each of the cabinet legs to the cabinet using **2x 5/8"** screws per leg.

Make sure the legs are positioned as seen in the image to support the end panel.


Set the leg height to **4 9/16"**. The leg height can be adjusted by turning the foot of the leg clockwise or anti-clockwise.

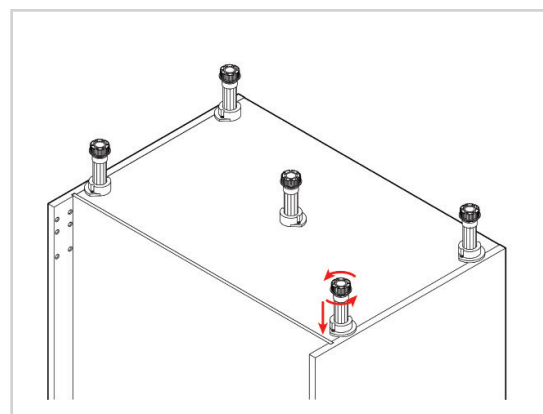

Notching out the side panel (when required)


In order to allow for any horizontal pipework running behind the cabinet, some cabinets will require the back of the cabinet side to be notched out.

Create a notch for the horizontal pipes at the back of the end panels using a jigsaw.

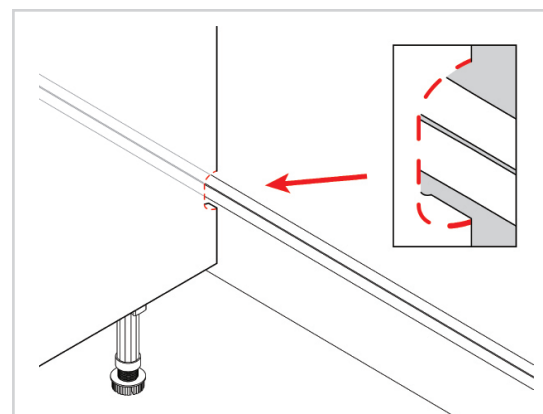

Locating the stud

Using a stud finder, locate the studs where the cabinet will be installed and mark the wall where the cabinet will sit.

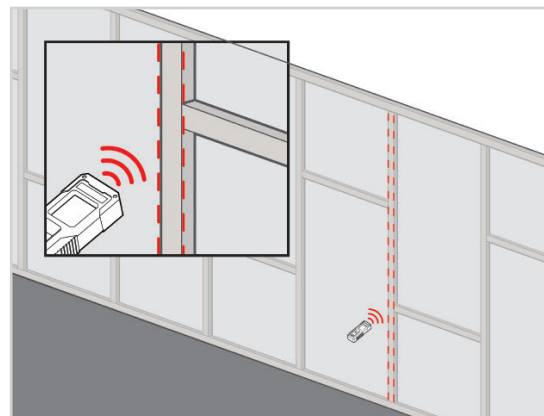

For help on determining the sort of wall you have, please refer to the “Room Preparation Guide.”


Lifting the cabinet into place

When lifting the cabinet into place, do **not** tilt, as this can damage the legs.

Position the cabinet against the wall so that the stud is in the center of the cabinet.

Use a spirit level to ensure the cabinet is level from front to back, left to right, and diagonally.

Adjust the legs if required.

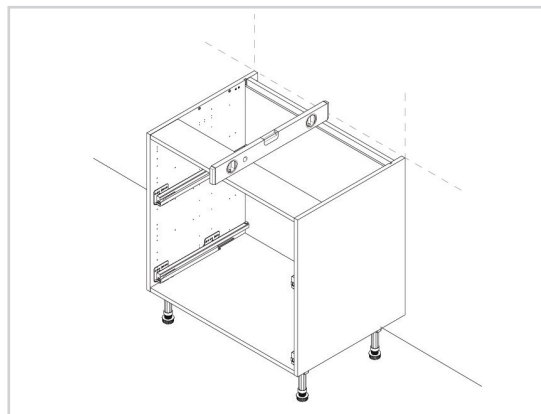

No screws or wall plugs are provided for attaching the cabinet to the wall. This is due to variations in wall construction.


Drilling the pilot holes

Drill pilot holes through the back rail in line with the wall studs, making sure to lightly mark the wall where the screws should be placed. The holes should be located, as per the diagram, close to the top of the cabinet.

Once complete, lift and move the cabinet away from the wall.

Drill a pilot hole at the marked positions.

Lift and reposition the cabinet, ensuring it is level and in line with the wall markings.

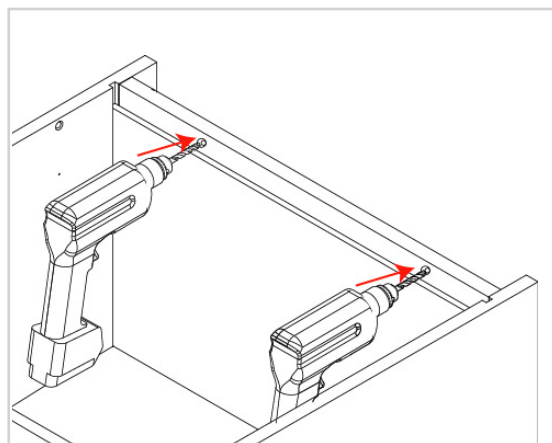


Inserting the space plugs

Position the space plugs between the wall and the back of the cabinet, where the holes are located.


Unwind until each space plug touches both the back panel of the cabinet and the wall.

Insert the screws into the drilled holes and secure the cabinet to the wall.

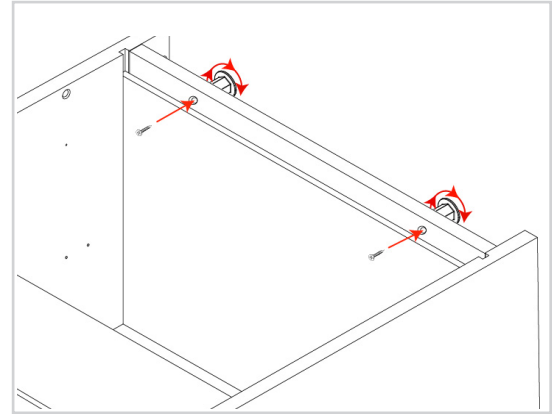

Securing an adjacent cabinet


Any adjacent cabinets need to be secured using the **1 1/4"** screws provided. Screw to the rear of both hinge plates and to the rear of the cabinet at the top and bottom.

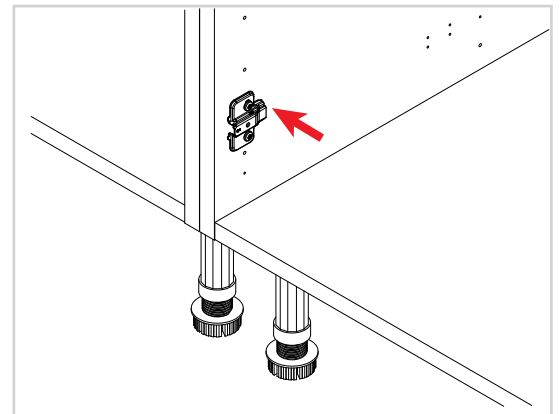

Inserting the drawers


Slide the drawer onto the runner, making sure the runner mechanism and the drawer side grooves line up.

Once positioned on the runners, push the drawer back into the cabinet. You will hear a click when it is inserted correctly.

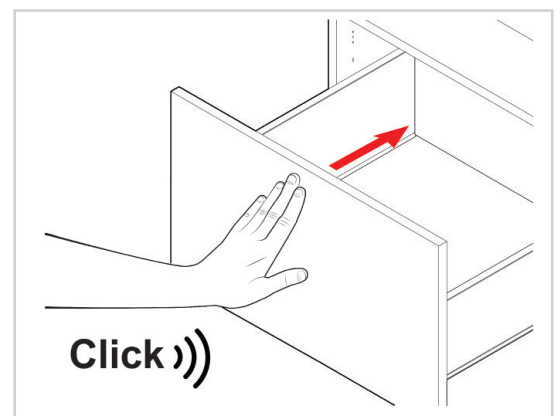


Adding the drawer buffers

Add **1x** door buffer to each side of each drawer along the cabinet edge, as shown in the image.

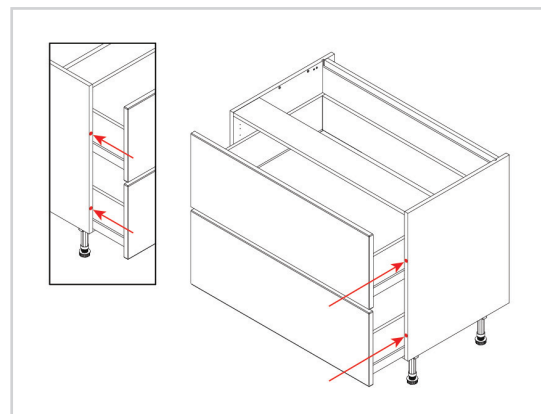

Cleaning the cabinet

Finally, the cabinet should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

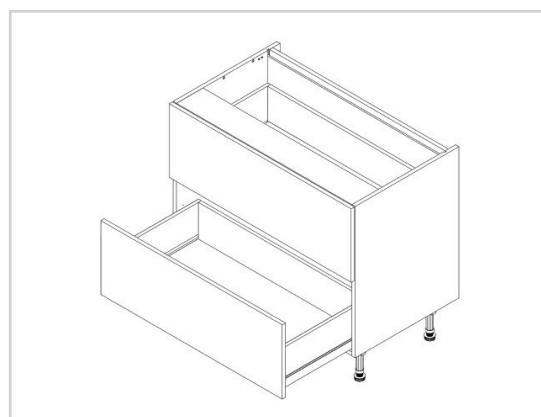

Store the toe kick clips and the remaining 5/8" screws.
These will be used later when attaching the toe kick.

Store the L-brackets.
These will be used later when installing the countertop (laminated or timber).

For drawer alignment please review the following installation guide:
Drawer - Drawer Hinge Adjustment