


**INFINITY**

# Base Unit

## Pet Beds base (Drawer, Solid Top)- Fitting Guide

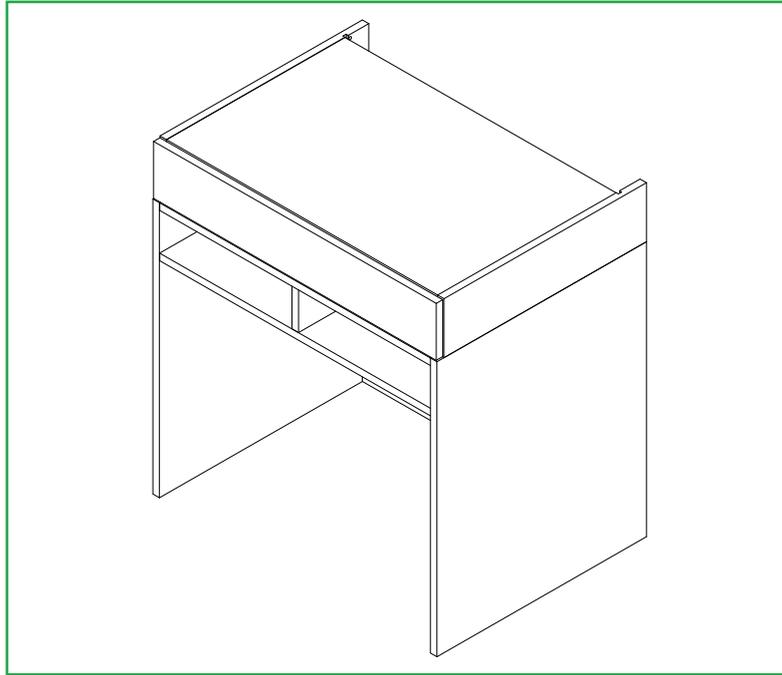

### Units Parts



### Tools Required




Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damages. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

A minimum of two people will be needed to lift the unit.

### Removing the drawer, fixtures, and fittings

Remove all fixtures and fittings from the drawer and keep on a clean and level surface and grouped by product.

Before installing the unit, remove all drawers. This is done by pulling the drawer all the way out, and then pulling the front of the drawer upwards.

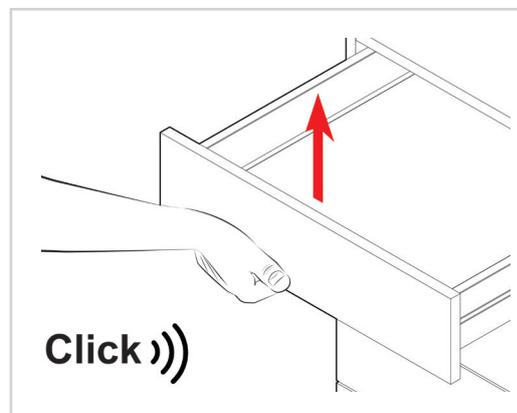


Place the drawer on a protected surface to protect it from any possible damage.

### Notching out the side panels (when required)

In order to allow for any horizontal pipework running behind the unit, some units will require the back of unit's side to be notched out.


Create a notch for the horizontal pipes at the back of the end panels using a jigsaw.

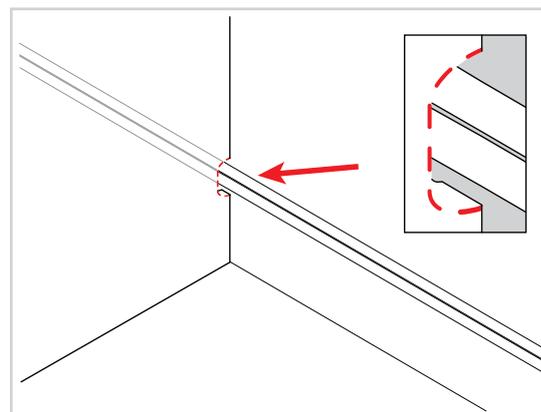

### Lifting the bottom unit into place

When lifting the unit into place do **not** tilt the unit on the side panels as this may damage the unit.


Place the bottom unit against the wall and align it with the wall markings that will have been drawn during the room preparation stage.

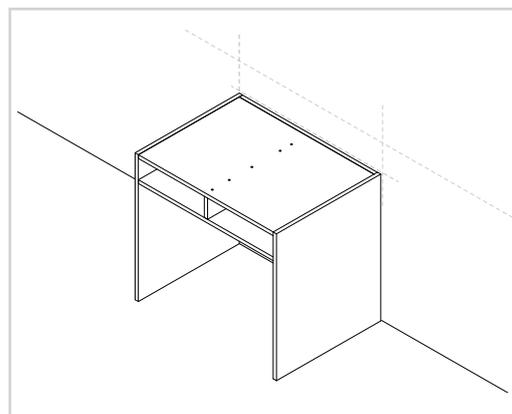

## Placing the top unit into place

Place the top unit on top of the bottom unit and align it with the wall markings. At the back of the units, level the back of the drawer unit with the back of the bottom unit so that the edges are level and flush.


Use a spirit level to ensure the unit is level from front to back, left to right, and diagonally. If the unit is required to be adjusted, lift the unit and place temporary packers.

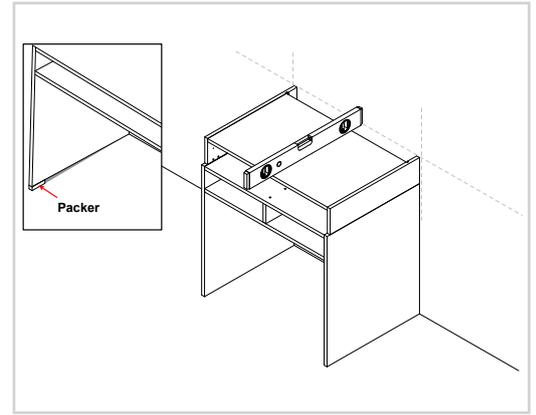

## Securing the drawer unit

Clamp together the **2** units and using the screws provided, **2x30mm** screws should be fixed from the inside of the drawer unit into the bottom unit on both sides.

The screws will be concealed once the drawer is re-inserted.

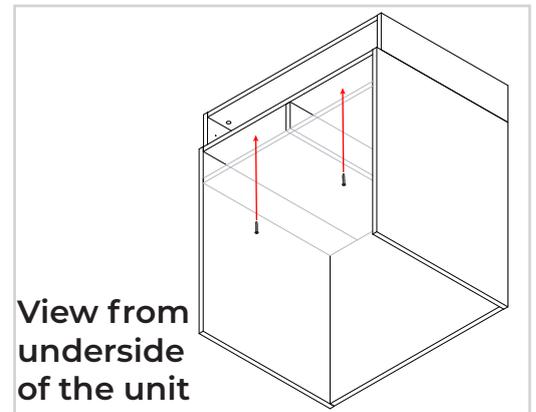


## Securing to adjacent units

Clamp together the two units, checking the front edges are level and flush.

Using the screws provided, **1x30mm** screw should be fixed, from the inside of the adjacent units, into each corner of the unit.


The screws can be concealed by placing them behind hinge plates or behind shelves. Cover caps can be used to hide any visible screw heads that remain.

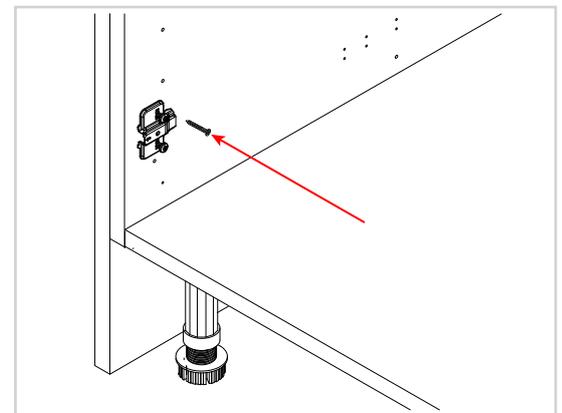

## Inserting the drawers


Slide the drawer onto the runners, make sure the runner mechanism and the drawer sides' groove line up.

Push the drawer back into the unit after it has been positioned on the runners: you should hear a click.

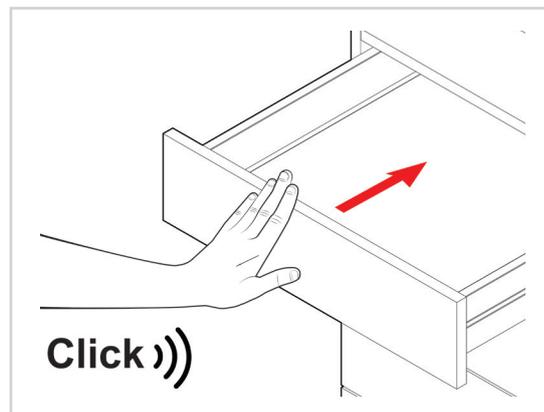

## Adding the drawer buffers

Add **1x** drawer buffer to each side of each drawer along the carcase edge, as show in the diagram.

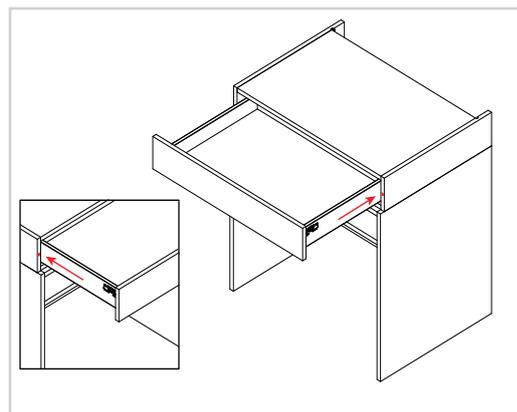

## Adjusting the hinges and cover caps

Remove the drawer cover caps


Adjust hinges to suit. As shown in the image.

**Point 1** - Will adjust the frontal left and right.

**Point 2a** - Will adjust the frontal up and down.


**Point 2b** - Will adjust the frontal tighten once in position.

**Point 3** - Will adjust the frontal releasing fixing clip. Screw while applying downward pressure to release.

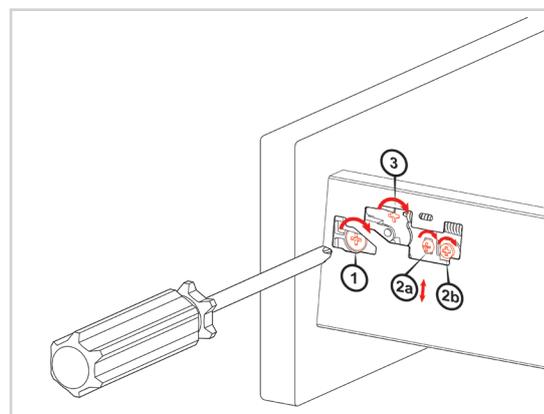


## Fitting the drawer cover caps

Fit the drawer cover caps over the drawer side adjustment.

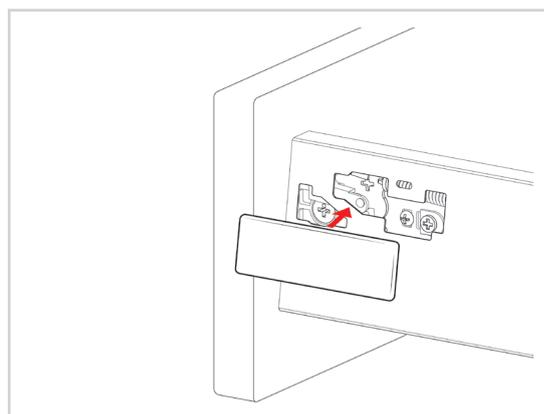

### Sealing the bottom of the unit (if required)

If the unit was required to be lifted to be made level, remove the packers, and seal the edges around the unit with silicone.

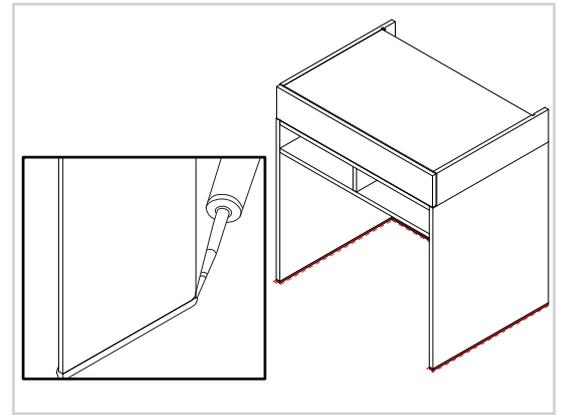

### Cleaning the unit

Finally, the unit should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

