



Worktop

Edge banding Tape, Fitting Guide

Parts Required

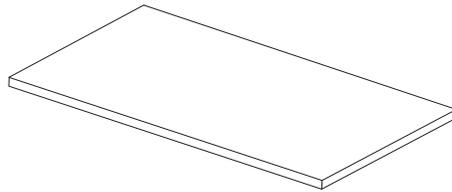

Worktop

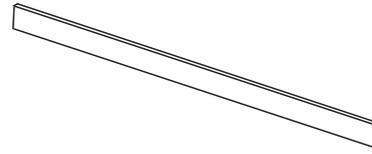


Edge banding
Tape

Tools Required




Scissor

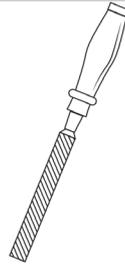

File



Glue

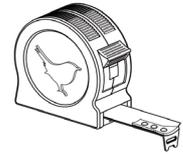


Tape
Measure

Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damages. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

Finding the edge banding measurement


Measure the side of the cut edge on the worktop and cut this measurement from the edge banding tape.

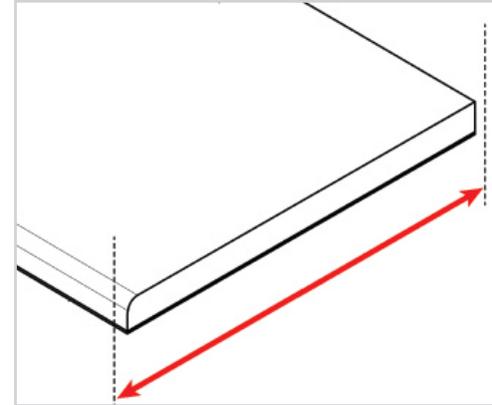

Add a extra 2mm to the edge banding measurement for tolerance.

Applying the adhesive

Apply adhesive to both the edge banding tape and the cut edge on the worktop.

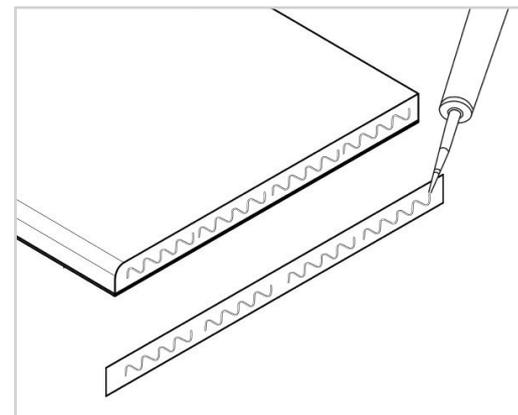


Attaching the edge banding tape

Place the edge banding tape onto the cut edge of the worktop. The edge banding tape should overhang the cut edge slightly.


Wipe away any excess adhesive before it dries.

Following manufacturers recommended drying time, wait for the adhesive to set before continuing.

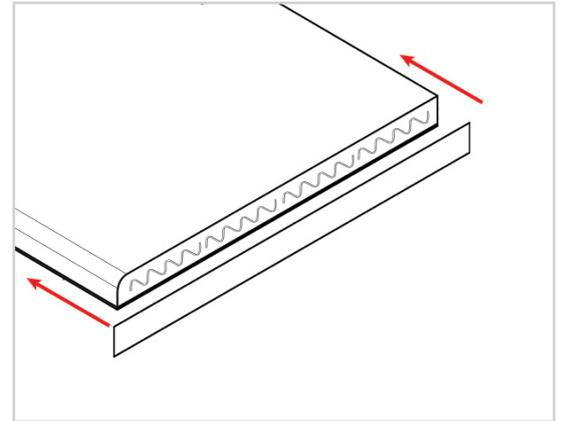

Removing the excess

Using a scraper or a file, to carefully remove any extra edge banding tape, and apply a small bevel to round off any sharp edges. Take care to avoid damage the worktop.

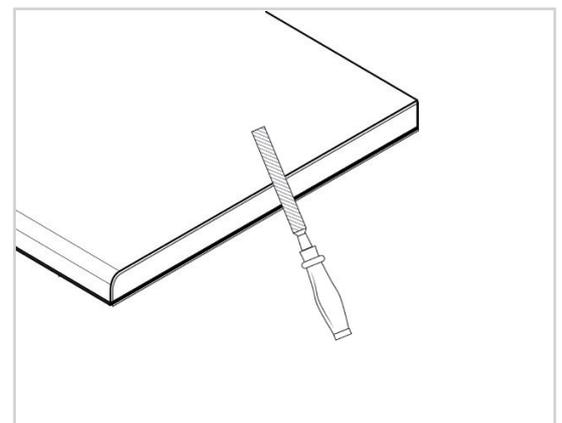

Take care when removing the excess to avoid damaging the worktop.