
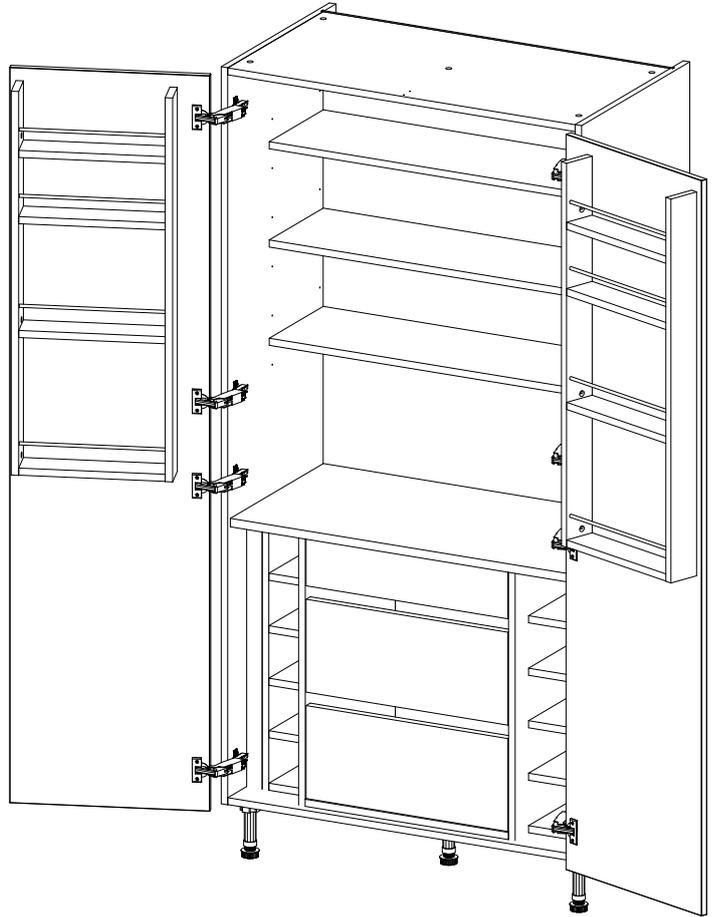


TOWER UNIT



2070-2250 Cooks Pantry Fitting Guide

wren

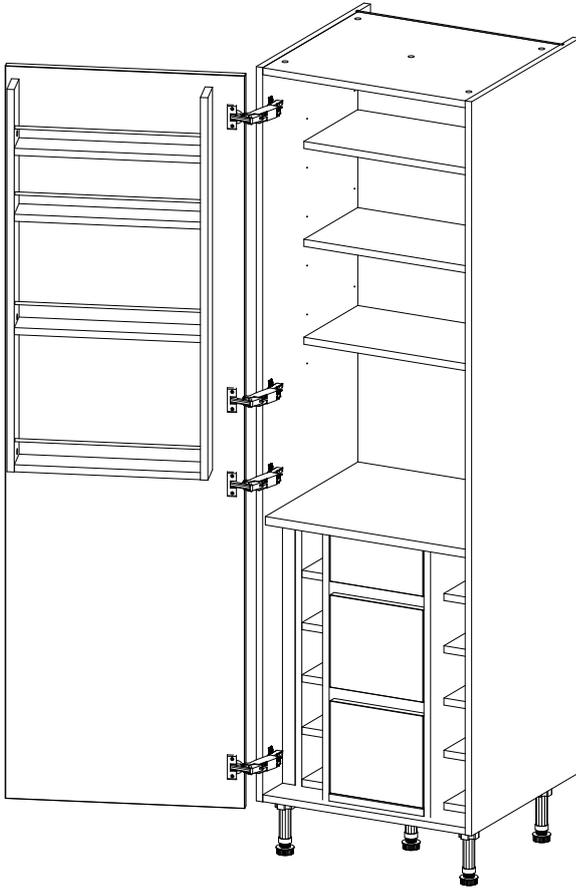



2070-2250 x 600

2070-2250 x 1000

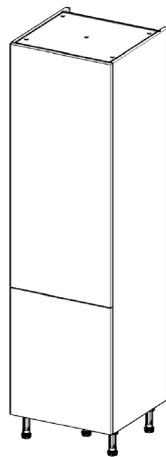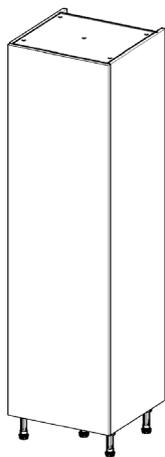

1 Door

70/30

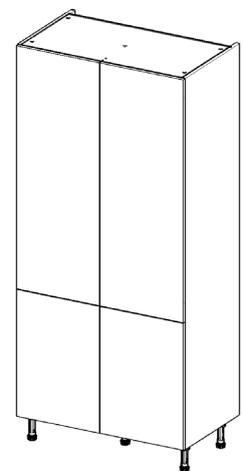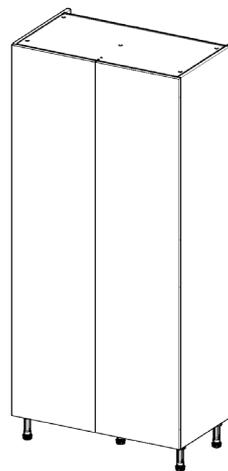

2 Door

70/30

BEFORE YOU START



INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED




Screws for fixing to walls are not provided as these vary depending on your wall material and construction. Ensure appropriate fixings for wall constructions are used.



Screws for attaching to worktops are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.






TWO
MAN
JOB

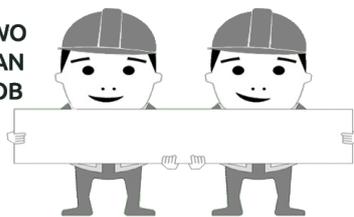

PROTECT
AGAINST
DAMAGE




TOOLS REQUIRED

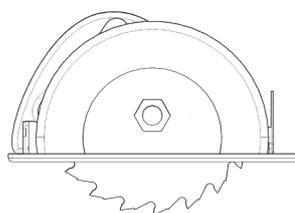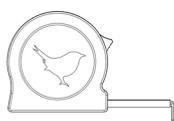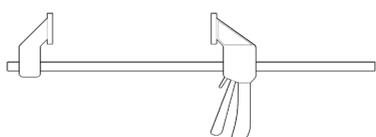

Drill NOT to be used with CAM DOWEL & CAM LOCK

5mm Ø Drill Bit

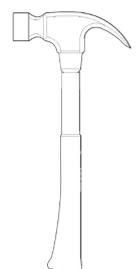

CONTENTS

1	Pack components
2	Filler panel attachment
3	Cooks pantry installation
4	Worktop fitting
5 - 6	Hinge location
7 - 8	Spice rack assembly
9 - 10	Frontal (W500) spice rack drilling
11 - 12	Frontal (W600) spice rack drilling
13	Frontal attachment / adjustment
14	Spice rack attachment
15	Loose shelf fitting

FI.PK.FIT.320 - FITTING PACK (COOKS PANTRY INC SPICE RACK)

Supplied in pack:




(F) x32
Wooden dowel




(H) x12
Cam lock



(K) x4
30mm screws

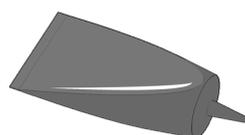


x2
Glue bottle



(L) x8
15mm screws



(W) x12
Cam dowel

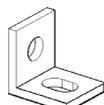


x4
L Bracket SML



x12
Shelf Pegs

FI.PK.FIT.246 - FITTING PACK (COOKS PANTRY ONLY)


Supplied in pack:



(L) x8
15mm screws



(K) x4
30mm screws

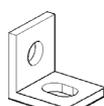


x4
L Bracket SML




x12
Shelf Pegs

ASSEMBLY COMPONENTS

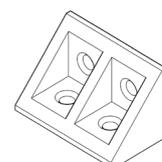


x3
Shelf support
(Inc Screws)

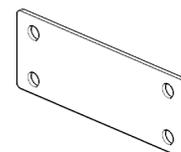


(U) x4
Fixing plate
(Inc Screws)


UNIT COMPONENTS (WHERE APPLICABLE)

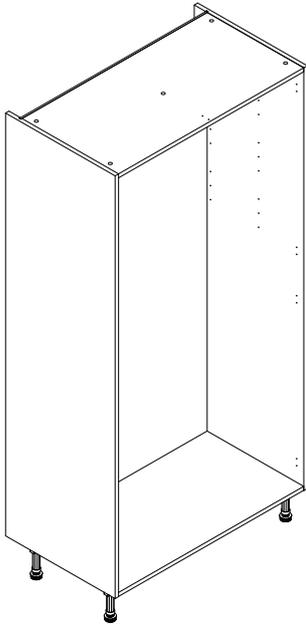


Tower Unit
H 2070 / 2250
W 1000

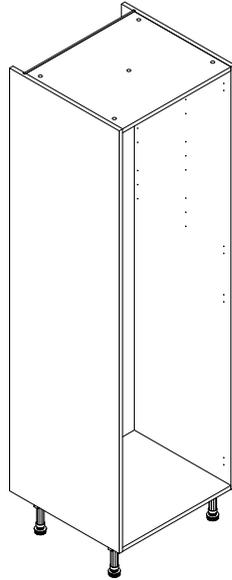


Tower Unit
H 2070 / 2250
W 600

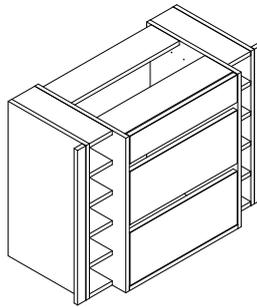


Cooks pantry
W 963

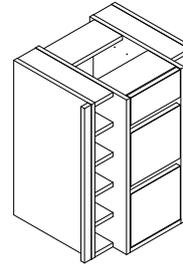

Cooks pantry
W 563
LH / RH options
available

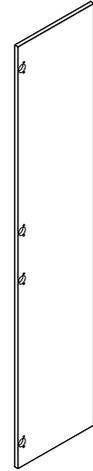

1-2 Dr
option

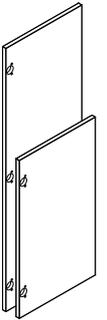

70/30 Dr
option

SPICE RACK & LOOSE SHELVES


Supplied in pack(s):



(eA)
LH End panel




(eB)
RH End panel

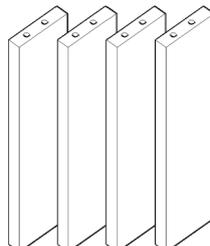

(sC)
Fixed shelves



(rD)
Spice rack
rods

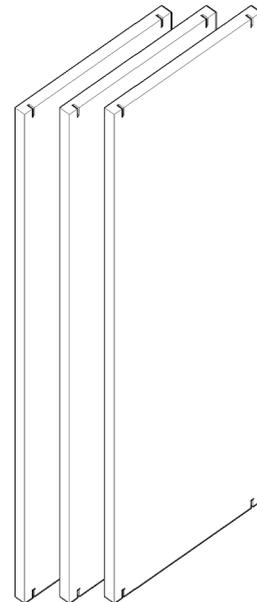

x3
Loose shelves

Please Note: Spice racks are only supplied with certain cooks pantry models (not all), this will be shown within the unit description on the order documentation "inc spice rack".



ENSURE TOWER AND ADJACENT UNITS ARE SECURED CORRECTLY AS PER FITTING INSTRUCTIONS SUPPLIED PRIOR TO INSTALLATION OF COOKS PANTRY UNIT. REMOVE DRAWERS FROM COOKS PANTRY PRIOR TO INSTALLATION.

Step 1.

Cut the filler panel to size.


1000 pantry filler: 43x702, Quantity 2

600 pantry filler: 35.5x702, Quantity 1

Step 2.

Position the filler panel in place and secure it with 2 x **L Bracket SML** per filler panel and 2 x 15mm Screws (**L**) Per **L Bracket SML**.

1000 Width unit will be used for reference throughout this instruction.

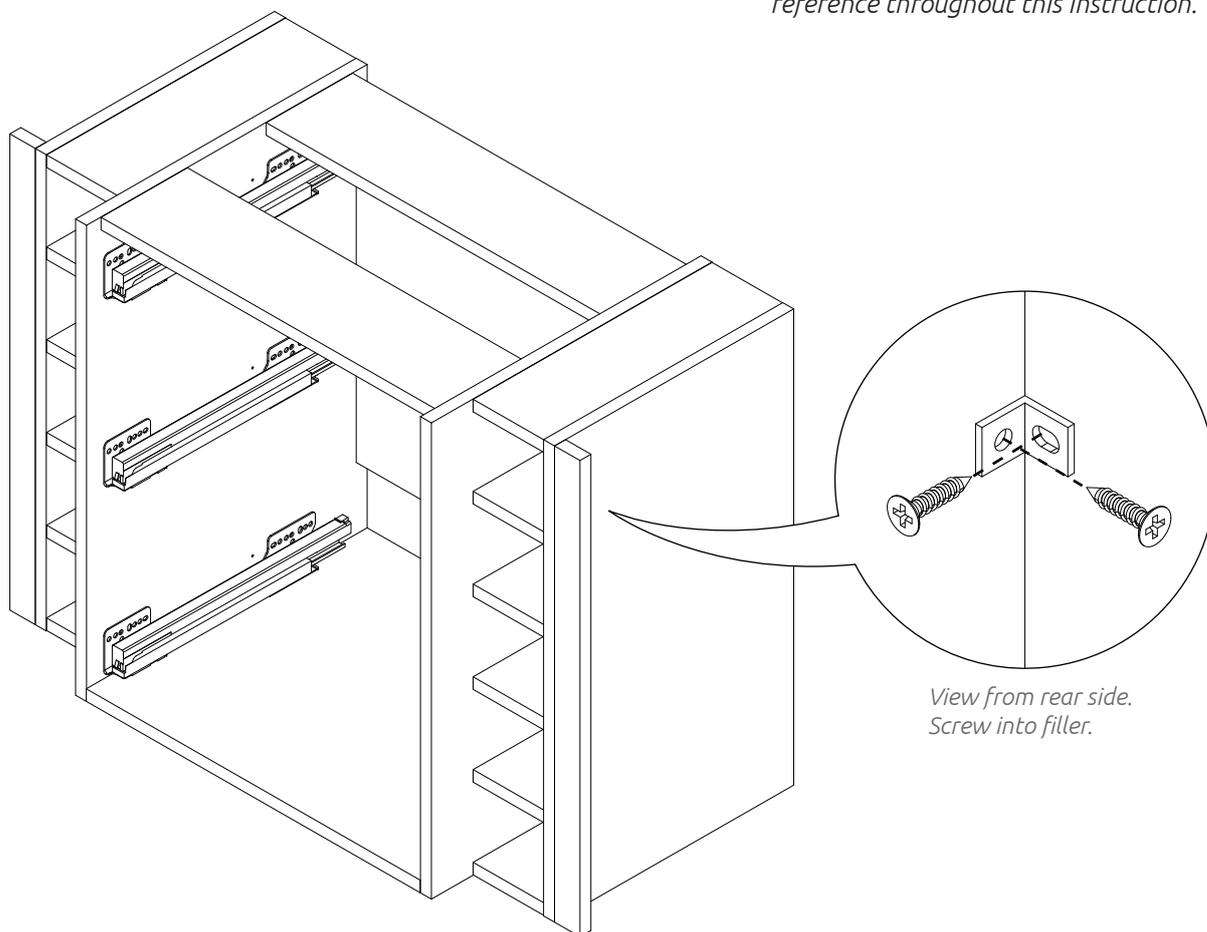


*View from rear side.
Screw into filler.*

Step 3.

Remove all the hinge plates on the bottom half of the tower before inserting the cooks pantry.


Step 4.

Fully insert the cooks pantry unit into the tower unit.

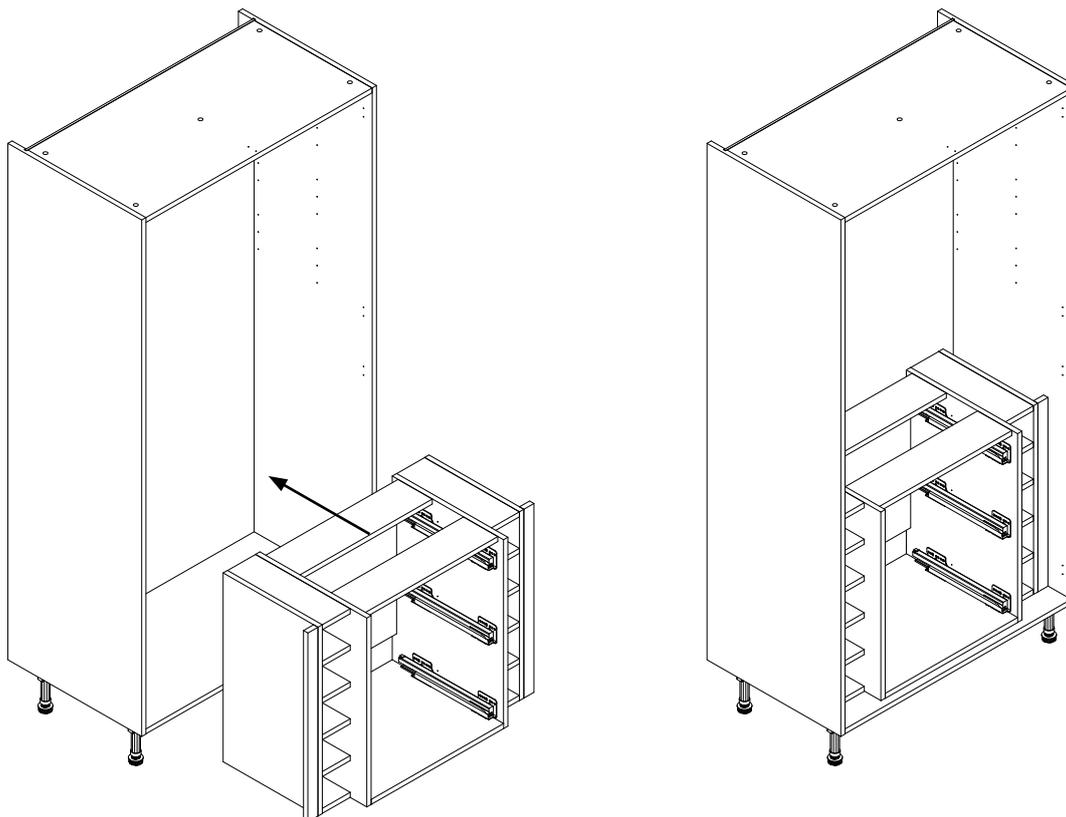

Step 5.

Secure the cooks pantry unit to the tower unit with 4 x 30mm screws (K).
Screw 100mm in from the front and the rear and 100mm in from the sides of the centre opening on both sides of the unit.

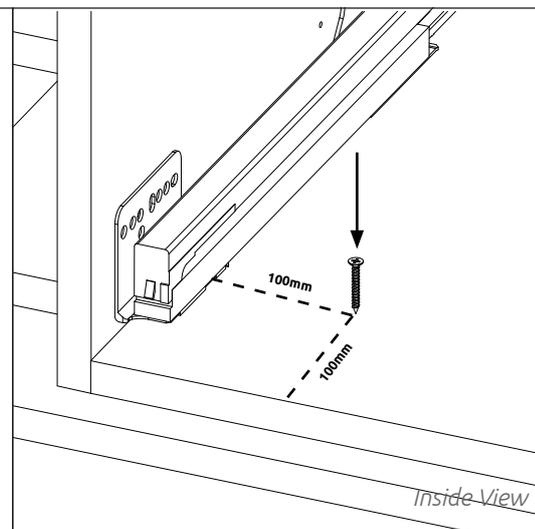

Step 6.

Re-attach the hinge plates to the unit.



ENSURE A SHARP SAW BLADE IS USED TO MINIMISE DAMAGE TO WORKTOP DURING CUTTING!


Step 7.

Cut the supplied worktop to the correct width.

1000 tower units: 963mm


600 tower units: 563

Quartz worktops will be supplied cut to size.

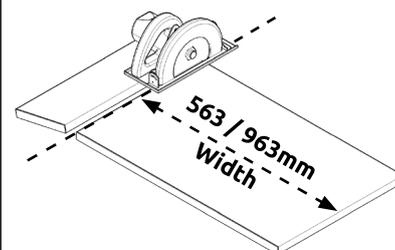

Step 8.


Cut the depth of the worktop to 490mm.

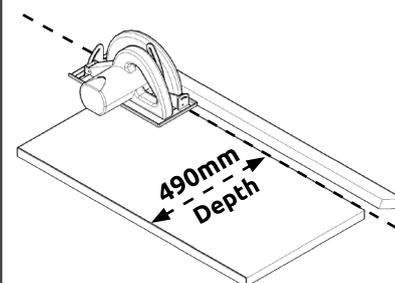

Step 9.

Carefully position worktop into the tower and sit it on top of the cooks pantry unit.


Ensure the worktop is flush with the back of the tower.

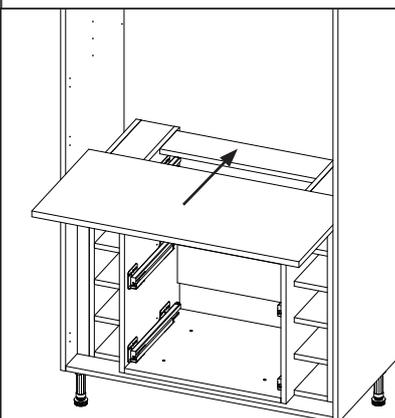

Step 10.

Ensure the worktop is positioned correctly, clamp in place if required. Screw up through the top rails into the worktop at the front and rear of the unit.

Screws not provided.

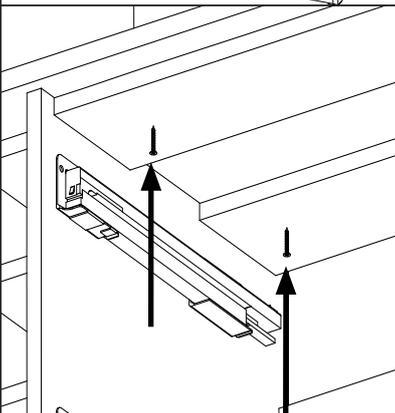


Step 11. (Where applicable)

Attach hinge plates onto end panel(s) to suit as shown using 2 screws already positioned within the hinge plate.

Hinge side(s) to be mounted in accordance to customer specific kitchen plan.


2070

1-2 DR HINGE POSITION

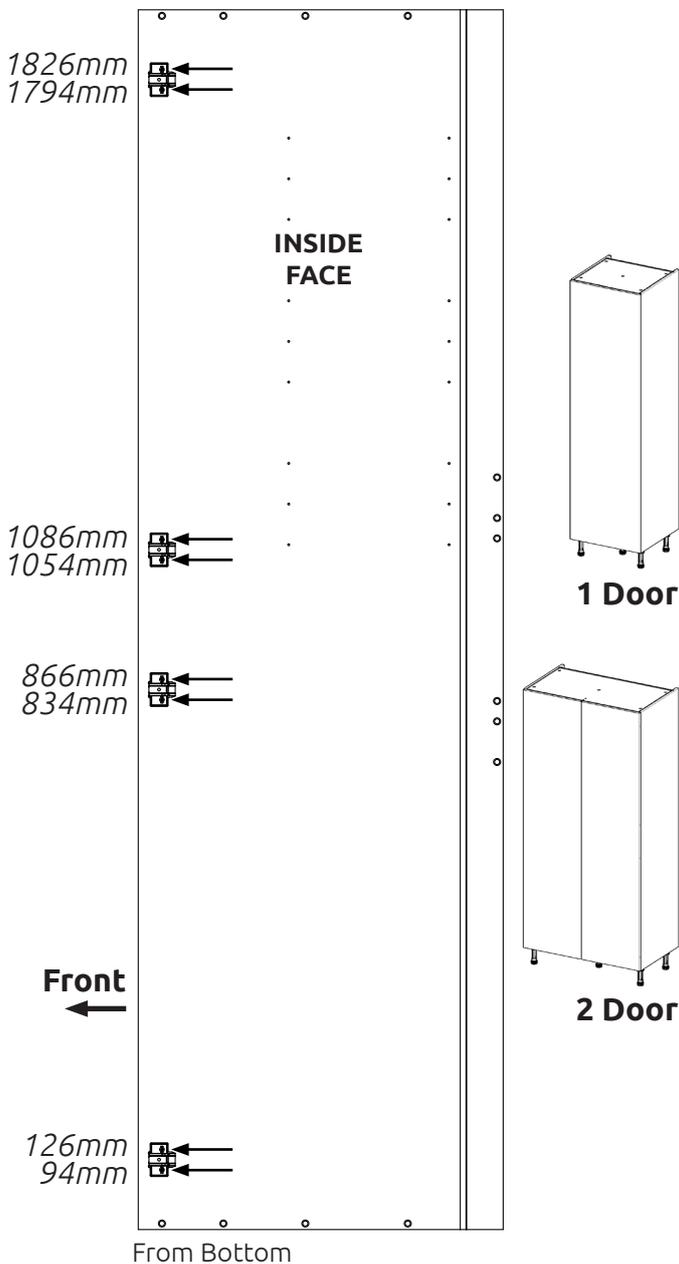

2070

70/30 HINGE POSITION

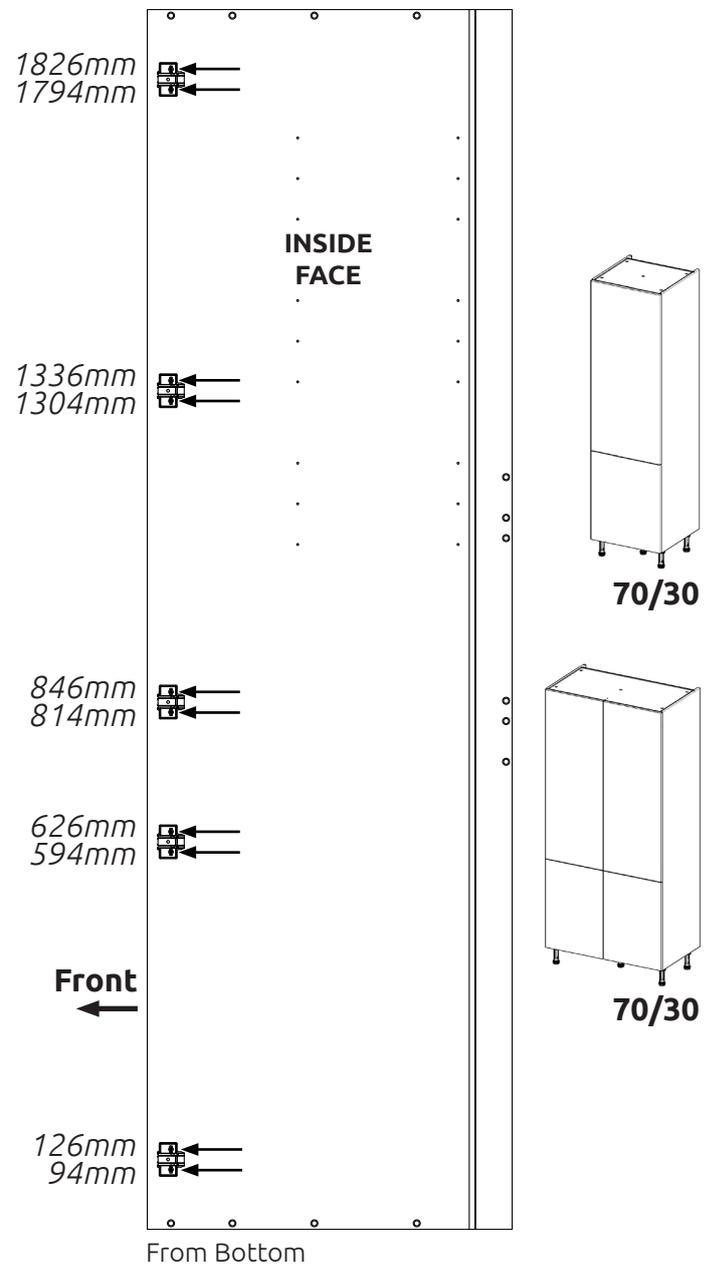




Step 11. (Where applicable)

Attach hinge plates onto end panel(s) to suit as shown using 2 screws already positioned within the hinge plate.

Hinge side(s) to be mounted in accordance to customer specific kitchen plan.




2250

1-2 DR HINGE POSITION

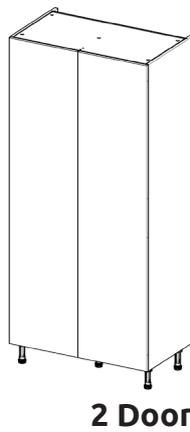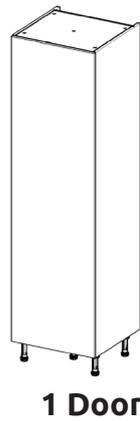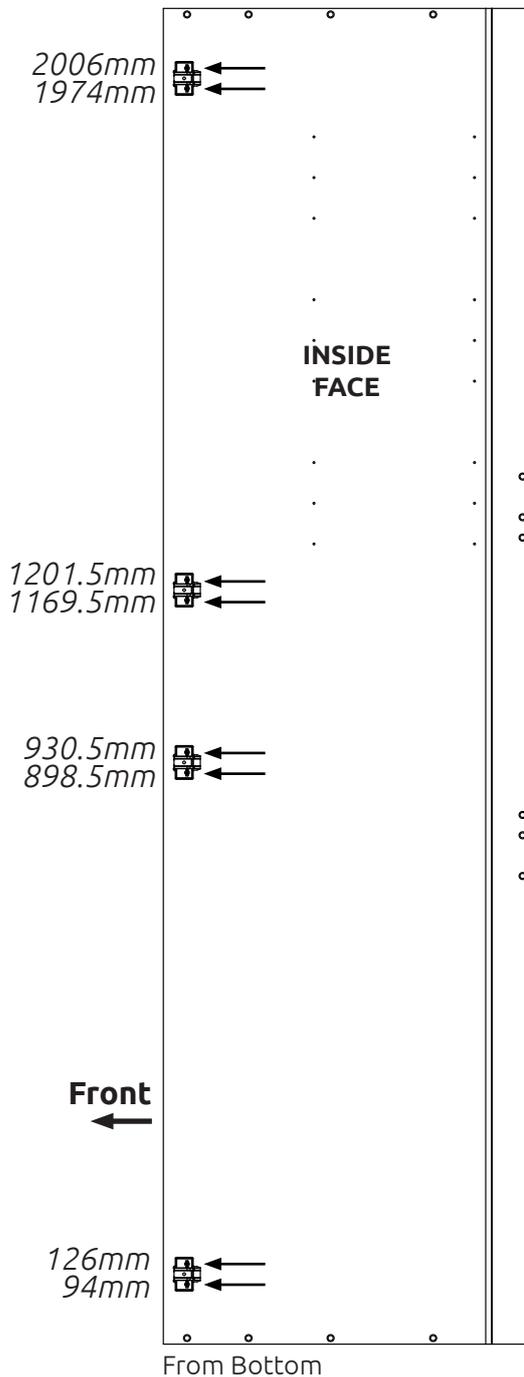

2250

70/30 HINGE POSITION

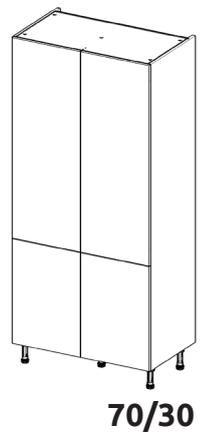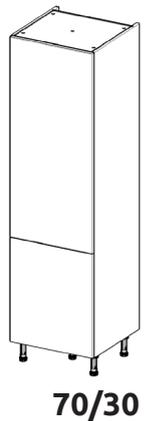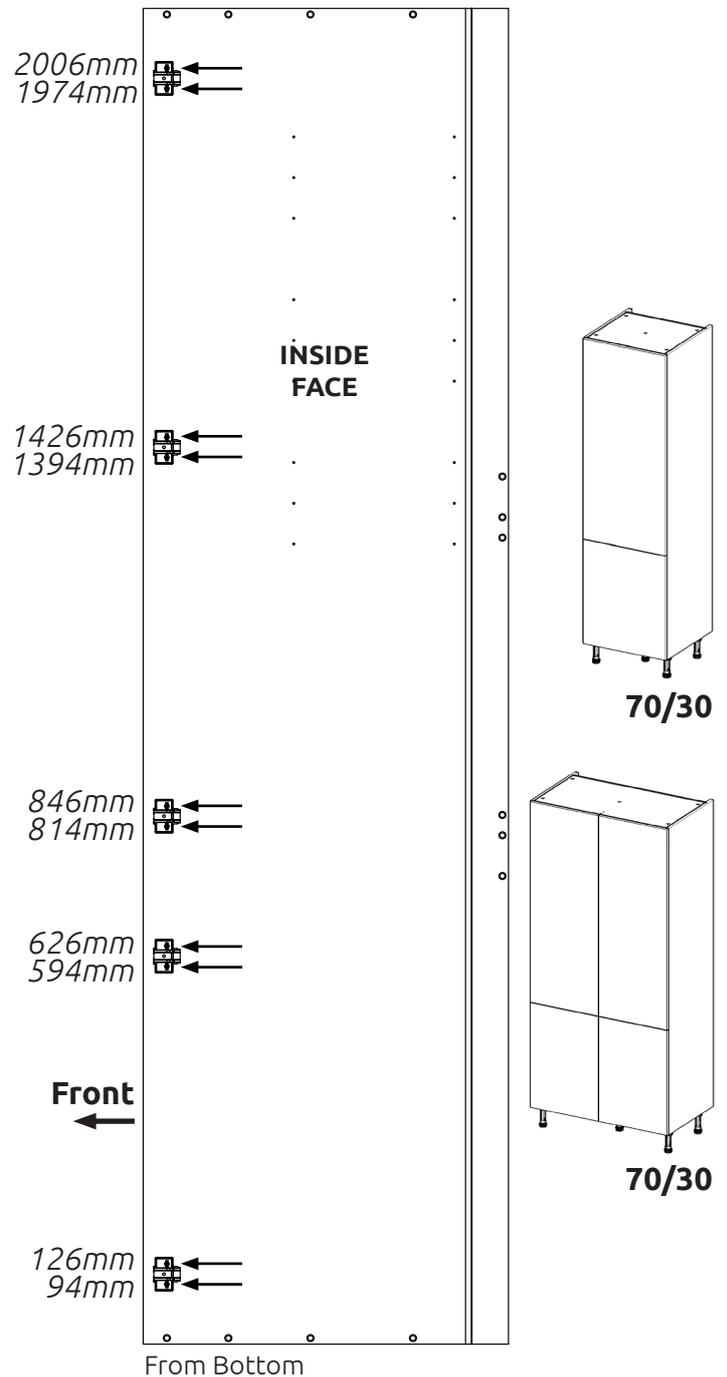




Please Note: Spice racks are only supplied with certain cooks pantry models (not all), this will be shown within the unit description on the order documentation "inc spice rack".


Step 12.

Using the provided adhesive, fill the marked holes on end panels **(eA)** & **(eB)** approximately 3/4 full.

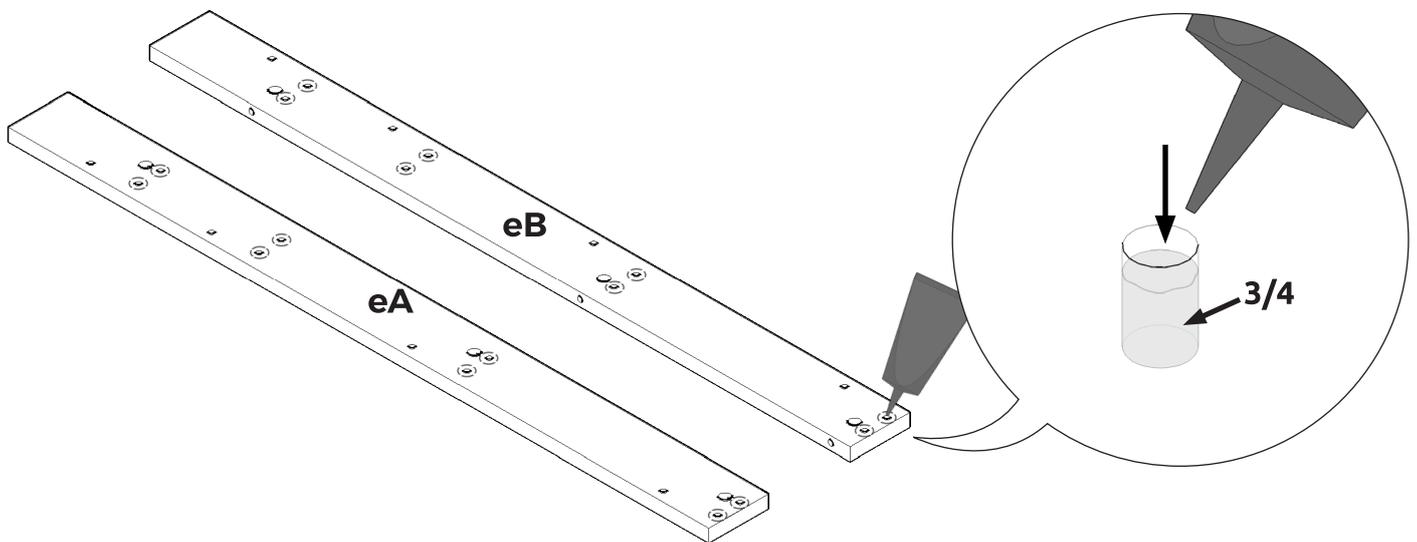


Step 13.

Using the provided adhesive, fill the holes of fixed shelf **(sC)** approximately 3/4 full and insert a wooden dowel **(F)** into each hole. Lightly tap wooden dowel **(F)** with a hammer if required. Repeat for each fixed shelf **(sC)**. Remove excess glue if necessary.

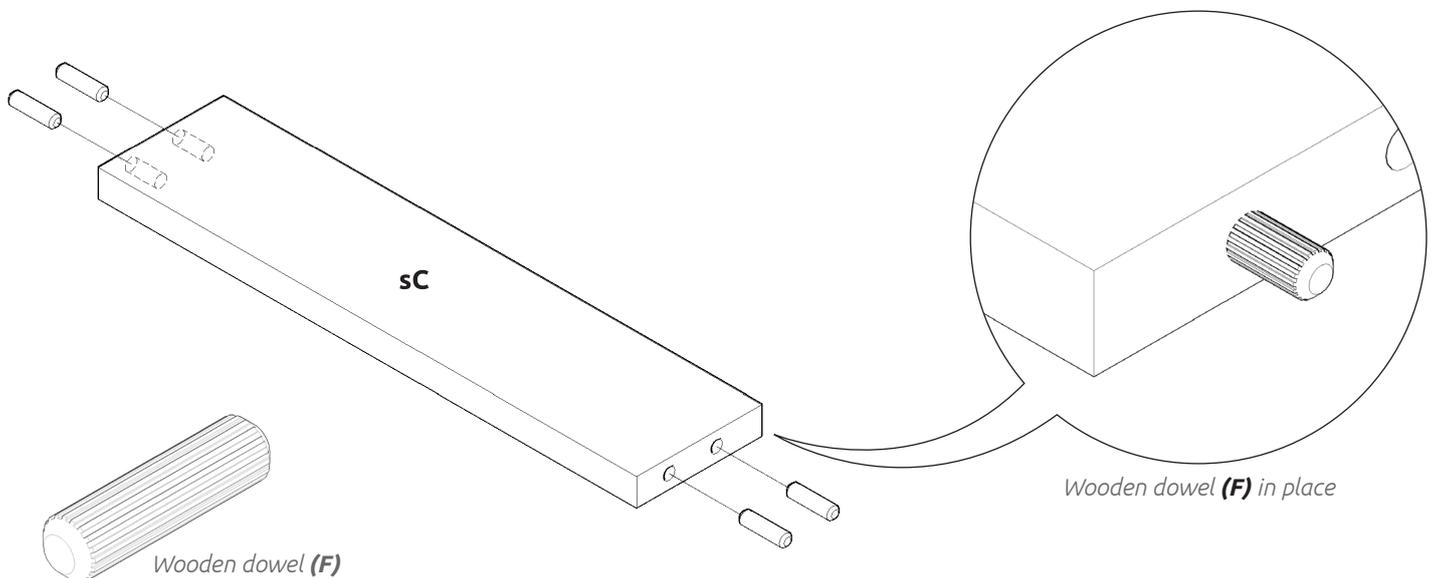


Step 14.

Attach end panels (**eA**), (**eB**), fixed shelves (**sC**) and spice rack rod (**rD**) together.

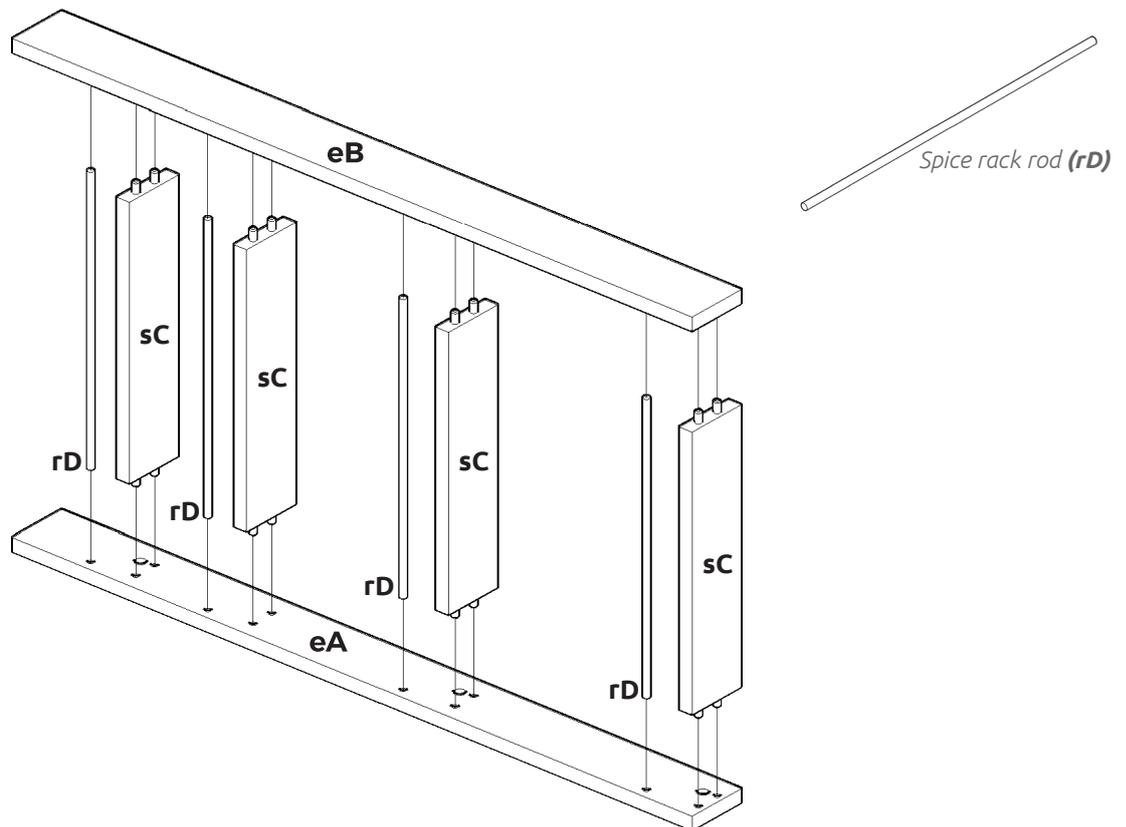

Step 15.

Once positioned, carefully clamp all panels together with a suitable amount of force. Allow bond to form. Remove excess glue if necessary.

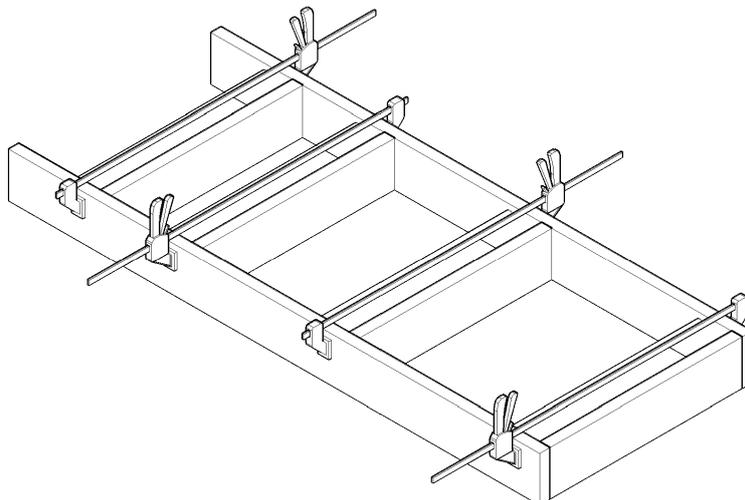

2070-2250 Cooks Pantry Fitting Guide

Step 16. (Where applicable)


Using the dimensions below drill 6 holes on the inside face of the door for the spice rack.
Holes to be drilled $\varnothing 5\text{mm}$ x 13mm deep.

Spice rack side(s) to be drilled in accordance to customer specific kitchen plan.




CAUTION!
ONLY DRILL 13MM DEEP TO PREVENT DAMAGING THE FRONT FACE OF THE DOOR.

1916 x 496 Door 2 DR (1000 unit) SPICE RACK DRILLING LOCATION

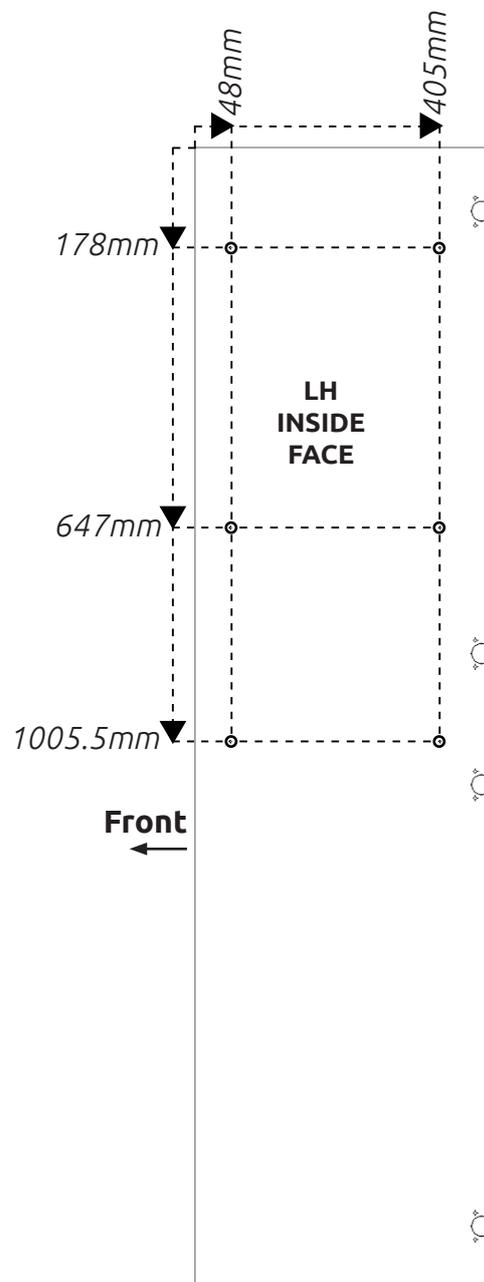

1196 x 496 Door 70-30 DR (TOP) (1000 unit) SPICE RACK DRILLING LOCATION

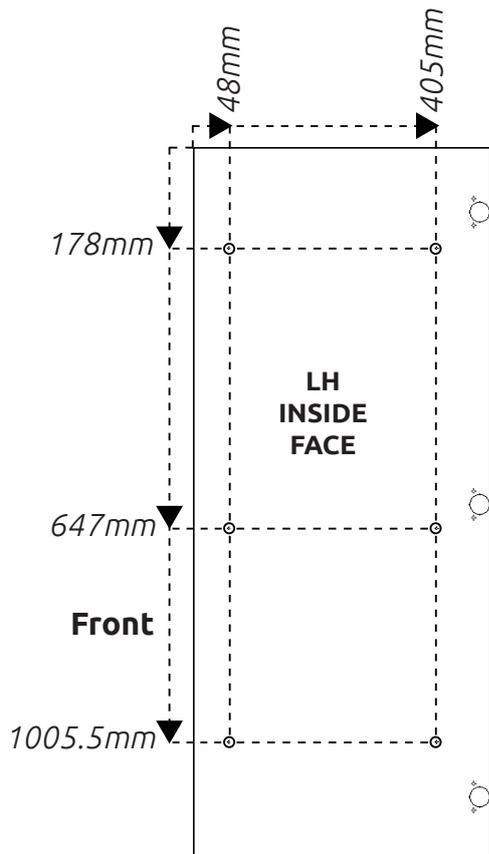

MIRROR DIMENSIONS FOR THE RIGHT HAND DOOR IF REQUIRED.

Step 16. (Where applicable)

Using the dimensions below drill 6 holes on the inside face of the door for the spice rack.
Holes to be drilled $\varnothing 5\text{mm}$ x 13mm deep.

Spice rack side(s) to be drilled in accordance to customer specific kitchen plan.





CAUTION!
ONLY DRILL 13MM DEEP TO PREVENT DAMAGING THE FRONT FACE OF THE DOOR.

2096 x 496 Door

2 DR (1000 unit)

SPICE RACK

DRILLING LOCATION

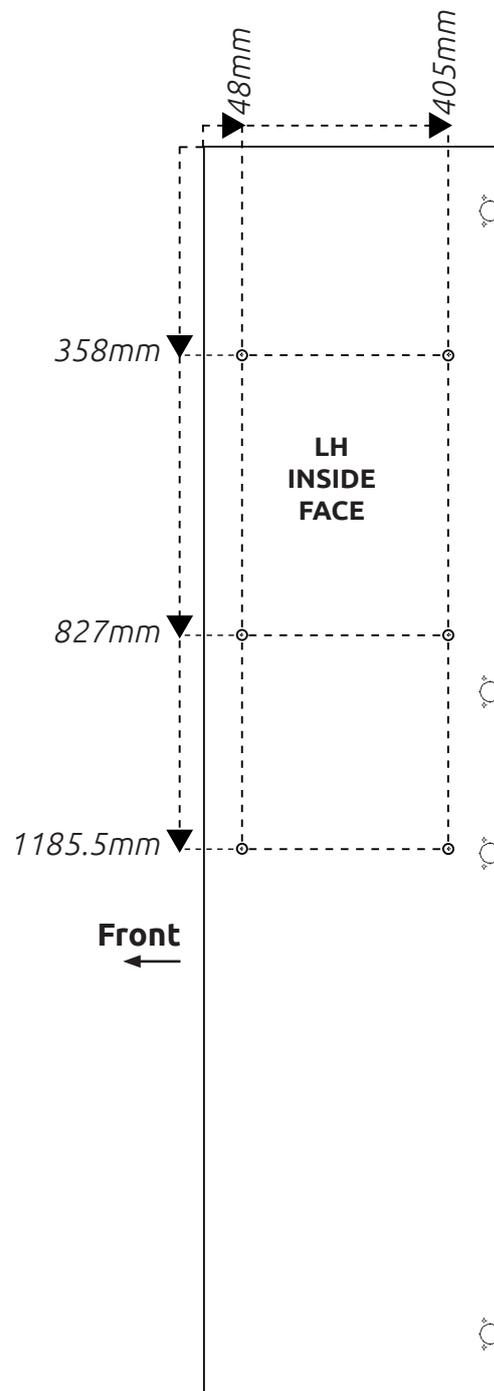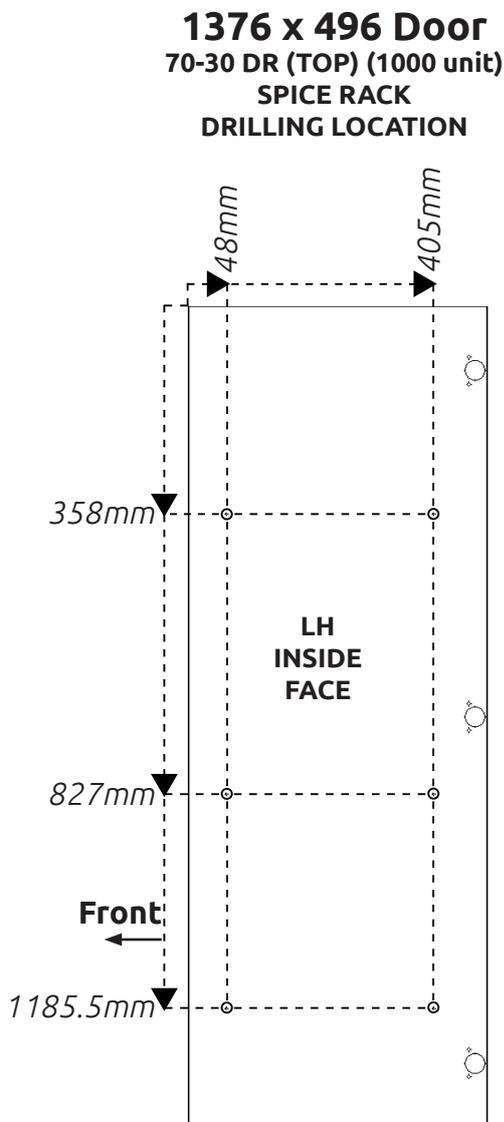

MIRROR DIMENSIONS FOR THE RIGHT HAND DOOR IF REQUIRED.

Step 16. (Where applicable)



Using the dimensions below drill 6 holes on the inside face of the door for the spice rack.
Holes to be drilled $\varnothing 5\text{mm}$ x 13mm deep.

Spice rack side(s) to be drilled in accordance to customer specific kitchen plan.



CAUTION!
ONLY DRILL 13MM DEEP TO PREVENT DAMAGING THE FRONT FACE OF THE DOOR.

1916 x 596 Door 2 DR (600 unit) SPICE RACK DRILLING LOCATION

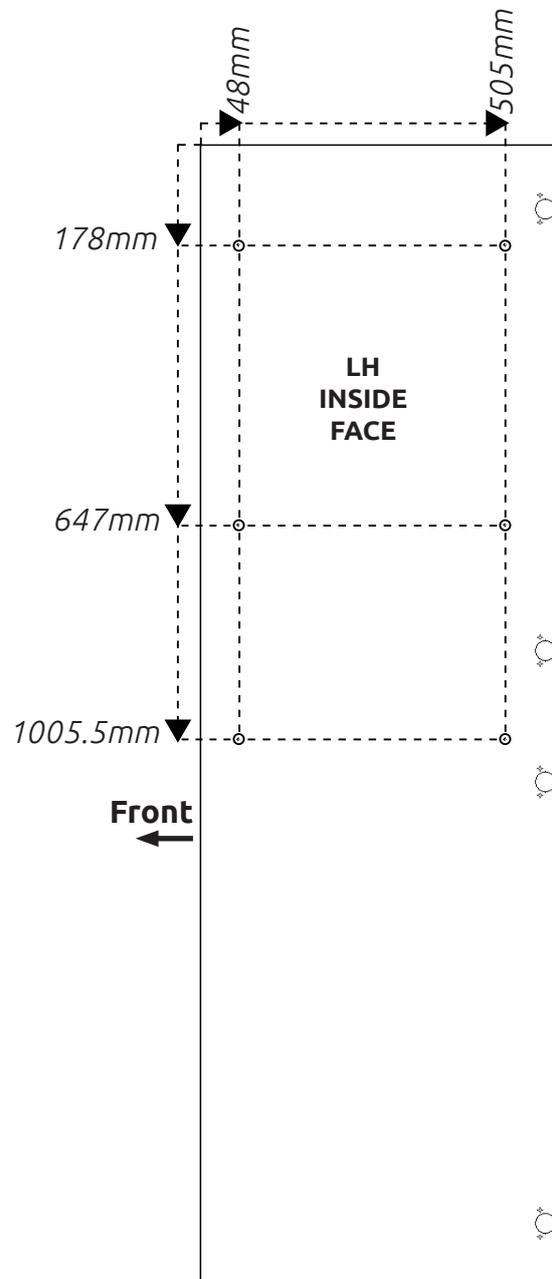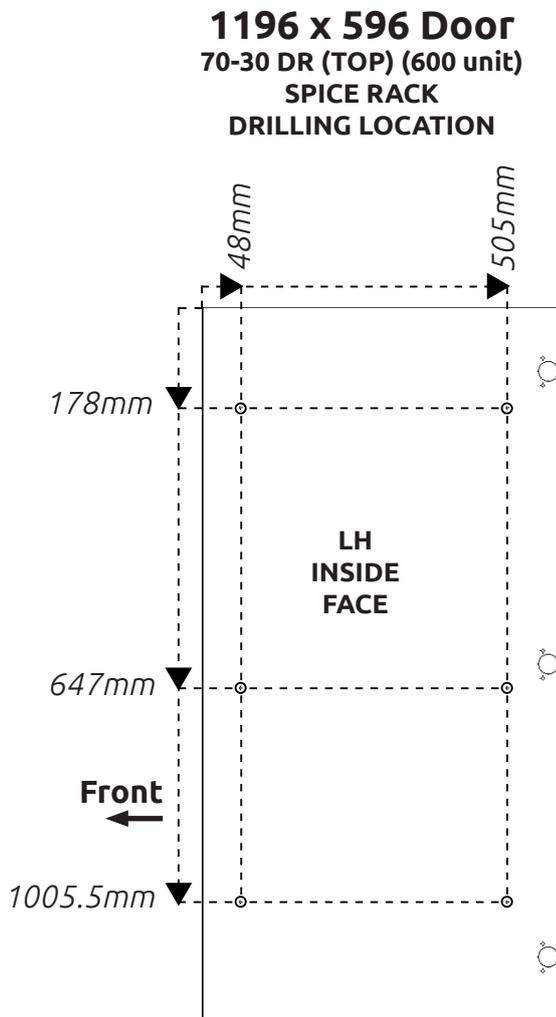

MIRROR DIMENSIONS FOR THE RIGHT HAND DOOR IF REQUIRED.

Step 16. (Where applicable)

Using the dimensions below drill 6 holes on the inside face of the door for the spice rack.
Holes to be drilled $\varnothing 5\text{mm}$ x 13mm deep.

Spice rack side(s) to be drilled in accordance to customer specific kitchen plan.




CAUTION!
ONLY DRILL 13MM DEEP TO PREVENT DAMAGING THE FRONT FACE OF THE DOOR.

2096 x 596 Door

1 DR (600 unit)

SPICE RACK

DRILLING LOCATION

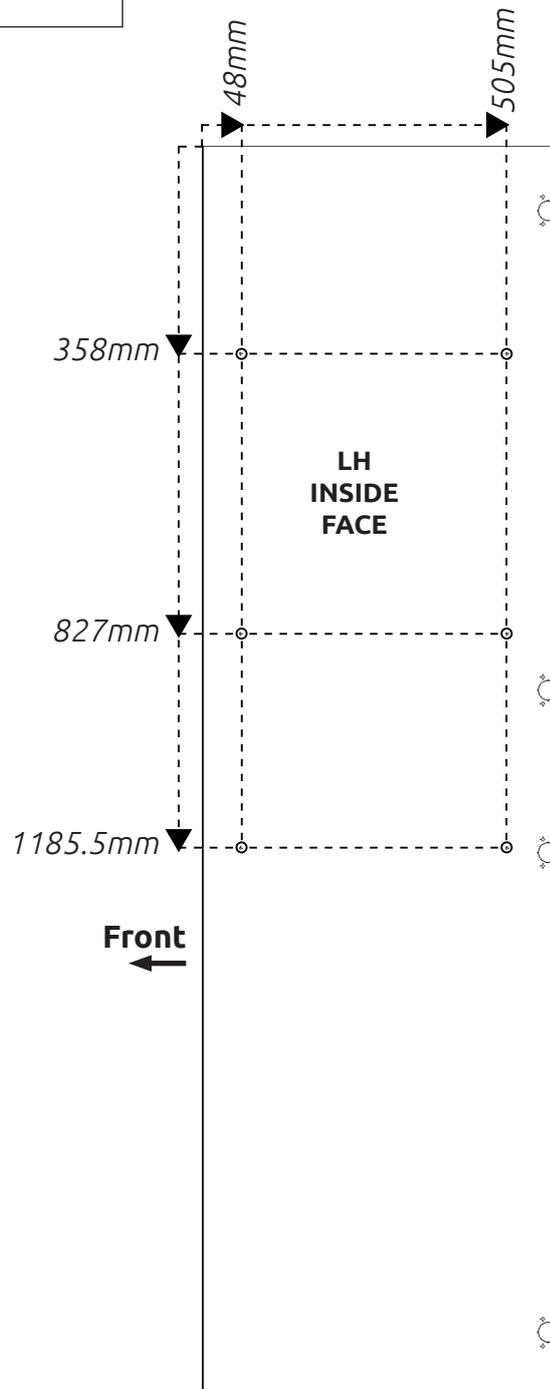


1376 x 596 Door

70-30 DR (TOP) (600 unit)


SPICE RACK

DRILLING LOCATION

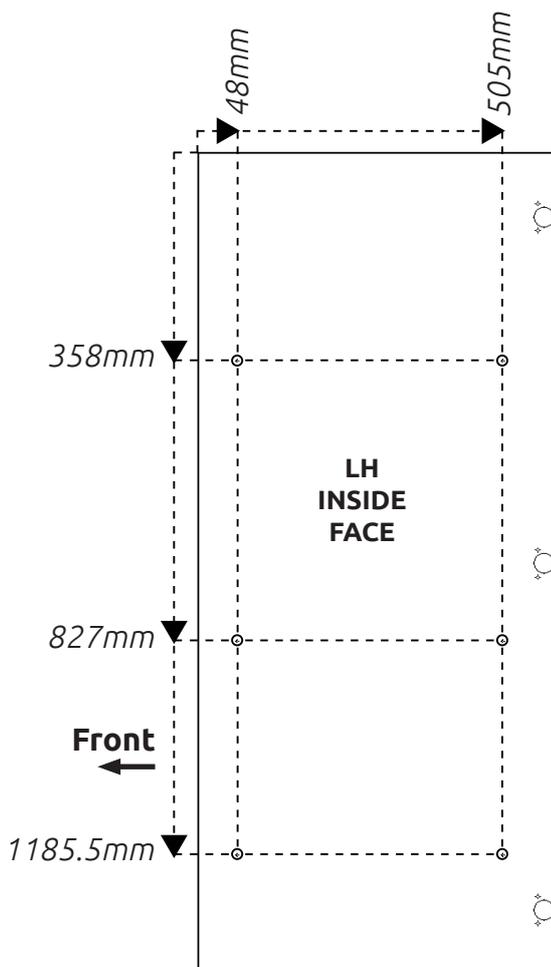

MIRROR DIMENSIONS FOR THE RIGHT HAND DOOR IF REQUIRED.

	<p>FRONTAL AND HINGE ATTACHMENT Step 17a. (Where applicable) Align frontals and join together using 2 x fixing plates to the back of both frontals. Ensure a 4mm gap is maintained between each frontal. Screw in place using 4 x 15mm screws (L) per fixing plate.</p>	<p>Fixing Plate</p>
	<p>Step 17b. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws already located in the hinges.</p>	
	<p>CLICK</p>	<p>Step 17c. Attach the door to unit, clip hinges onto hinge plates and click to secure.</p>
<p>Step 17d. Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

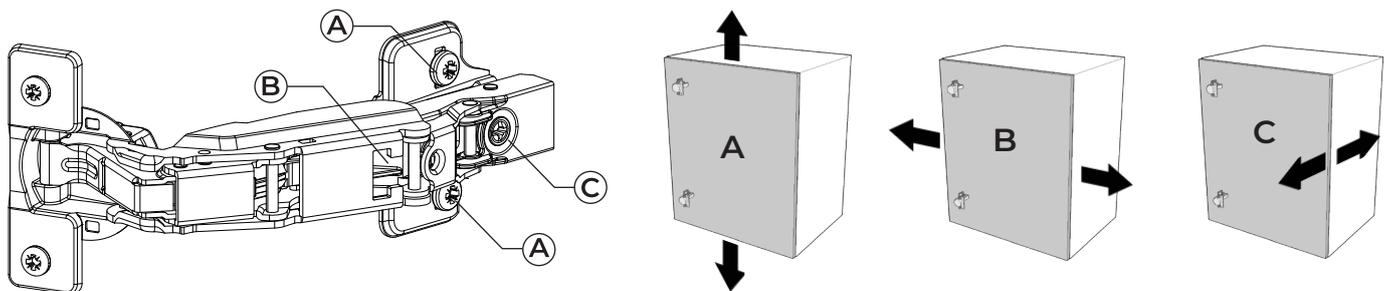

Step 18.

Insert 6 x cam dowels (**W**) into the holes on the inside face of the door(s). (See Fig 1)

Fig 1.


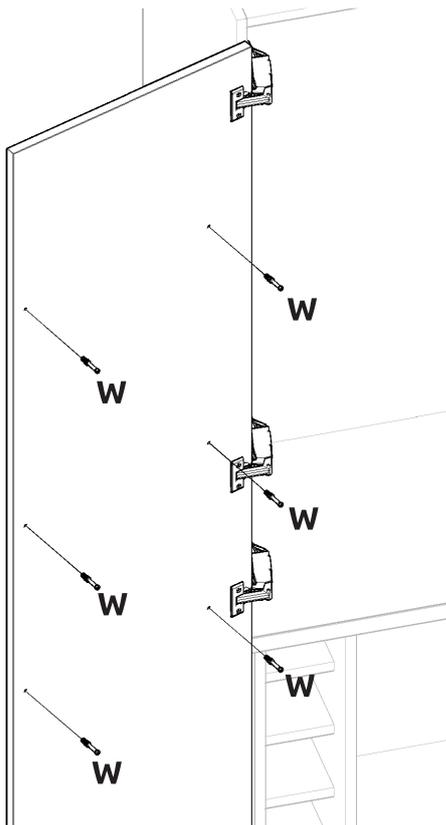


Fig 2.



Step 19.

Position the spice rack onto the door by inserting cam dowels (**W**) into the holes on the back of the spice rack end panels **eA** & **eB**. (See Fig 2)

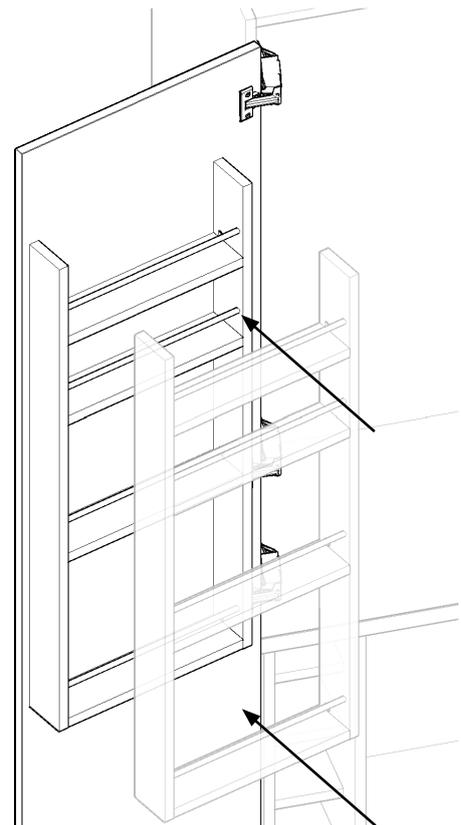


Cam dowel (**W**)

Step 20.

Insert 6 x cam locks (**H**) into the holes on the inside of the spice rack on the left and right sides. Secure the spice rack to the unit door by turning cam locks (**H**).




Cam lock (**H**)

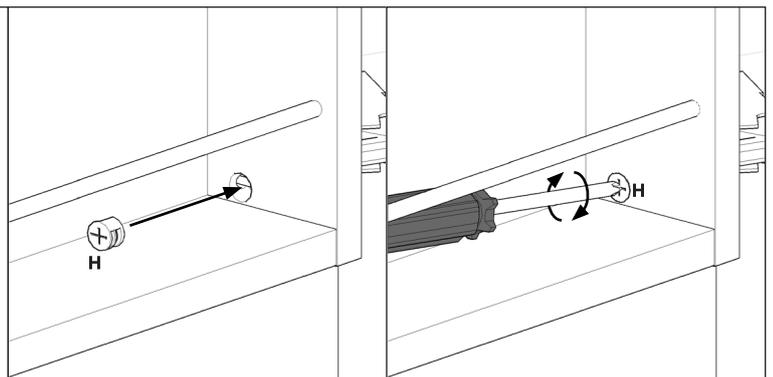


Step 21.

Position 4 shelf pegs per shelf into the pre-drilled holes, in required locations. Lower the shelf onto the pegs, slotting the pegs into the cut-outs. Repeat for all shelves.

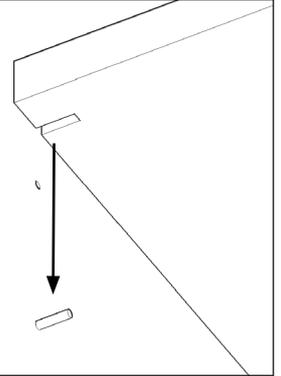

Step 22.

Position shelf support bracket underneath the loose shelf, aligned with the centre of the shelf and tower back. Secure shelf support bracket up into the loose shelves first with 2 x 15mm screws. Secure shelf support bracket into the back panel with 2 x 20mm screws. Screws included in shelf support block pack. Repeat for each loose shelf support bracket.

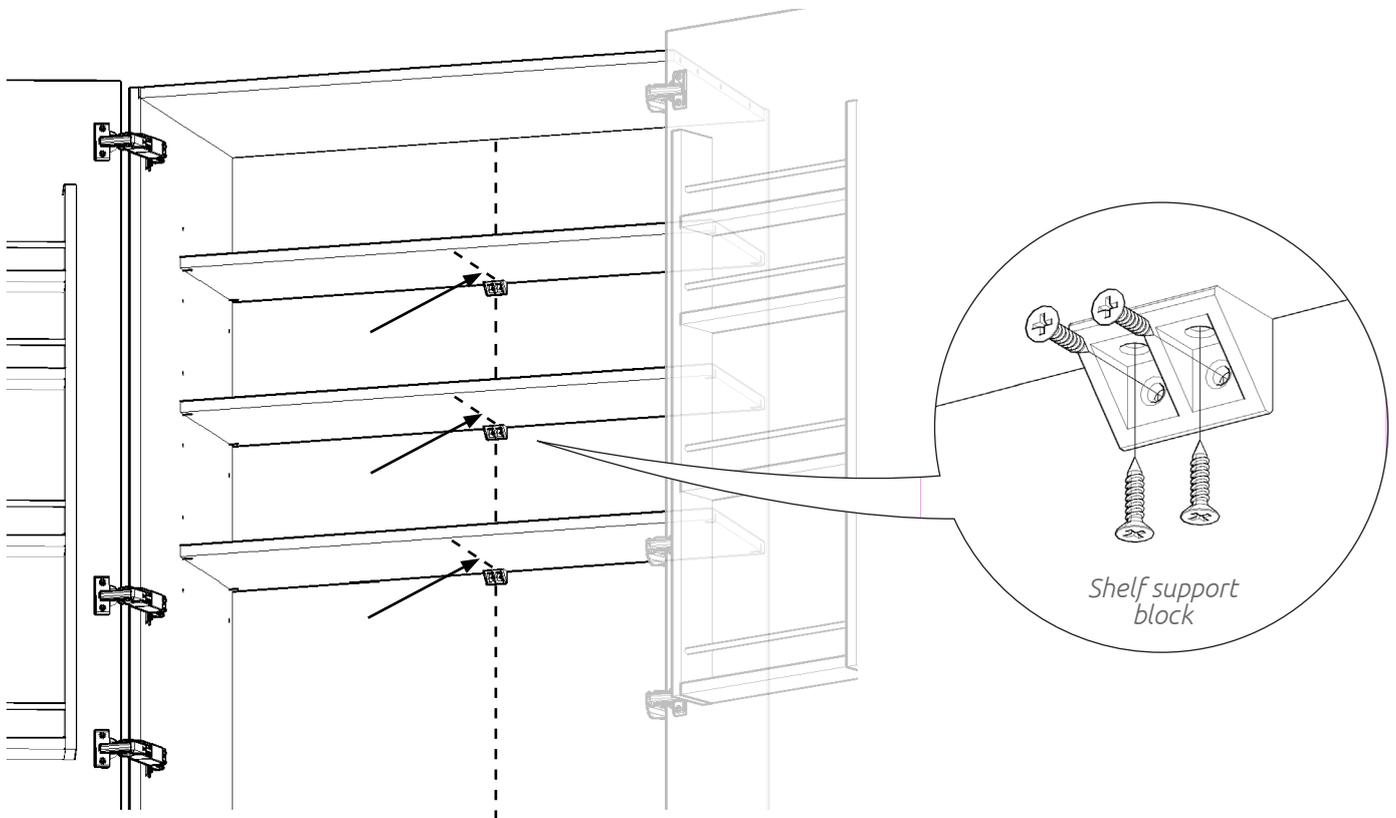

TOWER UNIT

2070-2250 Cooks Pantry Fitting Guide

wren

wren