


Vogue


wren

WALL/SHALLOW BASE UNIT

1000, Assembly Guide

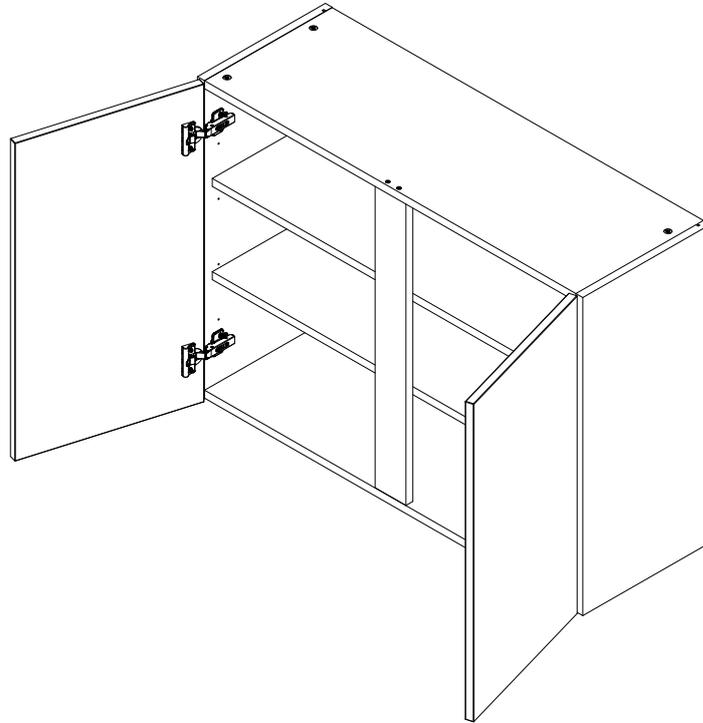

1000 WALL

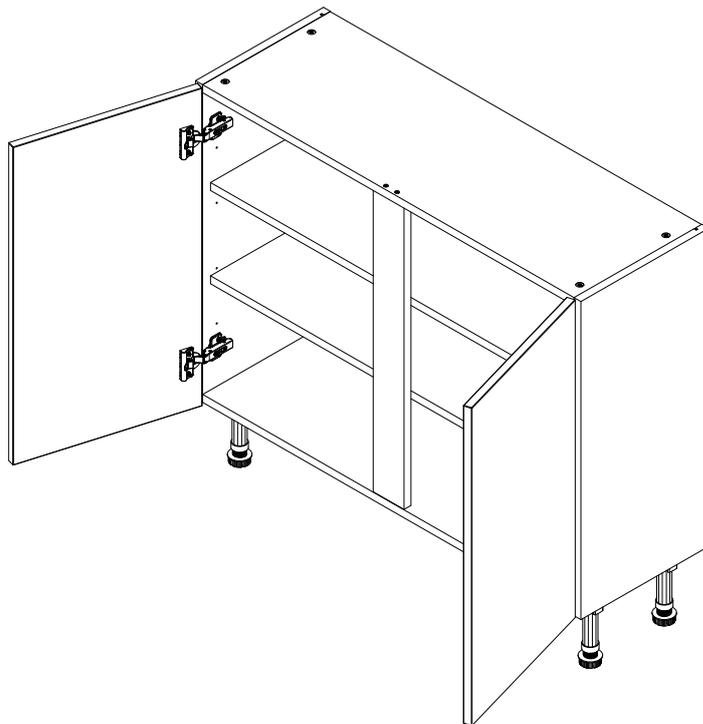

1000 SHALLOW BASE

WALL/SHALLOW BASE UNIT


1000, Assembly Guide



BEFORE YOU START


INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

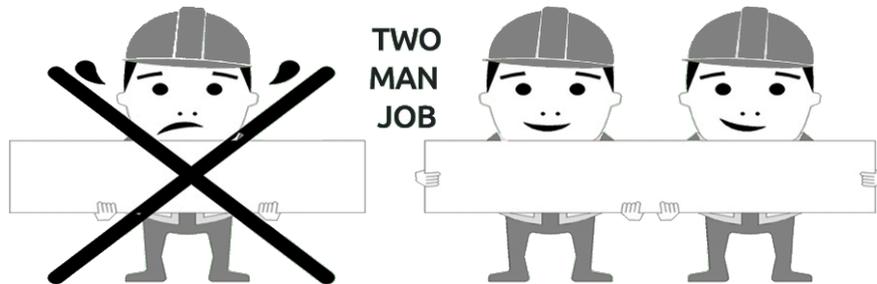


WALL/SHALLOW BASE UNIT


1000, Assembly Guide

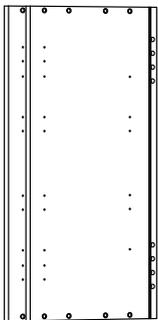


Panel A
x2 End Panel

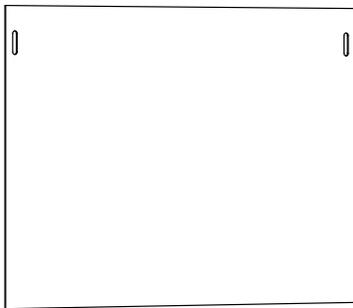


Panel B
x1 Back Panel

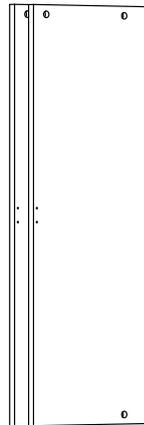

Panel C
x2 Fixed Shelf

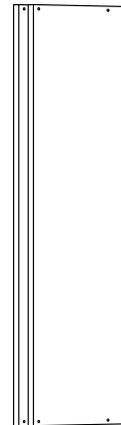

Shelf
x2 Loose Shelf

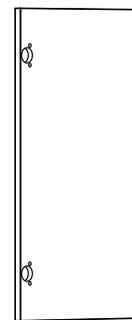


Frontal
x2 Front Panel
(Packed Separately)



Panel E
x1 Muntin

WALL/SHALLOW BASE UNIT


1000, Assembly Guide




(F) x8
Wooden Dowel



(L) x8
15mm Screw



(S) x4
20mm Screw



(K) x4
30mm Screw




(P) x4
45mm Screw




(G) x8
Cam Dowel (Expanding)




(H) x8
Cam Lock



(M) x4
Cover Cap

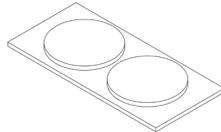


(N) x2
Door Buffer




(T) x12
Back Panel Support Clip




(Z) x10
Shelf Peg Metal

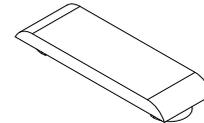


Hanging Bracket Cover Cap
x 2

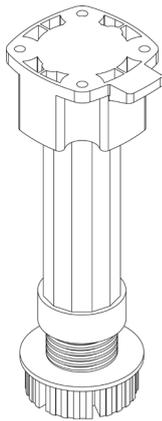


Leg
(Shallow Base Only)

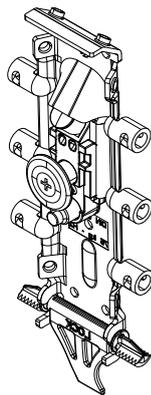


Hanging Bracket
x 2 Inc Screws

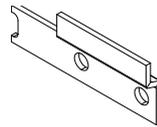


Hanging Bracket Plate
x 2

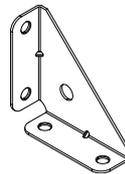

Corner Gusset
x 2

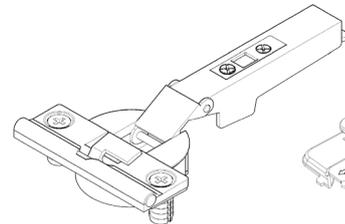

Hinge
Inc Screws & Cover Plate




Hinge Mounting Plate
Inc Screws

WALL/SHALLOW BASE UNIT

1000, Assembly Guide

Step 1.

Seat dowels (F) into holes in both end panels (A) as shown.

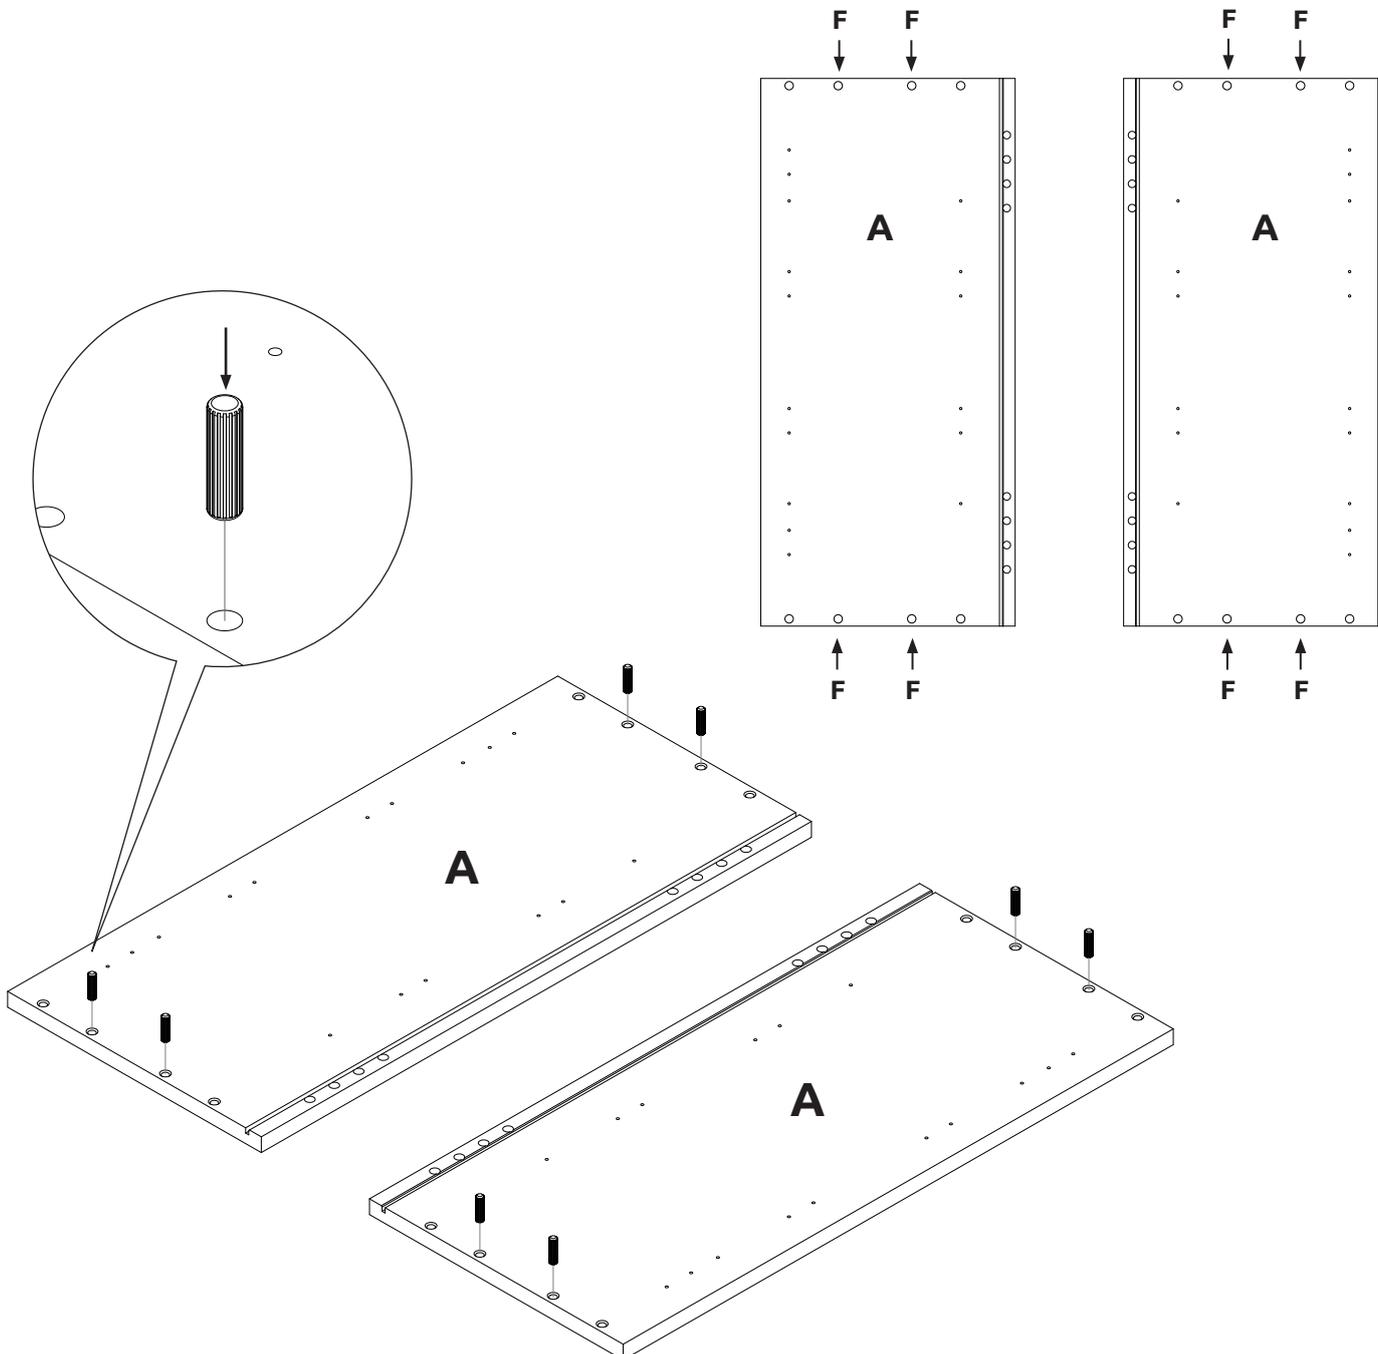


WALL/SHALLOW BASE UNIT

1000, Assembly Guide

Step 2.

Seat expanding cam dowels **(G)** into holes in both end panels **(A)** as shown.

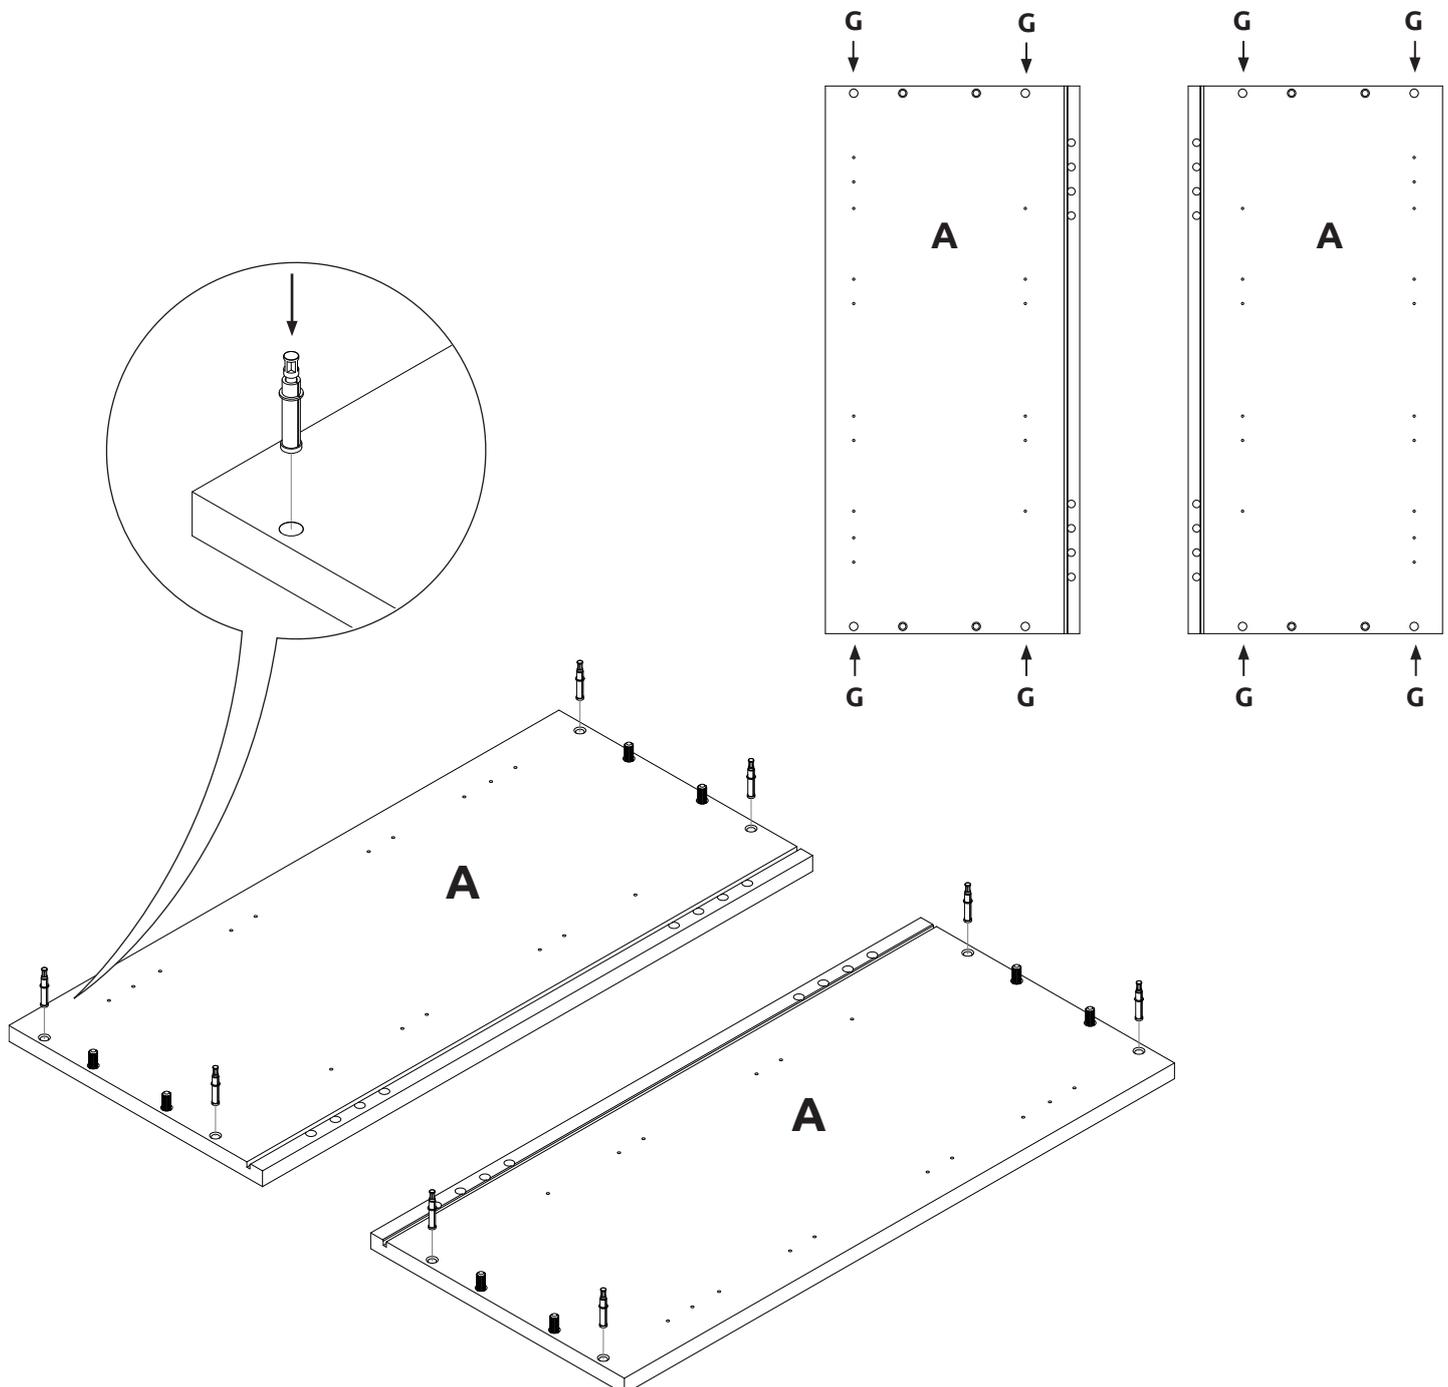

WALL/SHALLOW BASE UNIT



1000, Assembly Guide

Step 3.

Attach panels **(C)** to panel **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown. *See Fig 1.*



All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

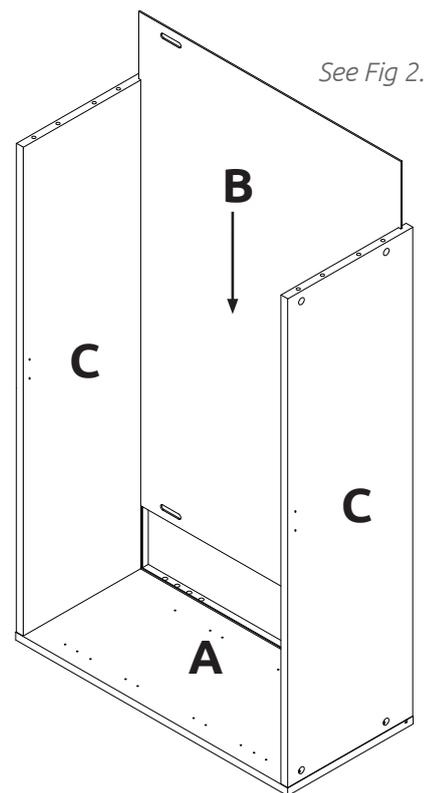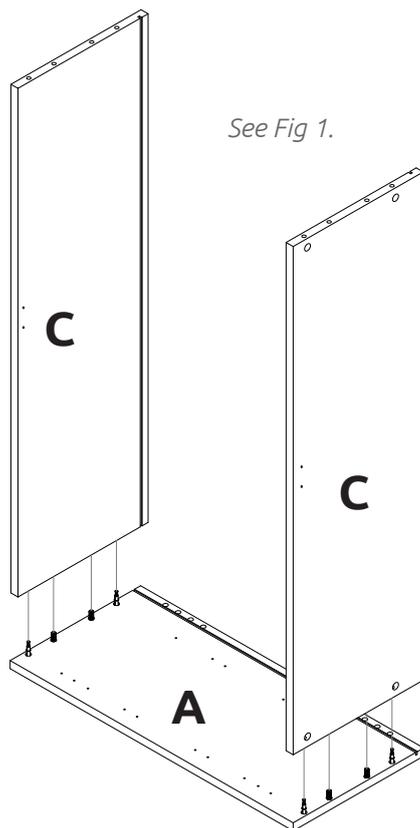

Step 4.


Slide back panel **(B)** into grooves of panels **(C)** and end panel **(A)**. *See Fig 2.*

WALL/SHALLOW BASE UNIT

1000, Assembly Guide



Step 5.

Attach end panel **(A)** using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.

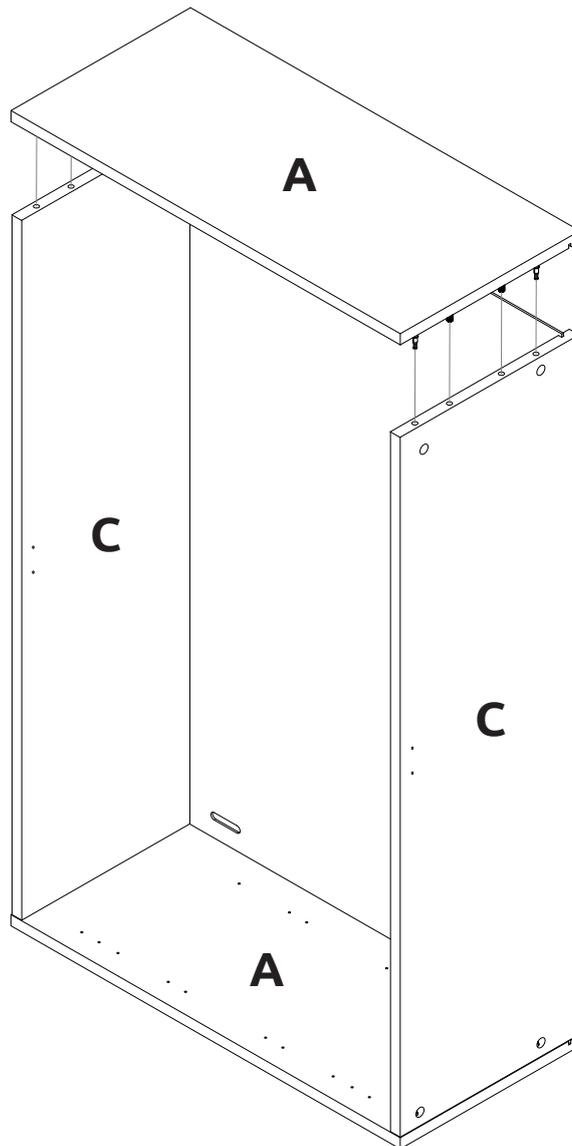

WALL/SHALLOW BASE UNIT

1000, Assembly Guide

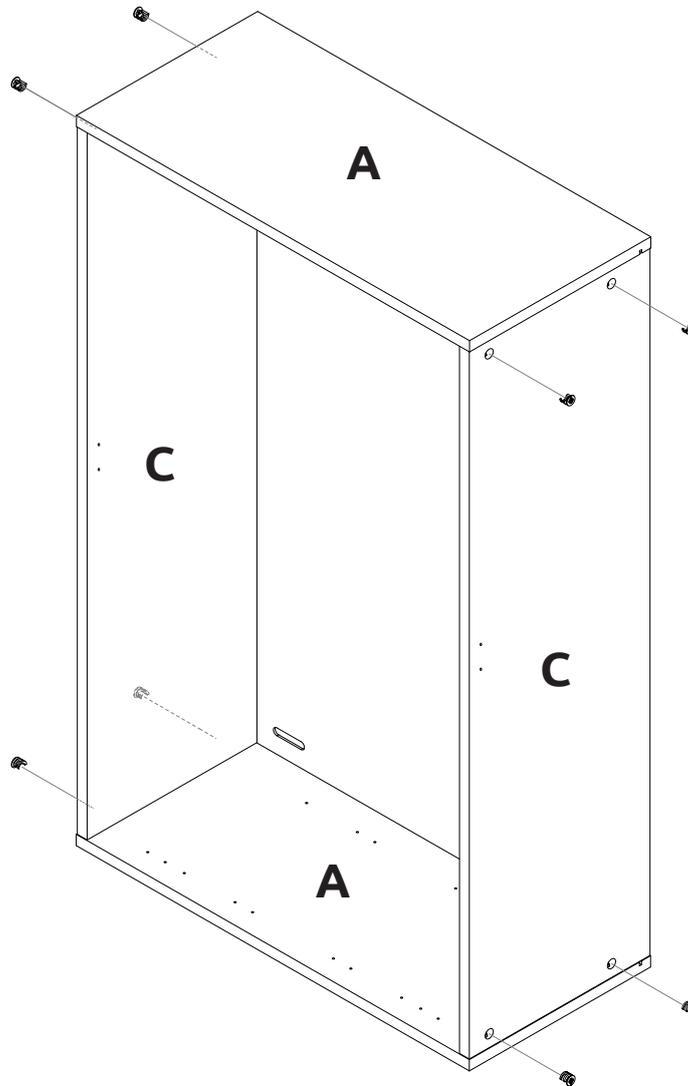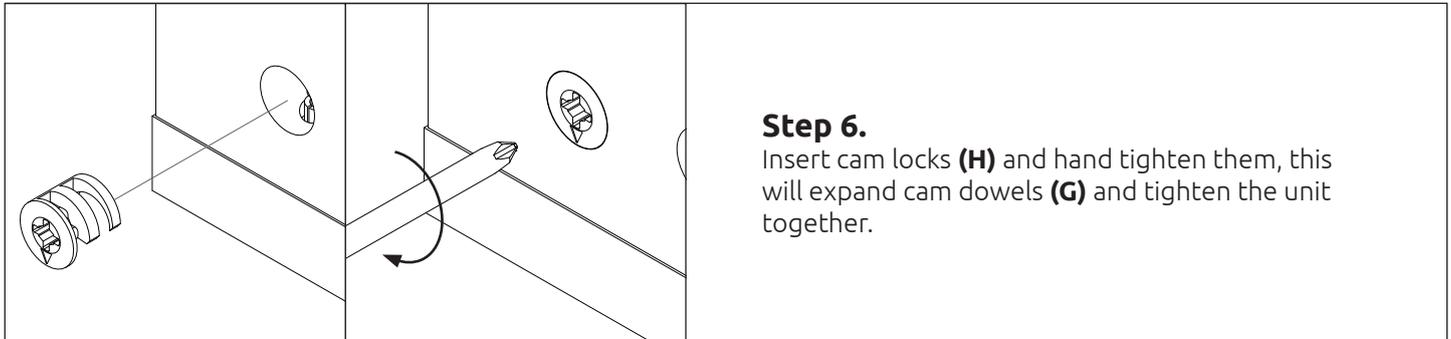


Do **not** use power tools with cam lock **(H)**

WALL/SHALLOW BASE UNIT

1000, Assembly Guide


Step 7.

Ensure the unit is square. Slide back panel clips **(T)** into the groove of both panels **(A)** & **(C)**. The back panel clips **(T)** should be evenly spaced as shown and positioned to allow the hanging bracket and corner gussets to be fitted. Once in place, tighten screw.

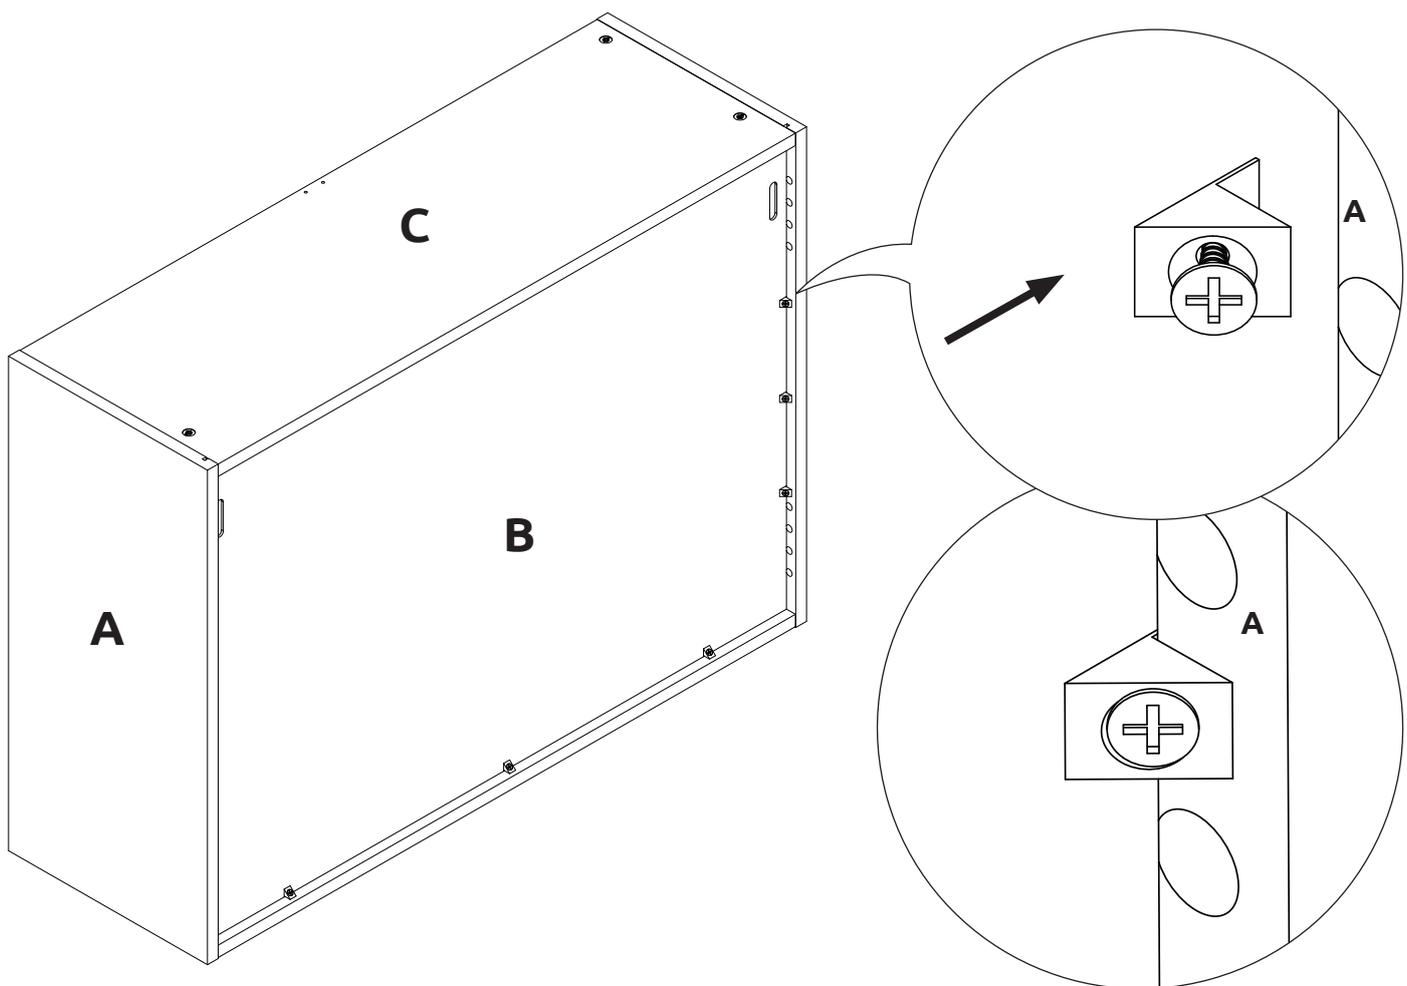



WALL/SHALLOW BASE UNIT

1000, Assembly Guide

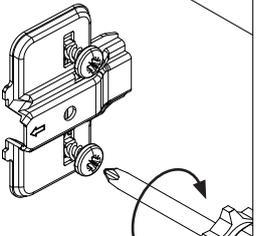

Step 8.
Attach hinge plates onto both end panels **(A)** as shown, using 2 screws already located in hinge plates.

Hinge to be mounted in accordance to customer specific kitchen plan.

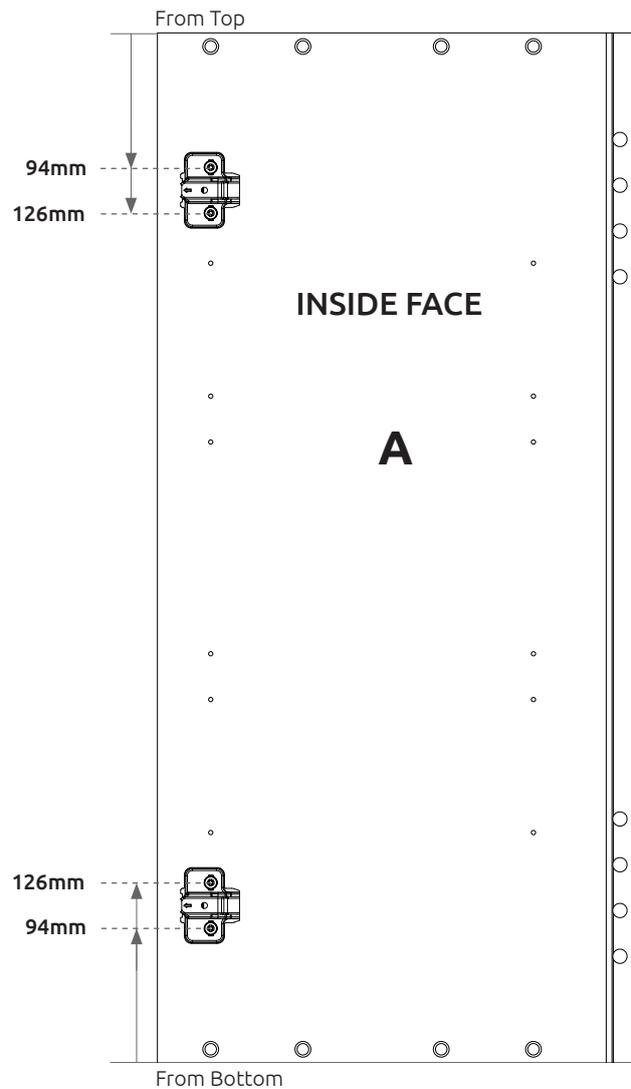
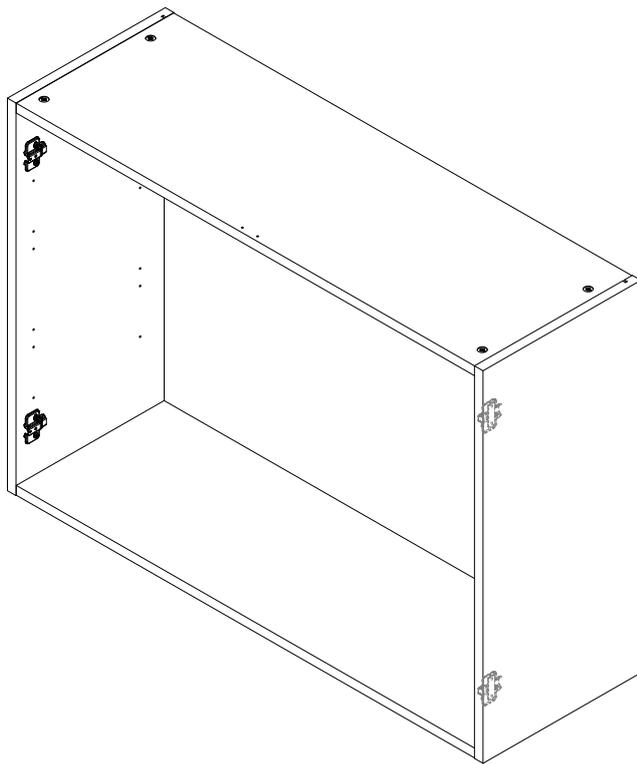


WALL/SHALLOW BASE UNIT

1000, Assembly Guide

Step 9.

To secure muntin post (E) in place, use pre-drilled pilot holes to align muntin as shown. Secure muntin (E) to both base panels (C) using 4 x 45mm screws (P) as shown.

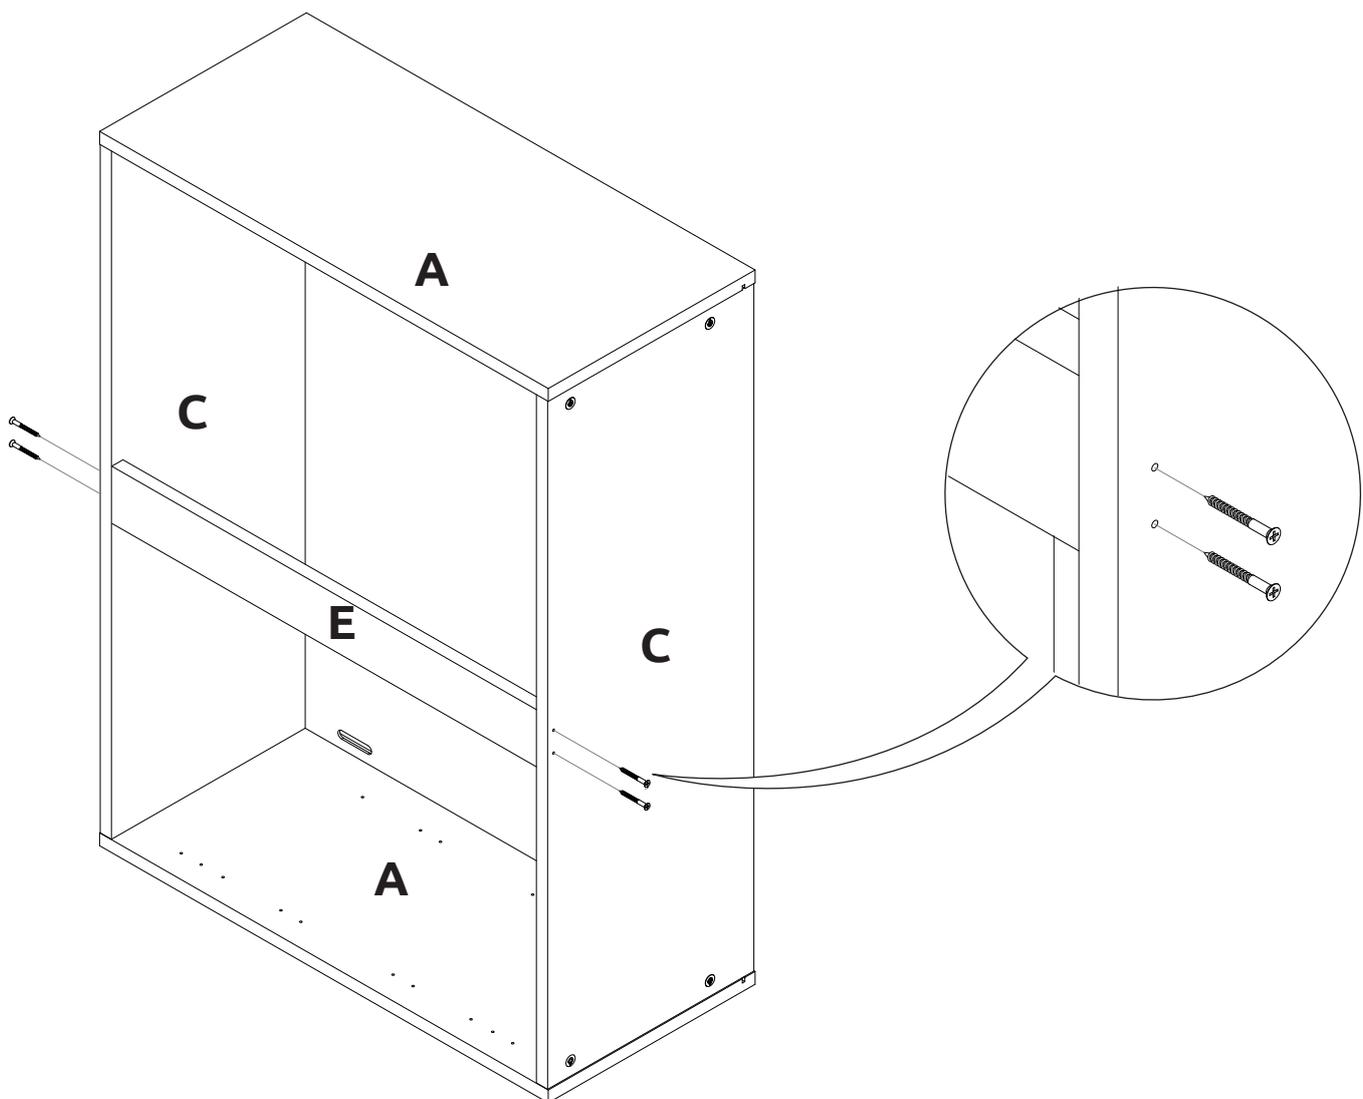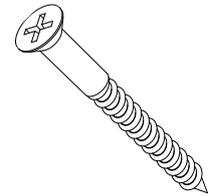

WALL/SHALLOW BASE UNIT



1000, Assembly Guide

WALL UNITS ONLY

Step 10.


Hanging brackets steps **A**, **B** & **C** to be carried out on both sides as shown.

- A.** Insert hanging bracket into pre-drilled holes.
- B.** Rotate locking lever 180 degrees.
- C.** Secure with provided 2 x 20mm screws (**S**) per bracket.

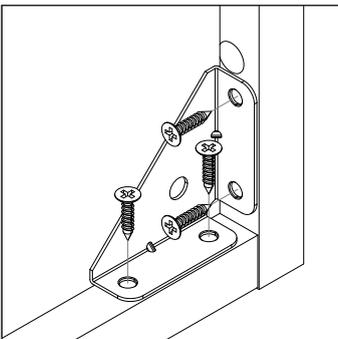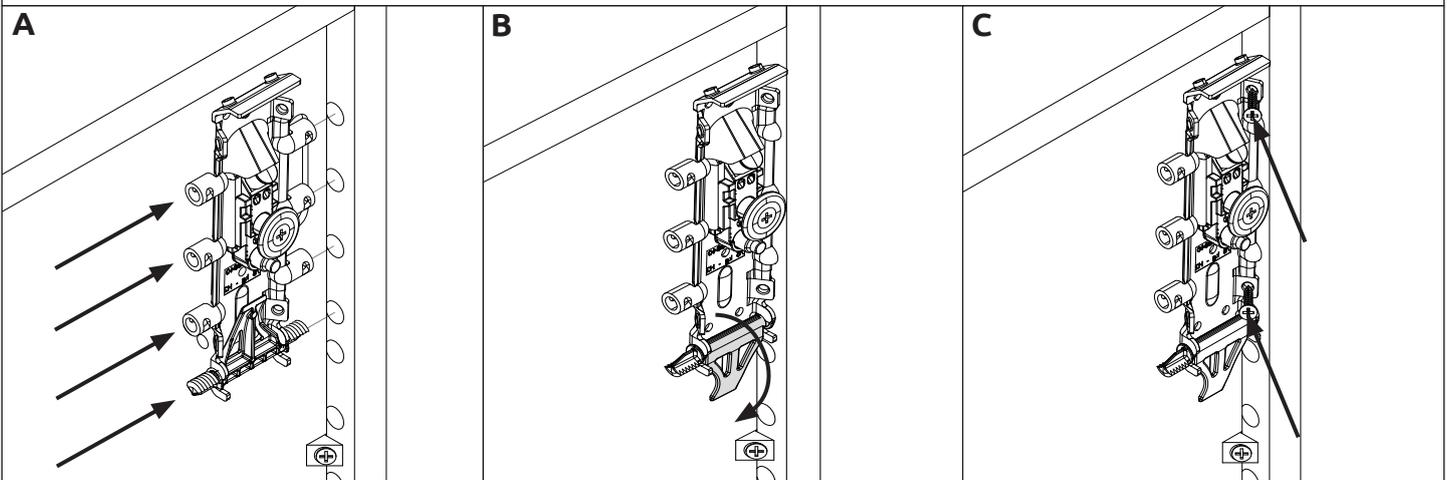

Step 11.

Secure corner gussets to the bottom left and right hand side of the wall unit using 4 x 15mm screws (**L**) per plate.

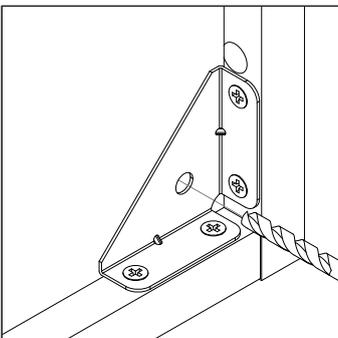

Step 12.

Drill a small pilot hole through the centre of the Corner Gussets. Use this hole at the end of the process to screw through and into the wall.

WALL/SHALLOW BASE UNIT

1000, Assembly Guide


WALL UNITS ONLY



Care to be taken. Hanging procedure is necessary for a safe installation.



Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

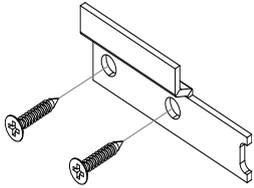


Step 13.

Measure appropriately and attach the 2 x hanging bracket plates onto the wall screwing through the provided holes into your wall.

Step 14.

Hang the unit using the brackets to hook onto the plate as shown.

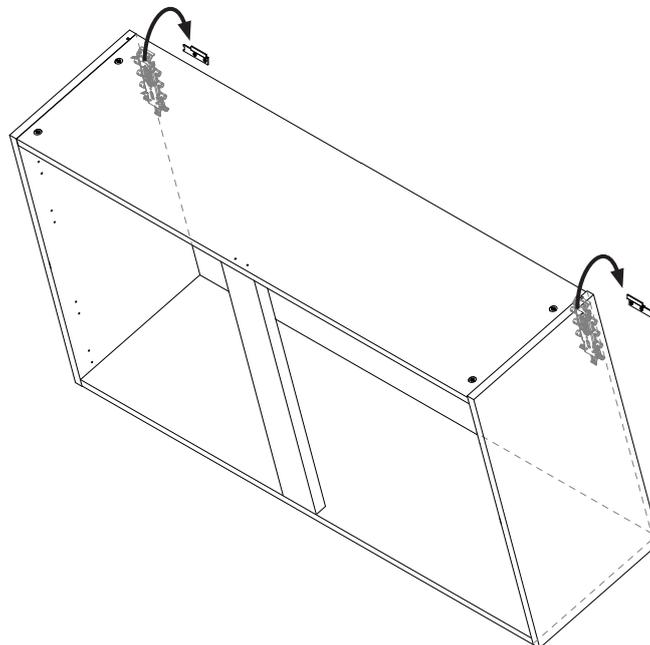


WALL/SHALLOW BASE UNIT

1000, Assembly Guide


WALL UNITS ONLY

Step 15.

Using points **a**, **b** & **c** adjust the unit to suit.

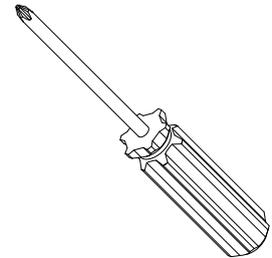

a



Point a.

Rotate the top screw clockwise to move the unit up.
Anti-clockwise for down.

b

Point b.

Adjust the depth using centre screw.


c

Point c.

Turn the bottom screw until it touches the plate to lock in position.




Screws for attaching to walls and worktops are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

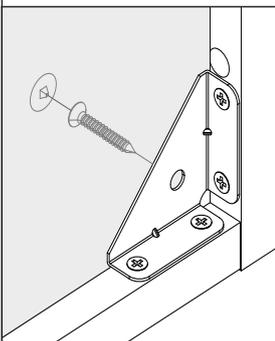

Step 16.

Secure the unit to the wall by screwing through the pilot hole and gusset from **Step 12** into the wall. Place cover caps **(M)** on the heads to conceal them.

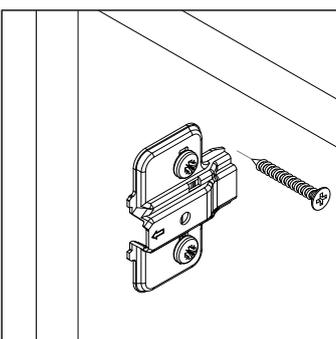


Step 17.

Screw into any adjacent units using 30mm screws **(K)** provided to secure to unit. Screw just to the rear of hinge plate at the top and bottom of both sides of the unit, place cover caps **(M)** on the heads to conceal them.

WALL/SHALLOW BASE UNIT


1000, Assembly Guide

SHALLOW BASE UNITS ONLY

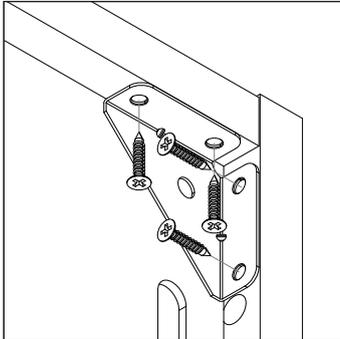

Step 18.

Secure corner gussets to the top left and right hand side of the wall unit using 4 x 15mm screws (**L**) per plate.

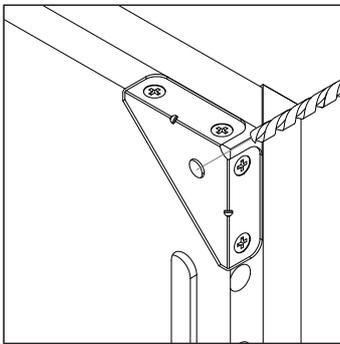


Step 19.

Drill a small pilot hole through the centre of the Corner Gussets. Use this hole at the end of the process to screw through and into the wall.

Step 20.



Position legs as shown on the diagram below. Ensure legs are rotated to also provide support to the end panels (**A**). Once positioned, secure each of the legs into place with 4 x 15mm screws (**L**) per leg. Push leg firmly down into leg base. Adjust legs to **155mm** before turning unit upright. Once in situ level accordingly.

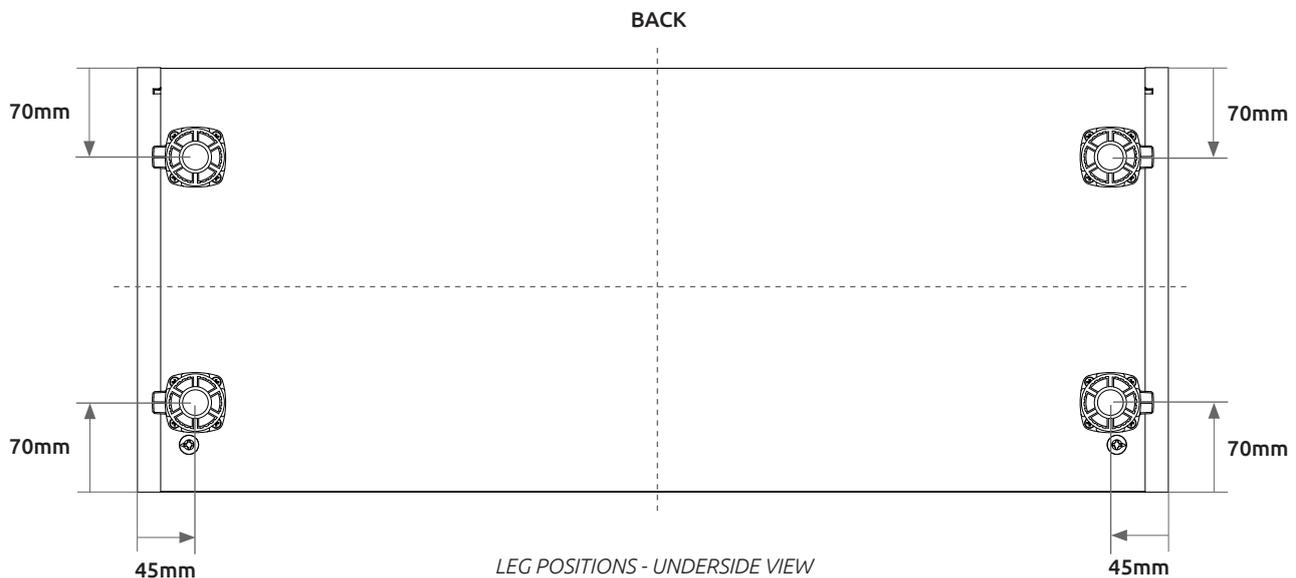

WALL/SHALLOW BASE UNIT


1000, Assembly Guide

SHALLOW BASE UNITS ONLY

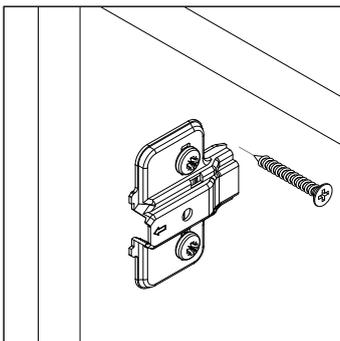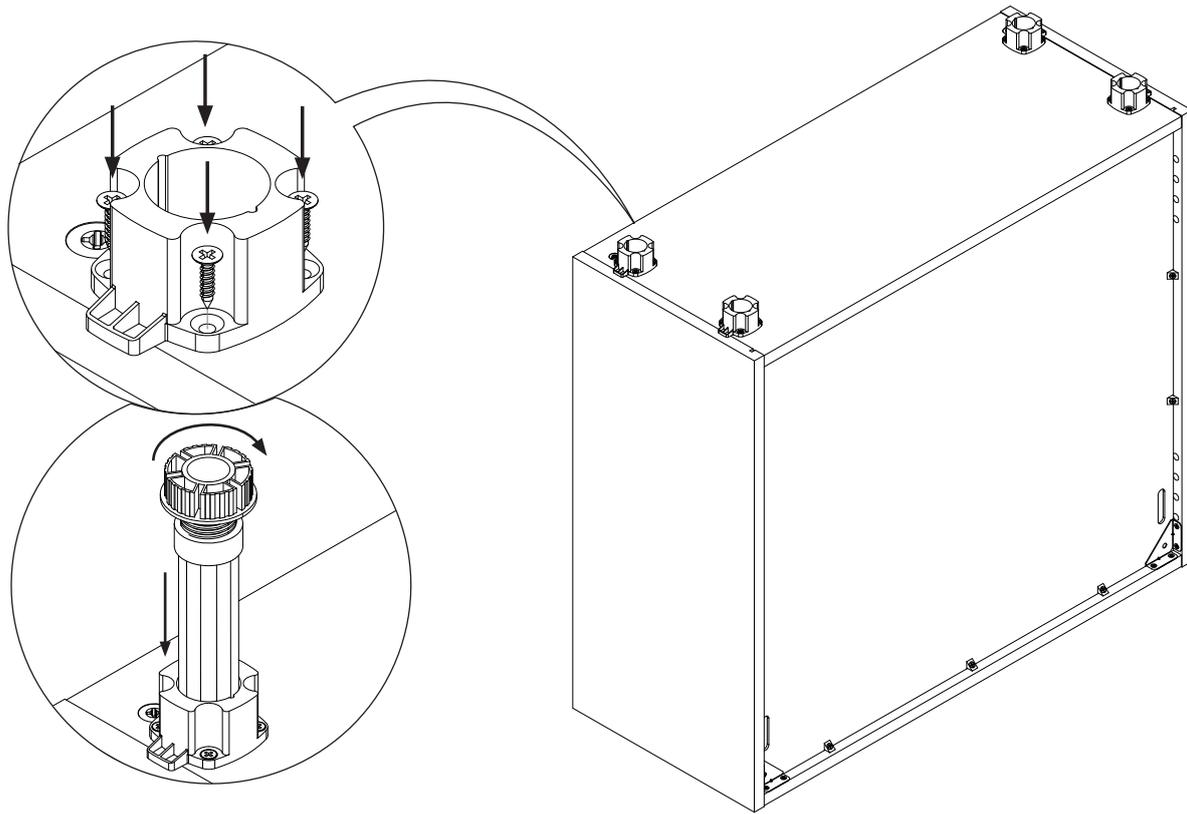

Step 21.

Screw into any adjacent units using 30mm screws **(K)** provided to secure to unit. Screw just to the rear of the hinge plate at the top and bottom of both sides of the unit, place cover caps **(M)** on the heads to conceal them.



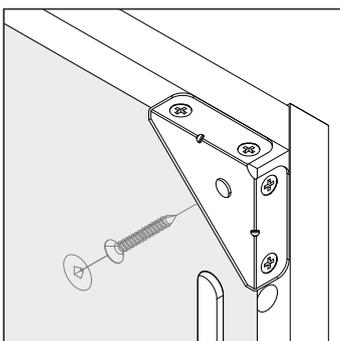



Step 22.



Secure the unit to the wall by screwing through the pilot hole and gusset from **Step 19** into the wall. Place cover caps **(M)** on the heads to conceal them.

WALL/SHALLOW BASE UNIT

1000, Assembly Guide

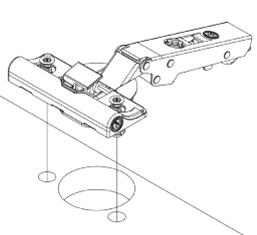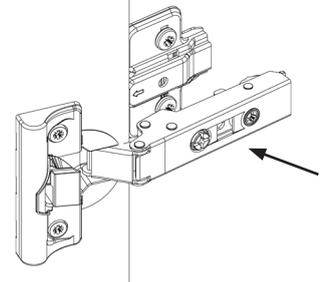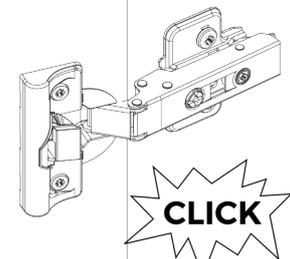	<p>HINGE ATTACHMENT AND ADJUSTMENT</p> <p>Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.</p>  <p>Hinge dowels</p>	
	 <p>CLICK</p>	<p>Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.</p>
<p>Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

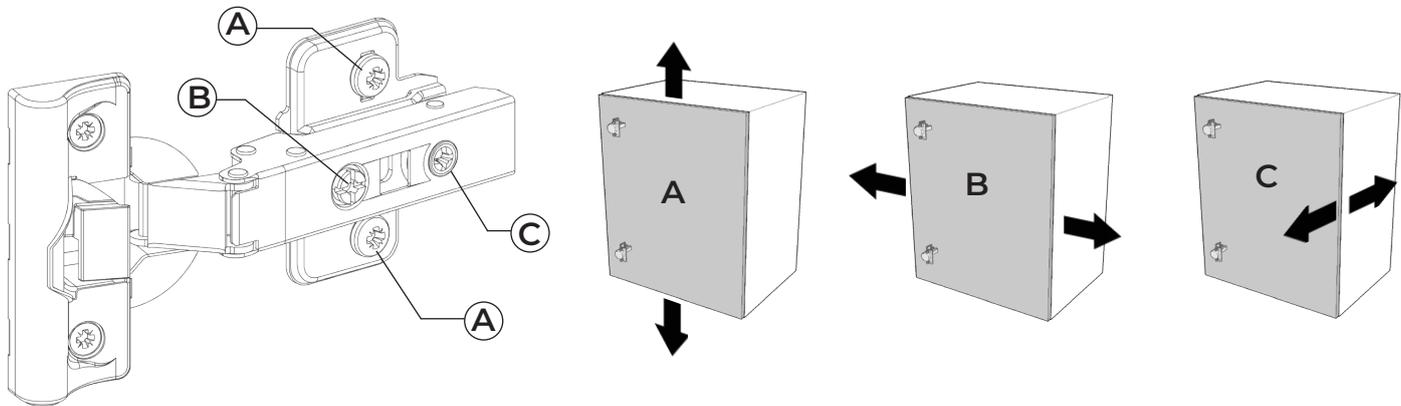

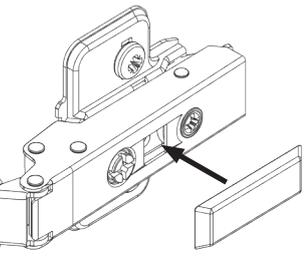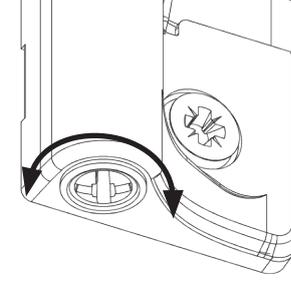	<p>Step 4. Fit cover caps to hinges and adjust soft-close to suit.</p>	
---	---	---



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.

Vogue

wren

WALL/SHALLOW BASE UNIT

1000, Assembly Guide

wren