


Vogue


wren

WALL/SHALLOW BASE UNIT


700-800, Assembly Guide

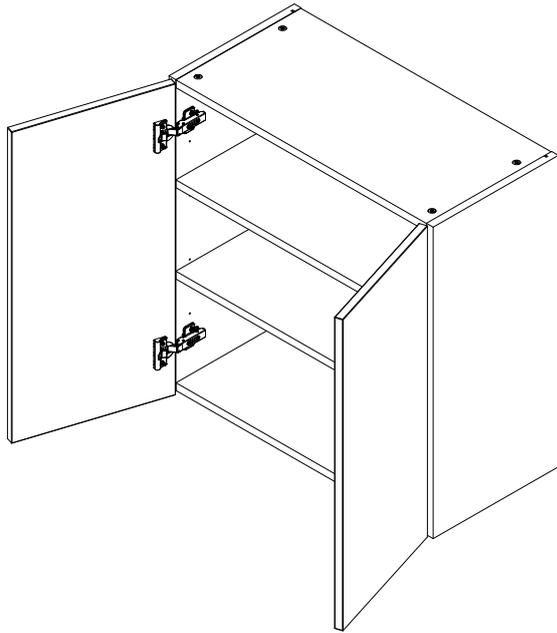

700 WALL

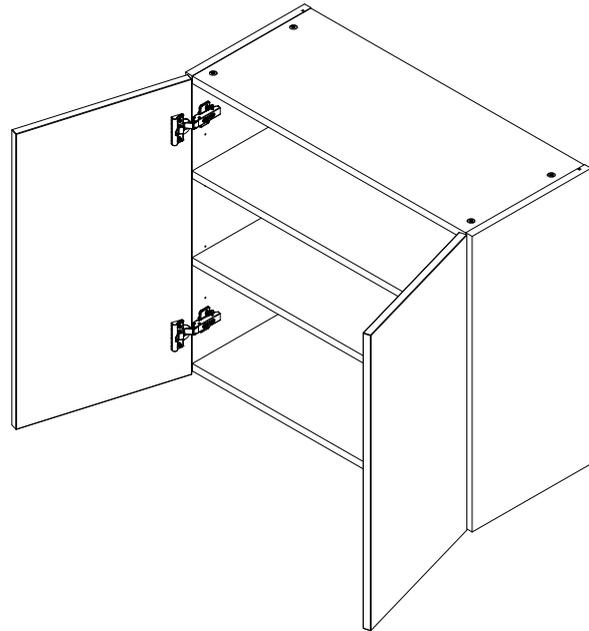

800 WALL

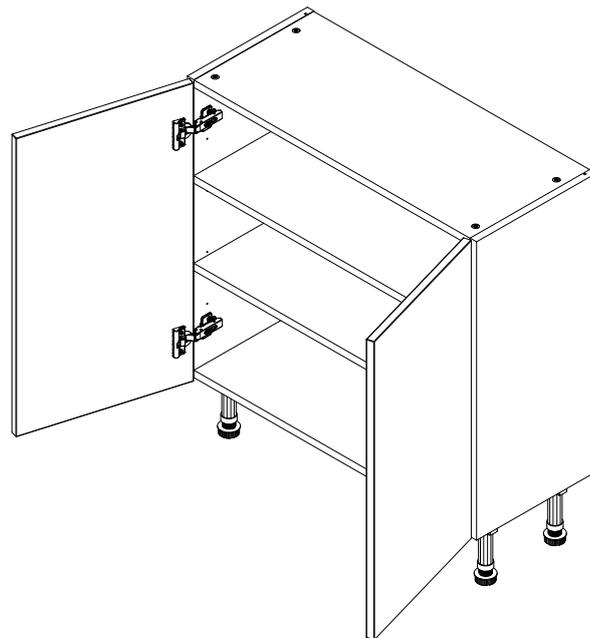

700-800 SHALLOW BASE

WALL/SHALLOW BASE UNIT


700-800, Assembly Guide



BEFORE YOU START


INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

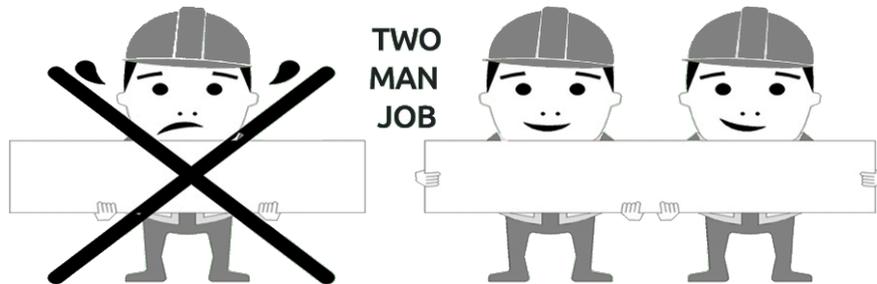


WALL/SHALLOW BASE UNIT


700-800, Assembly Guide

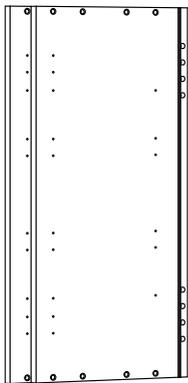


Panel A
x2 End Panel

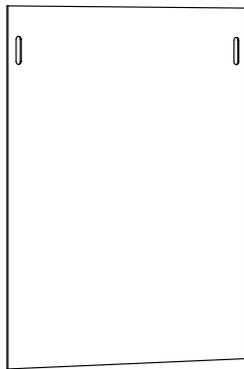


Panel B
x1 Back Panel

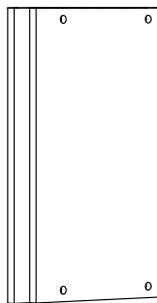

Panel C
x2 Fixed Shelf

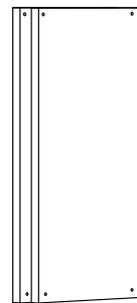


Shelf
x2 Loose Shelf

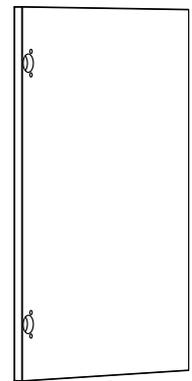

Frontal
x1 Front Panel
(Packed Separately)

WALL/SHALLOW BASE UNIT

700-800, Assembly Guide




(F) x8
Wooden Dowel




(L) x8
15mm Screw



(S) x4
20mm Screw




(K) x4
30mm Screw




(G) x8
Cam Dowel (Expanding)




(H) x8
Cam Lock




(M) x4
Cover Cap

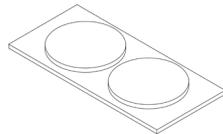


(N) x2
Door Buffer




(T) x10
Back Panel Support Clip




(Z) x8
Shelf Peg Metal

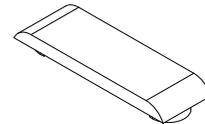


Hanging Bracket Cover Cap
x 2

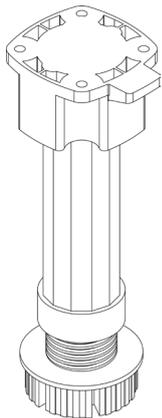


Leg
(Shallow Base Only)

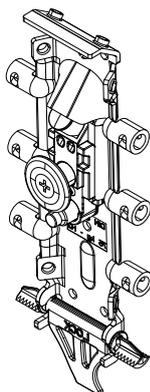


Hanging Bracket
x 2 Inc Screws

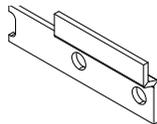


Hanging Bracket Plate
x 2

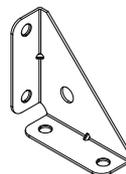

Corner Gusset
x 2

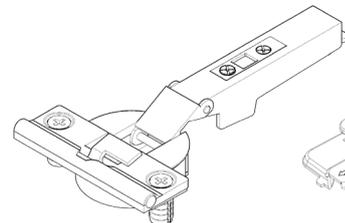

Hinge
Inc Screws & Cover Plate




Hinge Mounting Plate
Inc Screws

WALL/SHALLOW BASE UNIT

700-800, Assembly Guide

Step 1.

Seat dowels (F) into holes in both end panels (A) as shown.

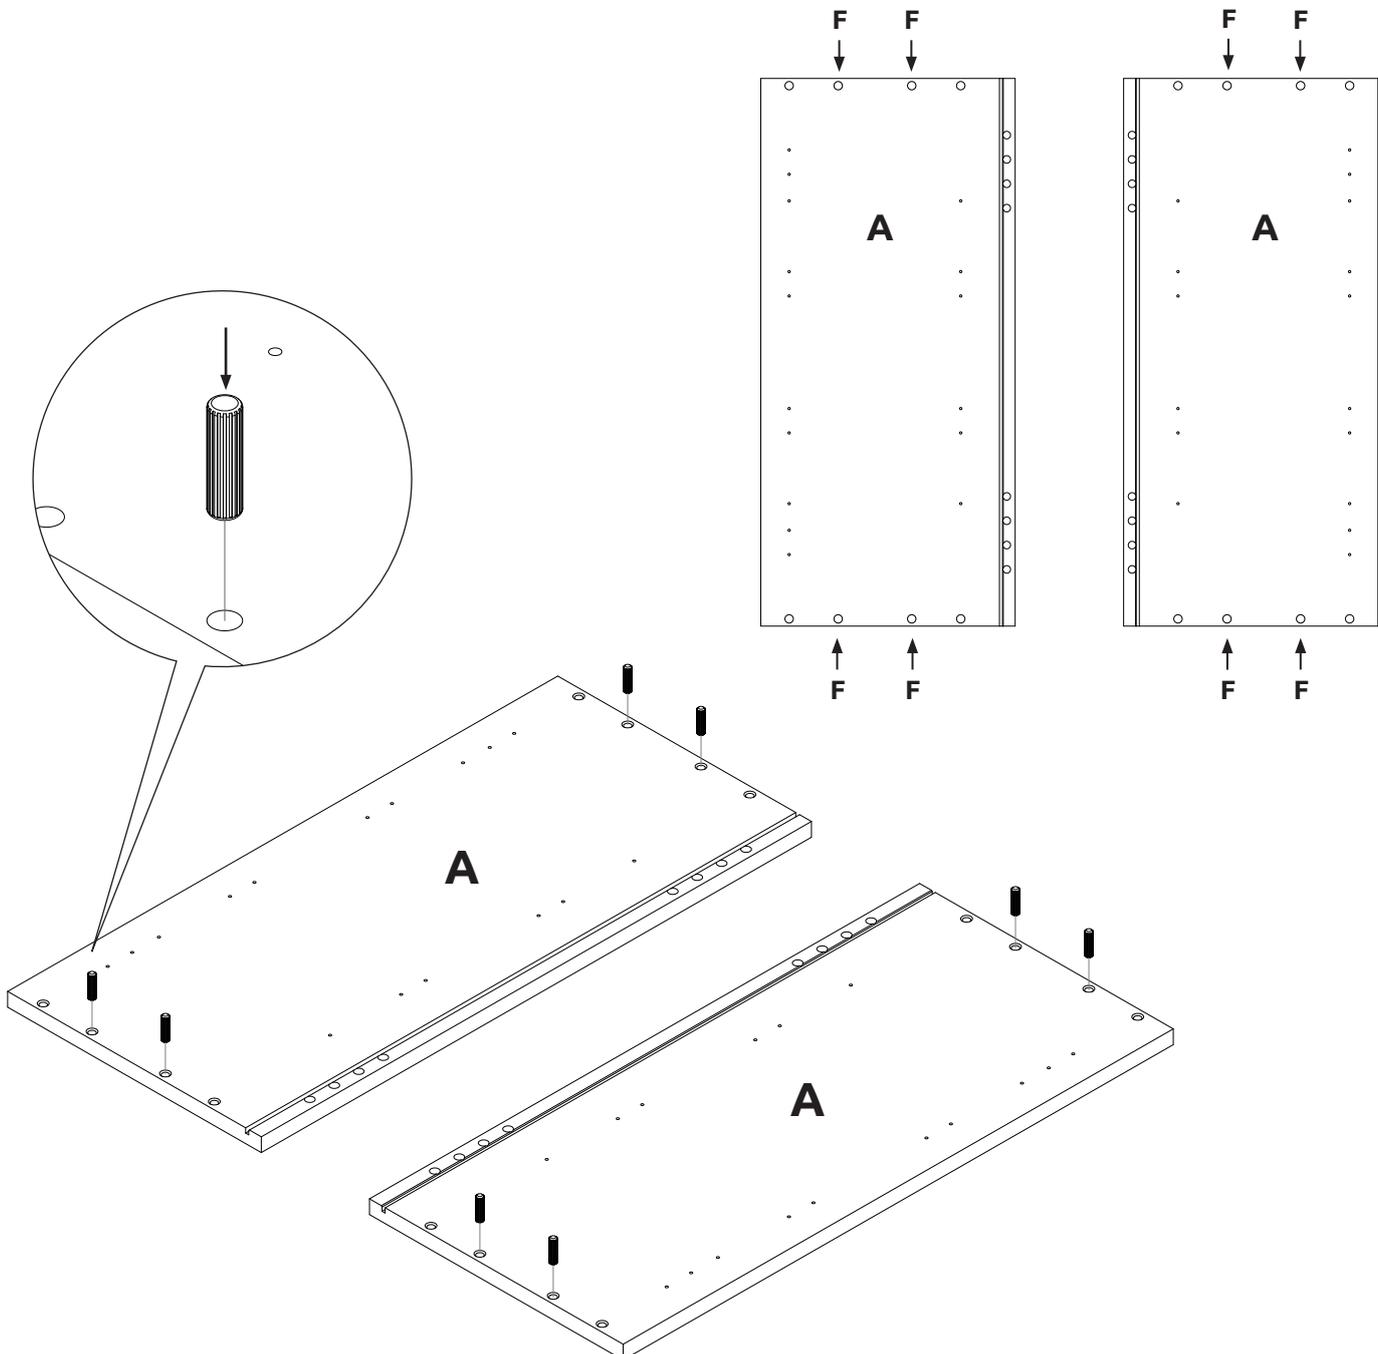


WALL/SHALLOW BASE UNIT

700-800, Assembly Guide

Step 2.

Seat expanding cam dowels (G) into holes in both end panels (A) as shown.

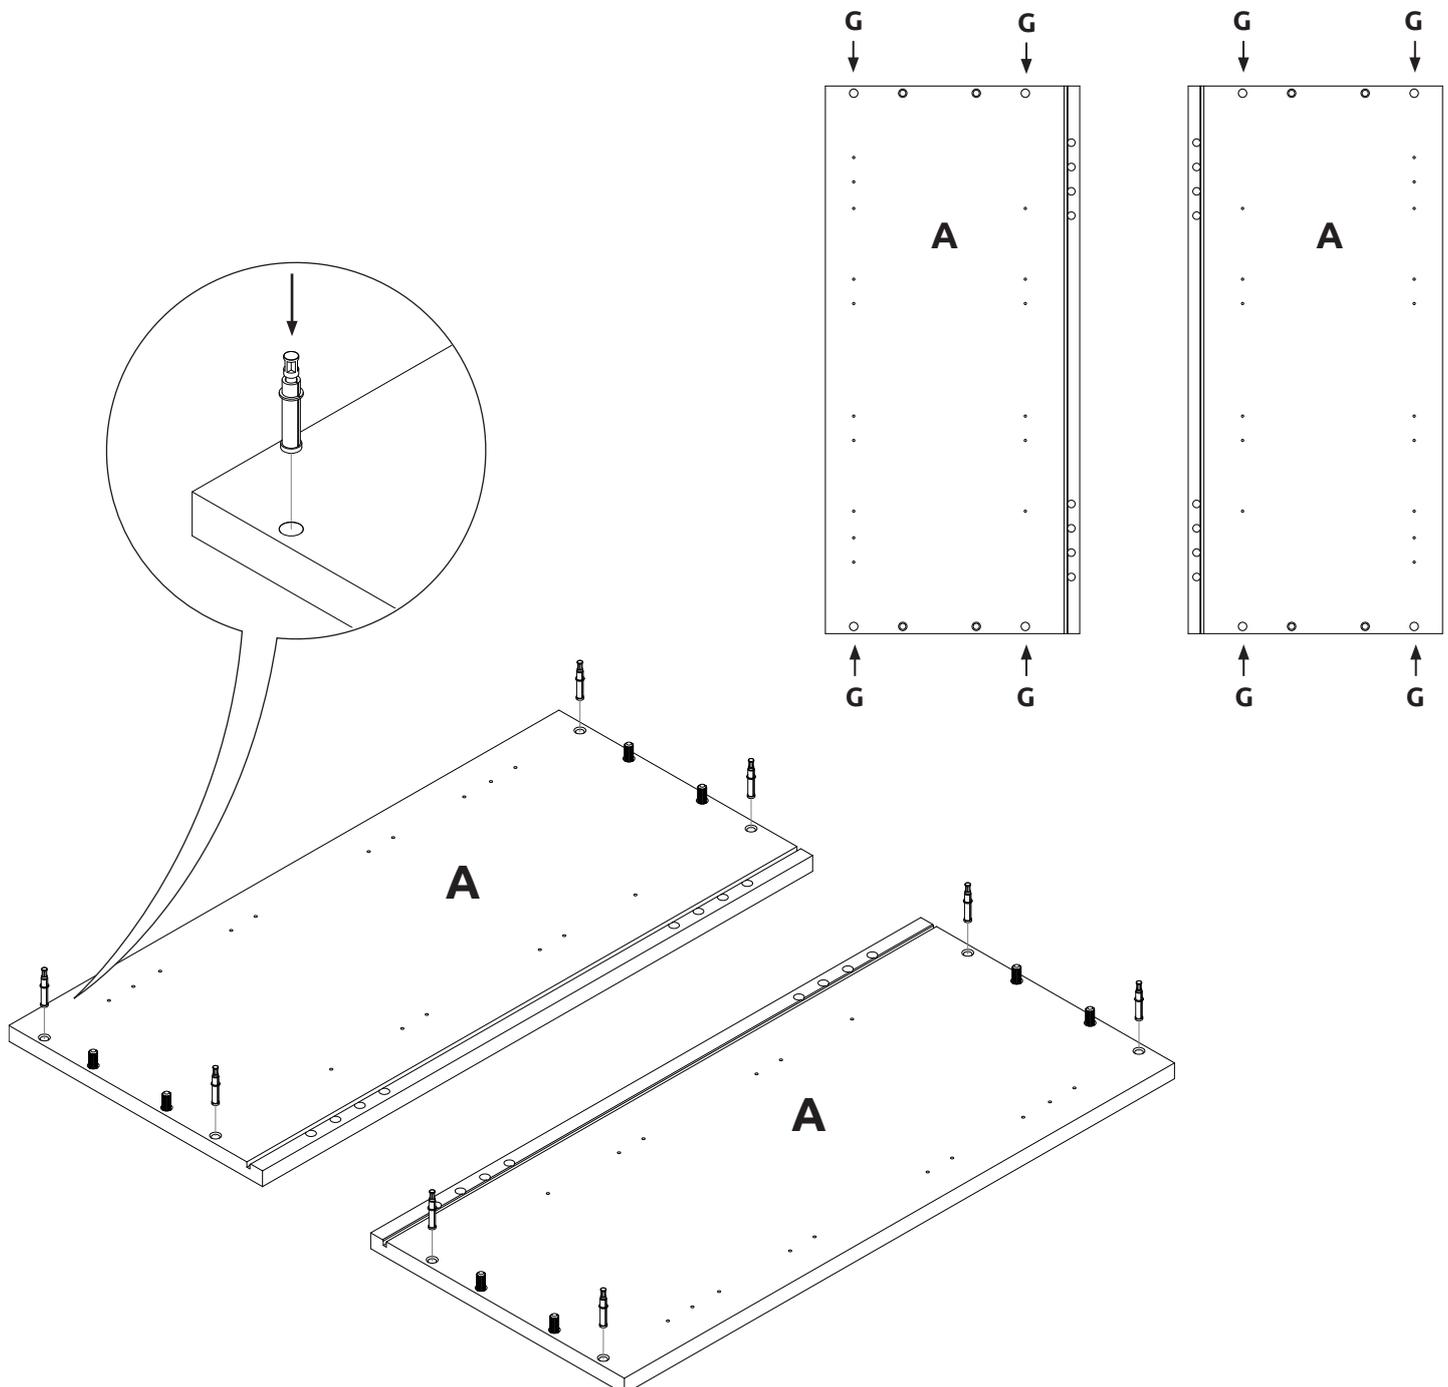

WALL/SHALLOW BASE UNIT


700-800, Assembly Guide

Step 3.

Attach panels **(C)** to panel **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.



All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

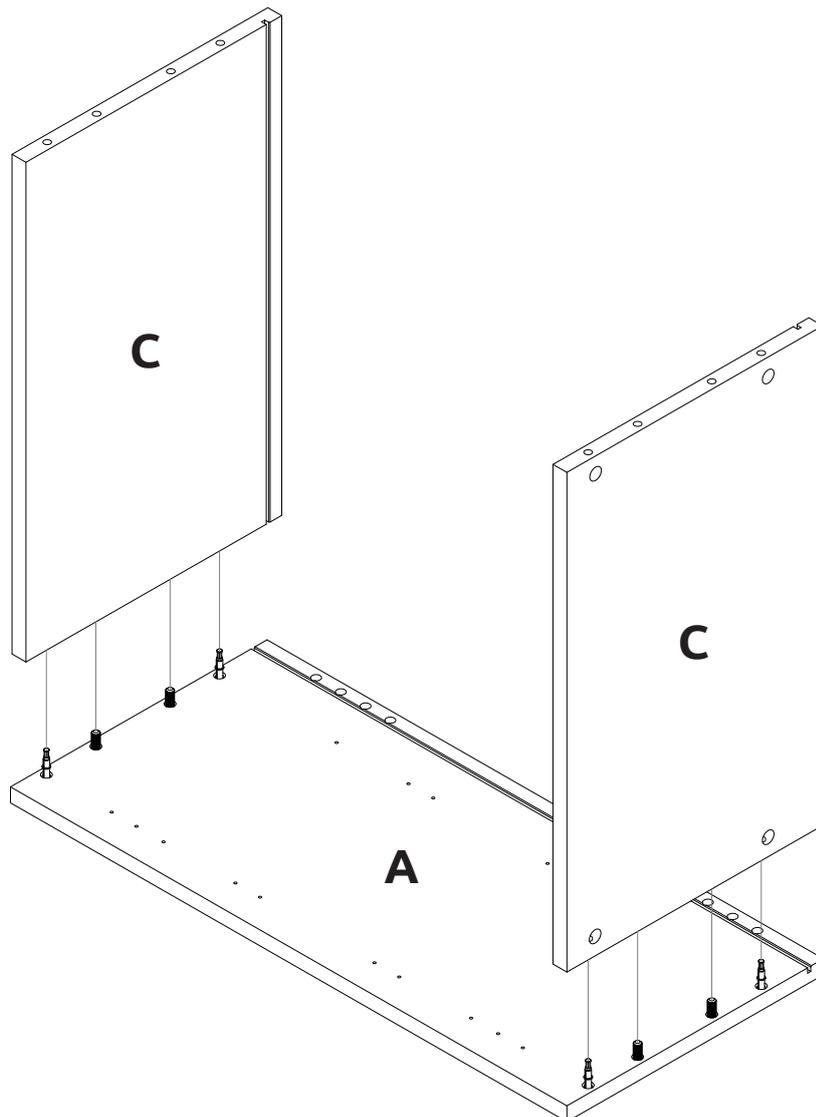


WALL/SHALLOW BASE UNIT

700-800, Assembly Guide

Step 4.

Slide back panel (B) into grooves of panels (C) and end panel (A).

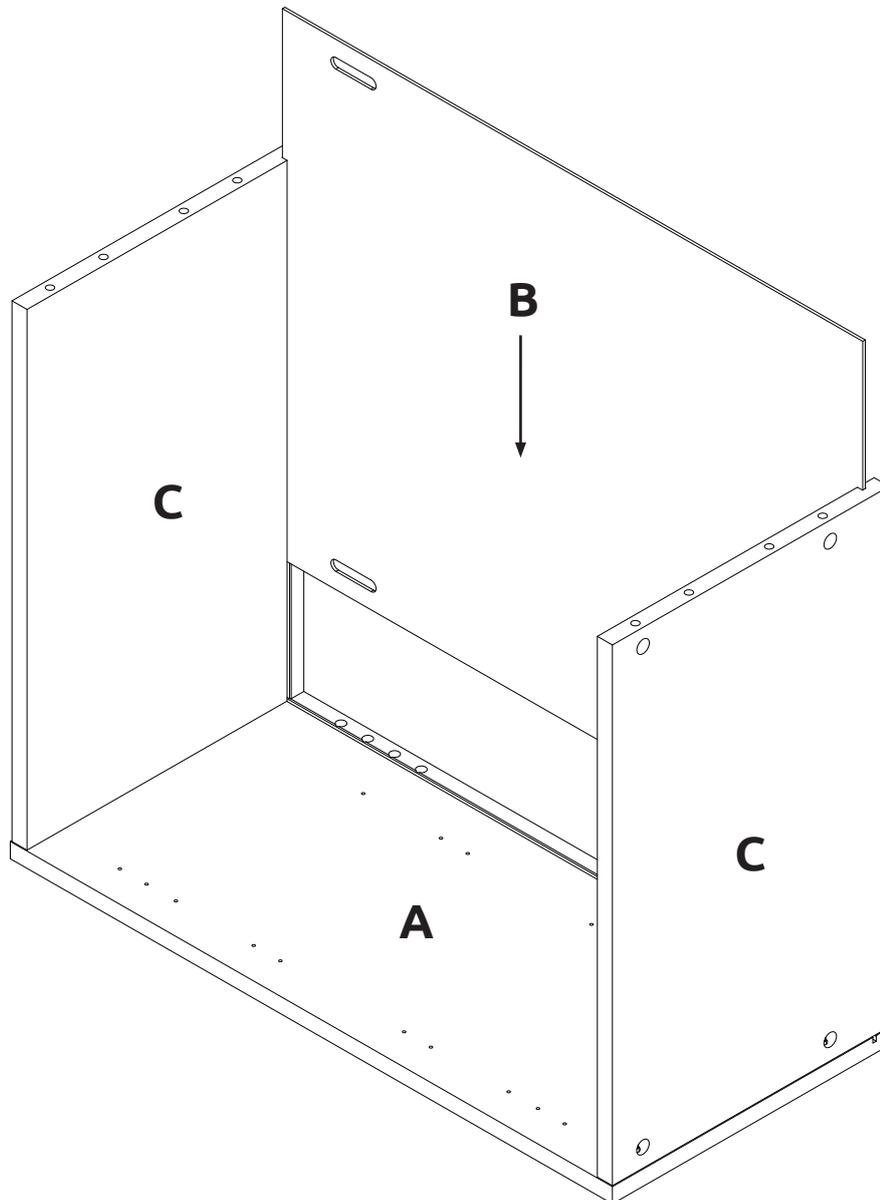


WALL/SHALLOW BASE UNIT

700-800, Assembly Guide



Step 5.

Attach end panel (A) using expanding cam dowels (G), and wooden dowels (F) in positions as shown.

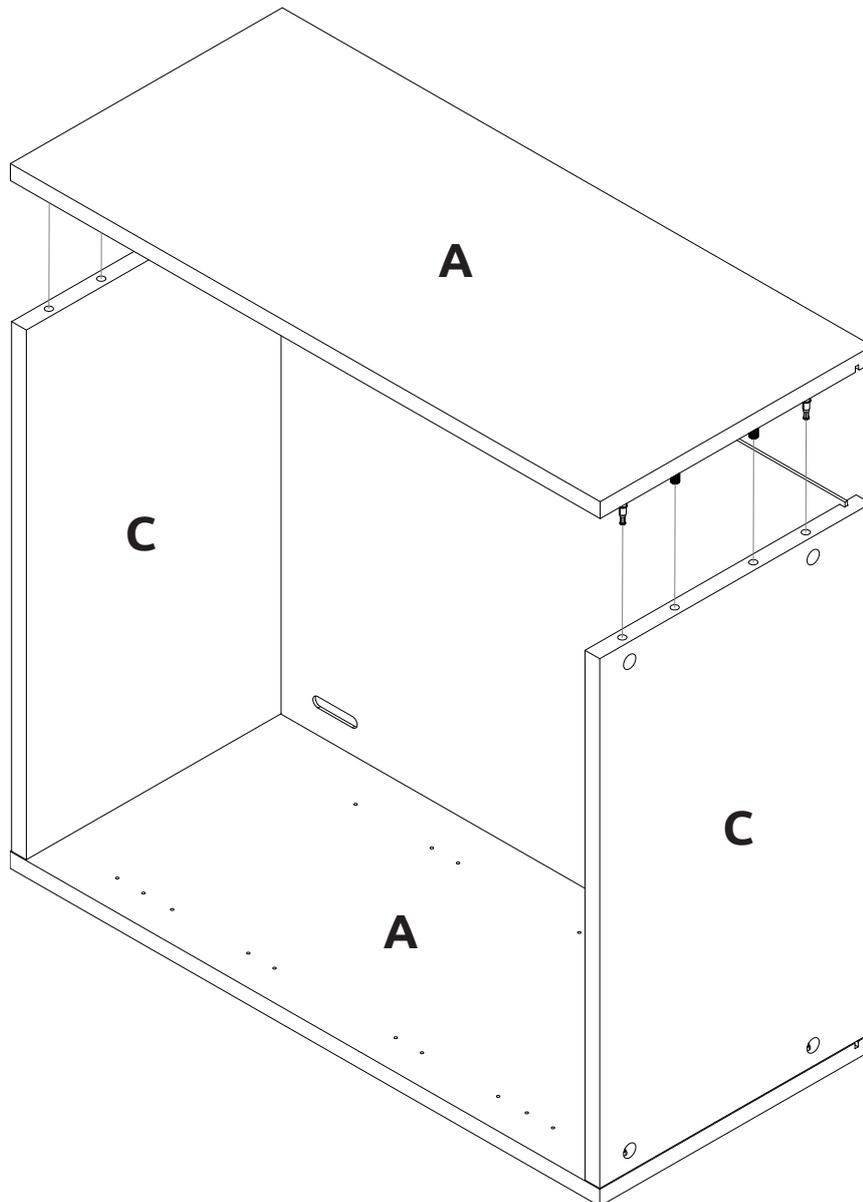

WALL/SHALLOW BASE UNIT

700-800, Assembly Guide

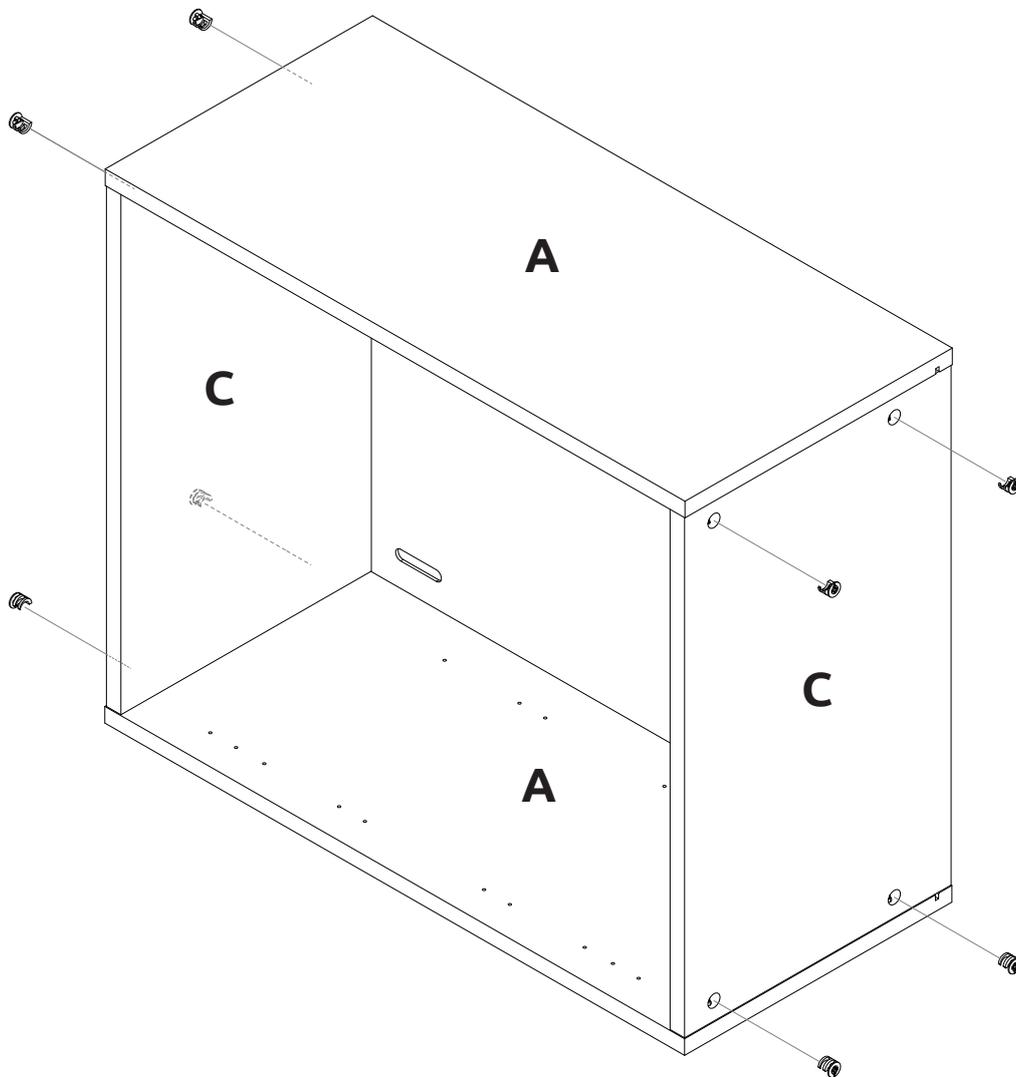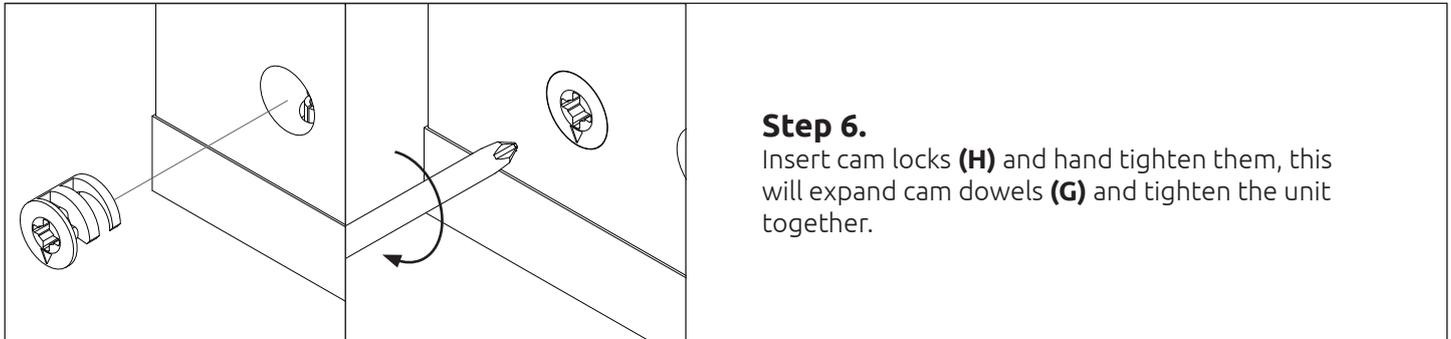


Do **not** use power tools with cam lock **(H)**

WALL/SHALLOW BASE UNIT

700-800, Assembly Guide




Step 7.

Ensure the unit is square. Slide back panel clips **(T)** into the groove of both panels **(A)** & **(C)**. The back panel clips **(T)** should be evenly spaced as shown and positioned to allow the hanging bracket and corner gussets to be fitted. Once in place, tighten screw.

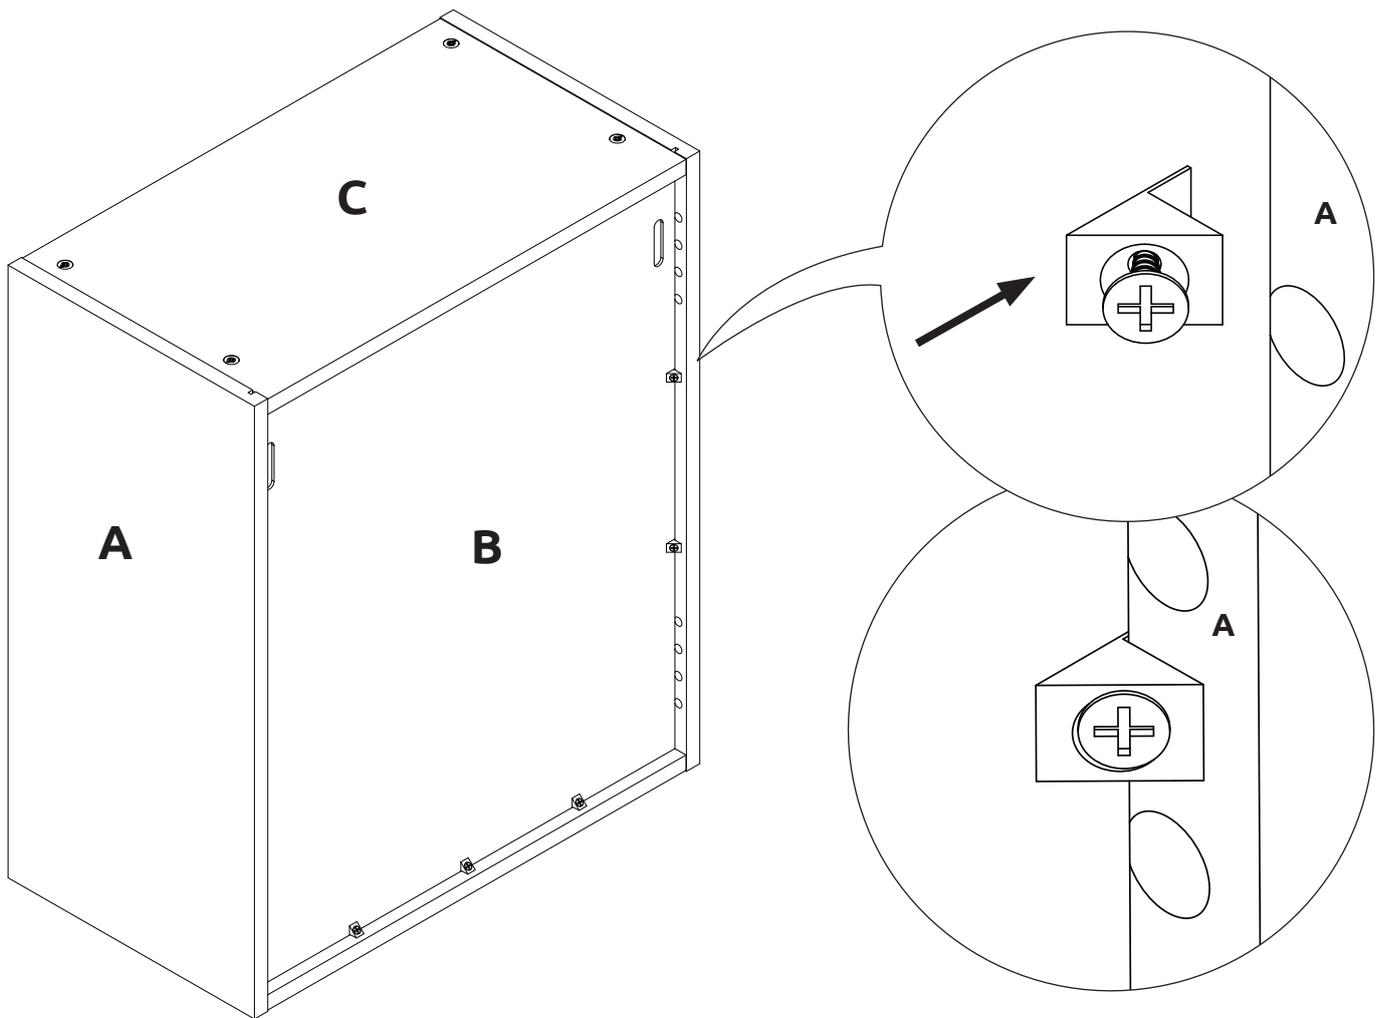

WALL/SHALLOW BASE UNIT

700-800, Assembly Guide

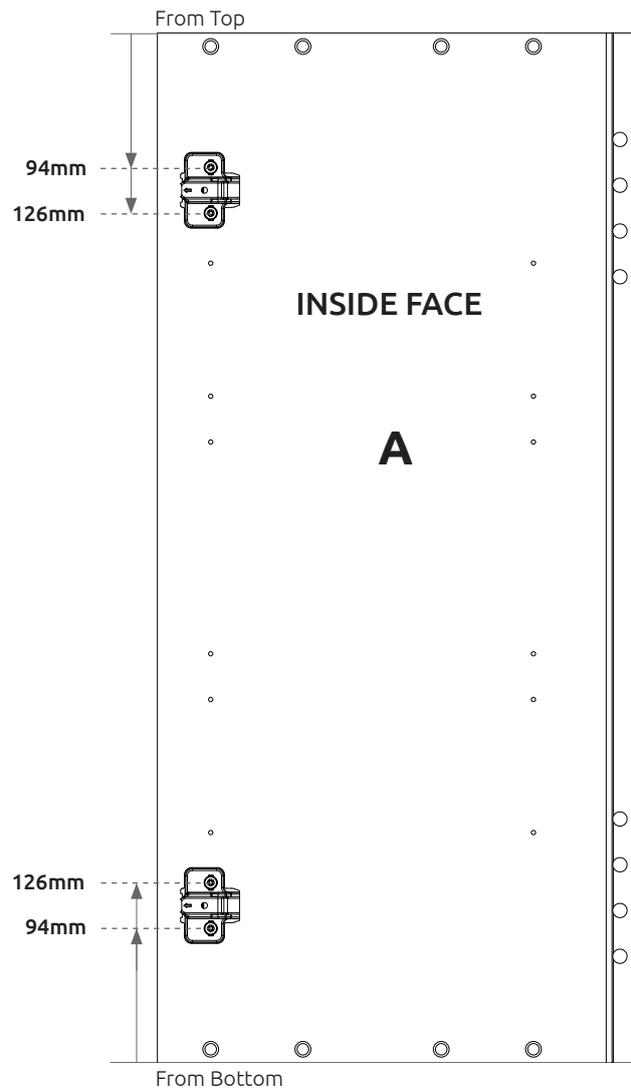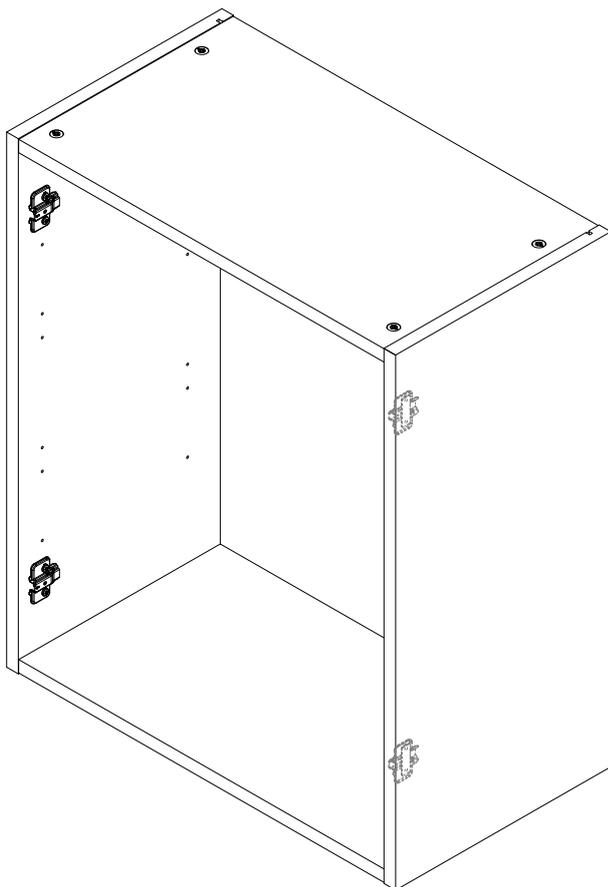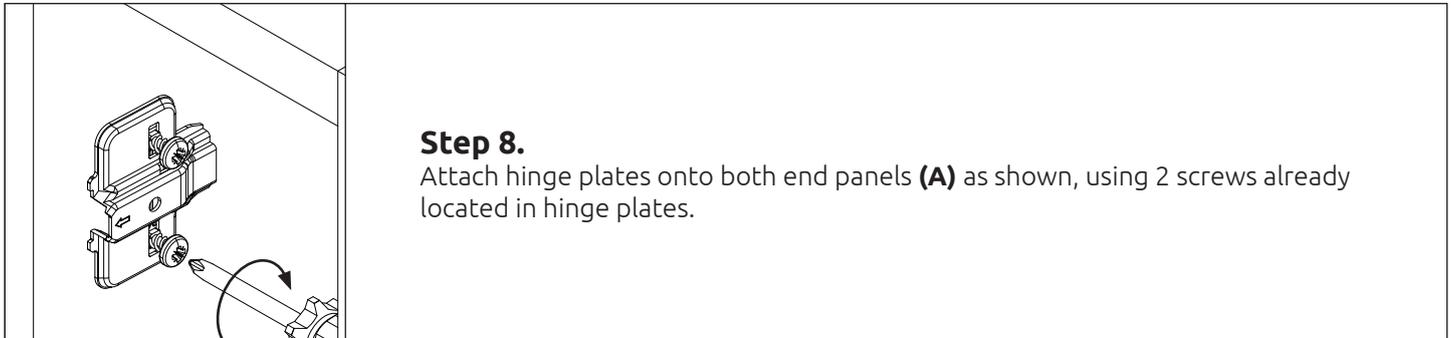

WALL/SHALLOW BASE UNIT



700-800, Assembly Guide

WALL UNITS ONLY

Step 9.


Hanging brackets steps **A**, **B** & **C** to be carried out on both sides as shown.

- A.** Insert hanging bracket into pre-drilled holes.
- B.** Rotate locking lever 180 degrees.
- C.** Secure with provided 2 x 20mm screws (**S**) per bracket.

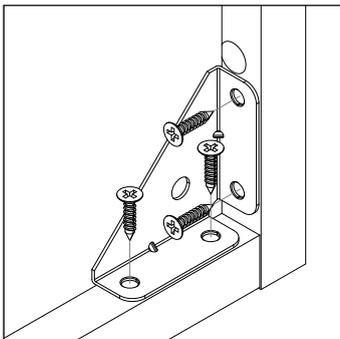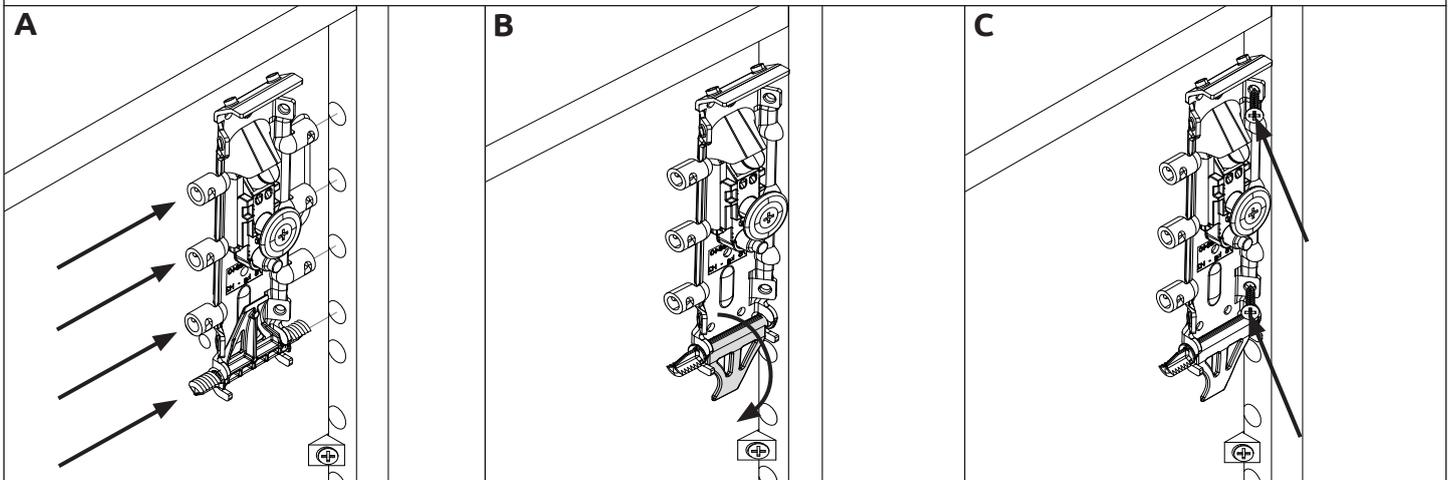

Step 10.

Secure corner gussets to the bottom left and right hand side of the wall unit using 4 x 15mm screws (**L**) per plate.

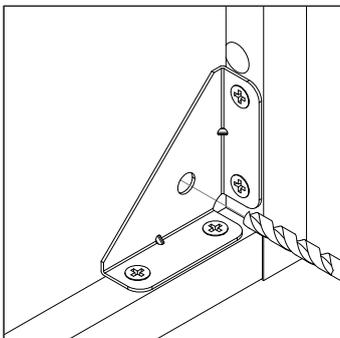

Step 11.

Drill a small pilot hole through the centre of the Corner Gussets. Use this hole at the end of the process to screw through and into the wall.

WALL/SHALLOW BASE UNIT

700-800, Assembly Guide


WALL UNITS ONLY



Care to be taken. Hanging procedure is necessary for a safe installation.



Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

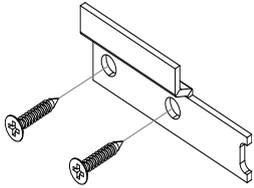


Step 12.

Measure appropriately and attach the 2 x hanging bracket plates onto the wall screwing through the provided holes into your wall.

Step 13.

Hang the unit using the brackets to hook onto the plate as shown.

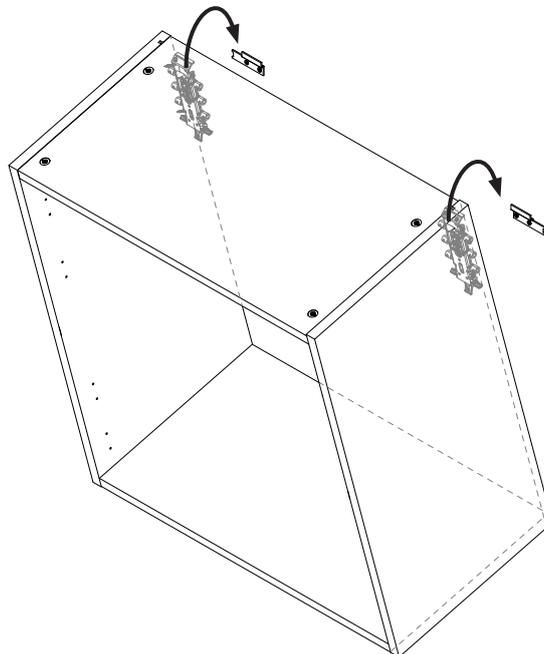


WALL/SHALLOW BASE UNIT

700-800, Assembly Guide


WALL UNITS ONLY

Step 14.

Using points **a**, **b** & **c** adjust the unit to suit.

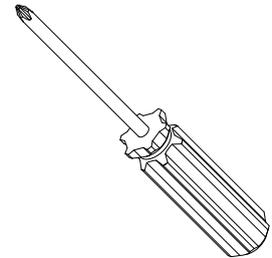

a



Point a.

Rotate the top screw clockwise to move the unit up.
Anti-clockwise for down.

b

Point b.

Adjust the depth using centre screw.


c

Point c.

Turn the bottom screw until it touches the plate to lock in position.




Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

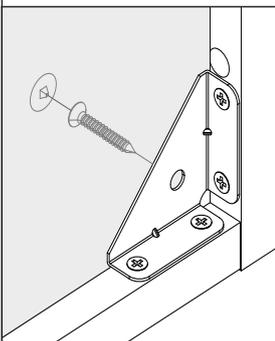

Step 15.

Secure the unit to the wall by screwing through the pilot hole and gusset from **Step 11** into the wall. Place cover caps **(M)** on the heads to conceal them.

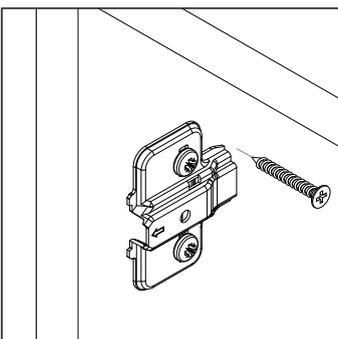


Step 16.

Screw into any adjacent units using 30mm screws **(K)** provided to secure to unit. Screw just to the rear of hinge plate at the top and bottom of both sides of the unit, place cover caps **(M)** on the heads to conceal them.

WALL/SHALLOW BASE UNIT


700-800, Assembly Guide

SHALLOW BASE UNITS ONLY

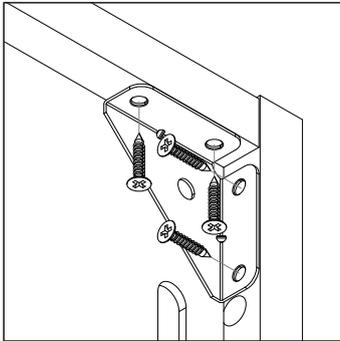

Step 17.

Secure corner gussets to the top left and right hand side of the wall unit using 4 x 15mm screws (**L**) per plate.

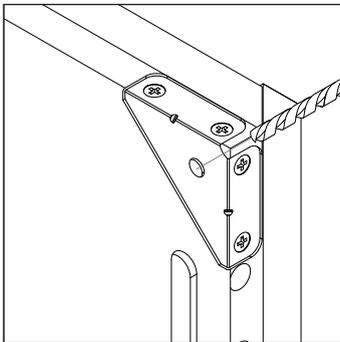


Step 18.

Drill a small pilot hole through the centre of the Corner Gussets. Use this hole at the end of the process to screw through and into the wall.

Step 19.



Position legs as shown on the diagram below. Ensure legs are rotated to also provide support to the end panels (**A**). Once positioned, secure each of the legs into place with 4 x 15mm screws (**L**) per leg. Push leg firmly down into leg base. Adjust legs to **155mm** before turning unit upright. Once in situ level accordingly.

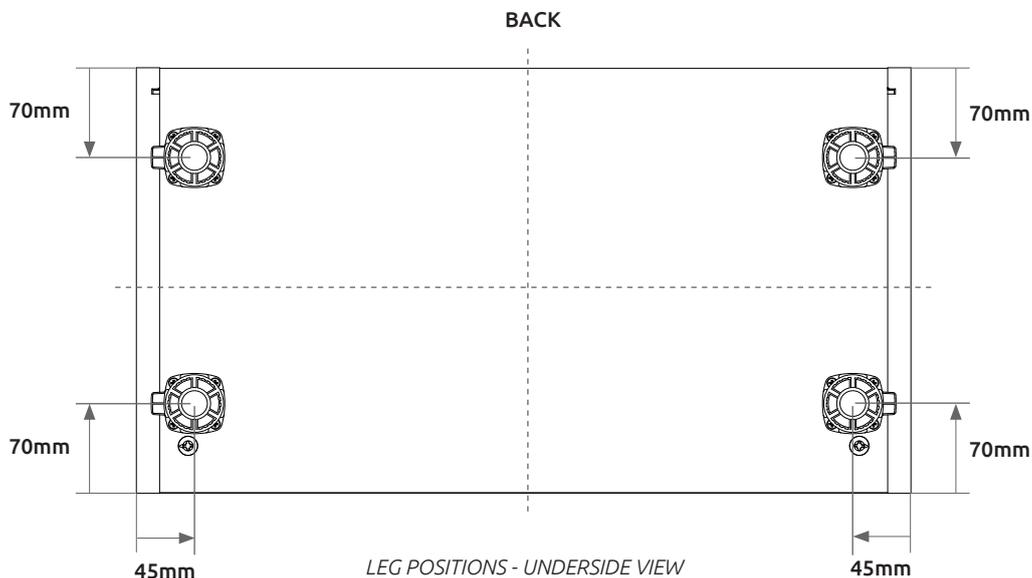

WALL/SHALLOW BASE UNIT


700-800, Assembly Guide

SHALLOW BASE UNITS ONLY

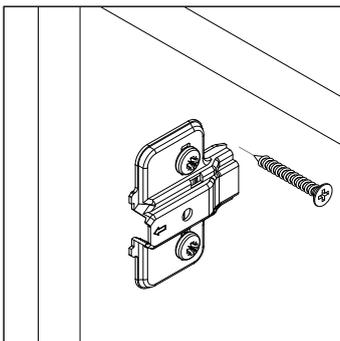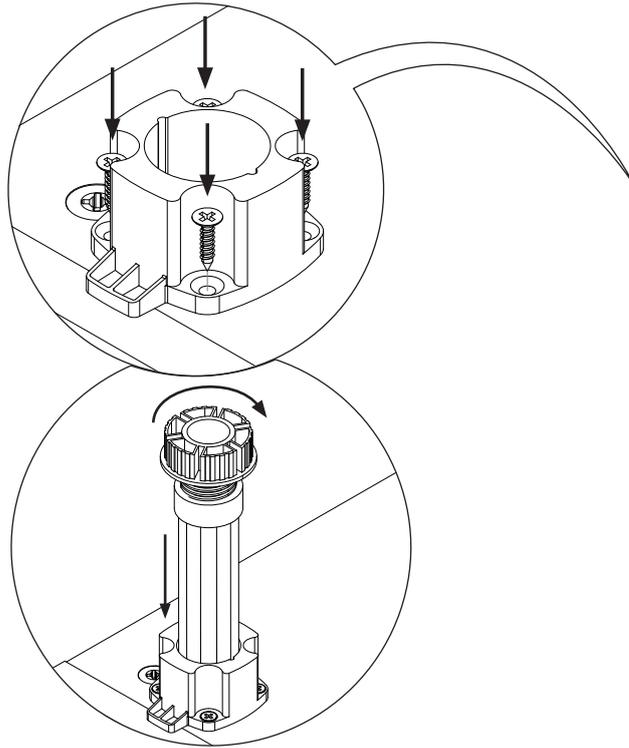

Step 20.

Screw into any adjacent units using 30mm screws **(K)** provided to secure to unit. Screw just to the rear of the hinge plate at the top and bottom of both sides of the unit, place cover caps **(M)** on the heads to conceal them.



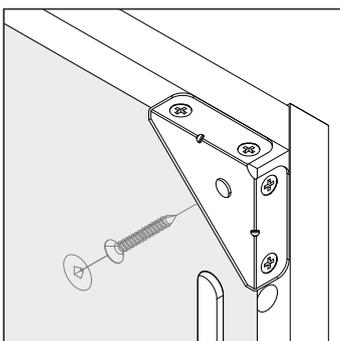



Step 21.



Secure the unit to the wall by screwing through the pilot hole and gusset from **Step 18** into the wall. Place cover caps **(M)** on the heads to conceal them.

WALL/SHALLOW BASE UNIT

700-800, Assembly Guide

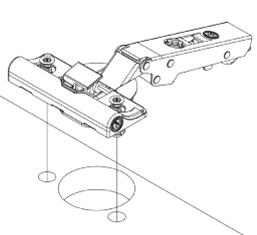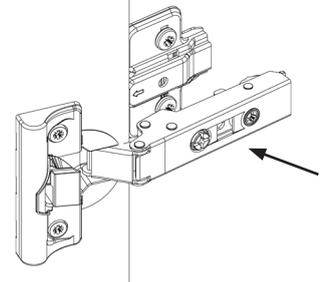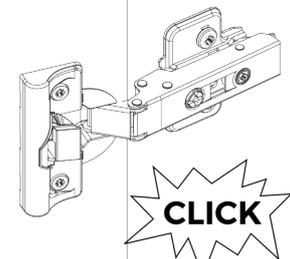	<p>HINGE ATTACHMENT AND ADJUSTMENT</p> <p>Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.</p>  <p>Hinge dowels</p>	
	 <p>CLICK</p>	<p>Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.</p>
<p>Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

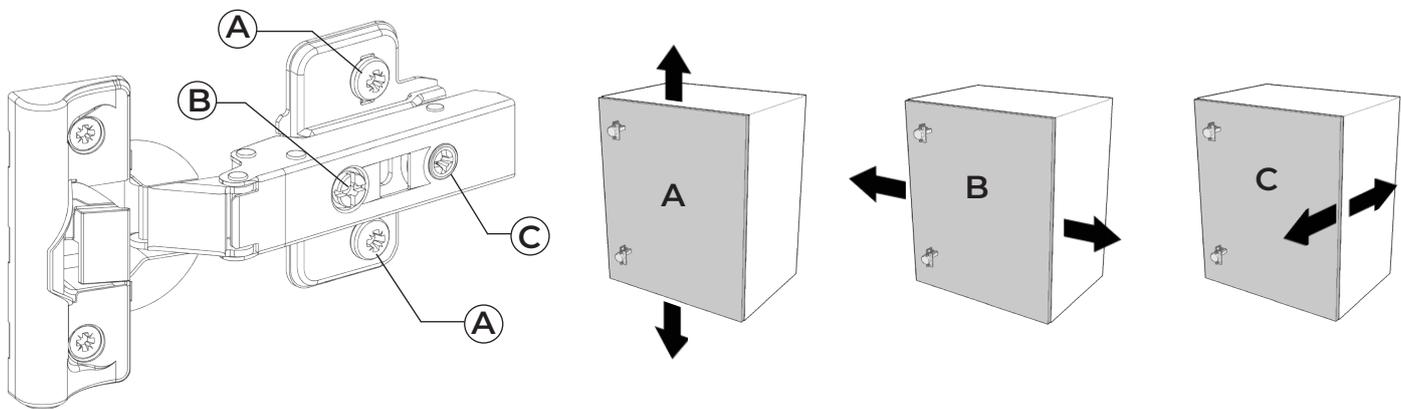

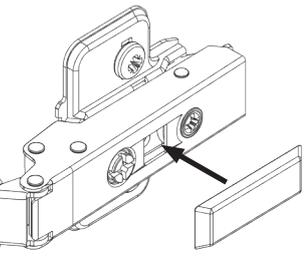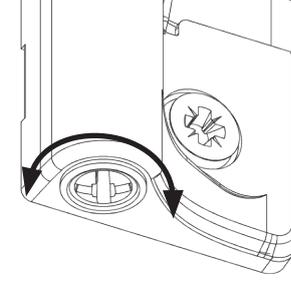	<p>Step 4. Fit cover caps to hinges and adjust soft-close to suit.</p>	
---	---	---



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.

Vogue

wren

WALL/SHALLOW BASE UNIT

700-800, Assembly Guide

wren