



BASE UNIT


Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

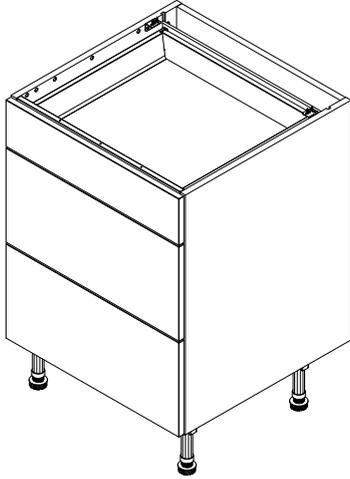


600, 3 Drawer

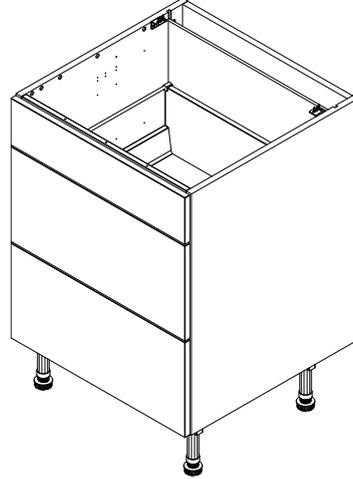


600, 3 Drawer inc. Dummy
Drawer

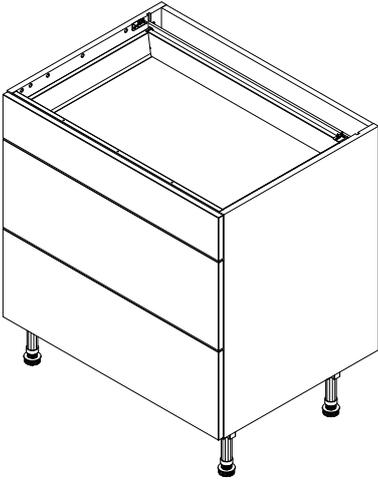

800, 3 Drawer

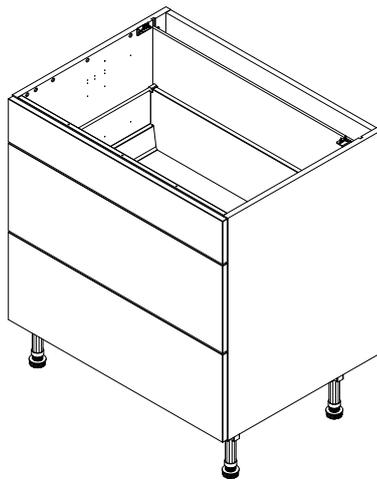

800, 3 Drawer inc. Dummy
Drawer

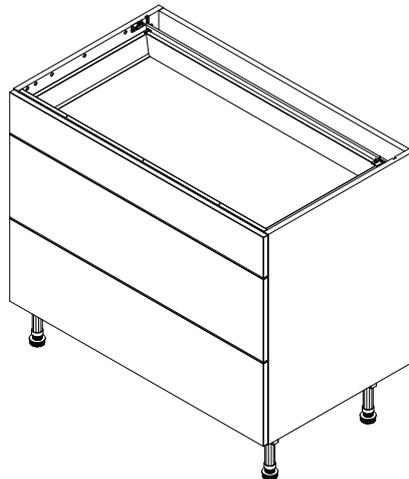

1000, 3 Drawer

BASE UNIT


Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide





BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

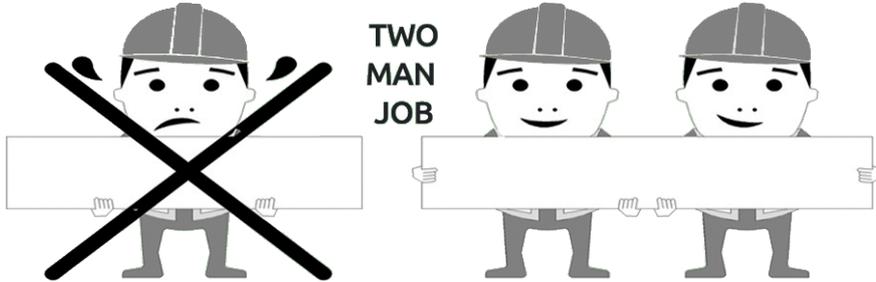


NOT to be used with
CAM LOCK

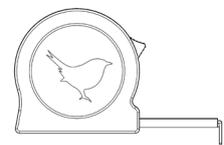

BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

Packs Supplied are Customer Specific
Standard Drawer (Packed Separately)

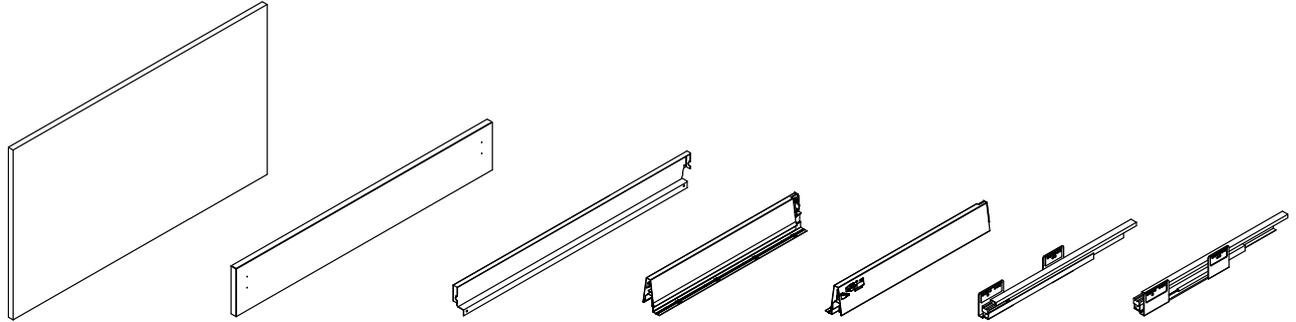

Drawer Base
x1 Drawer Base Panel

Frontal
x1 Front Panel
(Packed Separately)

Back Panel
x1 Metal Back Panel
(Small)

Drawer Side
x1 Left Hand

Drawer Side
x1 Right Hand

Drawer Runner
x1 Left Hand


Drawer Runner
x1 Right Hand




(J) x16
16mm
Screw




(Q) x4
21mm
Screw



(N) x1
Door Buffer

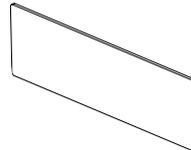


Drawer Cover Cap
x2



Drawer Front Fixing
x2

Deep Drawer (Packed Separately)

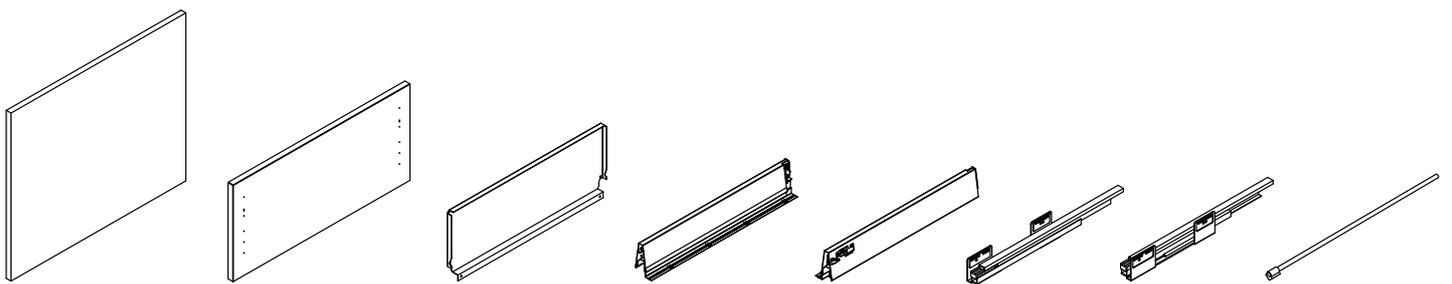

Drawer Base
x1 Drawer Base Panel

Frontal
x1 Front Panel
(Packed Separately)

Back Panel
x1 Metal Back Panel
(Large)

Drawer Side
x1 Left Hand

Drawer Side
x1 Right Hand

Drawer Runner
x1 Left Hand

Drawer Runner
x1 Right Hand

Gallery Rail
x2




(L) x2
15mm
Screw




(J) x16
16mm
Screw




(Q) x4
21mm
Screw




(Y) x2
Gallery Head



(N) x1
Door Buffer

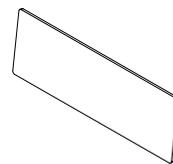

Drawer Cover Cap
x2



Drawer Front Fixing
x2

BASE UNIT



Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

STANDARD DRAWER ASSEMBLY

Step 1.


Seat the edge of drawer base tight into the corner of the drawer side, as shown. The decorative face of drawer base to be positioned at the front of the drawer. Secure drawer base to drawer side using 4 x 16mm screws (**J**) in holes provided. Repeat on both sides of the drawer.

Decorative face

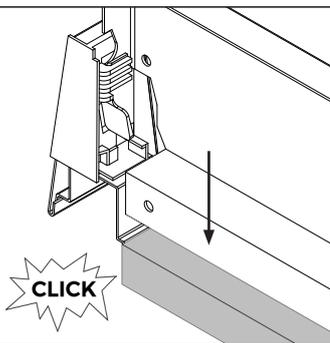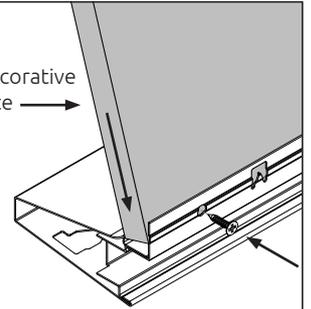



Step 2.

Clip metal back panel into the rear of the drawer sides and secure in position using 2 x 16mm screws (**J**) into drawer base in holes provided.

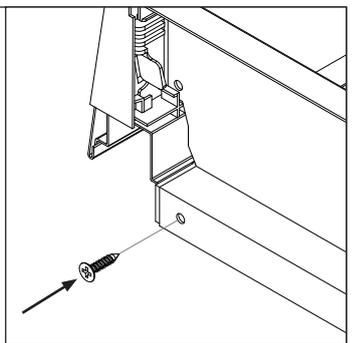

Step 3.

Secure **drawer side fixing clips** using 2 x 21mm screws (**Q**) in pilot holes provided on the frontal, as shown. Attach drawer frontal to drawer box by pushing drawer side fixing clips into drawer sides.

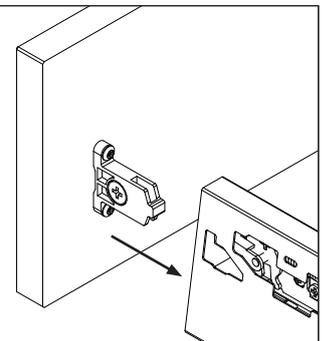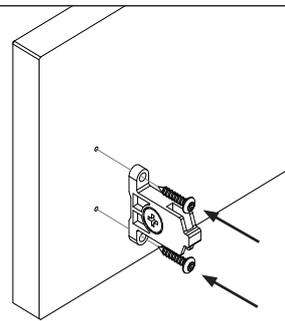



BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

DEEP DRAWER ASSEMBLY


Step 1.

Seat the edge of drawer base tight into the corner of the drawer side, as shown. The decorative face of drawer base to be positioned at the front of the drawer. Secure drawer base to drawer side using 4 x 16mm drawer runner screws (**J**) in holes provided. Repeat on both sides of the drawer.

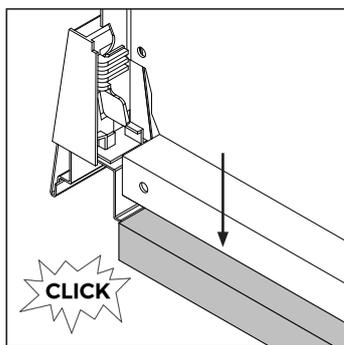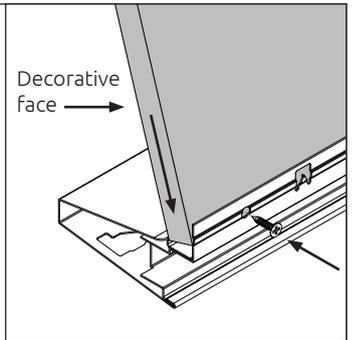



Step 2.

Clip metal back panel into the rear of the drawer sides and secure in position using 2 x 16mm screws (**J**) to drawer base in holes provided.

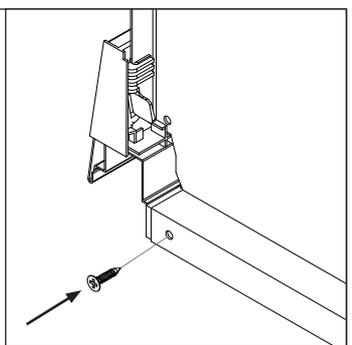


Step 3.

Secure **drawer side fixing clips** using 2 x 21mm screws (**Q**) and gallery head (**Y**) using 1 x 15mm screw (**L**) in pilot holes provided as shown. Attach drawer frontal to drawer box by pushing drawer side fixing clips into drawer sides.

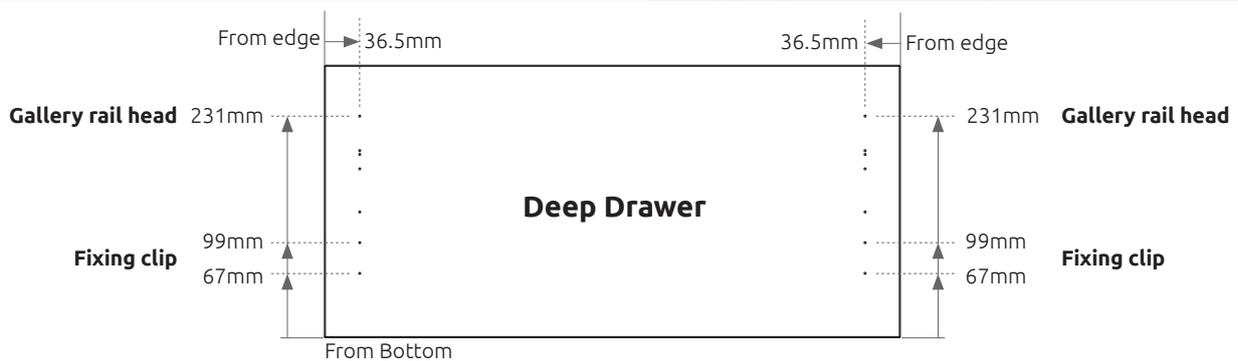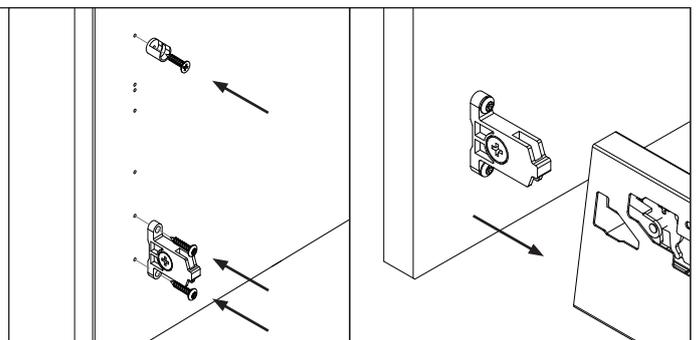

Step 5.

Fit gallery rail into the top corners of metal back panel. Locate front end of the gallery rail into the opening of the gallery head, which is secured to the frontal as shown.

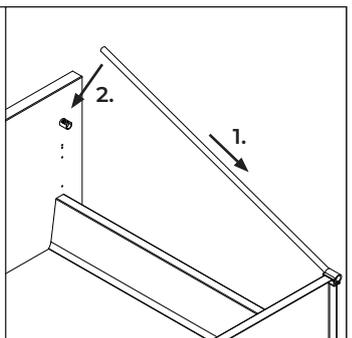

BASE UNIT


Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

DRAWER ADJUSTMENT Left and Right Adjustment

Turn screw shown to **adjust** drawer frontal **left & right**.




Drawer adjustments to be done on both side.

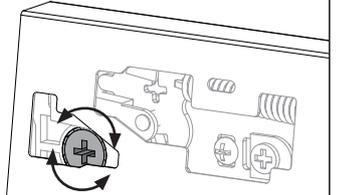


Up & Down Adjustment

Turn screw shown to **adjust** drawer frontal **up & down**.

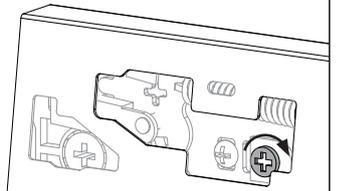


Lock Position

Tighten screw shown to lock in position.

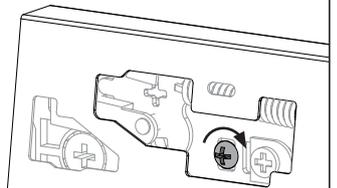


Remove Frontal

To remove the frontal, release the fixing clip by turning the locking plate screw shown.

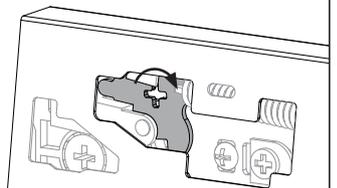


Step 6.

Fit drawer cover caps over drawer side adjustment.

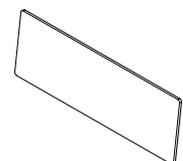


BASE UNIT


Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

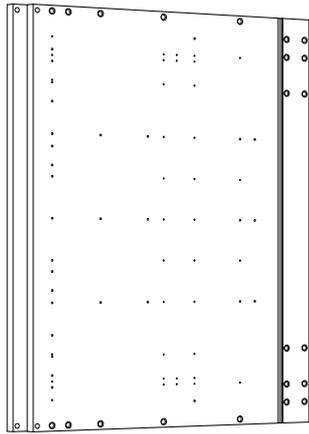


Panel A
x2 End Panel

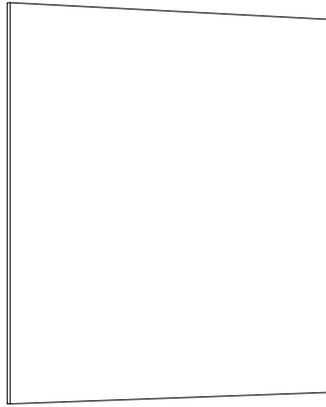


Panel B
x1 Back Panel

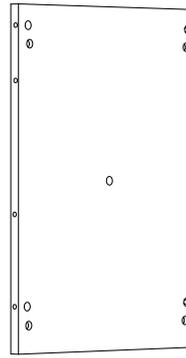

Panel C
x1 Fixed Shelf



Panel D
x2 Rail



Rail
x1 Metal Rail




(F) x8
Wooden Dowel




(L) x28
15mm Screw




(K) x7
30mm Screw




(G) x6
Cam Dowel (Expanding)




(H) x6
Cam Lock



(M) x4
Cover Cap

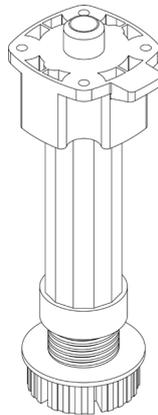

Leg




Part B



Part A

Dummy Fixing Clip
x2 Inc Screws
Where req'd

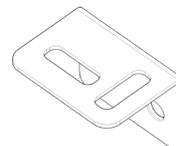

L Bracket LGE
x2


BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

Step 1.



To attach drawer runner, screw into end panels **(A)** using 2 x 16mm screws **(J)** (provided with drawer box pack) per drawer rail, into holes provided, as shown. Repeat **Step 1** for the other side of end panel **(A)**.

Drawer runner bracket screw position

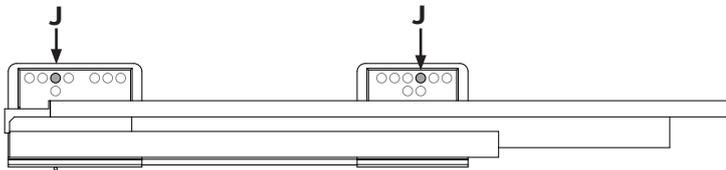

3 Drawer

2 Drawer inc Dummy Drawer

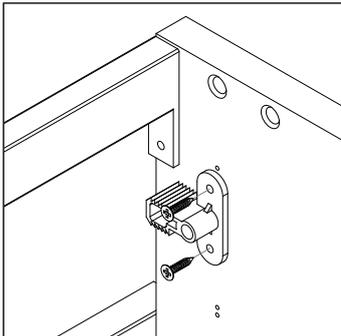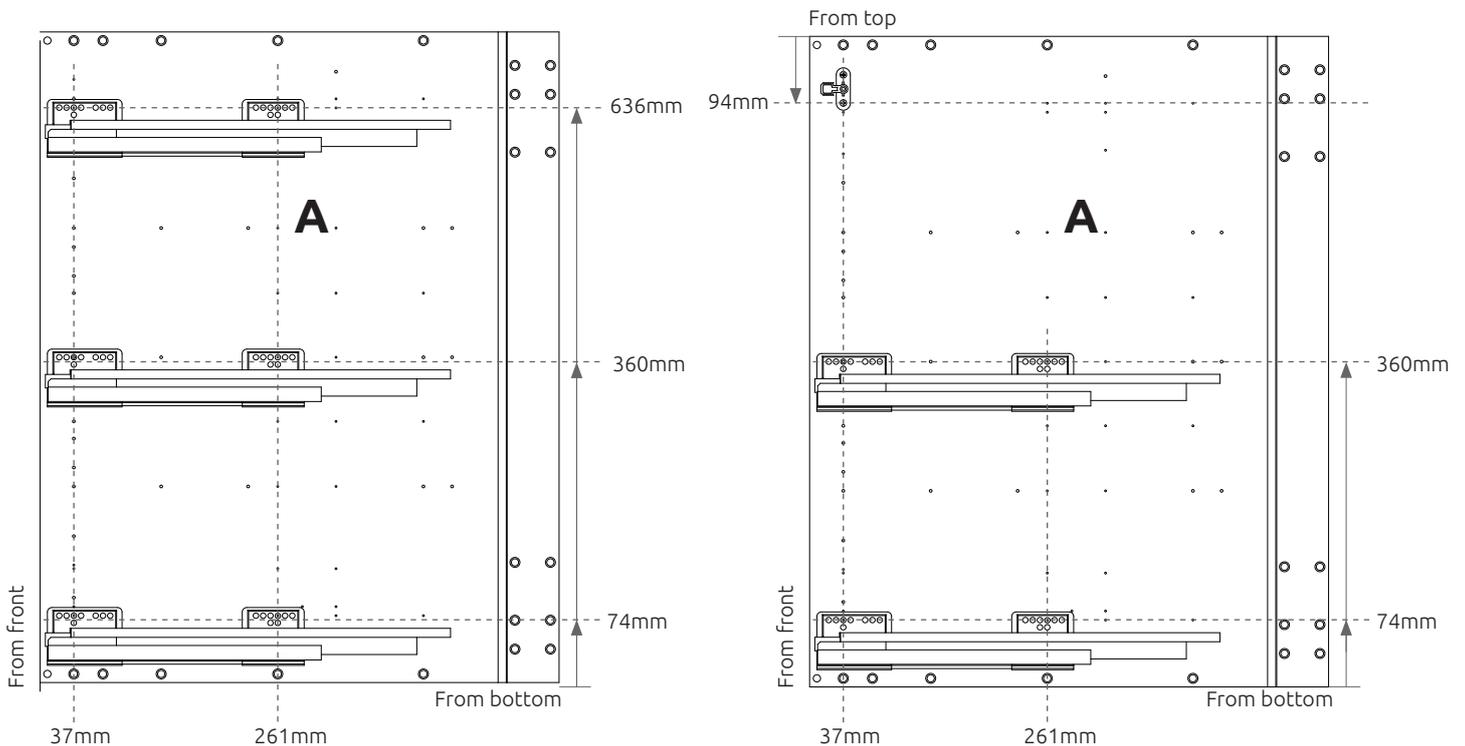

Step 2. (Where applicable)


Secure dummy fixing clip parts **(A)** onto both end panels **(B)** using 2 x 15mm screws **(L)** each, as shown. The bottom screw hole is to be positioned 94mm from the top of the panel (marked by an indentation).

BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

Step 3.

Seat dowels (F) into holes in both end panels (A) as shown.


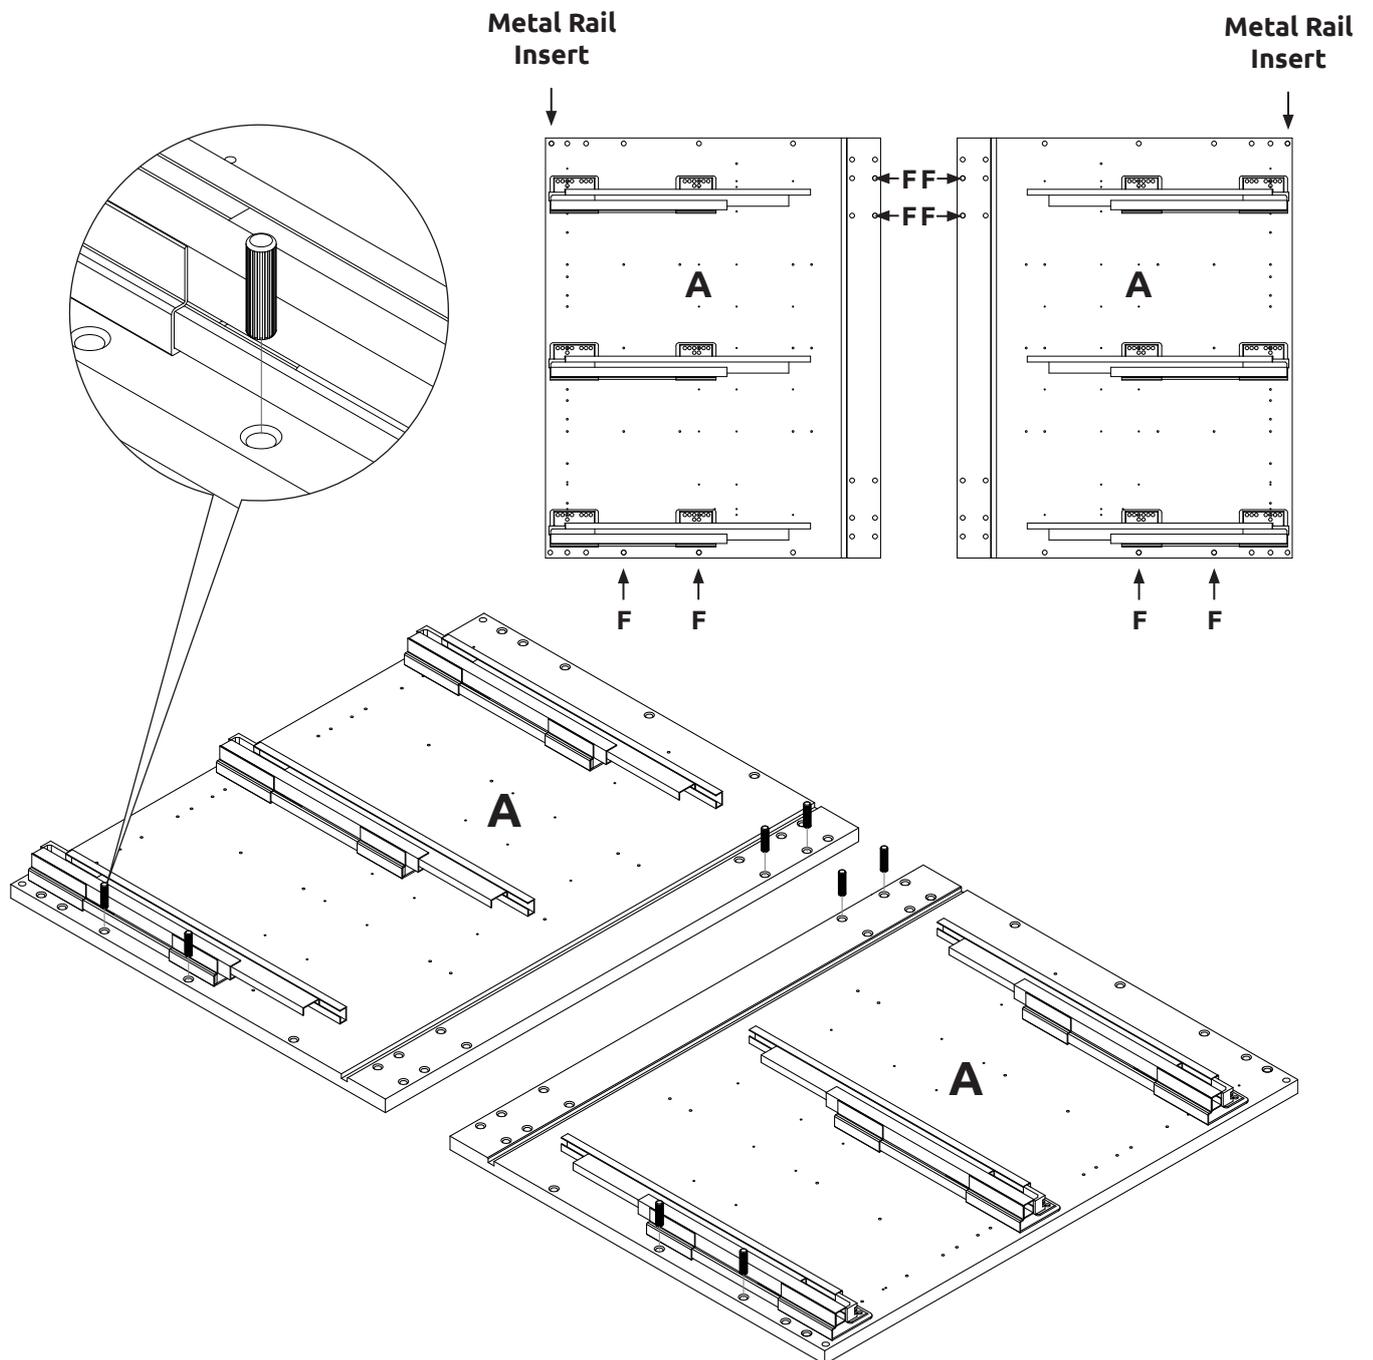


BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

Step 4.

Seat expanding cam dowels (**G**) into holes in both end panels (**A**) as shown.

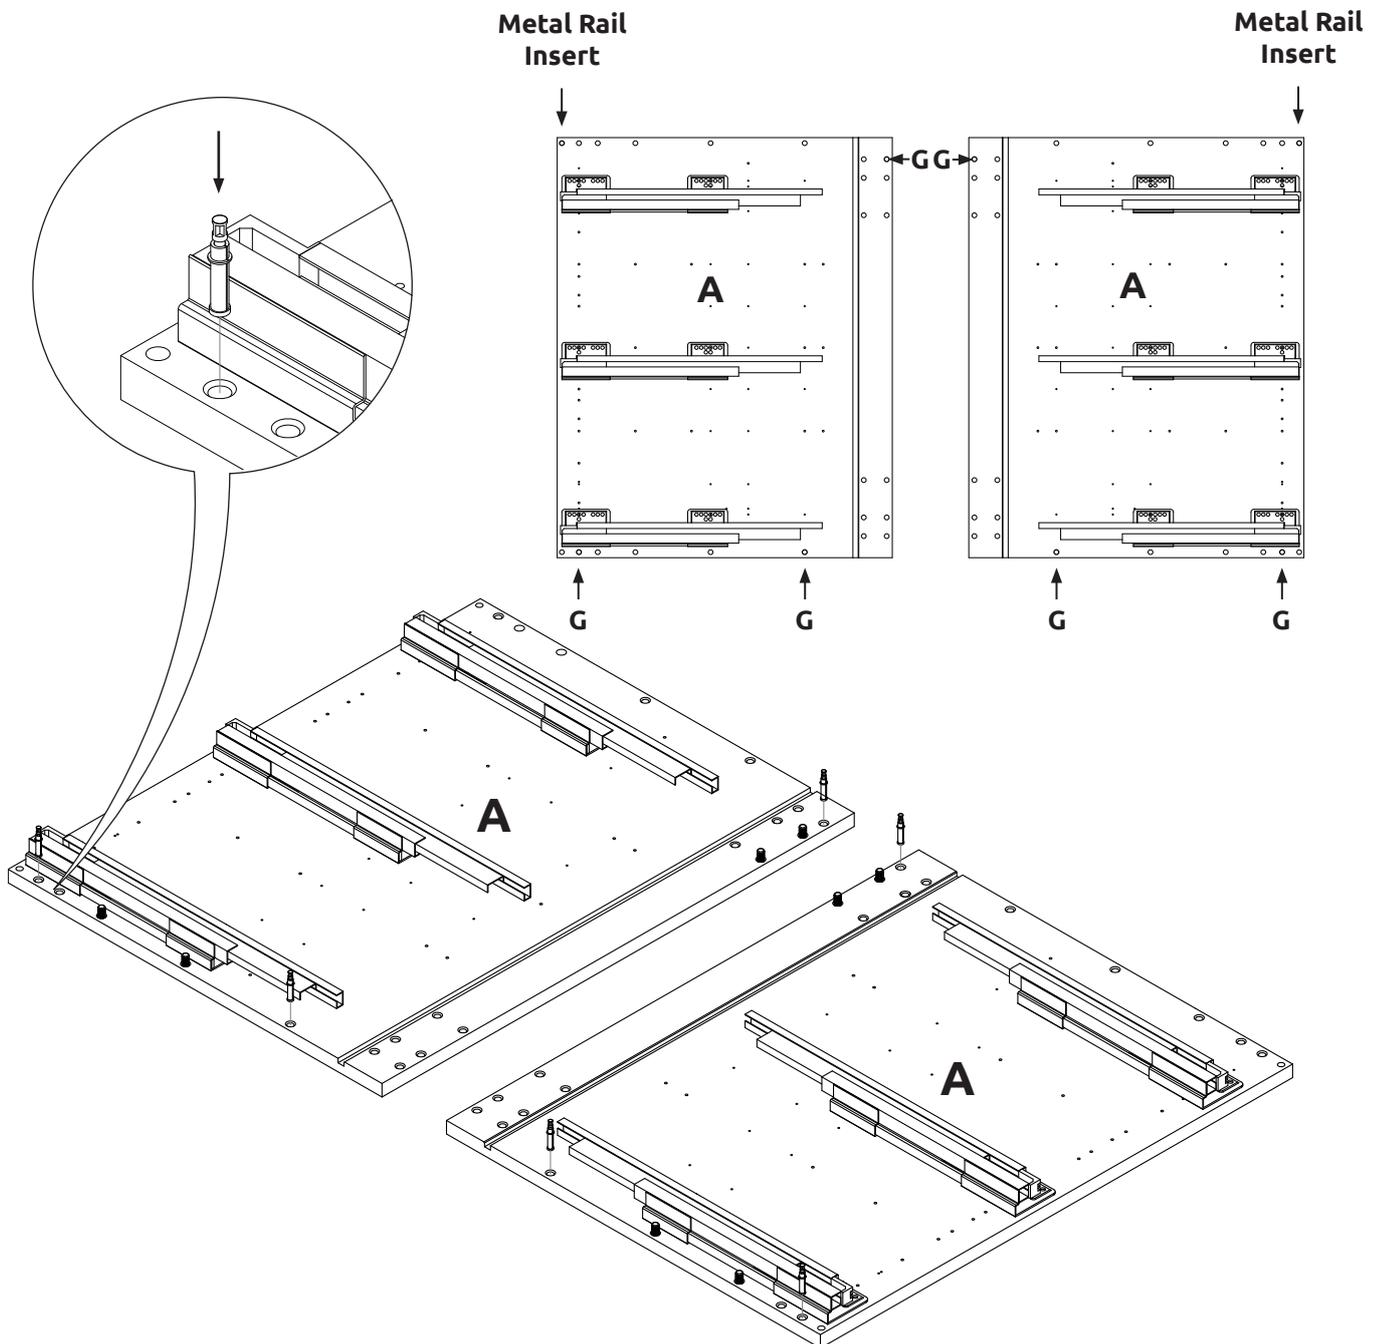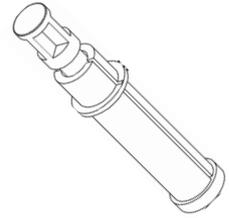

BASE UNIT


Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

Step 5.

Attach panels **(C)**, **(D)** and metal rail to panels **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown. Secure metal rail with 2 x 15mm screws **(L)** into panels **(A)**.



All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

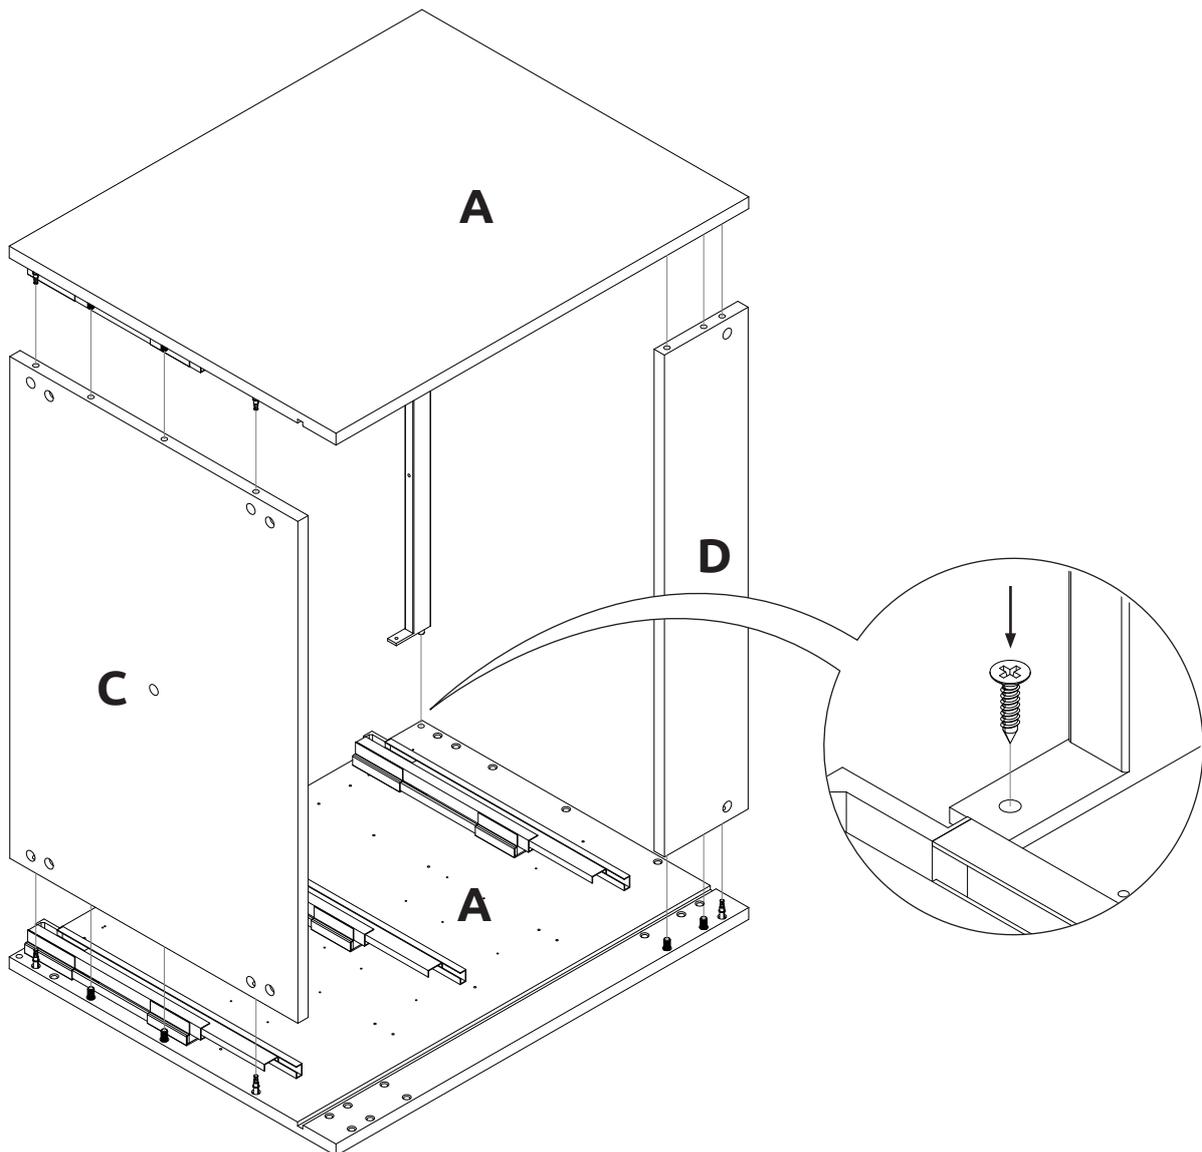


BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide



Step 6.

Slide back panel (B) into groove of end panels (A). Once back panel (B) is in position, ensure the panel is flush & square with bottom of end panels.

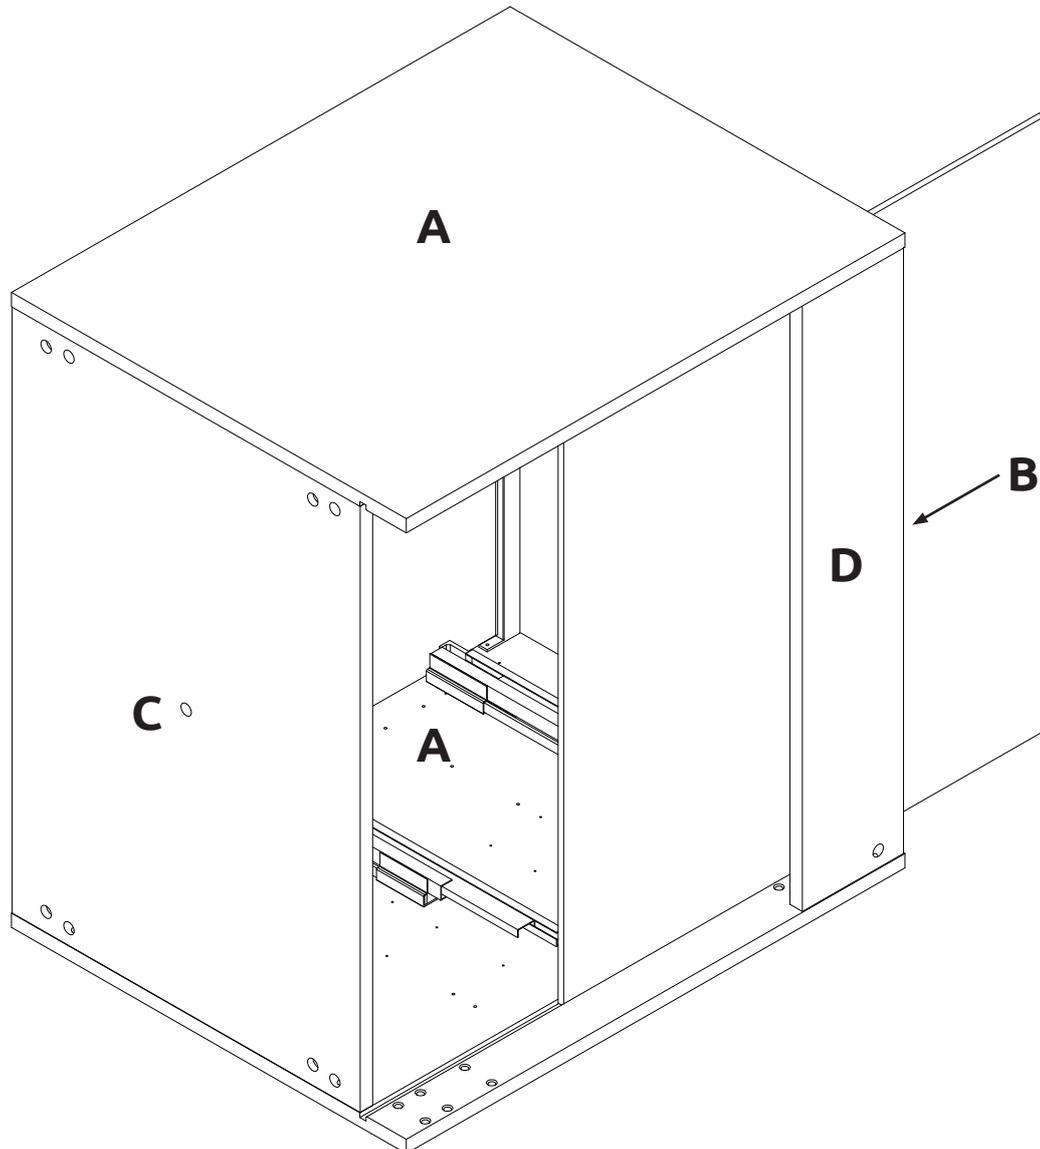

BASE UNIT


Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

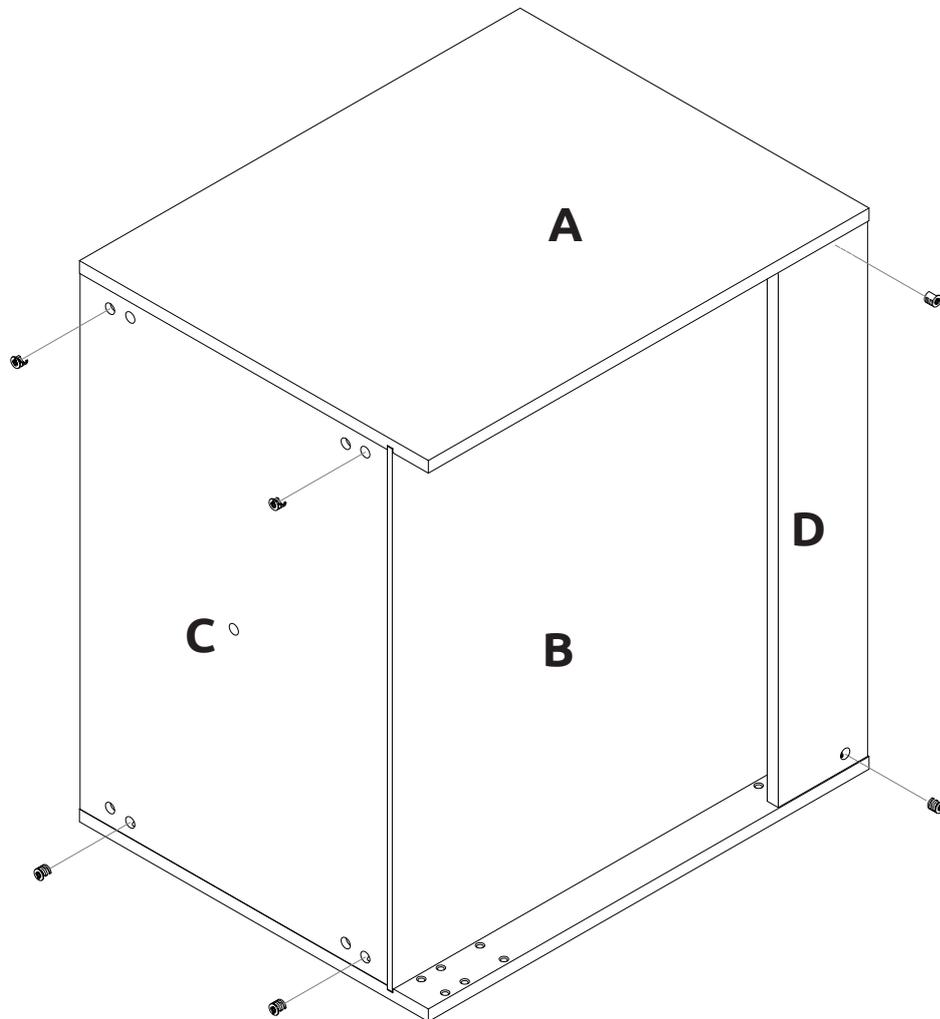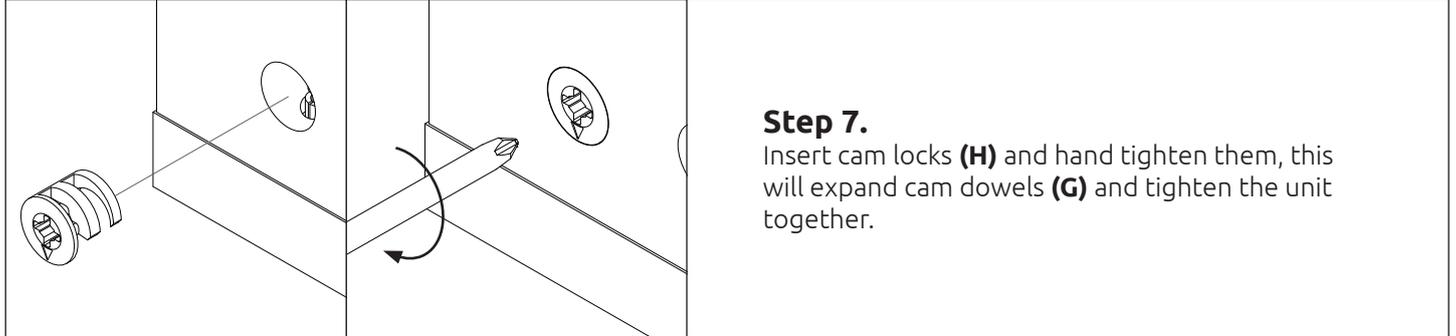

Do **not** use power tools with cam lock **(H)**


BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

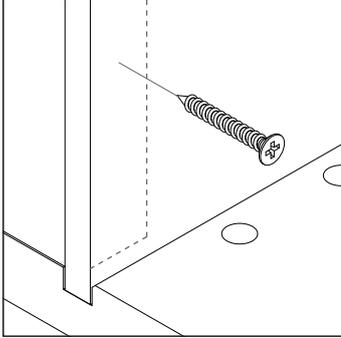

Step 8.

Ensure the unit is square. Secure back panel **(B)** with 3 x 30mm screws **(K)** equally spaced at the bottom of back panel **(B)** into base panel **(C)**, as shown. Ensure you screw into the centre of the base panel **(C)** (9mm from the edge).

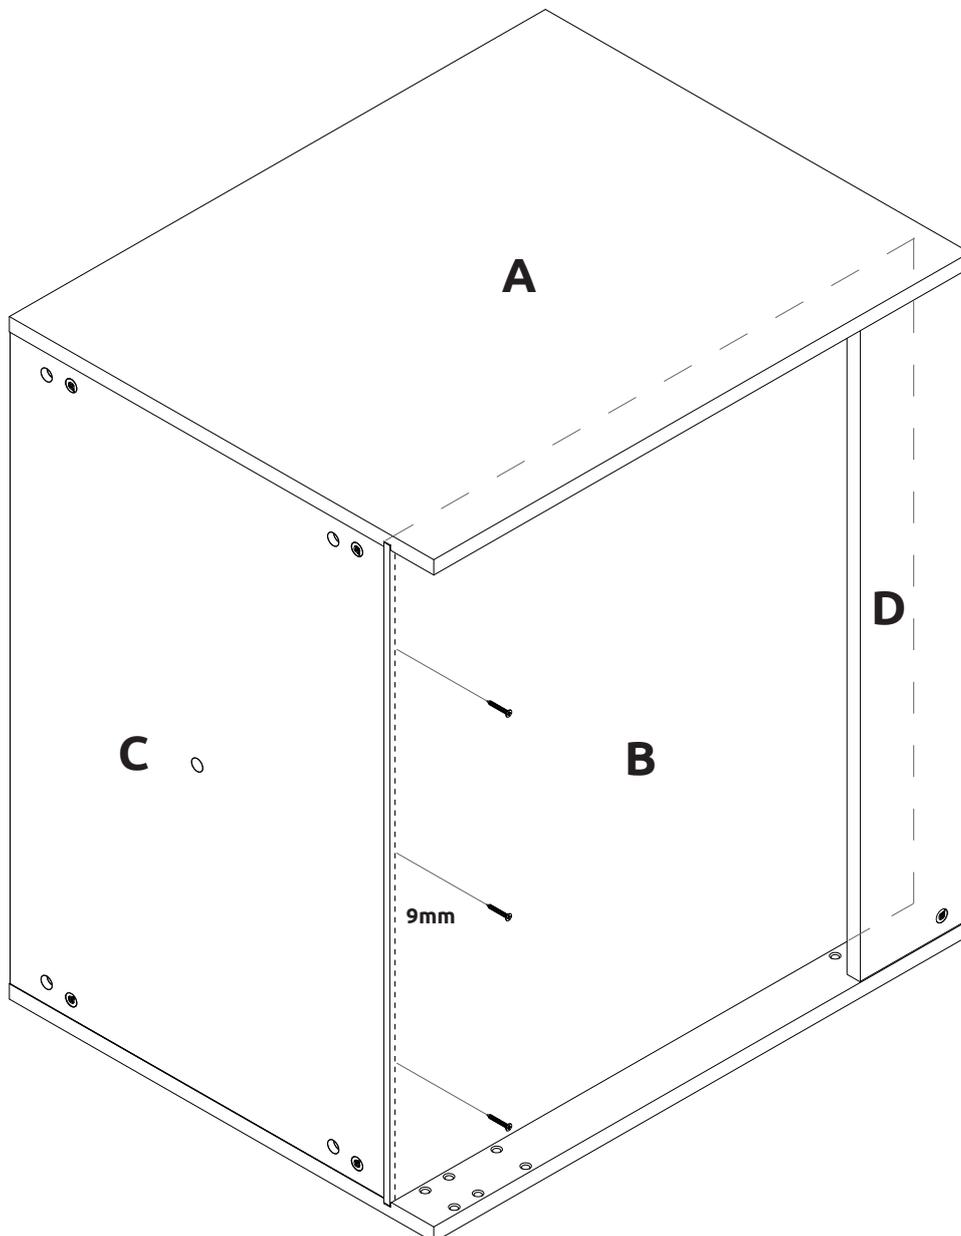



BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide


Step 9.

Position legs as shown on the diagram below. Ensure legs are rotated to also provide support to the end panels (**A**). Once positioned, secure each of the legs into place with 4 x 15mm screws (**L**) per leg. Push leg firmly down into leg base. Adjust legs to **155mm** before turning unit upright. Once in situ level accordingly.

600 width = 4x leg
800-1000 width = 5x leg

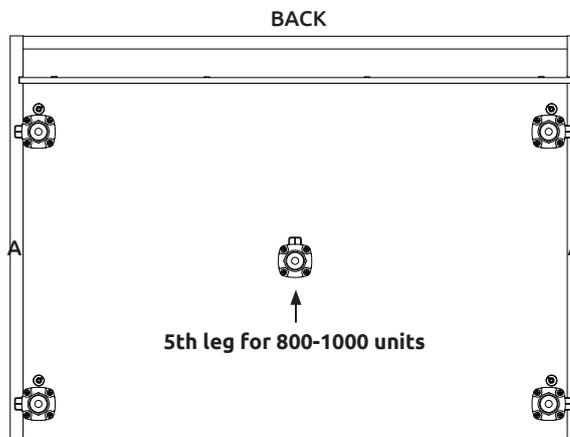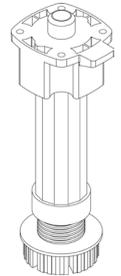

LEG POSITIONS - UNDERSIDE VIEW

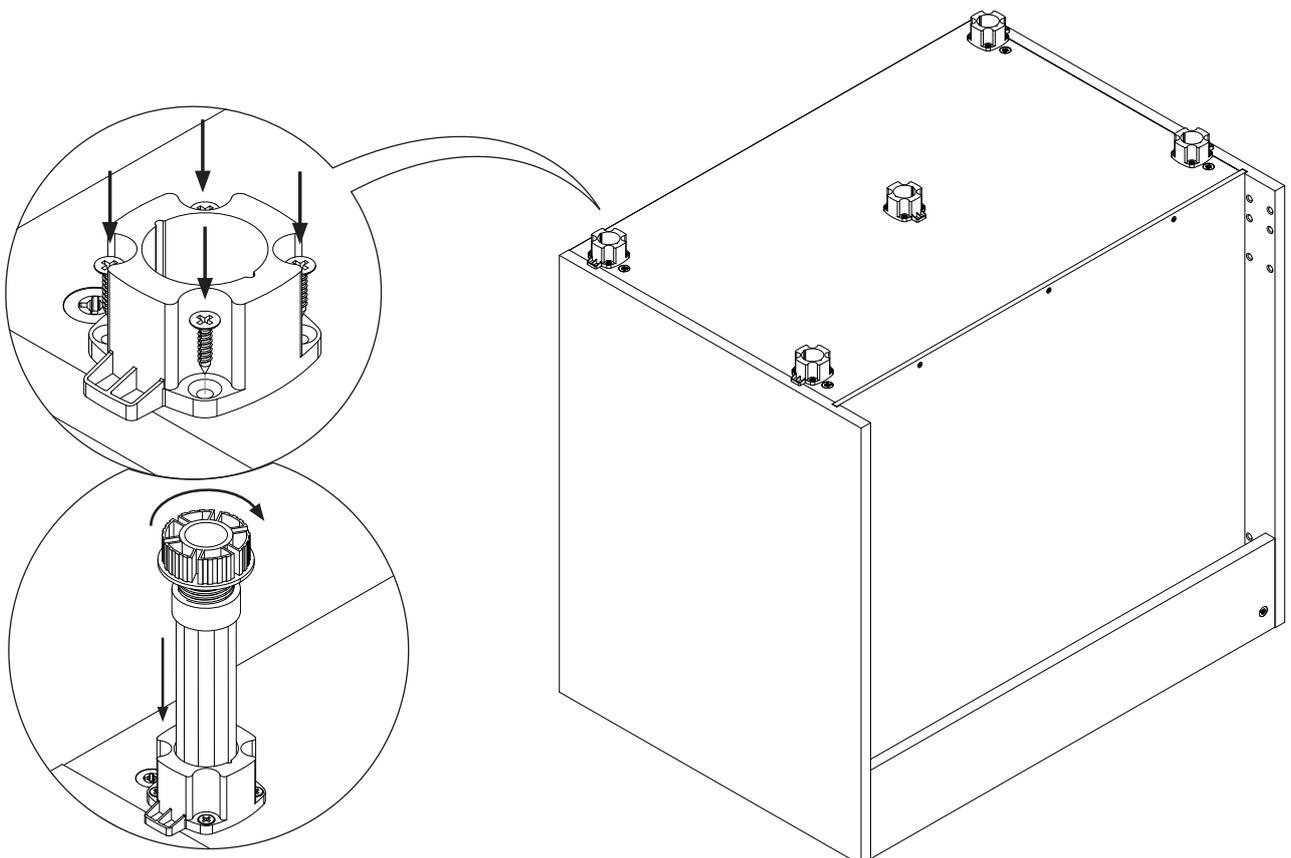


BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide




Screws for attaching to walls and worktops are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall and worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.

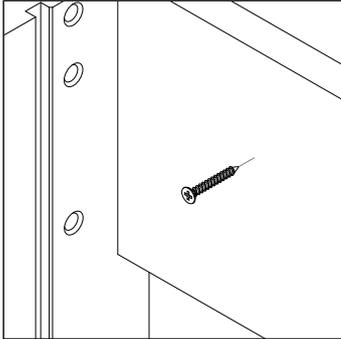


Step 10.

Ensure the unit is positioned correctly and level. Screw through the back rail into the wall to secure the unit in place.

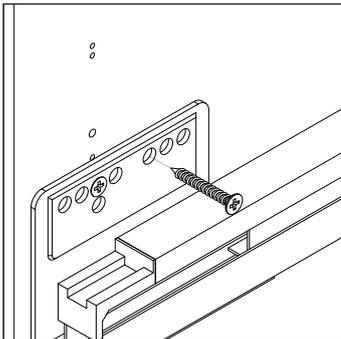



Step 11.

Screw into any adjacent units using 30mm screws (**K**) provided to secure to unit. Screw into one of the spare runner holes at the top and bottom of the unit.

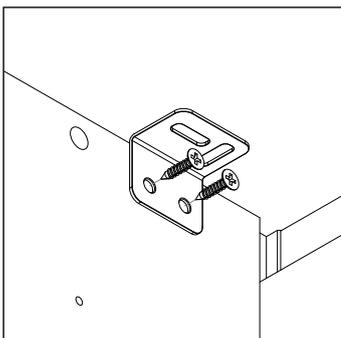

Step 12.

Use 2 x 15mm screws (**L**) to secure each of the L brackets to the top rear of the unit on both sides.

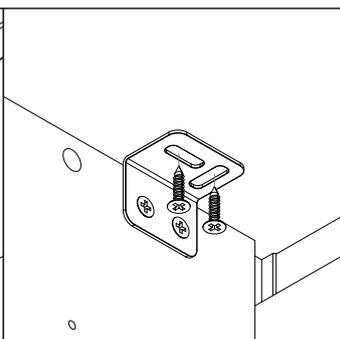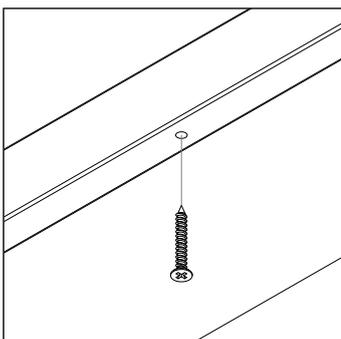

Step 13.


Screw up through the metal rail and the L brackets into worktop to secure it in place to secure it in place.


BASE UNIT


Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

Dummy Drawer Frontal Fixing (Where Applicable)

Drawers supplied in accordance to **Specific Customer Kitchen Plan**.

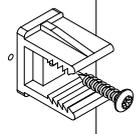	<p>Step 14. Secure dummy fixing clips (Parts B) onto the inside face at the bottom of filler (F), 64 mm from the bottom face and 26mm from the edges to the screw hole of (Parts B), spaced evenly either side as shown, using 1 x 21mm screw (Q) per dummy fixing clip (Part B). Align so filler is in line with adjacent frontals.</p>
---	--

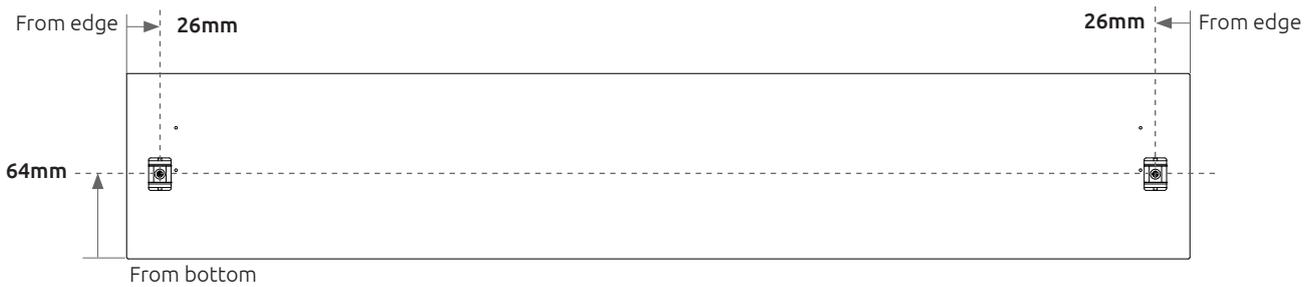

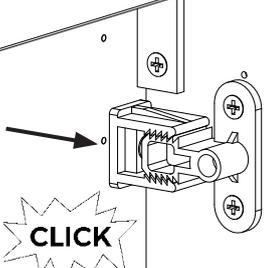 <p>CLICK</p>	<p>Step 15. Align and push frontal into place. Ensure frontal is in line with adjacent frontals. Space appropriately from unit.</p>
--	--

Vogue 

BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

wren

Vogue 

BASE UNIT

Hob, 3 Drw & 3 Drw inc Dummy Assembly Guide

wren

wren