


BASE UNIT

972 L Corner Assembly Guide

wren

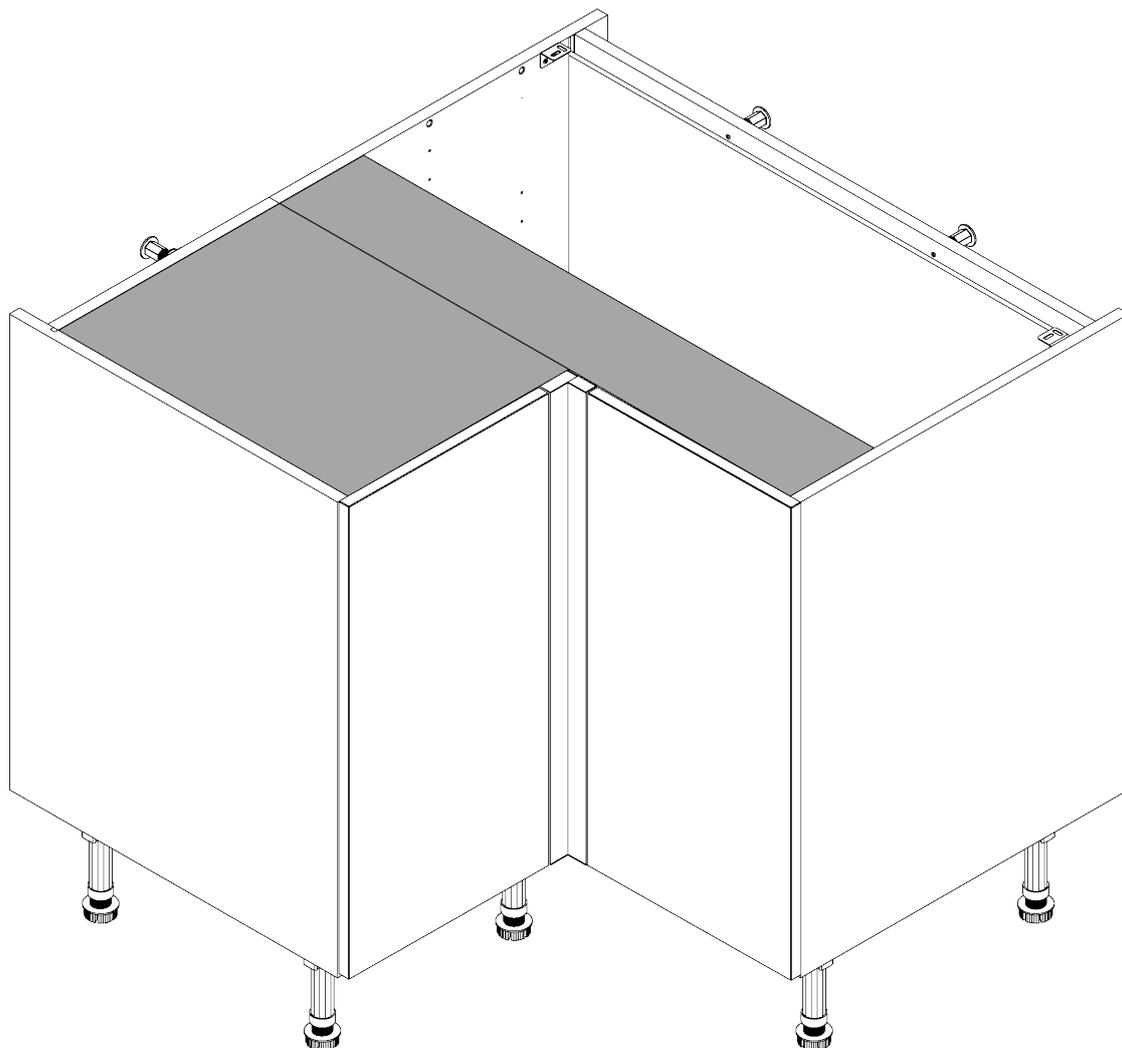

Always ensure the lava fixed shelf is at the top next to the lava rail.





BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED




Screws and fixings for attaching to walls and worktops are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall and worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.

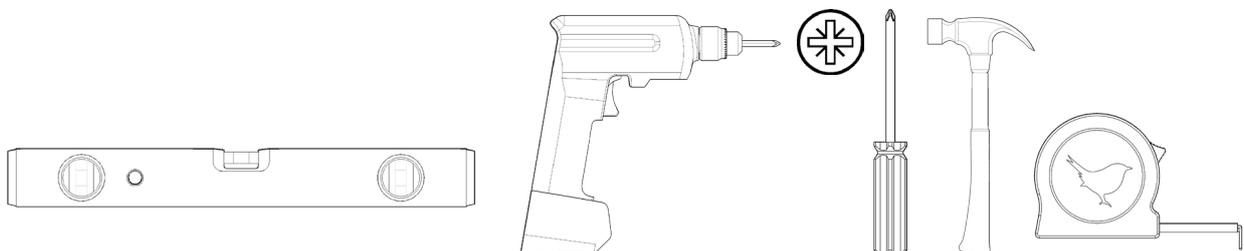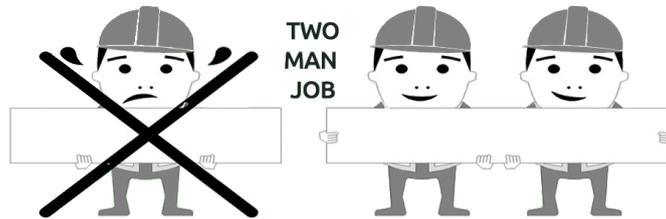




BASE UNIT

972 L Corner Assembly Guide

wren

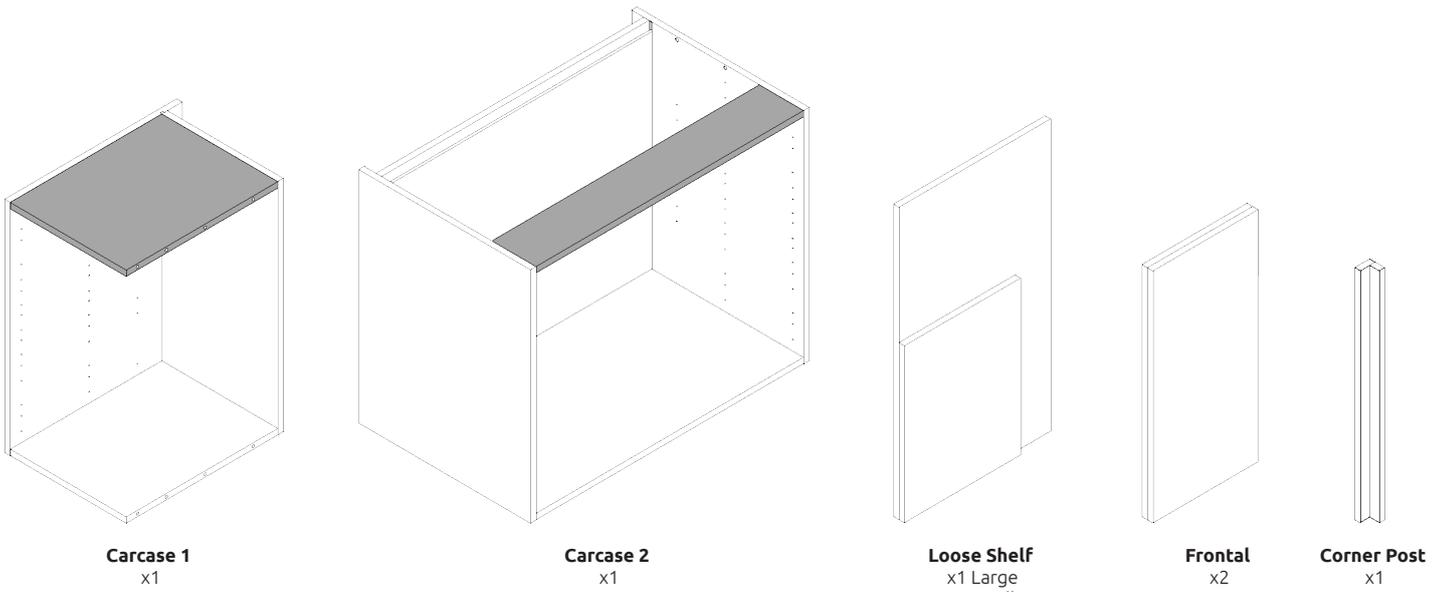

Frontals & Corner Post Packed Separatly

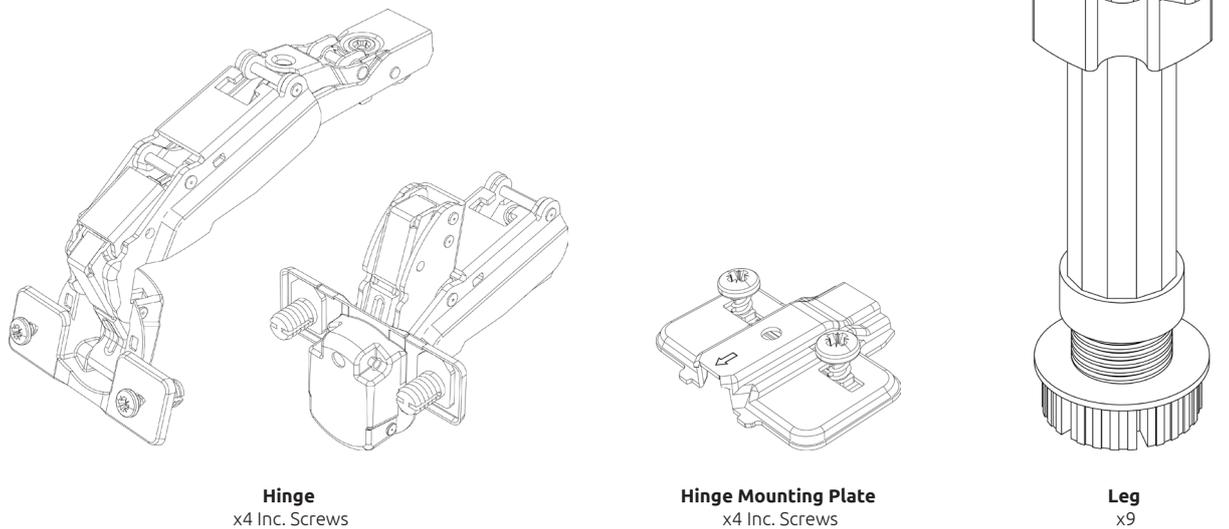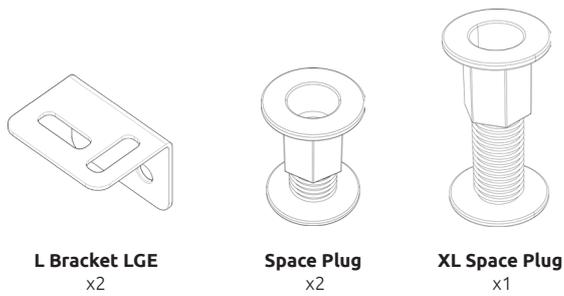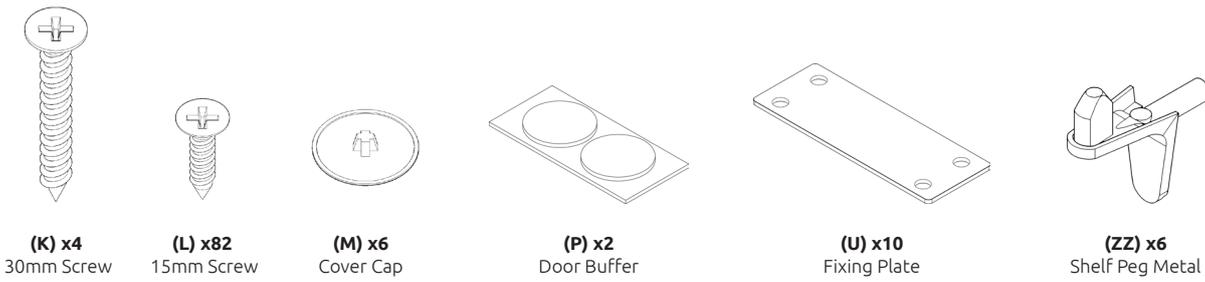


BASE UNIT

972 L Corner Assembly Guide

wren


Step 1.

Position units as shown and connect together using fixing plates. Attach 6 of the fixing plates (**U**) on to the units in the 3 positions (**1**), (**2**), (**3**) shown using 4 x 15mm screws (**L**) per plate. Be careful not to interfere with the leg positions.

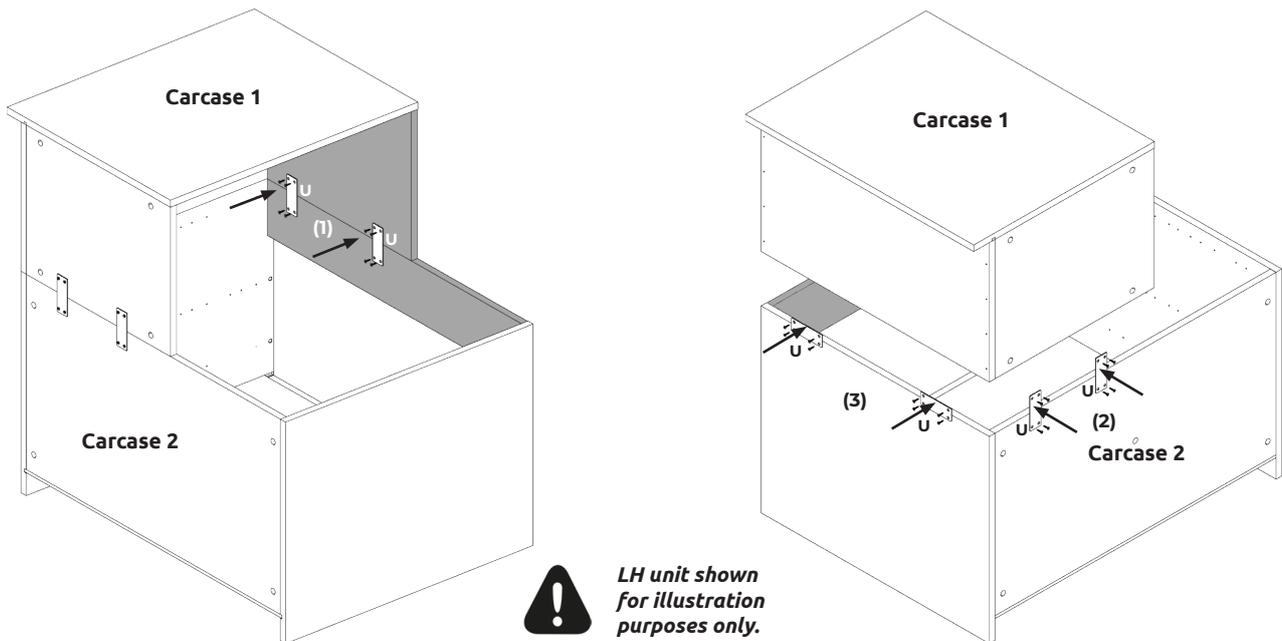

Step 2.

Position legs as shown below. Ensure legs are rotated to also provide support to the end panels (**B**). Once positioned, secure each of the legs into place with 4 x 15mm screws (**L**) per leg. Push leg firmly down into leg base. Adjust legs to **155mm** before turning carcasses upright. Once in situ level accordingly.

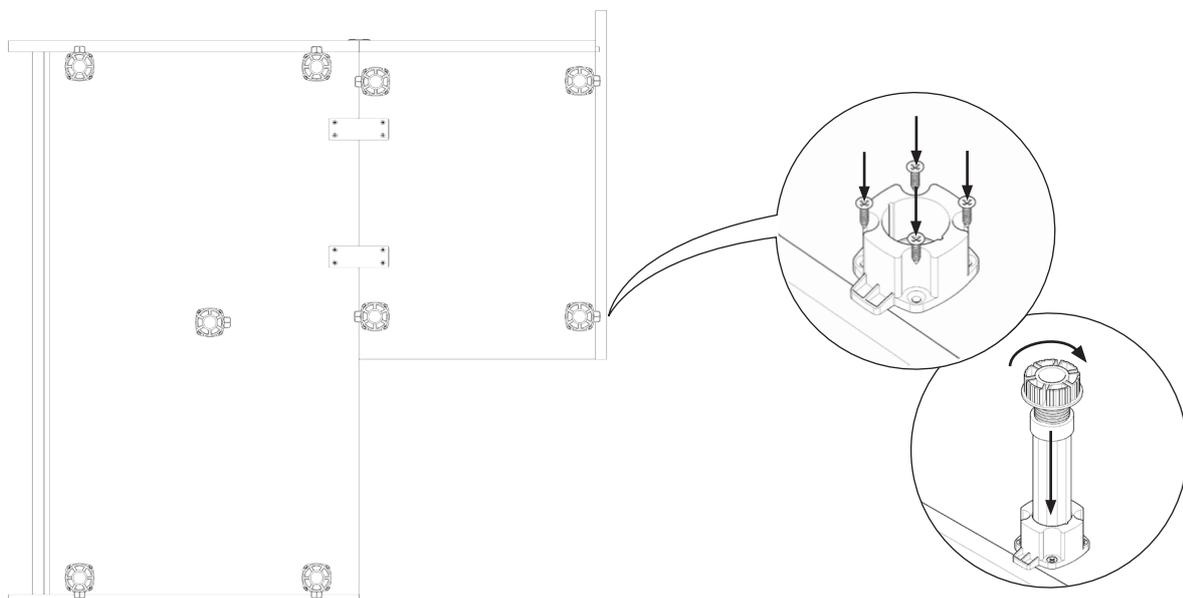


BASE UNIT

972 L Corner Assembly Guide

wren


Step 3.

Using 2 x fixing plates (**U**), fix loose shelves together using 4 x 15mm screws (**L**) per plate. Equally space fixing plates as shown. Once the loose shelves are attached together, slot the panels into the unit from the top, with fixing plates facing down.

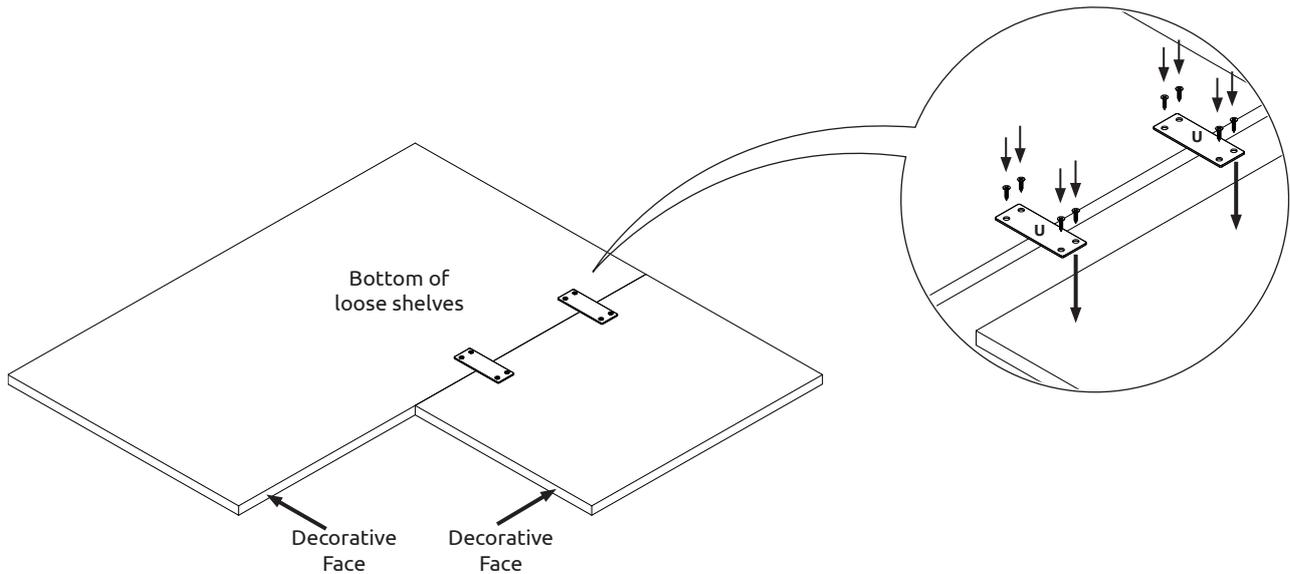

Step 4.

Attach hinge mounting plate on to the end panels as shown, using screws which are already positioned within the hinge plates. **Hinge side to be mounted in accordance to customers specific kitchen plan.**

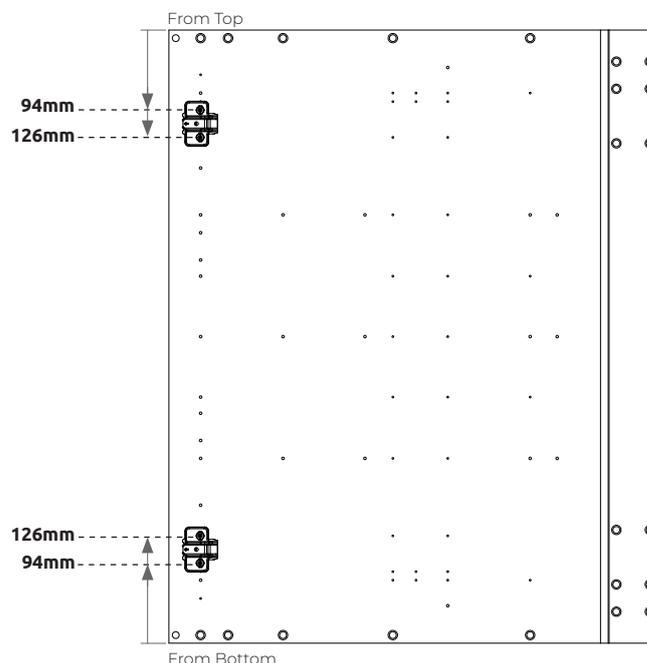


972 L Corner Assembly Guide

Step 5.


Secure unit to the wall using Space-Plugs. The 2 regular Space Plugs are to be used on the back of carcass 2 and the XL Space Plug at the rear of the carcass 1. Drill pilot holes through the back panel/back rail of the units into the wall. Unwind the Space Plugs until they contact both surfaces, insert and tighten an appropriately sized screw through the back of the units and the Space Plugs into the wall.

Screws not provided.

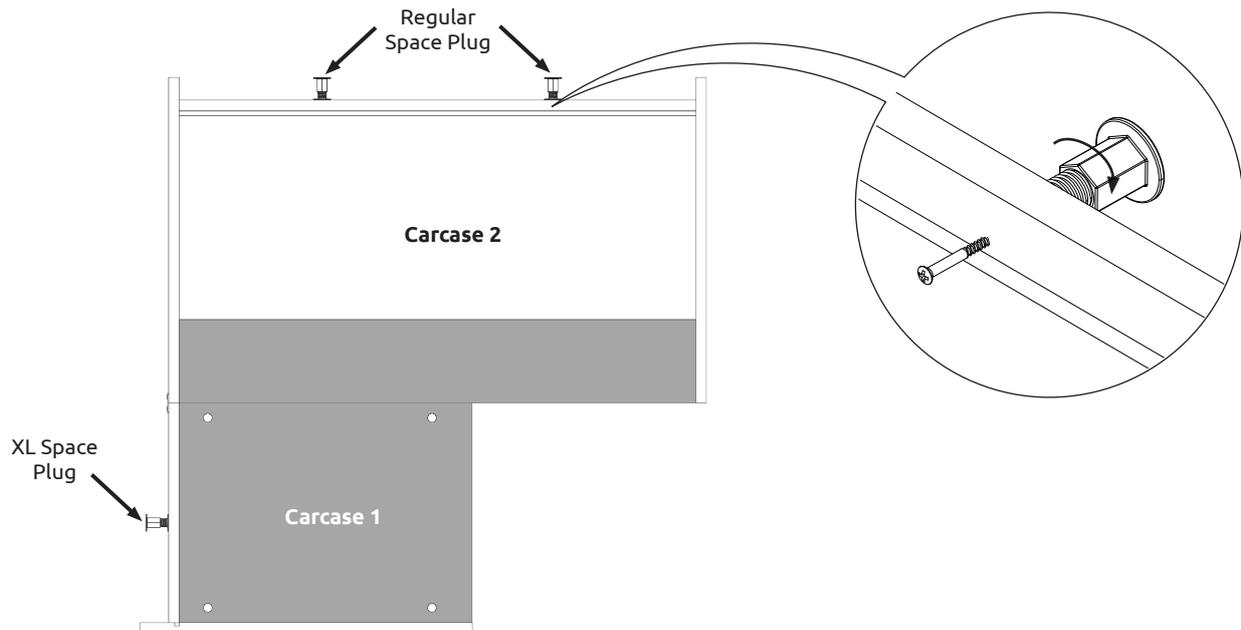


Step 6.

Screw into any side units using the 30mm screws (**K**) provided to secure to the units. Screw just to the rear of the hinge mounting plate and the top and bottom of both sides of the unit, place a cover cap (**M**) on the heads to conceal them.

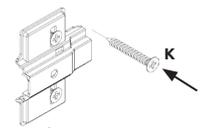

Step 7.


Use 2 x 15mm screws (**L**) to secure each L bracket LGE to the top rear of the larger unit on the left and right hand sides.

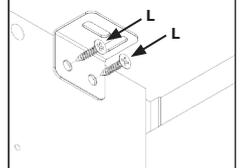

Step 8.


Screw up through the front rail, top fixed shelf and the L Brackets LGE into your worktop to secure it in place.

Screws not provided.

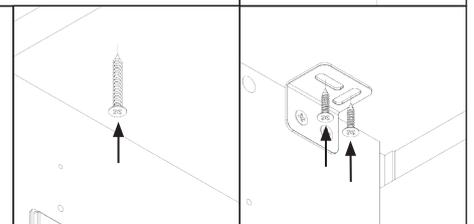

Step 9.




Align corner post to frontal. Equally space 2 fixing plates (**U**) to the back of frontal & corner post. Screw in place using 4 x 15mm screws (**L**) per fixing plate (**U**). Ensure a 4mm gap is maintained between frontal & post once fixed together.

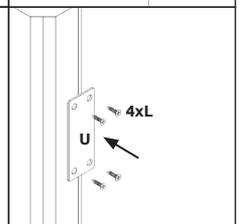


BASE UNIT

972 L Corner Assembly Guide

wren

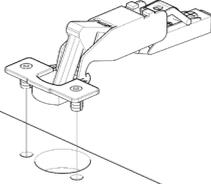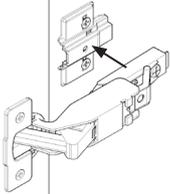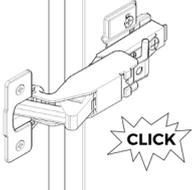	<p>Step 1. Insert hinges into frontal holes provided, secure with the 2 x screws and hinge dowels already located in the hinges.</p>	
	 <p>CLICK</p>	<p>Step 2. Attach the door to the unit, clip hinges onto the hinge plates and click to secure.</p>
<p>Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

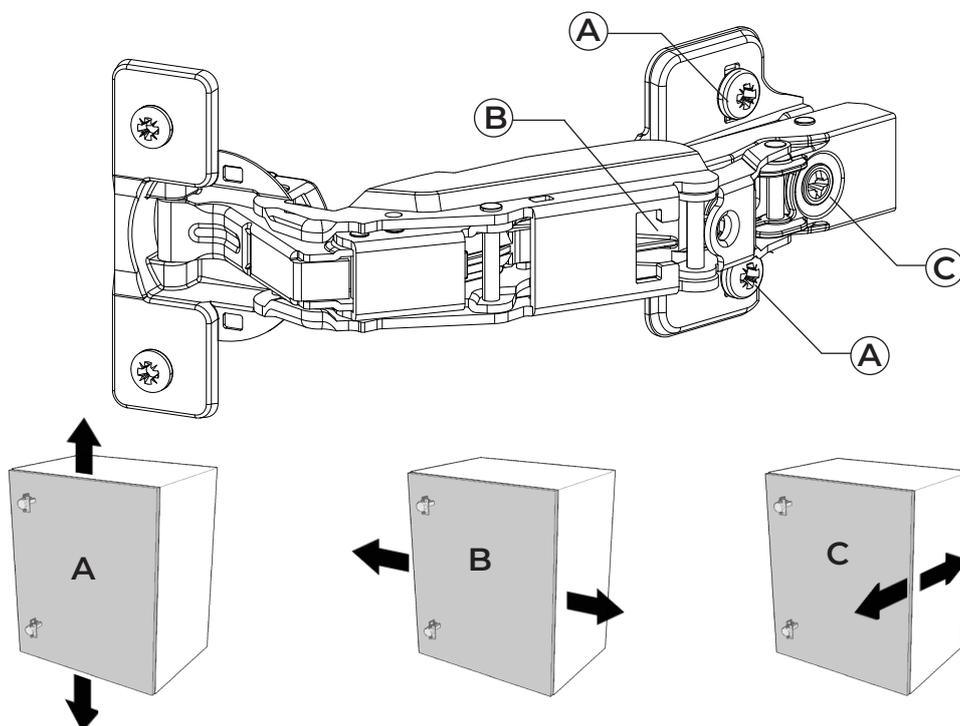

wren