


Vogue

wren

# BASE UNIT

600 BUOH Assembly Guide

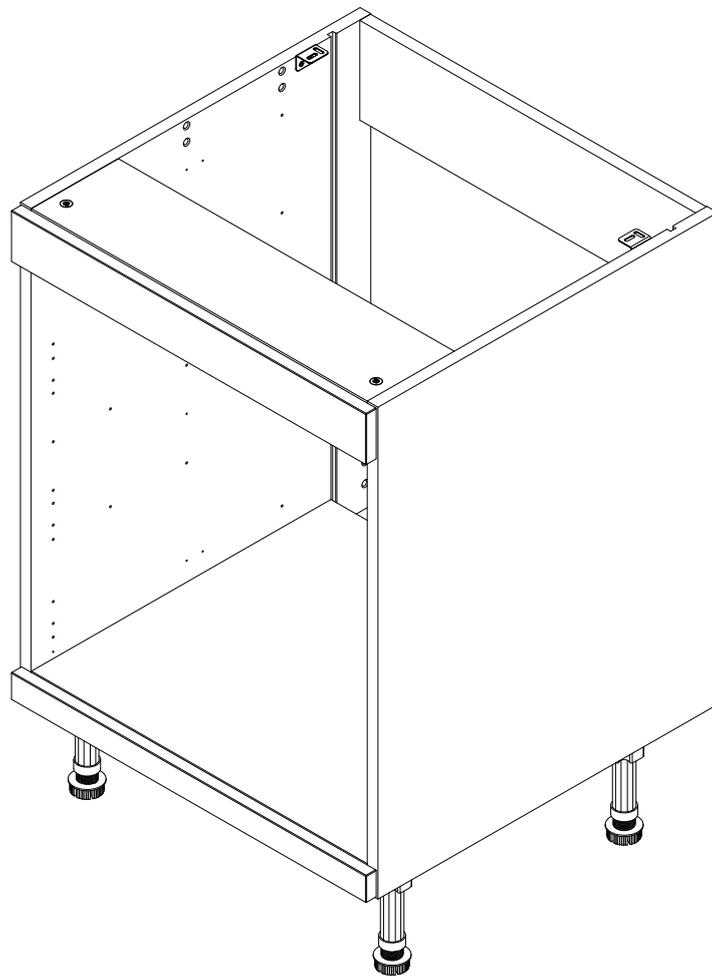

600 BUOH Base Unit

# BASE UNIT



## 600 BUOH Assembly Guide



### BEFORE YOU START


INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

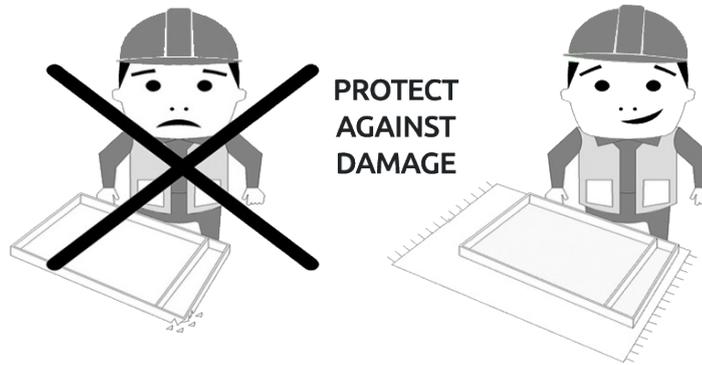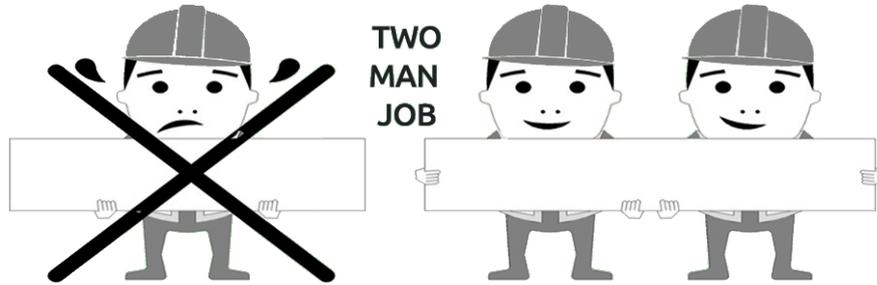


# BASE UNIT


## 600 BUOH Assembly Guide

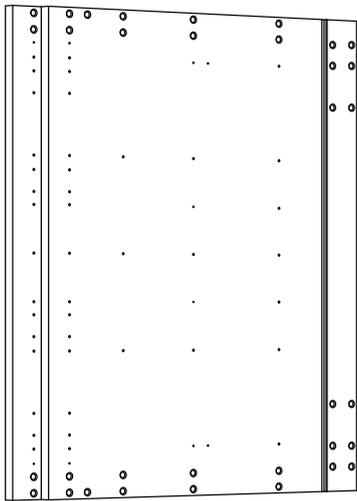


**Panel A**  
x2 End Panel

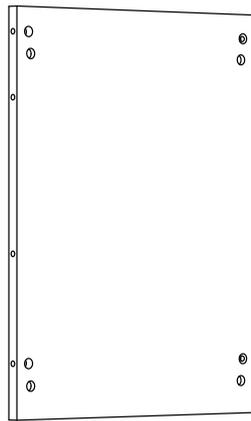

**Panel C**  
x1 Fixed Shelf

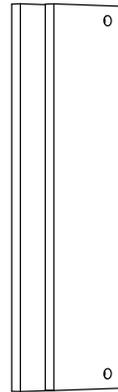

**Panel D**  
x2 Rail

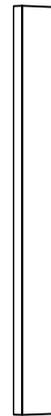


**Filler F**  
(Packed Separately)



**Filler G**  
(Packed Separately)

# BASE UNIT


## 600 BUOH Assembly Guide

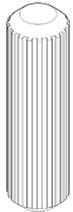


**(F) x16**  
Wooden Dowel




**(L) x26**  
15mm Screw

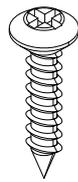


**(Q) x2**  
21mm Screw

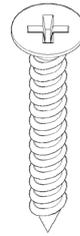


**(K) x4**  
30mm Screw

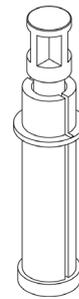


**(G) x12**  
Cam Dowel (Expanding)

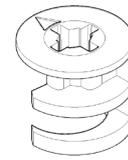


**(H) x12**  
Cam Lock

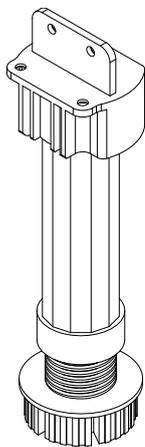


**Leg**

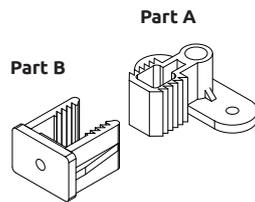


**Dummy Fixing Clip**  
x2 Inc Screws

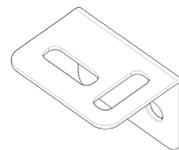

**L Bracket LGE**  
x2

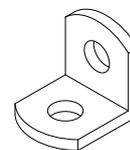

**L Bracket SML**  
x2

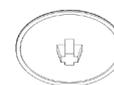


**(M) x4**  
Cover Cap

# BASE UNIT

## 600 BUOH Assembly Guide

### Step 1.

Seat dowels (F) into holes in both end panels (A) as shown.


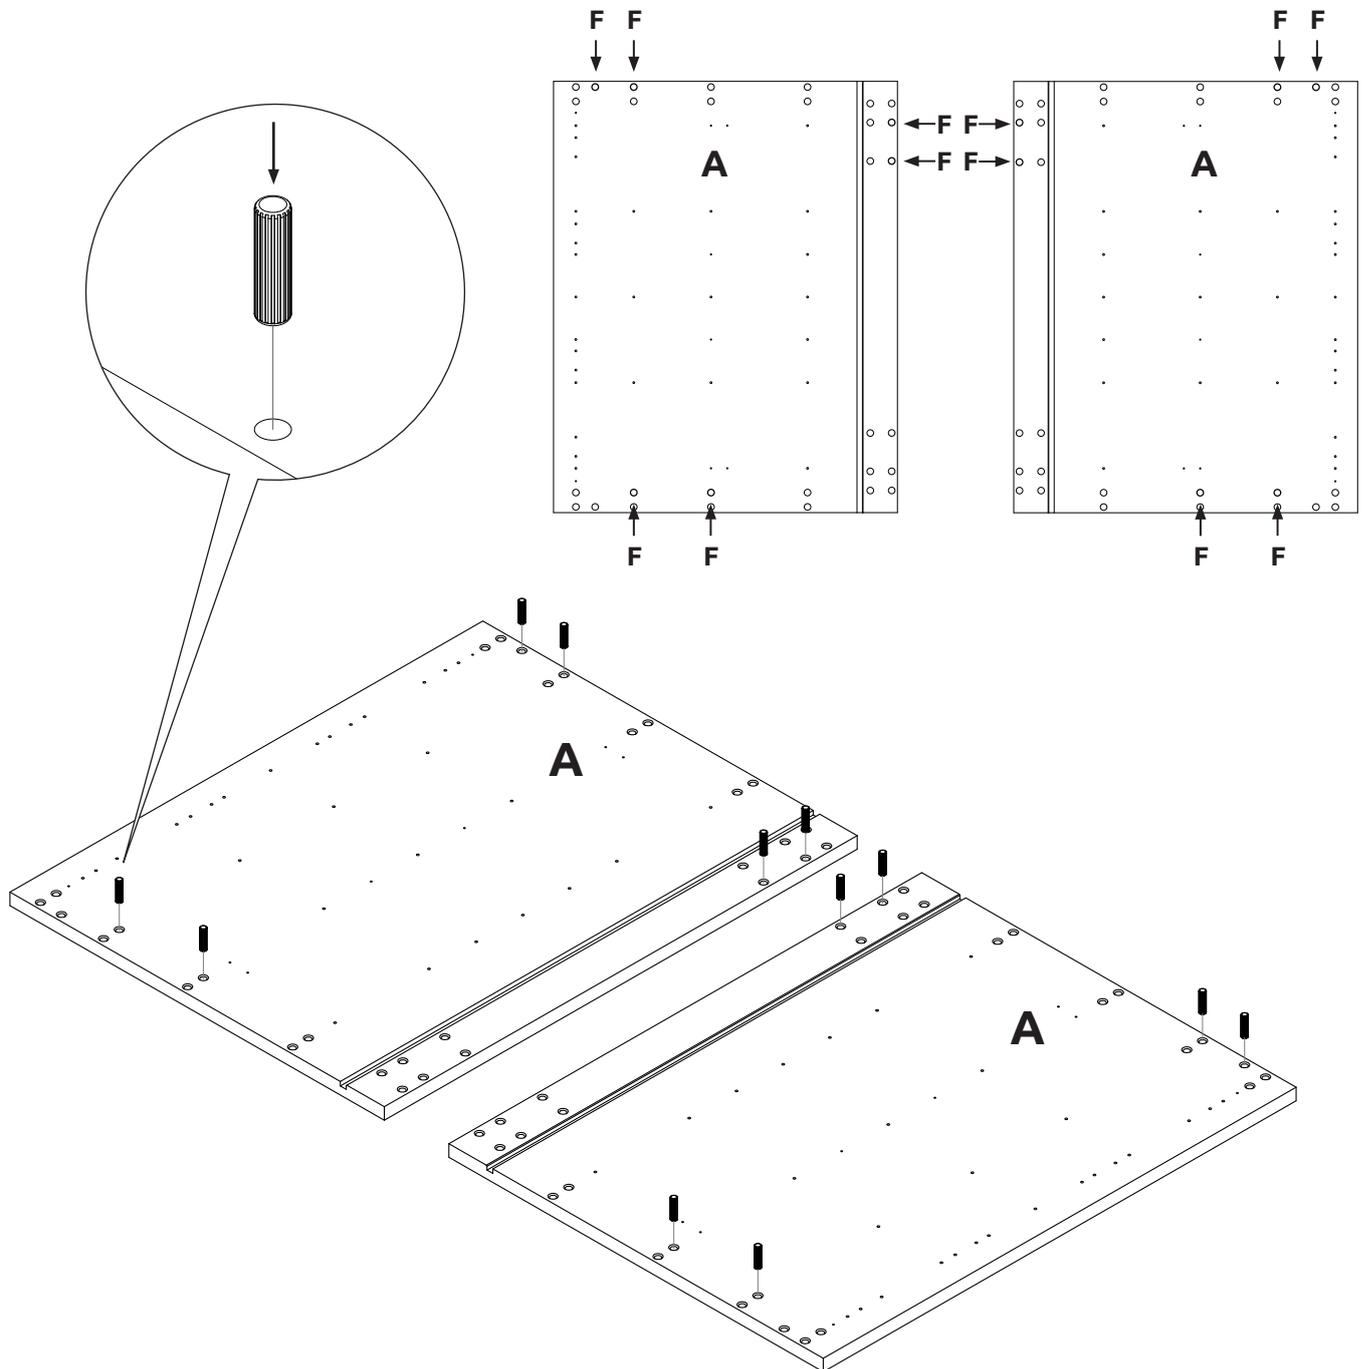


# BASE UNIT

## 600 BUOH Assembly Guide

### Step 2.

Seat expanding cam dowels (G) into holes in both end panels (A) as shown.

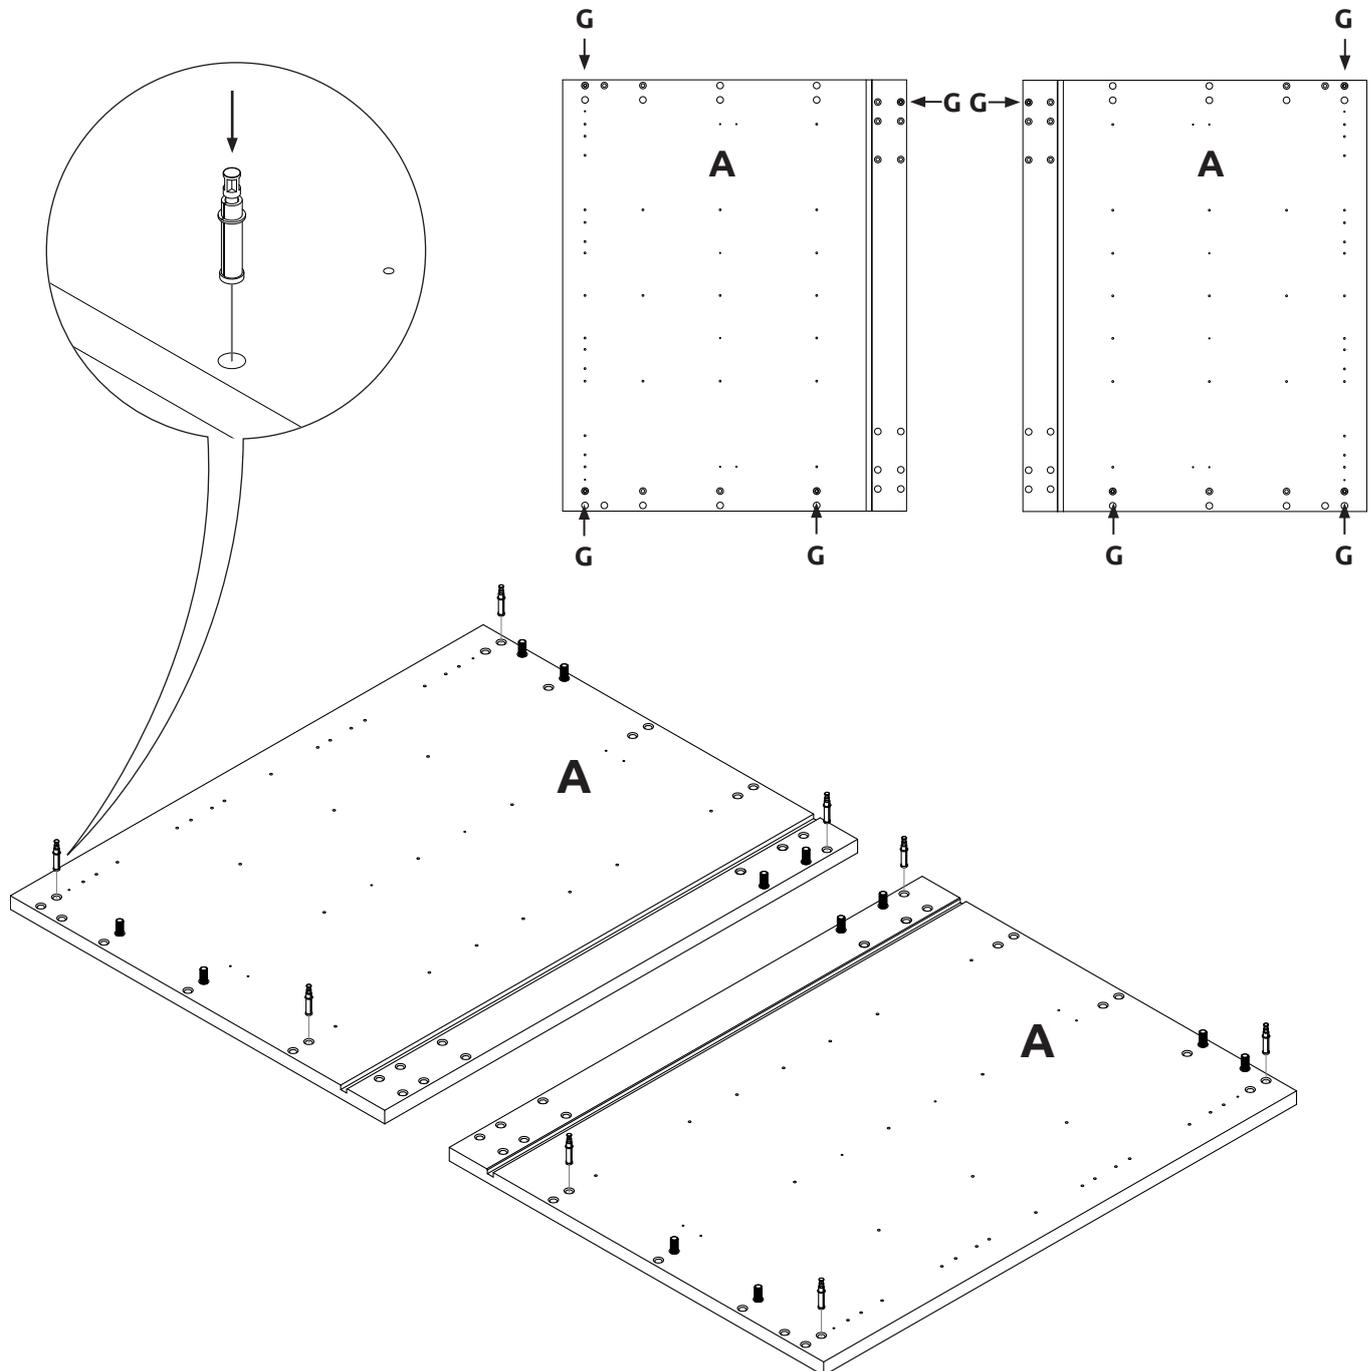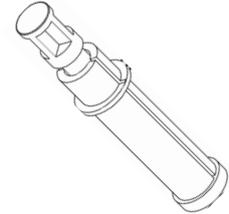


**BASE UNIT****600 BUOH Assembly Guide****Step 3.**

Attach panels **(C)** & **(D)** to panels **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.





All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

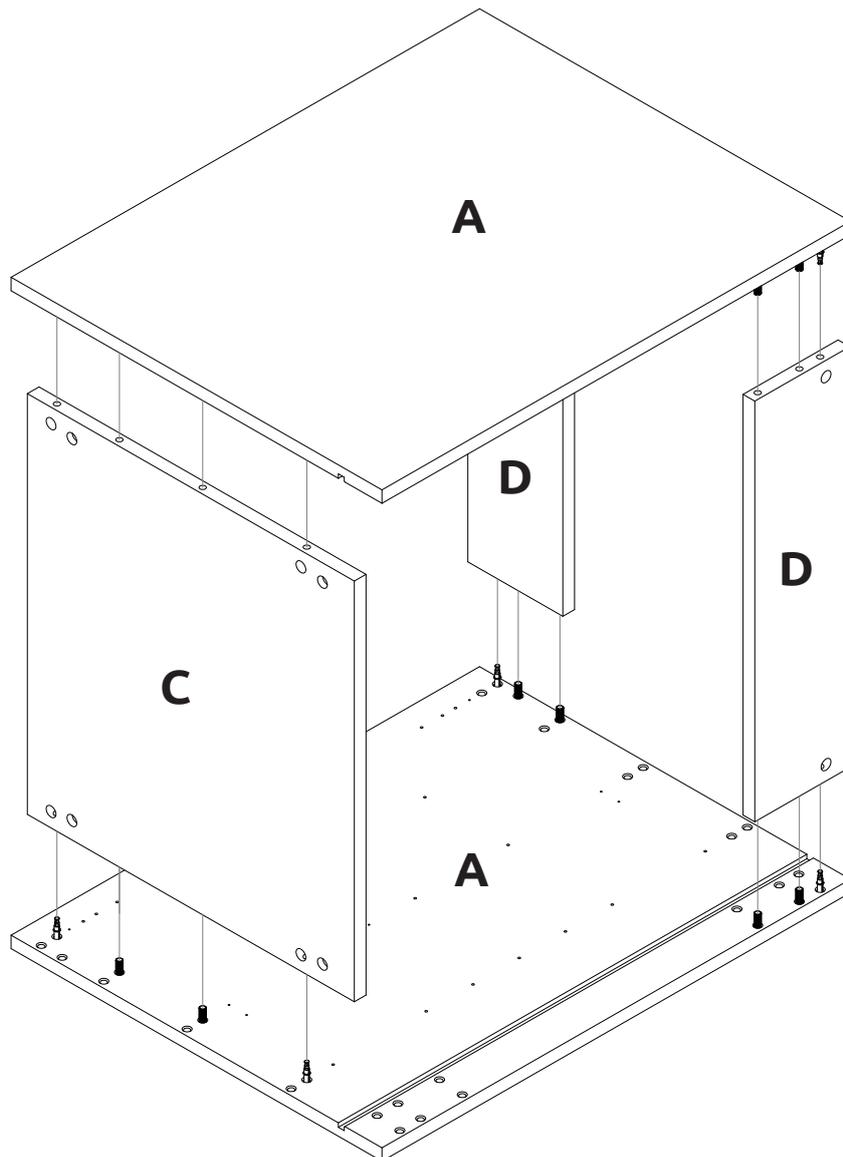

# BASE UNIT

## 600 BUOH Assembly Guide

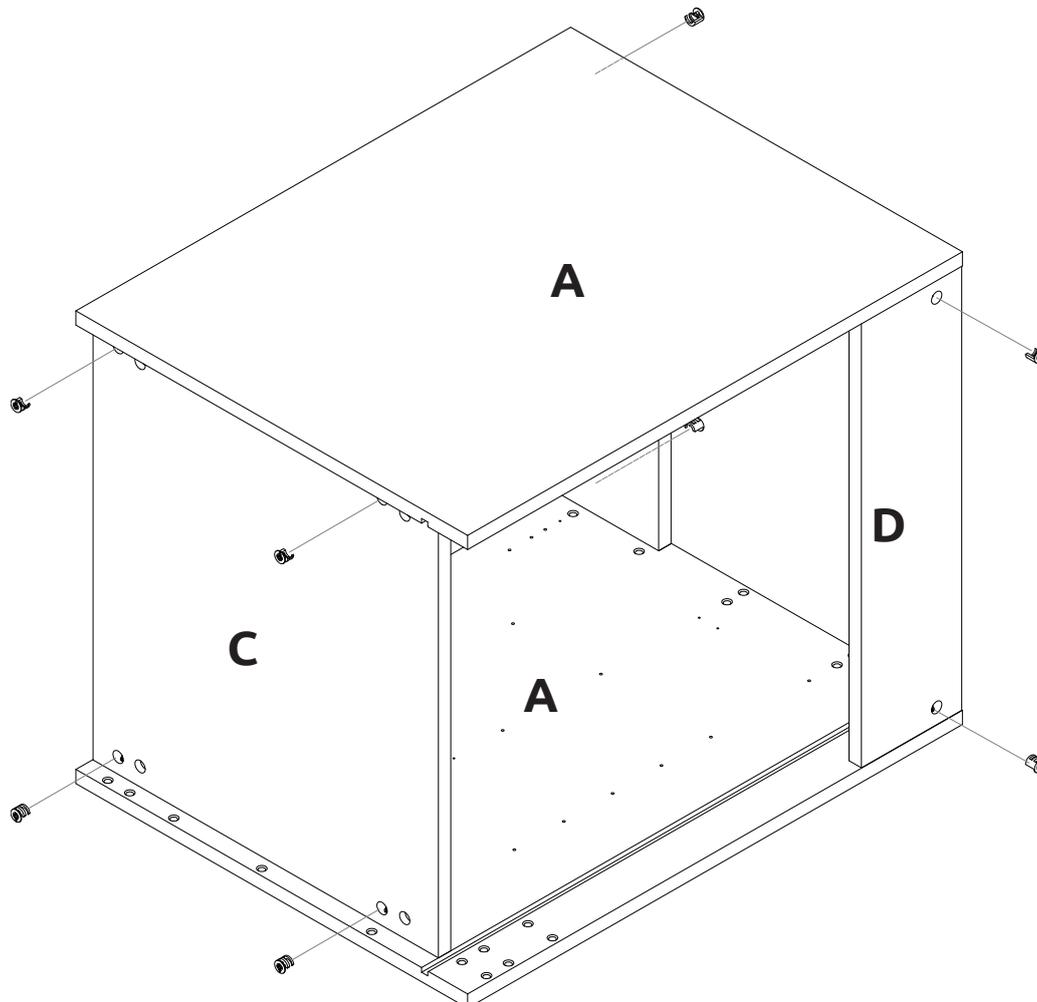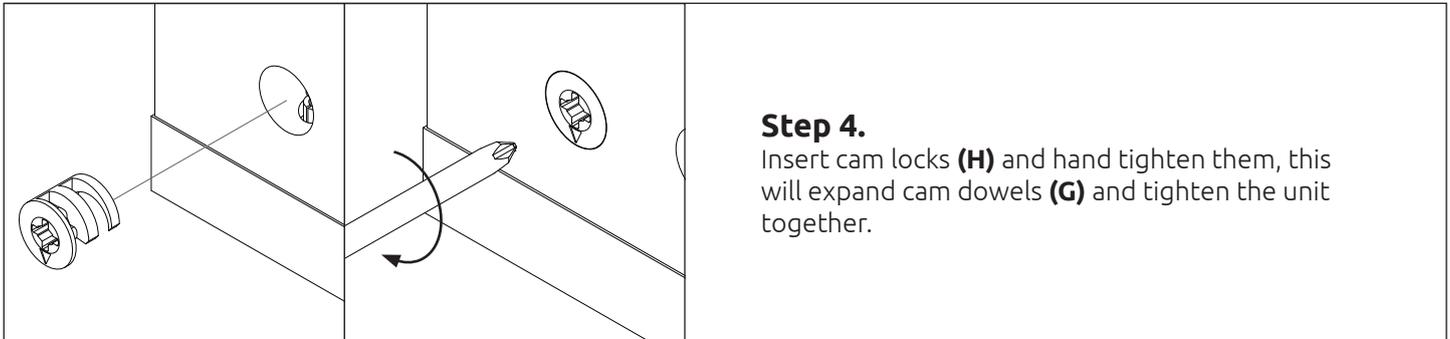



Do **not** use power tools with cam lock **(H)**

# BASE UNIT





## 600 BUOH Assembly Guide

### Step 5.

Position legs as shown on the diagram below. Once positioned, secure each of the legs into place with 4 x 15mm screws (L) per leg. Push leg firmly down into leg base. Adjust legs to **155mm** before turning unit upright accordingly.

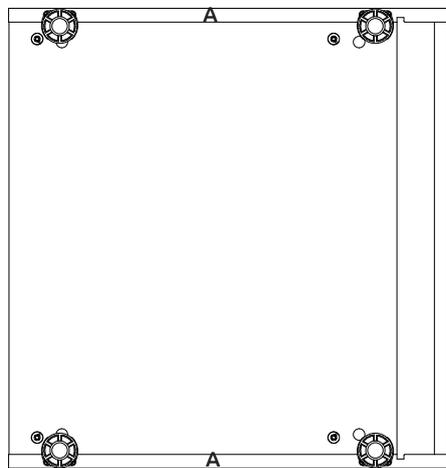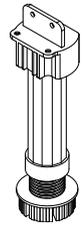


LEG POSITIONS - UNDERSIDE VIEW

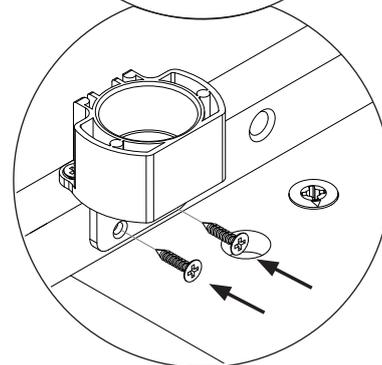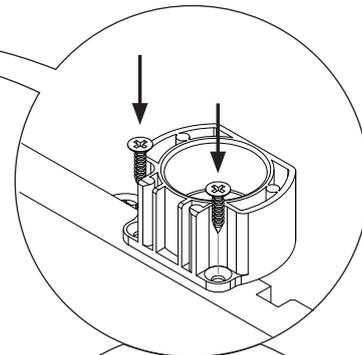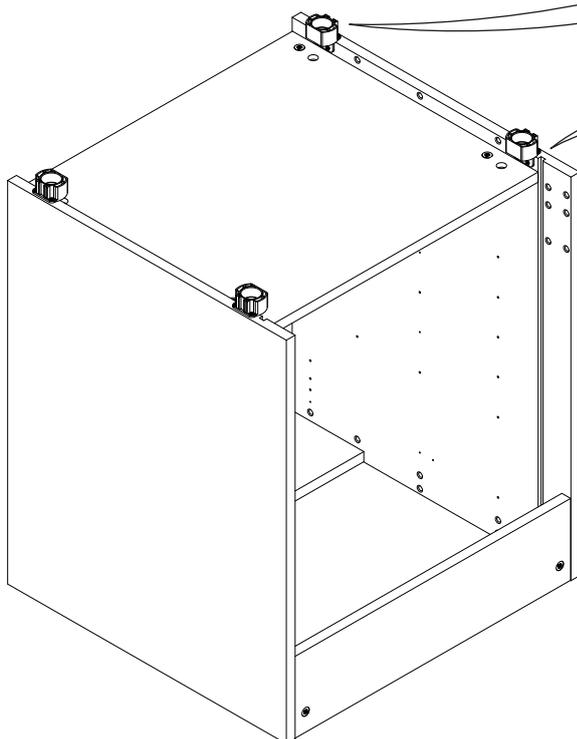
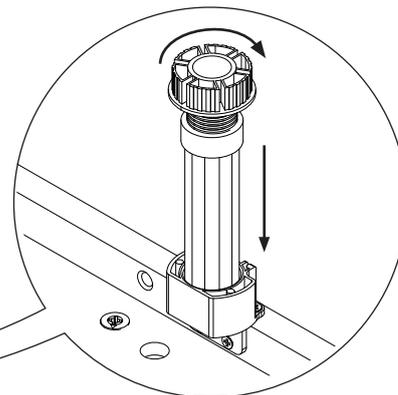


# BASE UNIT

## 600 BUOH Assembly Guide

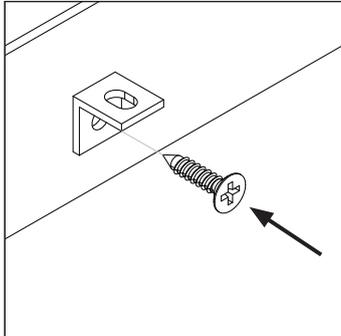

**Step 6.**  
Use 1 x 15mm screw **(L)** per L bracket SML to secure to inside face of filler **(G)**. Attached equally spaced as shown.

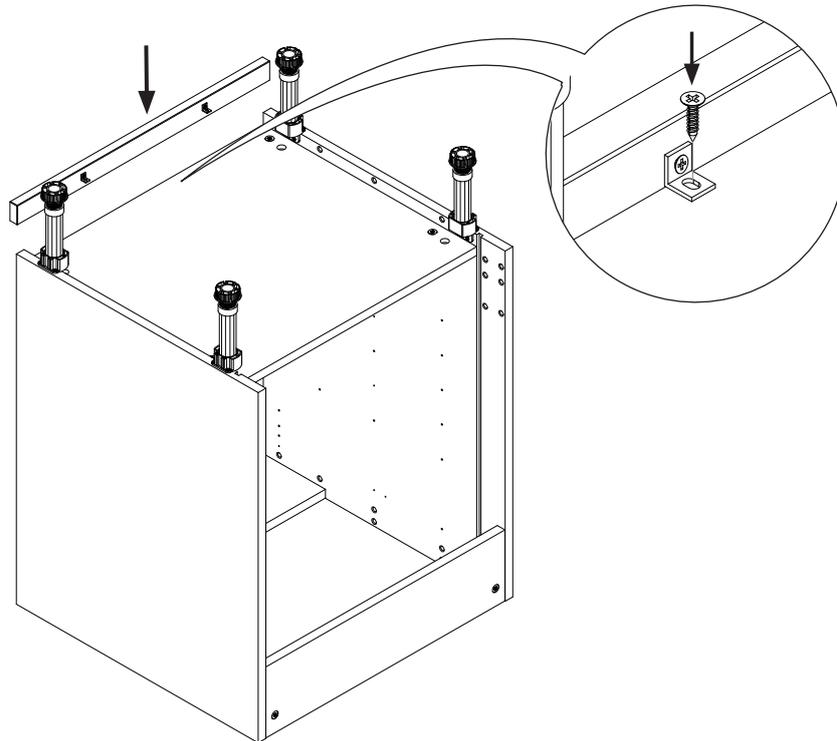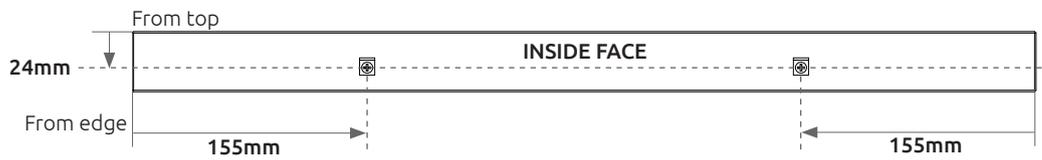


**Step 7.**  
Align filler **(G)** to unit, ensuring it is in line with adjacent frontals. With the unit upside down, secure filler **(G)** with 1 x 15mm screw **(L)** per L bracket SML to base as shown. Flip unit upright and move in situ.

# BASE UNIT

## 600 BUOH Assembly Guide




Screws for attaching to walls and worktops are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall and worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.

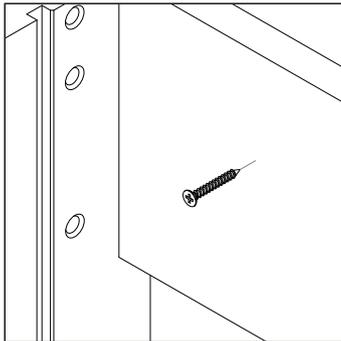


### Step 8.

Ensure the unit is positioned correctly and level. Screw through the back rail into the wall to secure the unit in place.

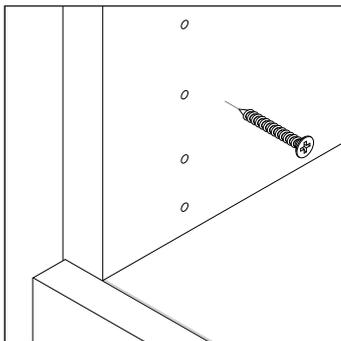



### Step 9.

Screw into any adjacent units using 30mm screws **(K)** provided to secure to unit. Screw at the top and bottom of both sides of the unit, place cover caps **(M)** on the heads to conceal them.

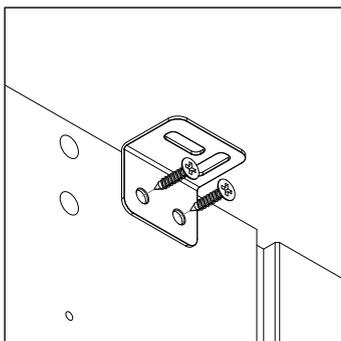

### Step 10.

Use 2 x 15mm screws **(L)** to secure each of the L brackets to the top rear of the unit on both sides.

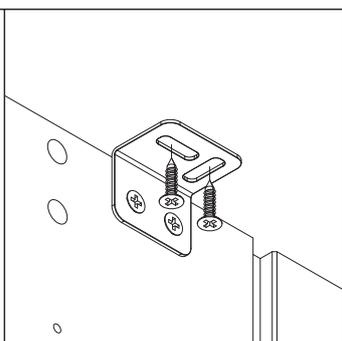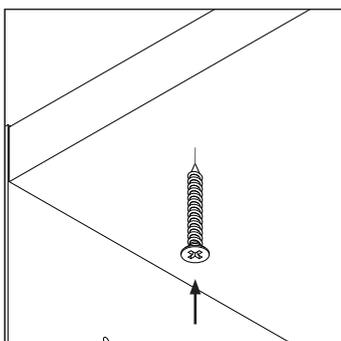


### Step 11.


Screw up through the front rail and the L brackets into the worktop to secure it in place.


# BASE UNIT

## 600 BUOH Assembly Guide

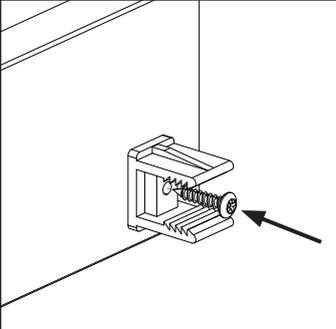


**Step 12.**  
Secure dummy fixing clips (**Parts B**) onto the inside face at the bottom of filler (**F**), 56mm from the top face and 26mm from the edges to the screw hole of (**Parts B**), spaced evenly either side as shown, using 1 x 21mm screw (**Q**) per dummy fixing clip (**Part B**). Align so filler is in line with adjacent frontals.

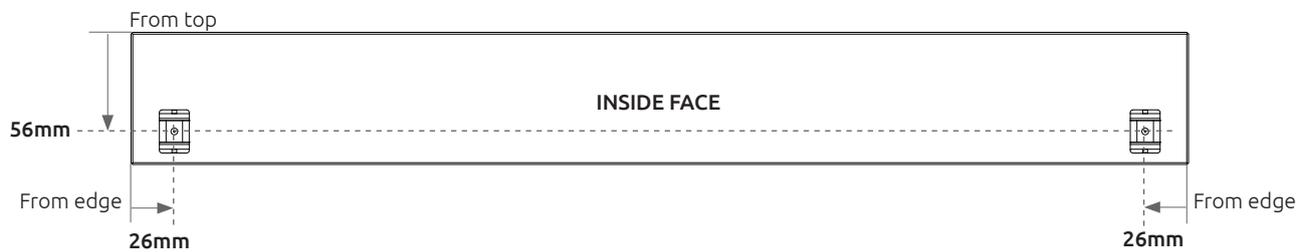

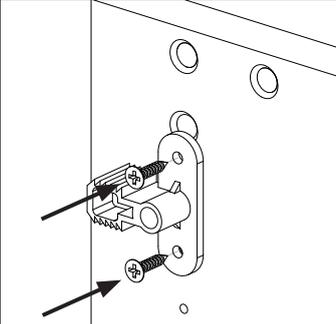

**Step 13.**  
Secure dummy fixing clips (**Parts A**) onto both end panels (**A**) using 2 x 15mm screws (**L**) each, as shown. The bottom screw hole is to be positioned 74mm from the top of the panel using pre drilled hole.

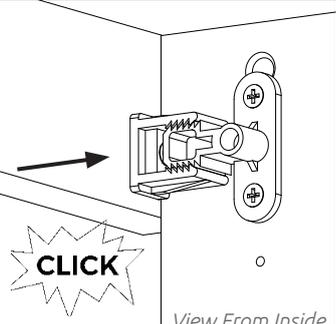

**CLICK**

View From Inside

