


*Vogue*

**wren**

# BASE UNIT

## 800, 3 Drawer Assembly Guide

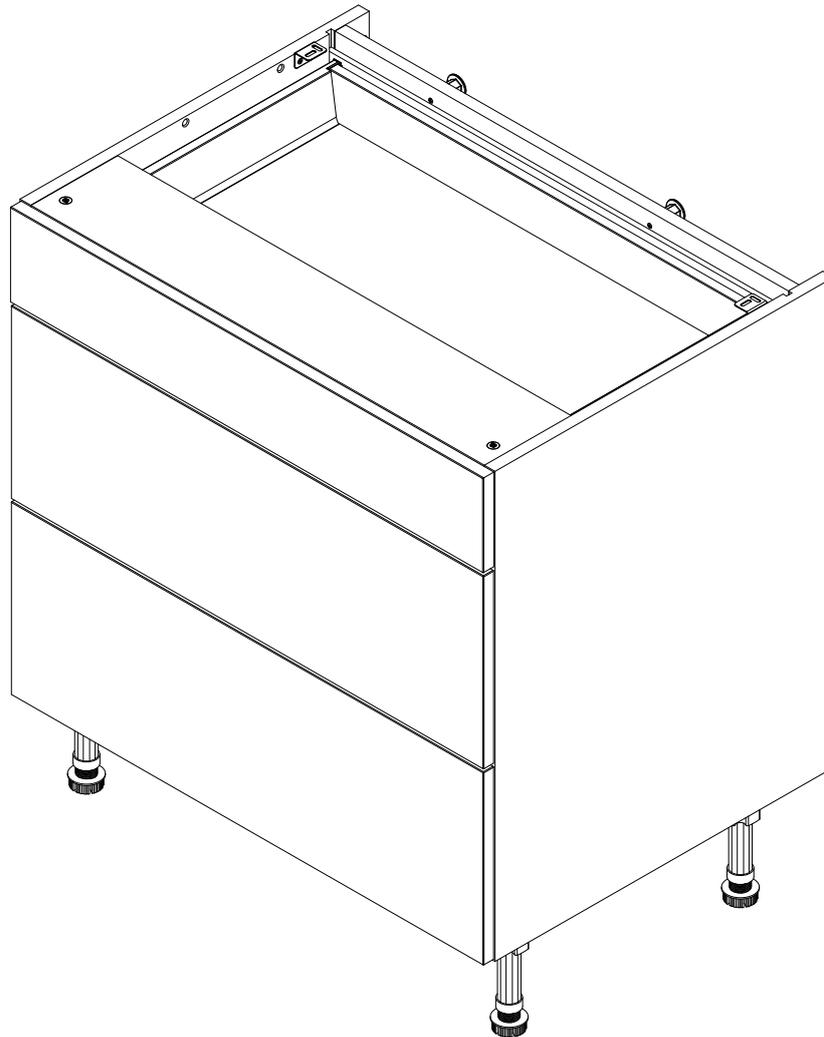

**800, 3 Drawer Base Unit**

# BASE UNIT


## 800, 3 Drawer Assembly Guide



### BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.



THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

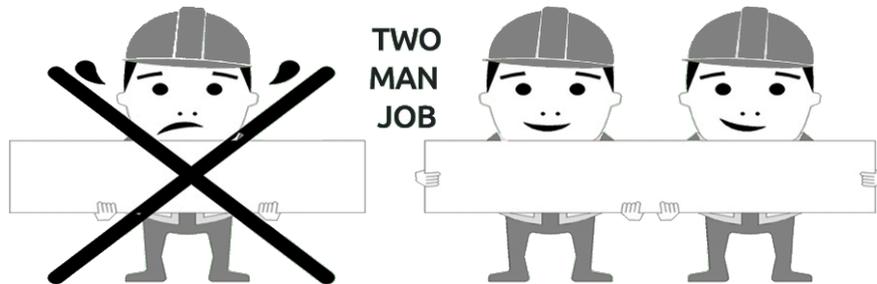



# BASE UNIT

## 800, 3 Drawer Assembly Guide

### Standard Drawer (Packed Separately) (1 Pack Supplied)

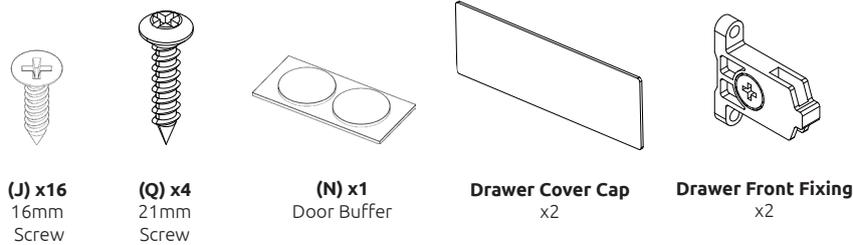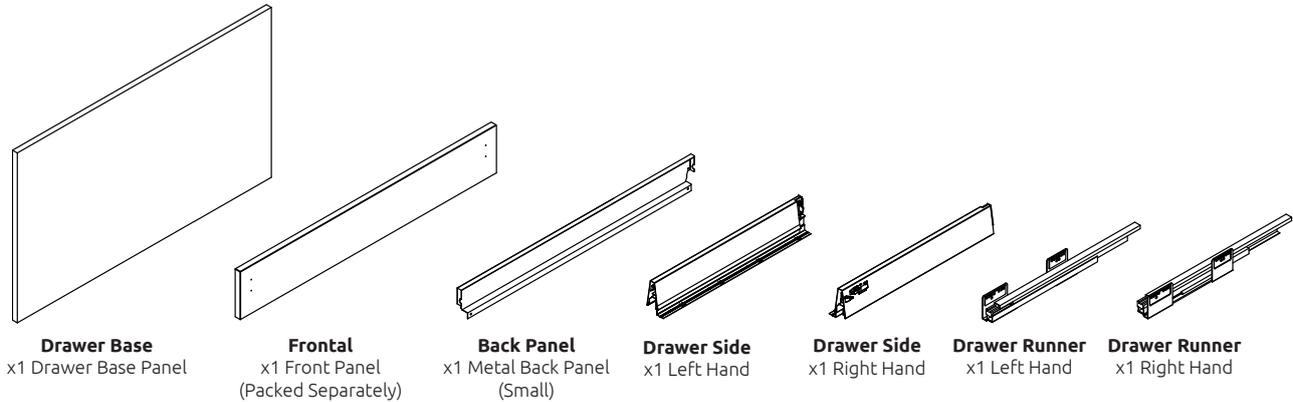

### Deep Drawer (Packed Separately) (2 Packs Supplied)

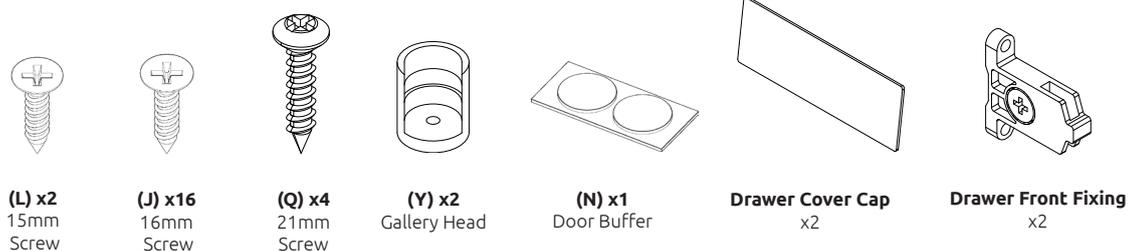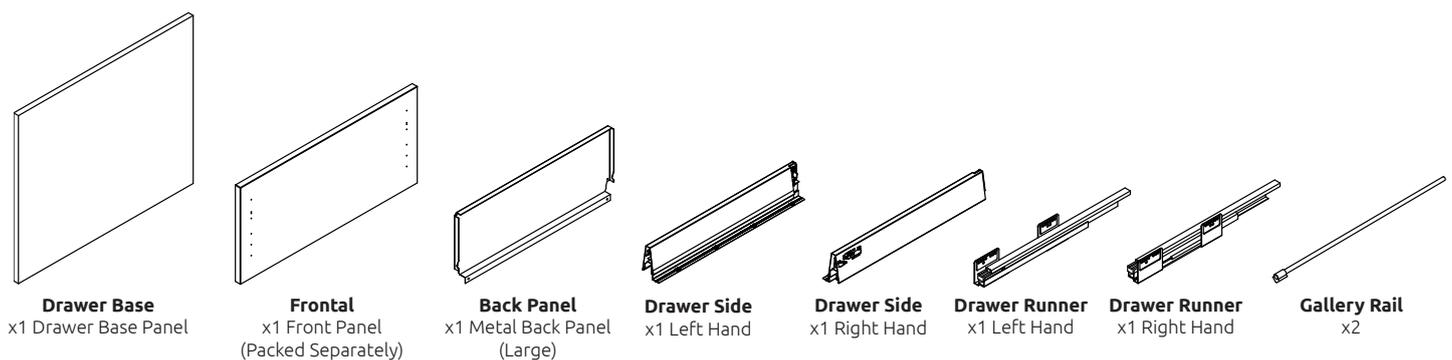



# BASE UNIT

## 800, 3 Drawer Assembly Guide

### STANDARD DRAWER ASSEMBLY


#### Step 1.

Seat the edge of drawer base tight into the corner of the drawer side, as shown. The decorative face of drawer base to be positioned at the front of the drawer. Secure drawer base to drawer side using 4 x 16mm screws (**J**) in holes provided. Repeat on both sides of the drawer.

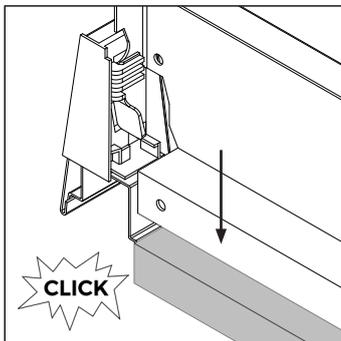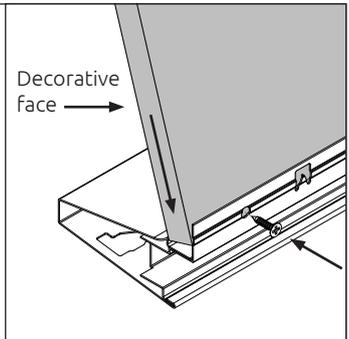



#### Step 2.

Clip metal back panel into the rear of the drawer sides and secure in position using 2 x 16mm screws (**J**) into drawer base in holes provided.

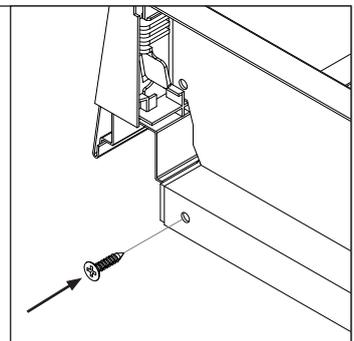

#### Step 3.

Secure **drawer side fixing clips** using 2 x 21mm screws (**Q**) in pilot holes provided on the frontal, as shown. Attach drawer frontal to drawer box by pushing drawer side fixing clips into drawer sides.

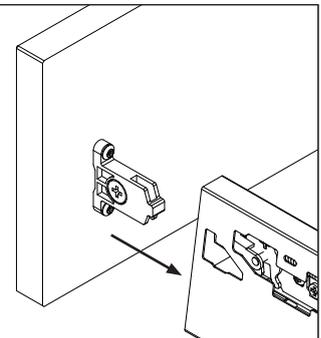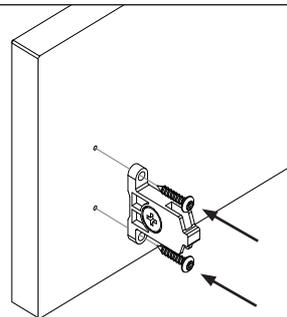



# BASE UNIT

## 800, 3 Drawer Assembly Guide

### DEEP DRAWER ASSEMBLY


#### Step 1.

Seat the edge of drawer base tight into the corner of the drawer side, as shown. The decorative face of drawer base to be positioned at the front of the drawer. Secure drawer base to drawer side using 4 x 16mm drawer runner screws (J) in holes provided. Repeat on both sides of the drawer.

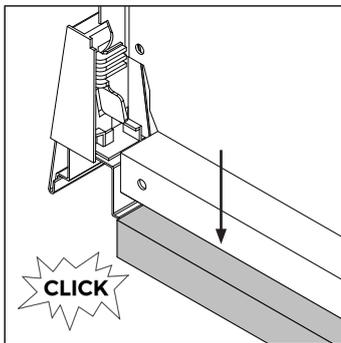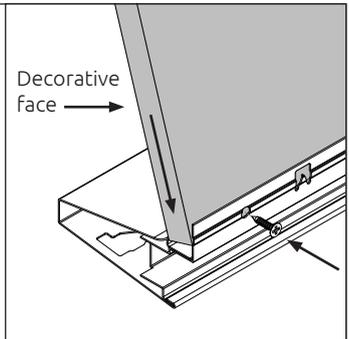



#### Step 2.

Clip metal back panel into the rear of the drawer sides and secure in position using 2 x 16mm screws (J) to drawer base in holes provided.

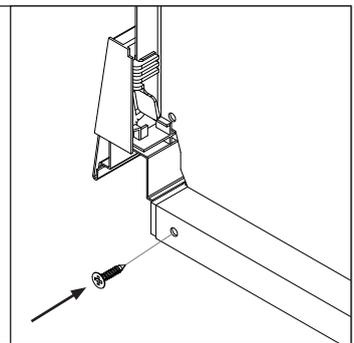


#### Step 3.

Secure **drawer side fixing clips** using 2 x 21mm screws (Q) and gallery head (Y) using 1 x 15mm screw (L) in pilot holes provided as shown. Attach drawer frontal to drawer box by pushing drawer side fixing clips into drawer sides.

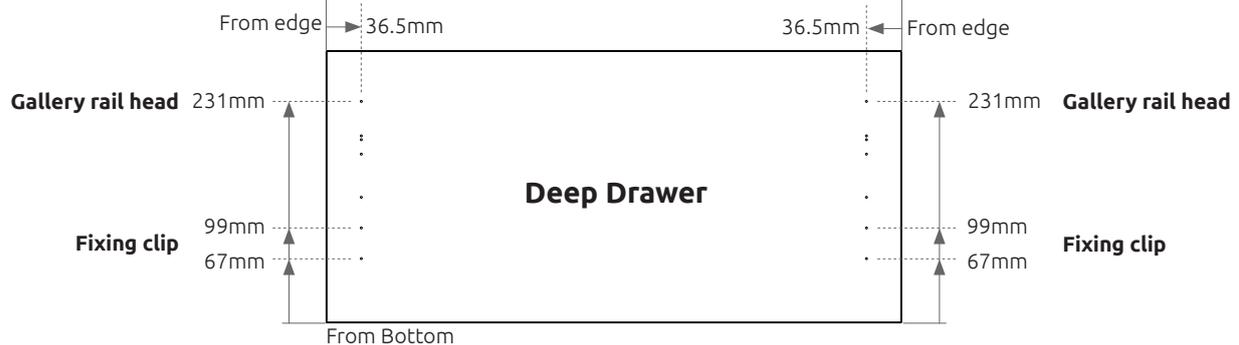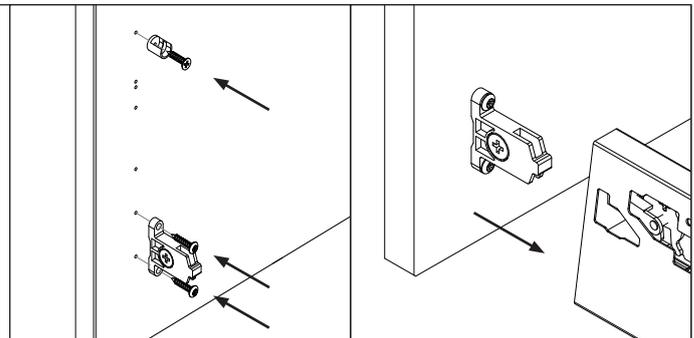

#### Step 5.

Fit gallery rail into the top corners of metal back panel. Locate front end of the gallery rail into the opening of the gallery head, which is secured to the frontal as shown.

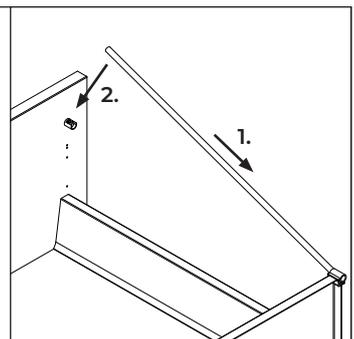

# BASE UNIT

## 800, 3 Drawer Assembly Guide


### DRAWER ADJUSTMENT

#### Left and Right Adjustment

Turn screw shown to **adjust** drawer frontal **left & right**.




Drawer adjustments to be done on both sides.

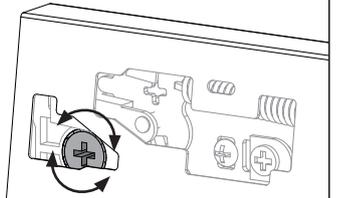


#### Up & Down Adjustment

Turn screw shown to **adjust** drawer frontal **up & down**.

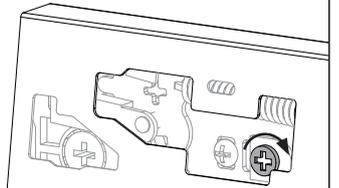


#### Lock Position

Tighten screw shown to lock in position.

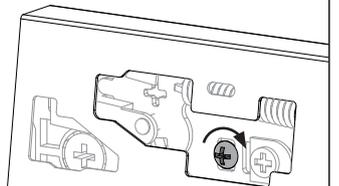


#### Remove Frontal

To remove the frontal, release the fixing clip by turning the locking plate screw shown.

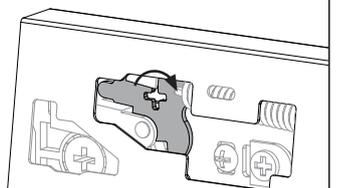


### Step 6.

Fit drawer cover caps over drawer side adjustment.

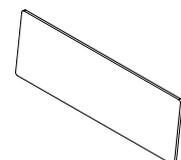


# BASE UNIT


## 800, 3 Drawer Assembly Guide

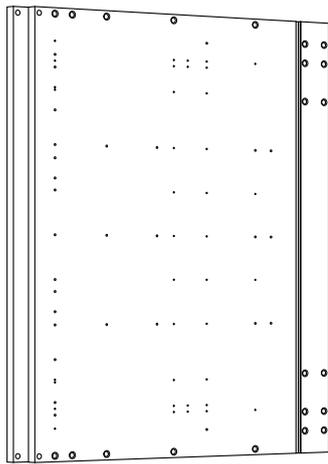

**Panel A**  
x2 End Panel

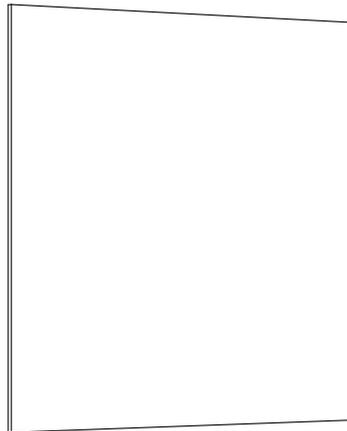


**Panel B**  
x1 Back Panel

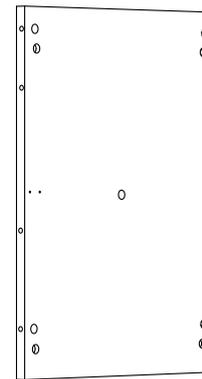

**Panel C**  
x2 Fixed Shelf



**Panel D**  
x2 Rail



**(F) x12**  
Wooden Dowel




**(L) x30**  
15mm Screw




**(K) x7**  
30mm Screw




**(G) x8**  
Cam Dowel (Expanding)

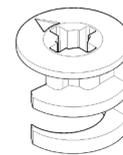


**(H) x8**  
Cam Lock

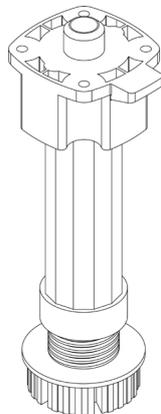


**Leg**  
x5

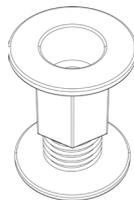

**Space Plug**  
x2

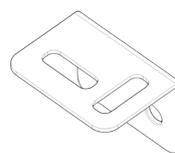

**L Bracket LGE**  
x2



**(M) x4**  
Cover Cap


# BASE UNIT

## 800, 3 Drawer Assembly Guide


**Step 1.**

To attach drawer runner screw into end panels **(A)** using 2 x 16mm screws **(J)** (provided with drawer box pack) per drawer rail, into holes provided, as shown.  
Repeat **Step 1** for the other side of end panel **(A)**.

**Drawer runner bracket screw position**

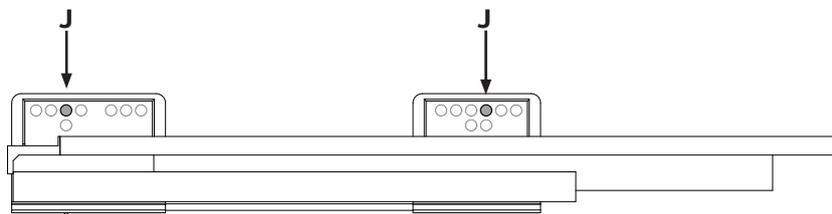

**Drawer runners position**

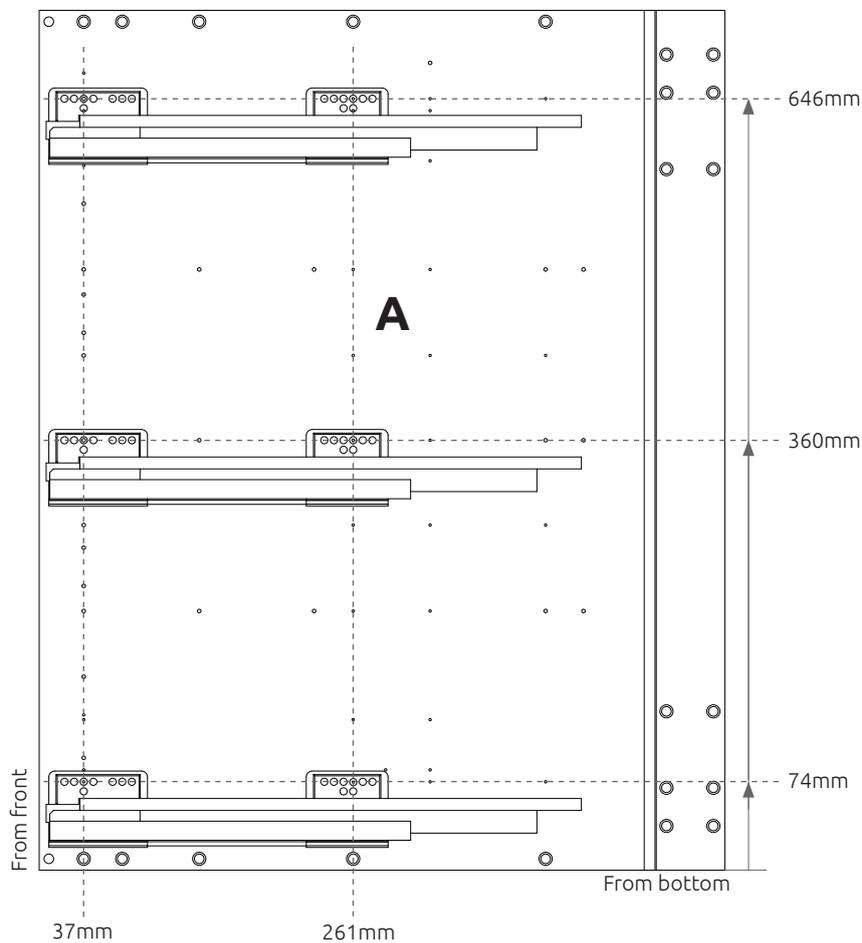


# BASE UNIT

## 800, 3 Drawer Assembly Guide

### Step 2.

Seat dowels (F) into holes in both end panels (A) as shown.

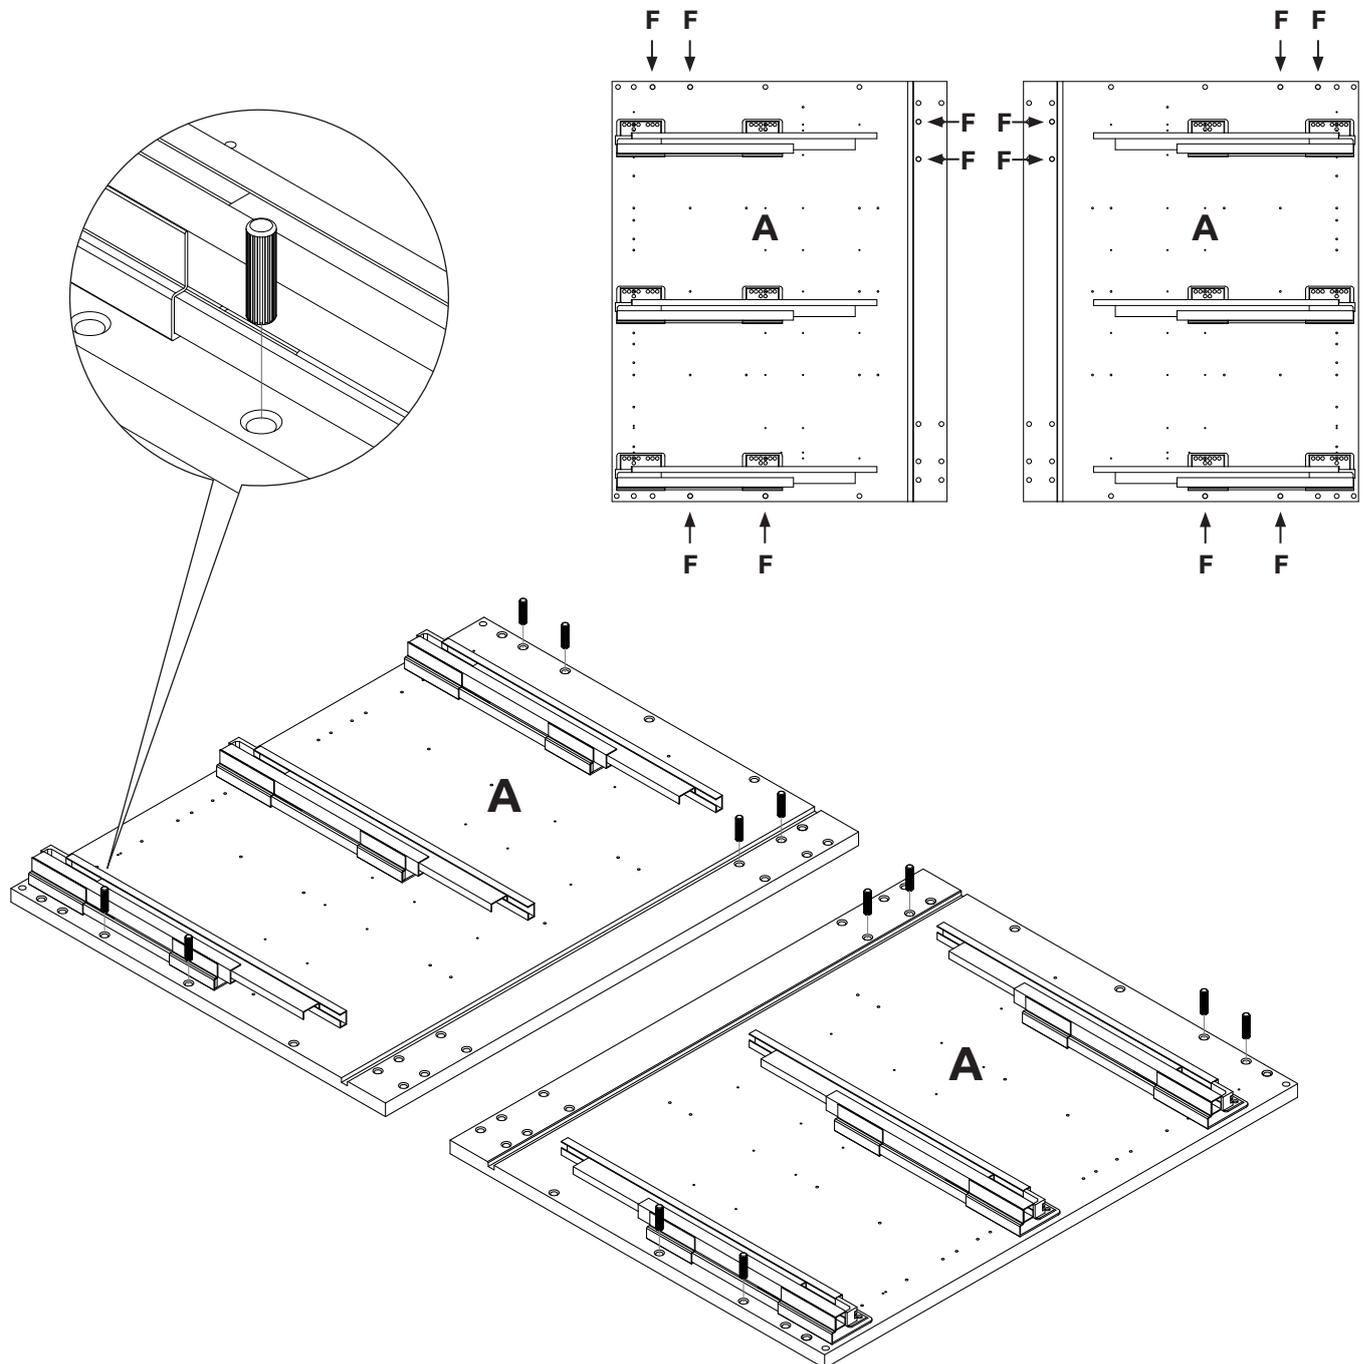


# BASE UNIT

## 800, 3 Drawer Assembly Guide

### Step 3.

Seat expanding cam dowels (G) into holes in both end panels (A) as shown.

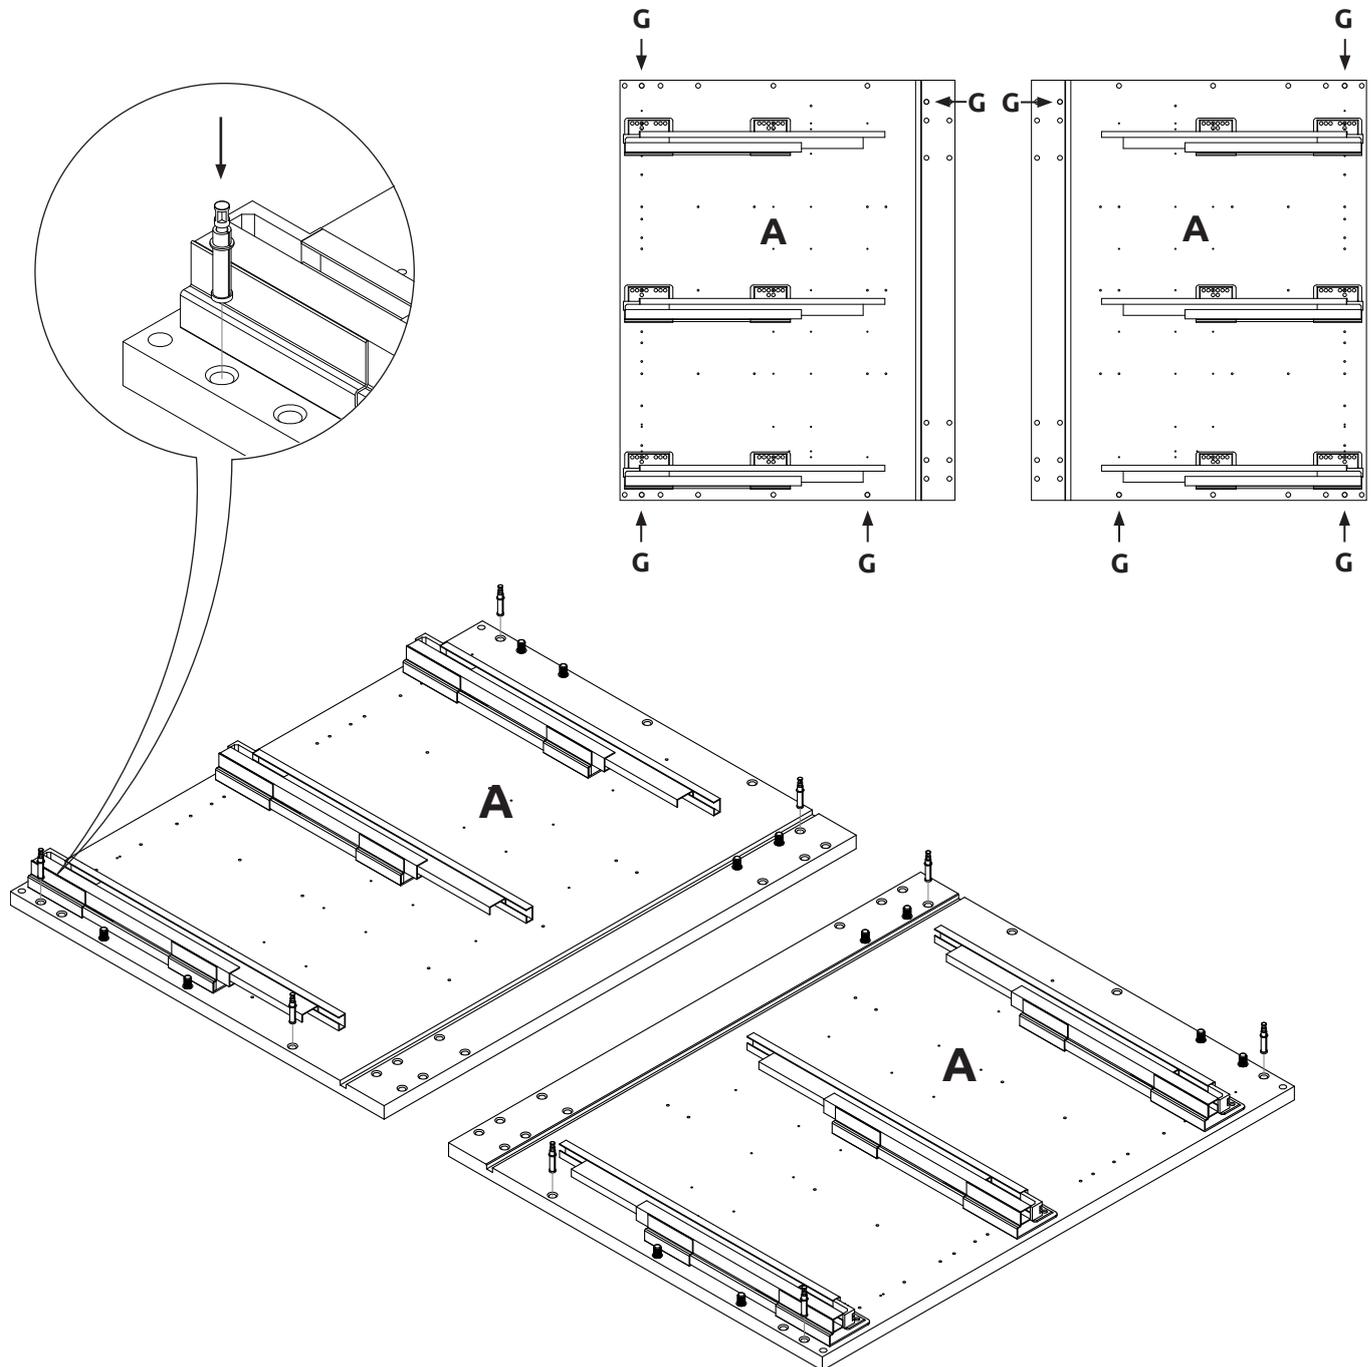

# BASE UNIT


## 800, 3 Drawer Assembly Guide

**Step 4.**

Attach panels **(C)** & **(D)** to panels **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.



All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

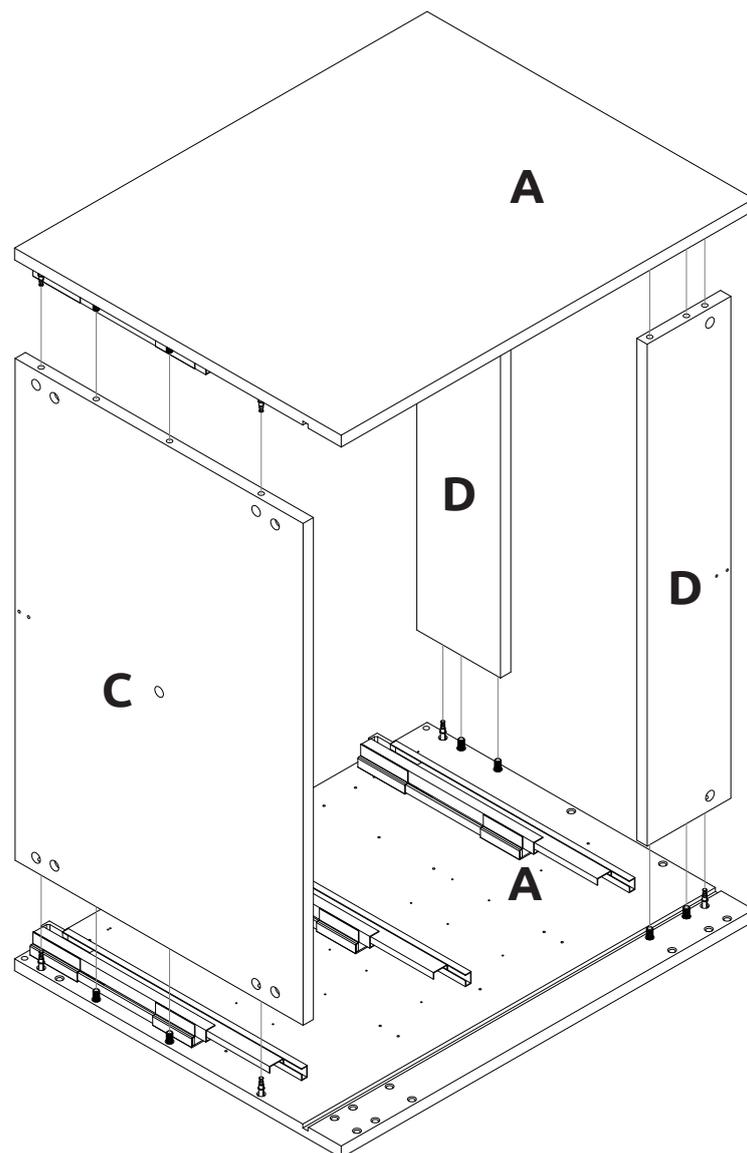


# BASE UNIT

## 800, 3 Drawer Assembly Guide



**Step 5.**

Slide back panel **(B)** into groove of end panels **(A)**. Once back panel **(B)** is in position, ensure the panel is flush & square with bottom of end panels.

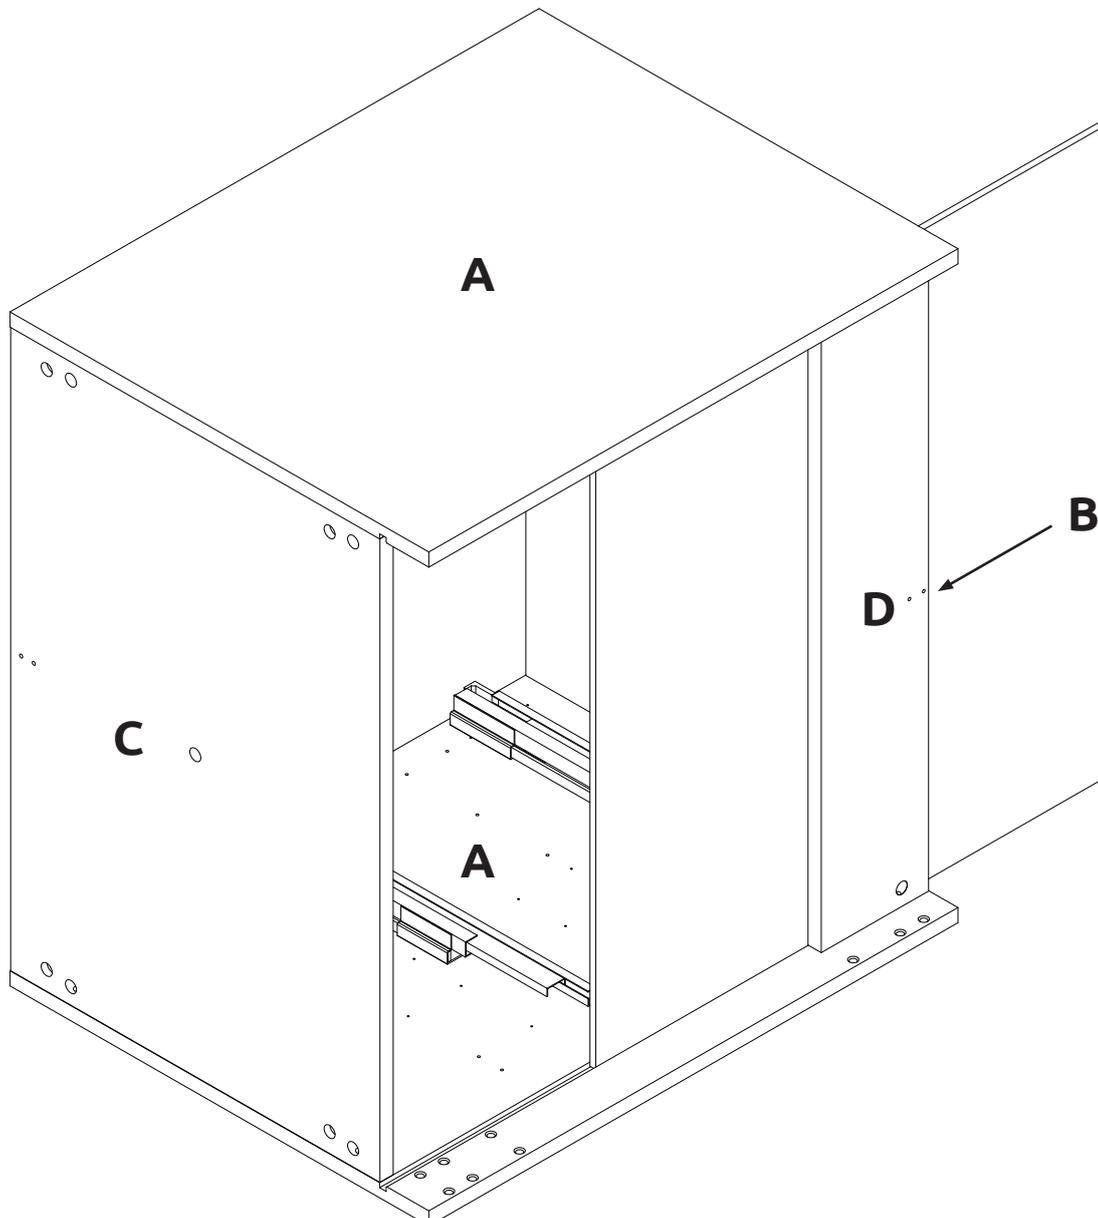

# BASE UNIT


## 800, 3 Drawer Assembly Guide

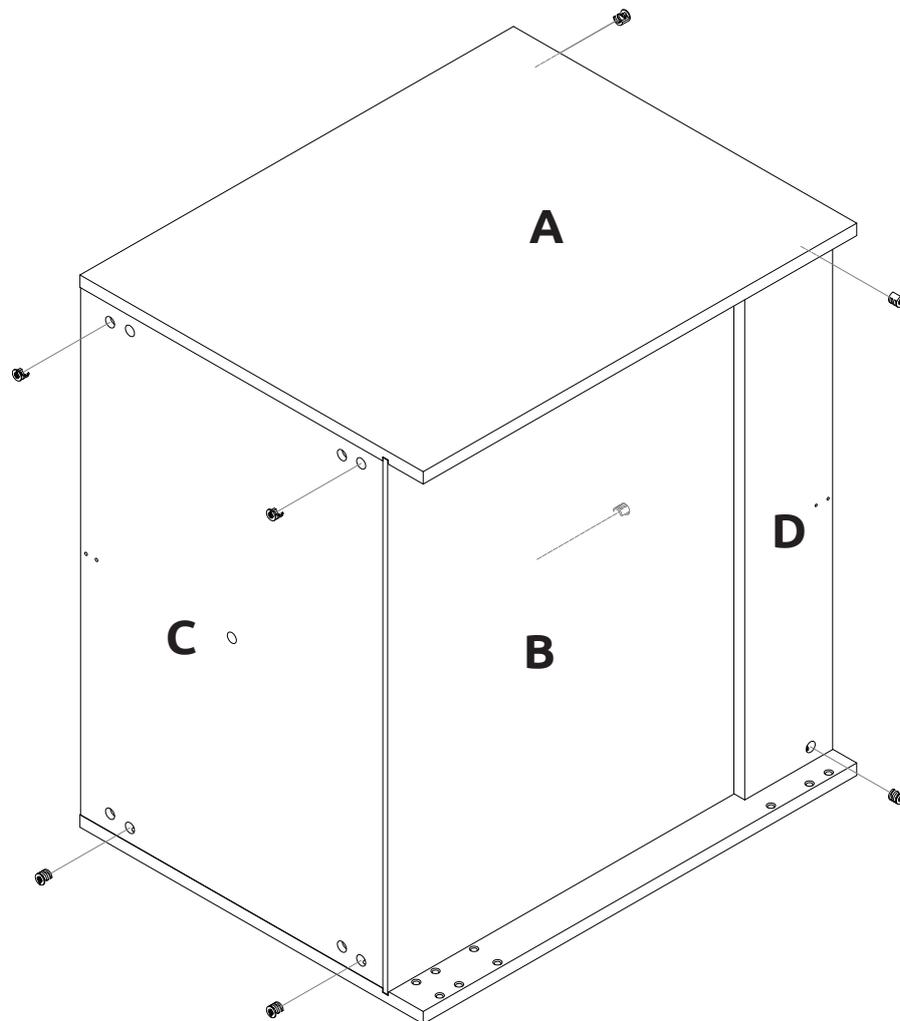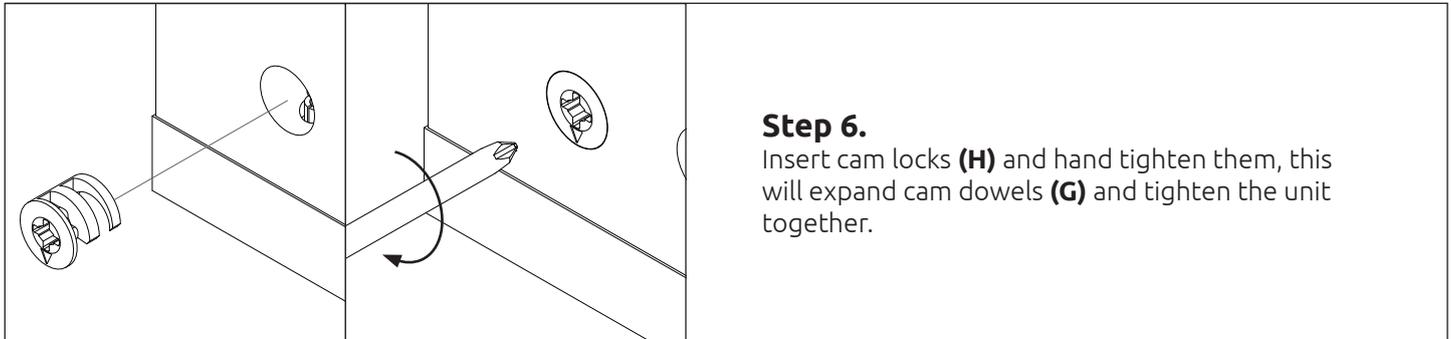

Do **not** use power tools with cam lock **(H)**


# BASE UNIT

## 800, 3 Drawer Assembly Guide

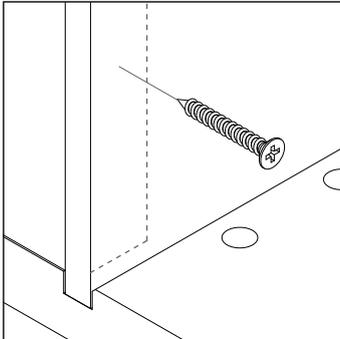

**Step 7.**

Ensure the unit is square. Secure back panel **(B)** with 4 x 30mm screws **(K)** equally spaced at the bottom of back panel **(B)** into base panel **(C)**, as shown. Ensure you screw into the centre of the base panel **(C)** (9mm from the edge).


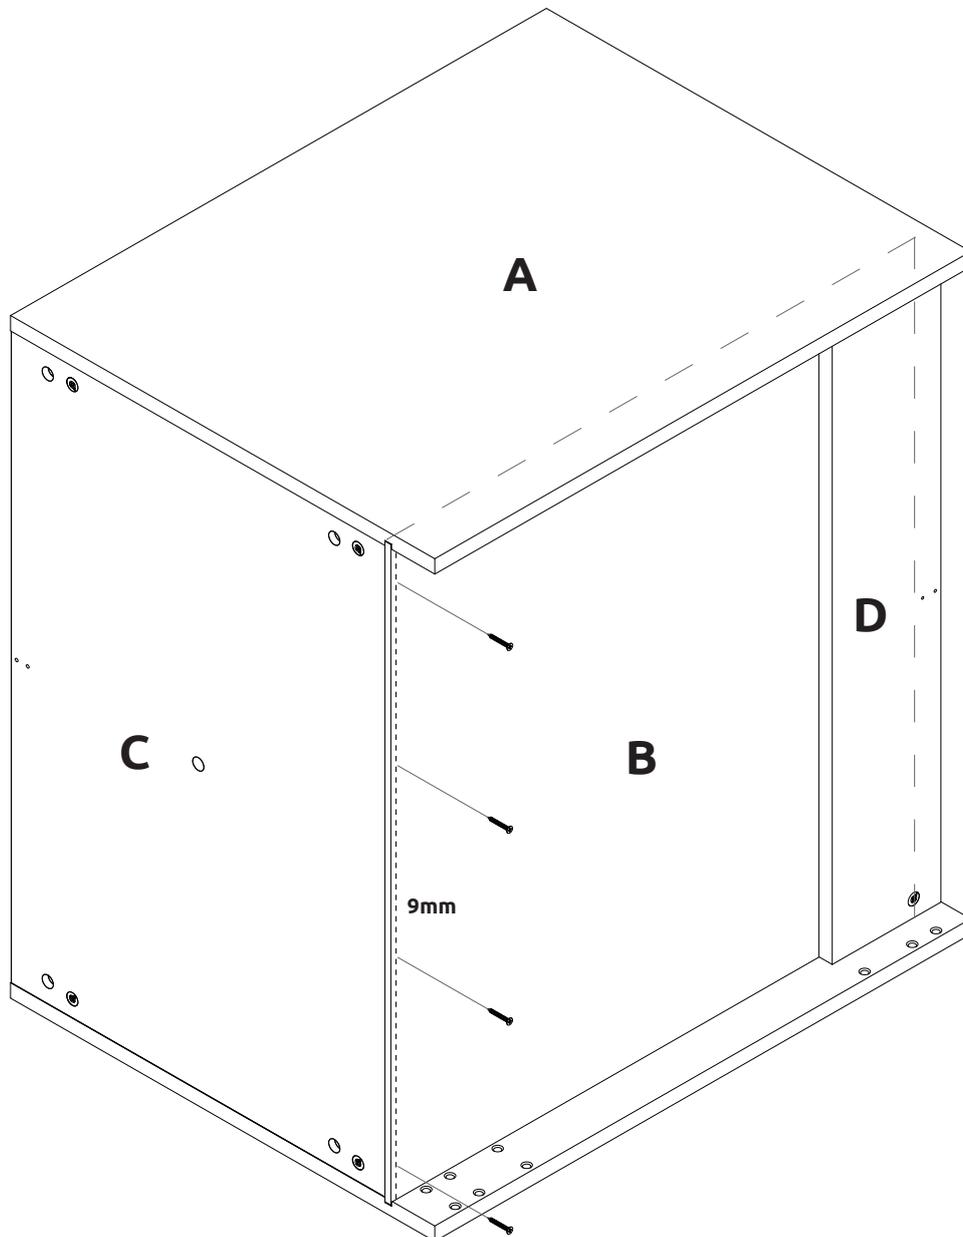


# BASE UNIT


## 800, 3 Drawer Assembly Guide

### Step 8.

Position legs as shown on the diagram below. Ensure legs are rotated to also provide support to the end panels (**A**). Once positioned, secure each of the legs into place with 4 x 15mm screws (**L**) per leg. Push leg firmly down into leg base. Adjust legs to **155mm** before turning unit upright. Once in situ level accordingly.

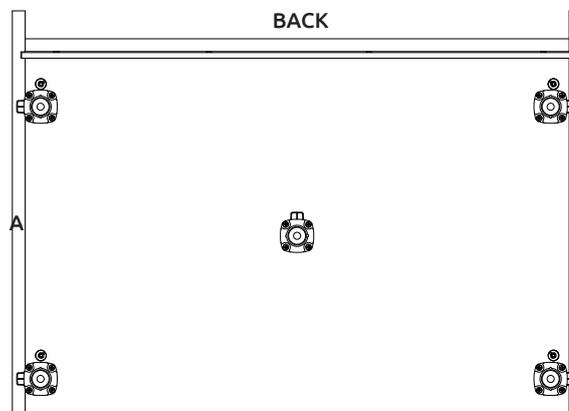

LEG POSITIONS - UNDERSIDE VIEW

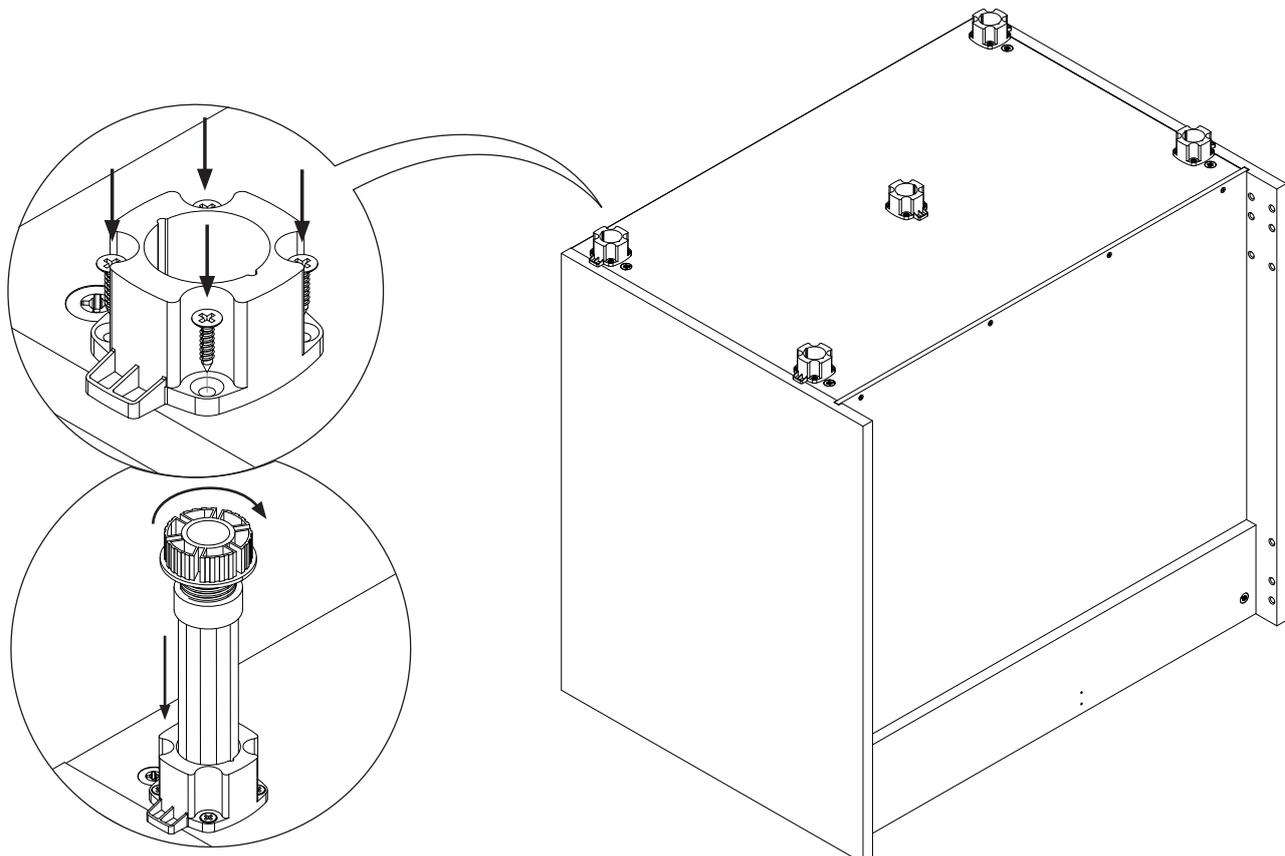


# BASE UNIT

## 800, 3 Drawer Assembly Guide




Screws for attaching to walls and worktops are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall and worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.

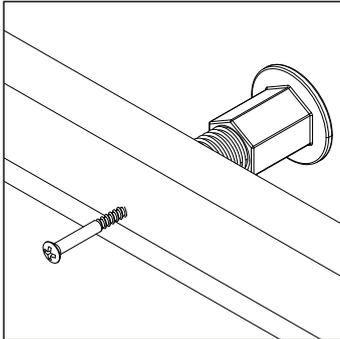


### Step 9.

Ensure the unit is positioned correctly and level. Drill 2 x pilot holes through the back rail into the wall. Unwind space plugs until they contact both surfaces. Finally, secure to the wall using an appropriate screw.

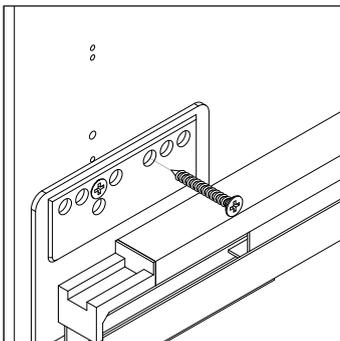



### Step 10.

Screw into any adjacent units using 30mm screws (**K**) provided to secure to unit. Screw into one of the spare runner holes at the top and bottom of the unit.

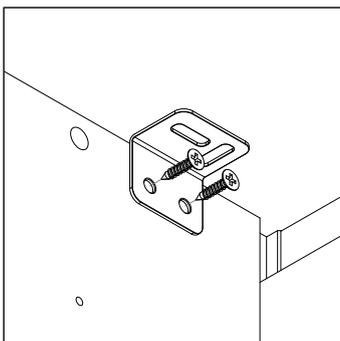

### Step 11.

Use 2 x 15mm screws (**L**) to secure each of the L brackets to the top rear of the unit on both sides.

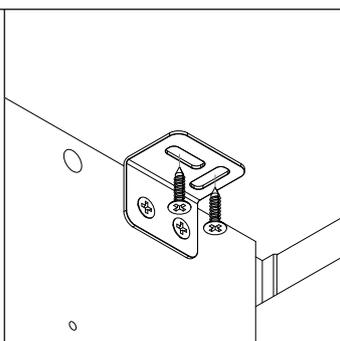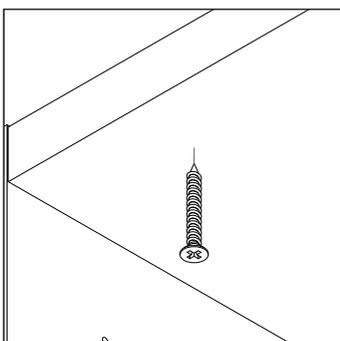

### Step 12.

Screw up through the front rail and the L brackets into the worktop to secure it in place.