


Vogue


wren

BASE UNIT

700-800, 2 Door Assembly Guide

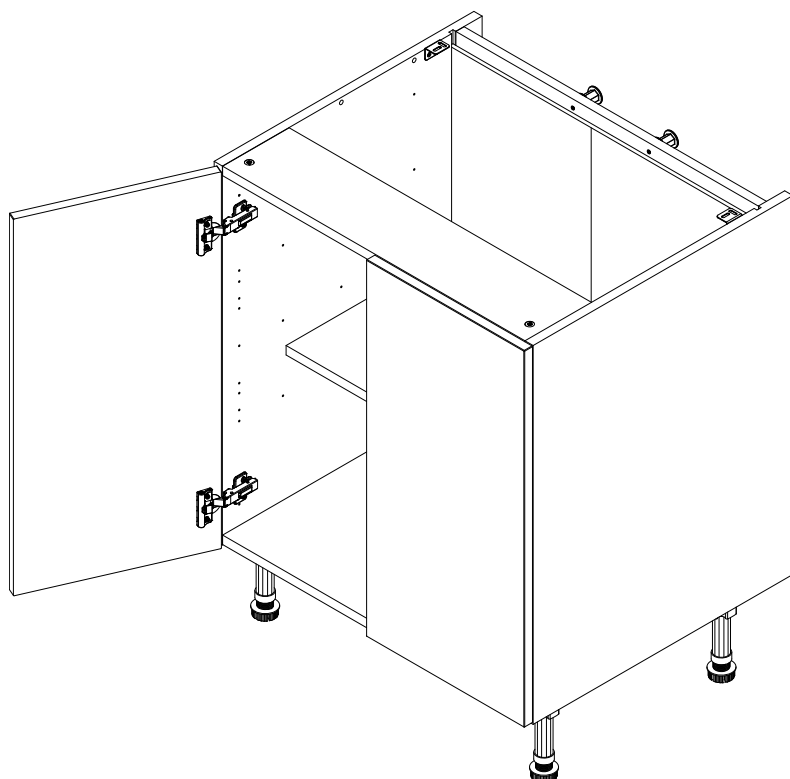

700 Base Unit

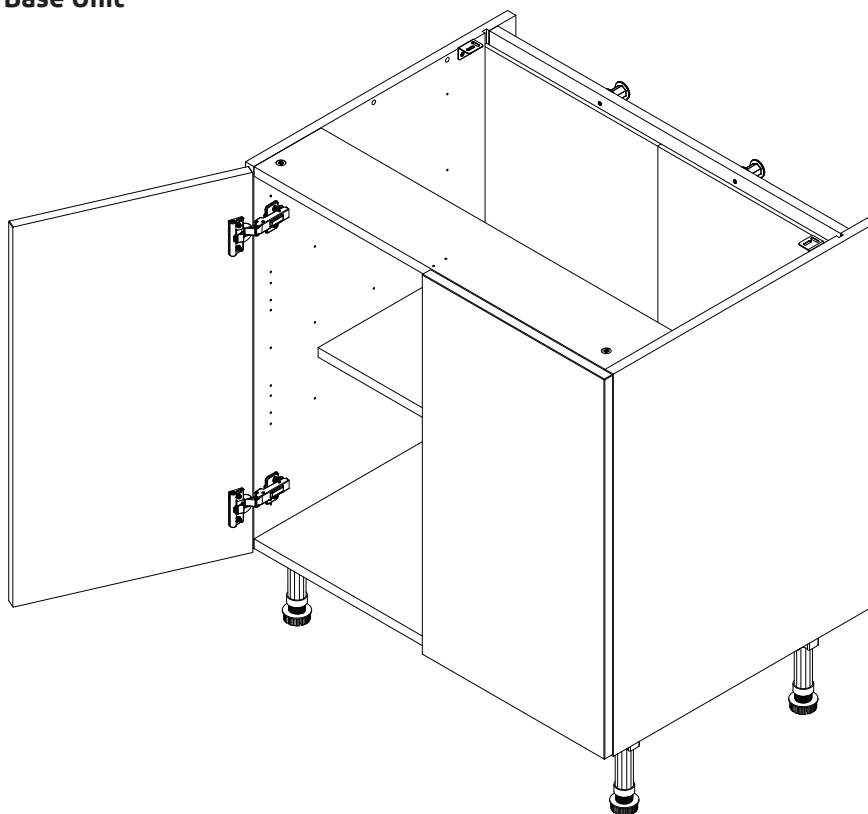

800 Base Unit

BASE UNIT





700 - 800, 2 Door Assembly Guide



BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.


THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

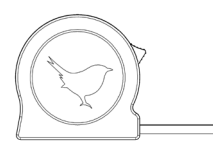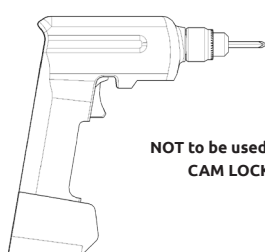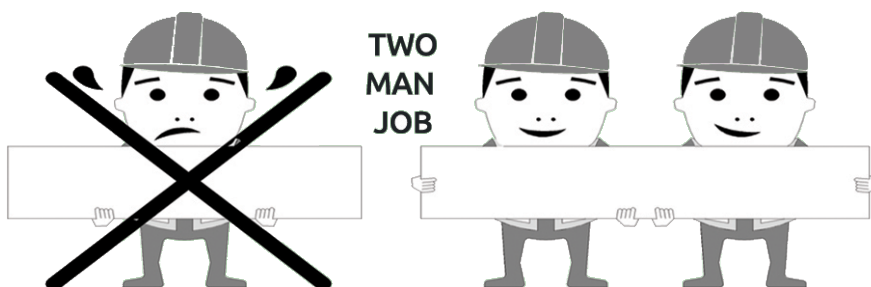


NOT to be used with
CAM LOCK

BASE UNIT


700 - 800, 2 Door Assembly Guide

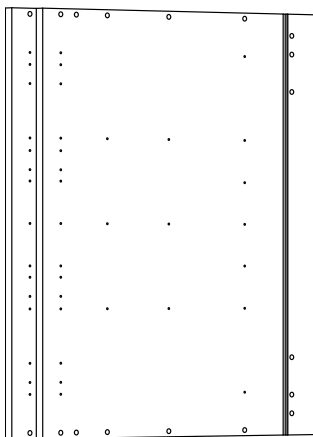


Panel A
x2 End Panel

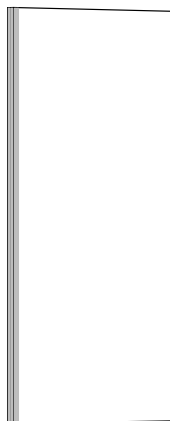

Panel B
x1 Back Panel
(800 only folded)

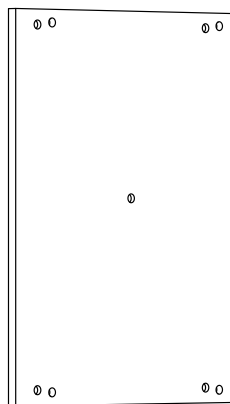


Panel C
x1 Fixed Shelf



Panel D
x2 Rail




Shelf
x1 Loose Shelf

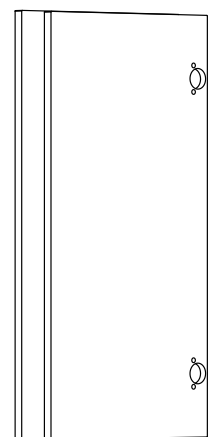


Frontal
x2 Front Panel
(Packed Separately)

BASE UNIT


700 - 800, 2 Door Assembly Guide




(F) x12
Wooden
Dowel




(L) x32
15mm
Screw




(K) x8
30mm
Screw




(G) x8
Cam Dowel
(Expanding)

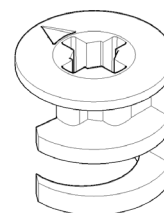


(H) x8
Cam Lock

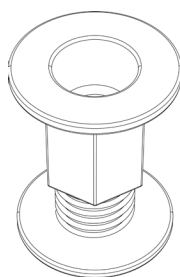


Space Plug
x2

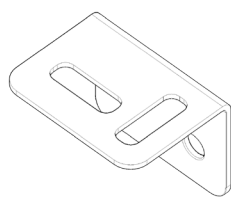


L Bracket
x2

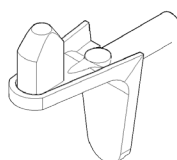


(Z) x4
Shelf Peg Metal




(M) x4
Cover Cap

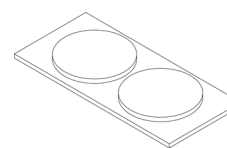


(N) x2
Door Buffer

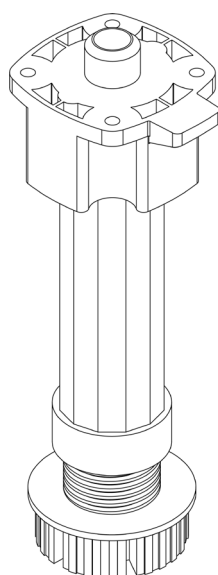

Leg

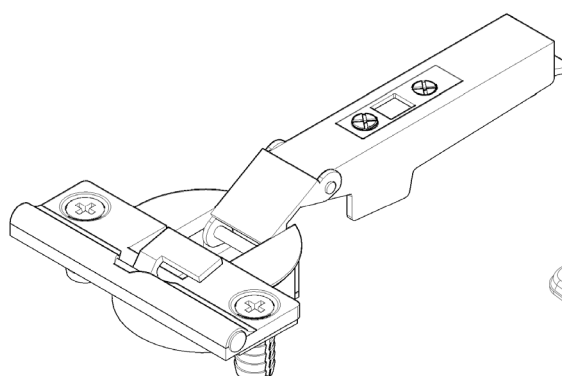

Hinge
Inc Screws & Cover Plate

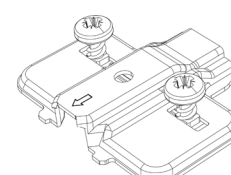



Hinge Mounting Plate
Inc Screws

BASE UNIT

700 - 800, 2 Door Assembly Guide

Step 1.

Seat dowels **(F)** into holes in both end panels **(A)** as shown.

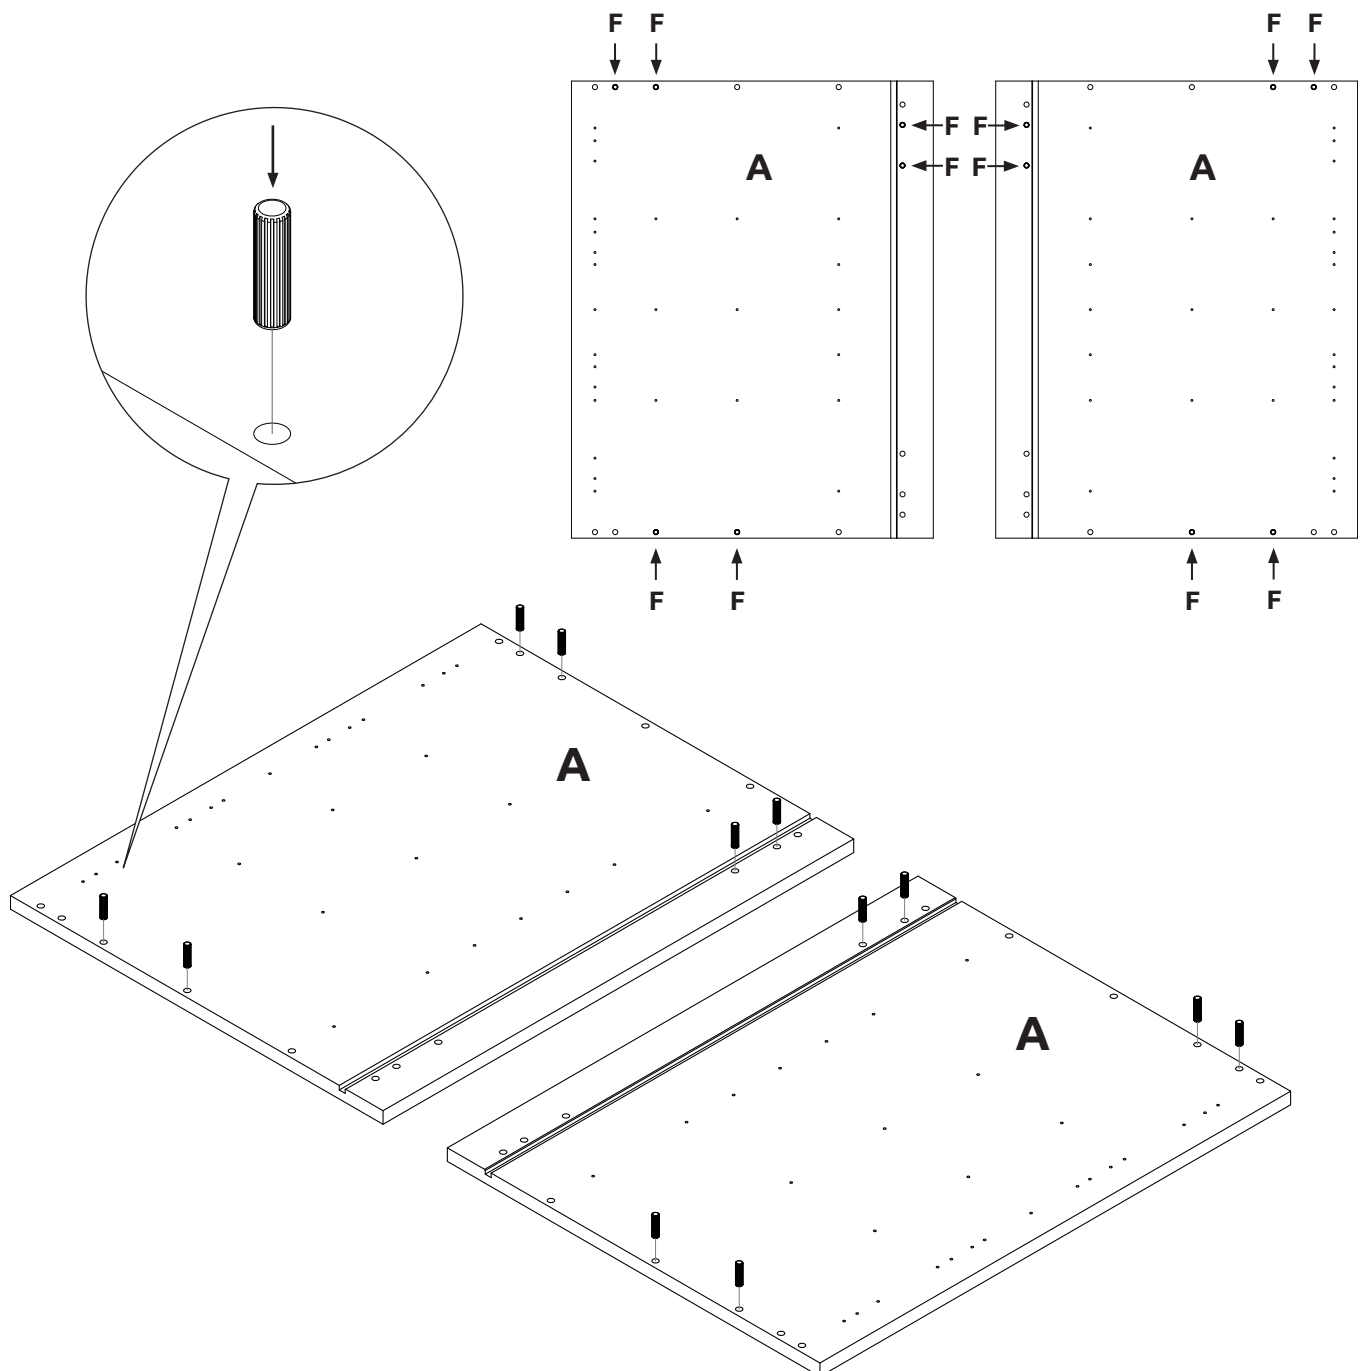
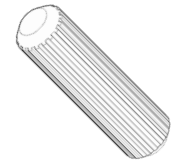


BASE UNIT

700 - 800, 2 Door Assembly Guide

Step 2.

Seat expanding cam dowels **(G)** into holes in both end panels **(A)** as shown.

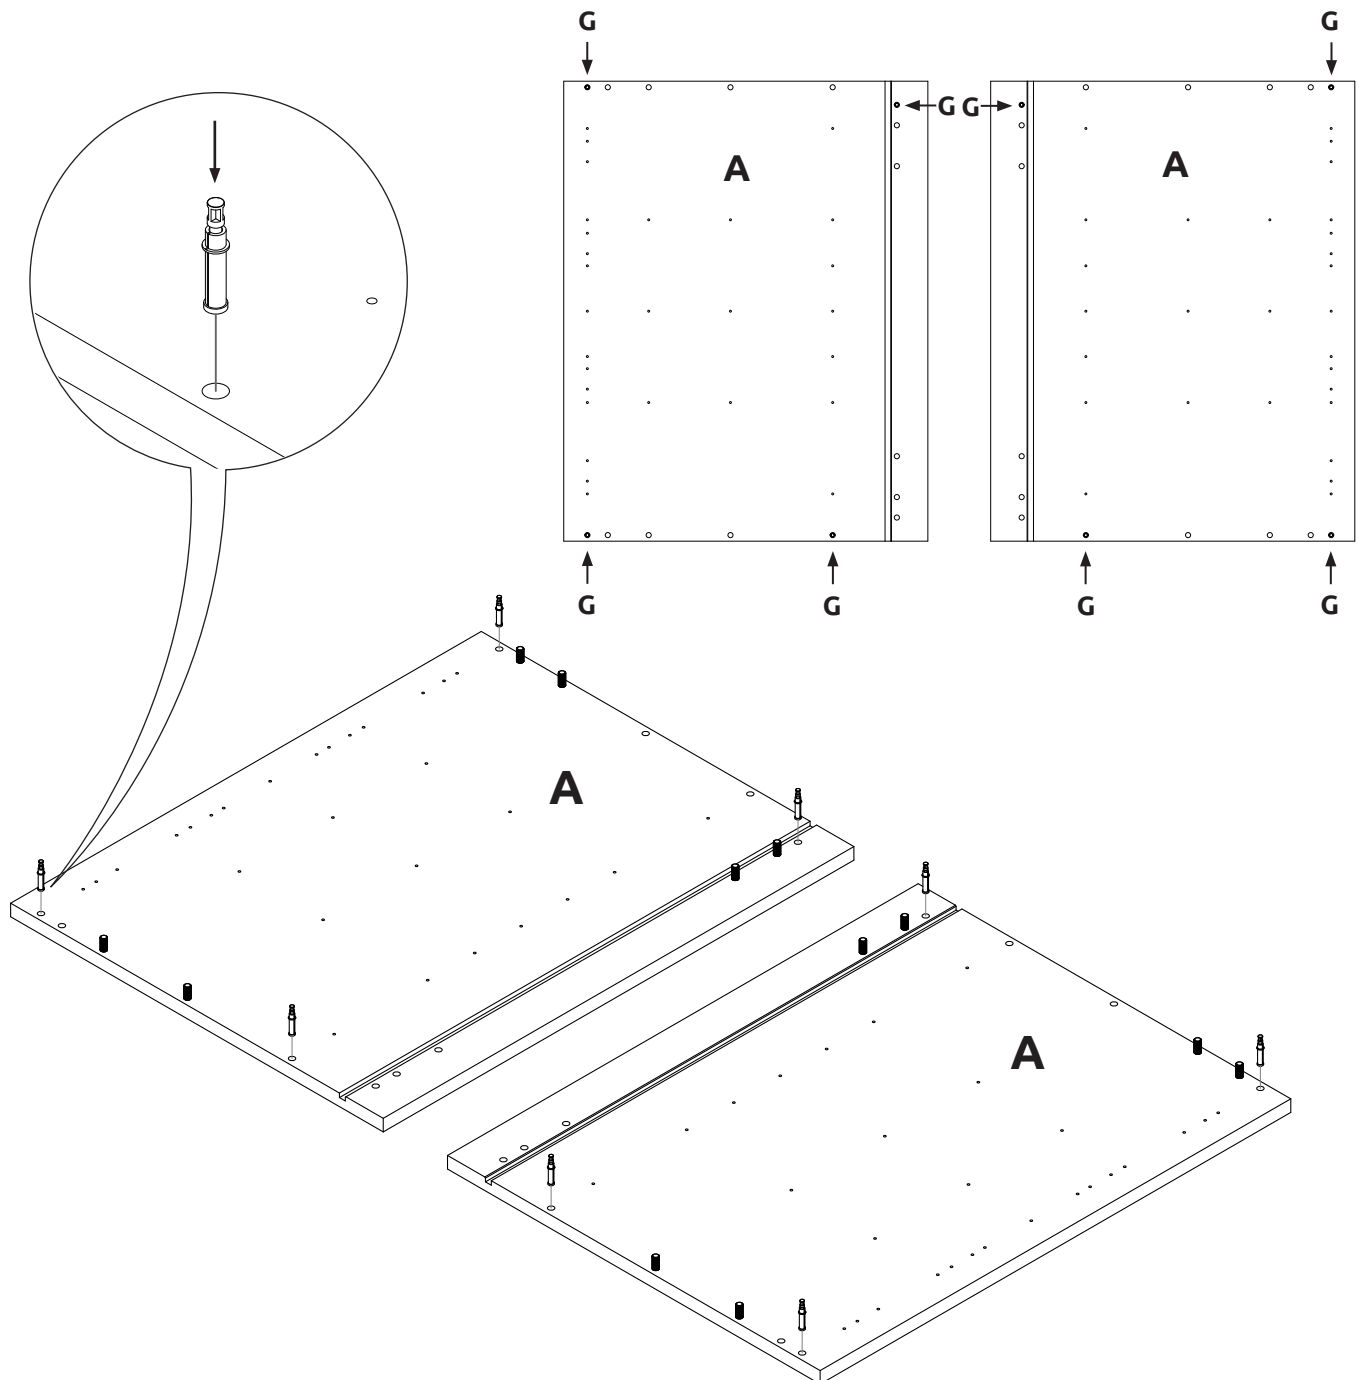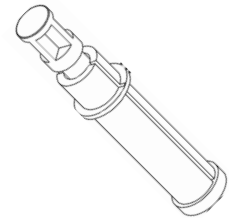

BASE UNIT


700 - 800, 2 Door Assembly Guide

Step 3.

Attach panels **(C)** & **(D)** to panels **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.




All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

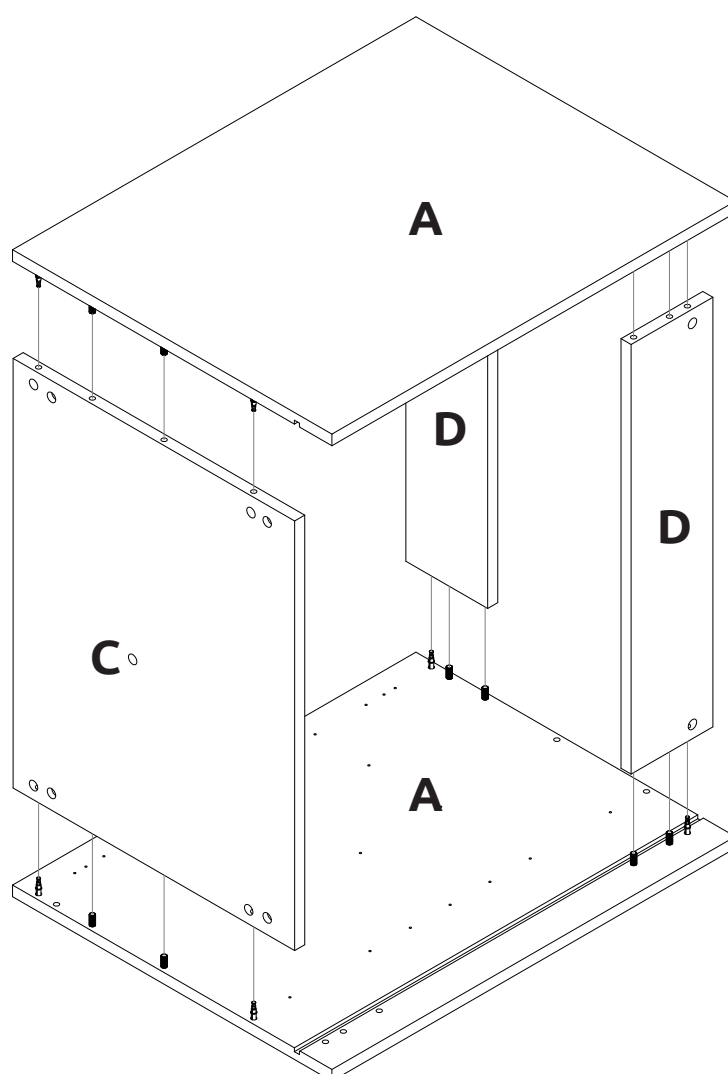



BASE UNIT**700 - 800, 2 Door Assembly Guide****Step 4.**

Slide back panel **(B)** into groove of end panels **(A)**. Once back panel **(B)** is in position, (ensure the panel is flush & square with bottom of end panels.)

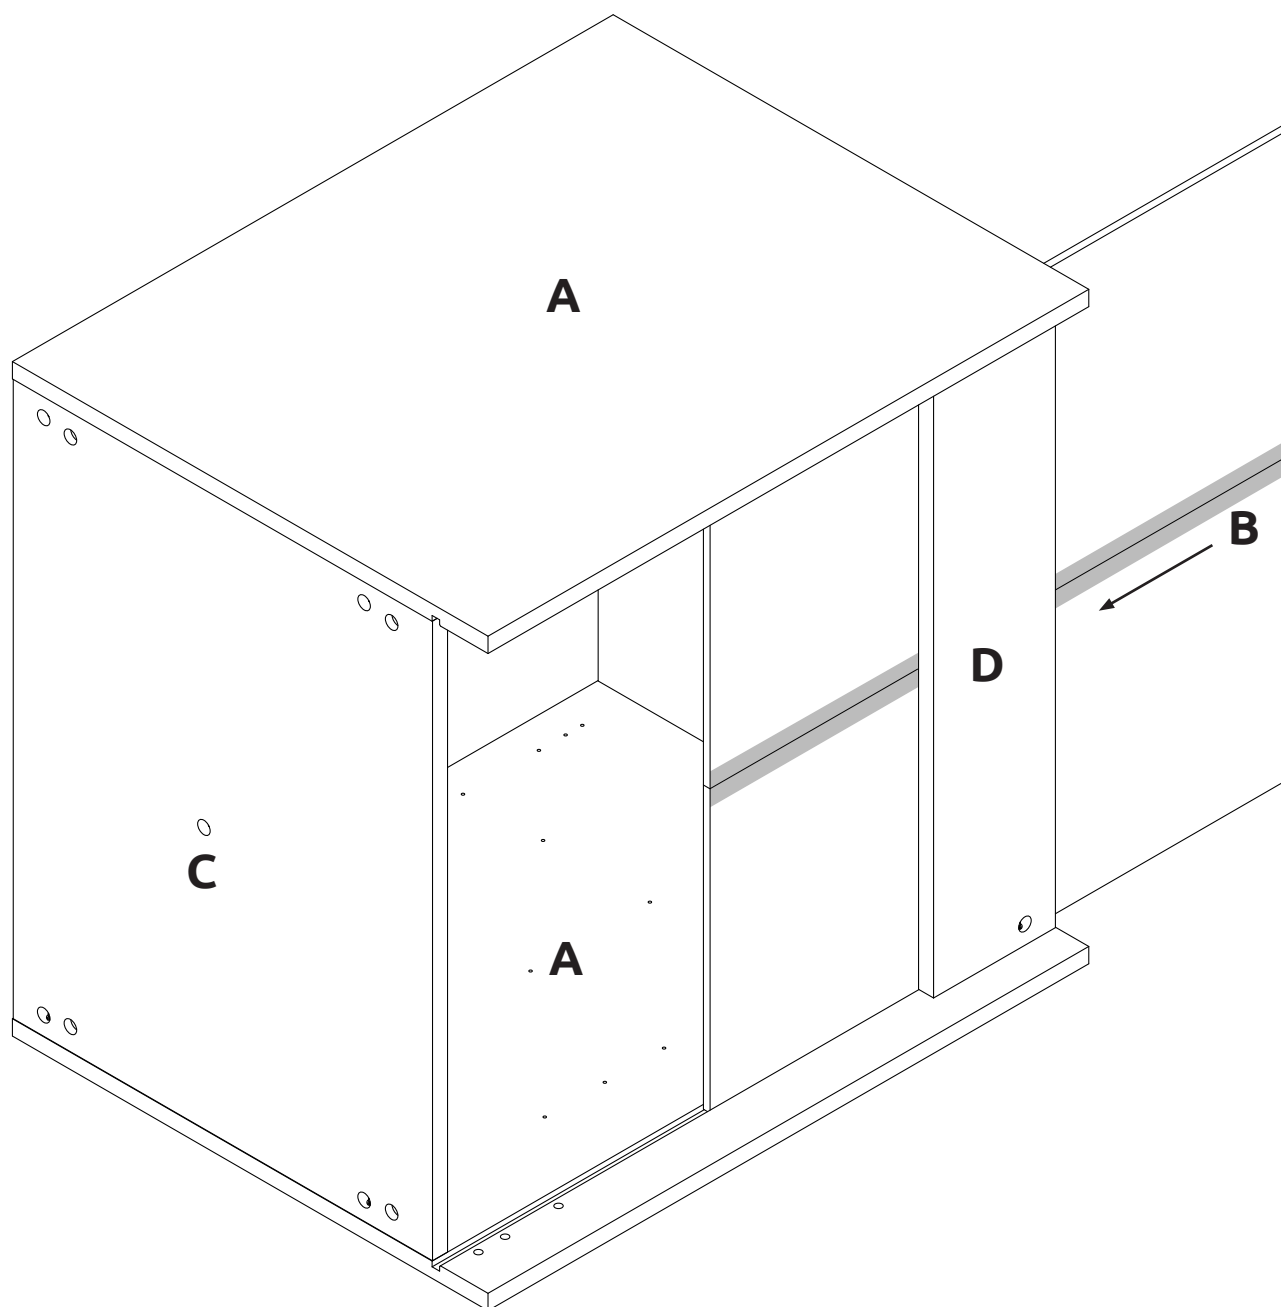

BASE UNIT


700 - 800, 2 Door Assembly Guide

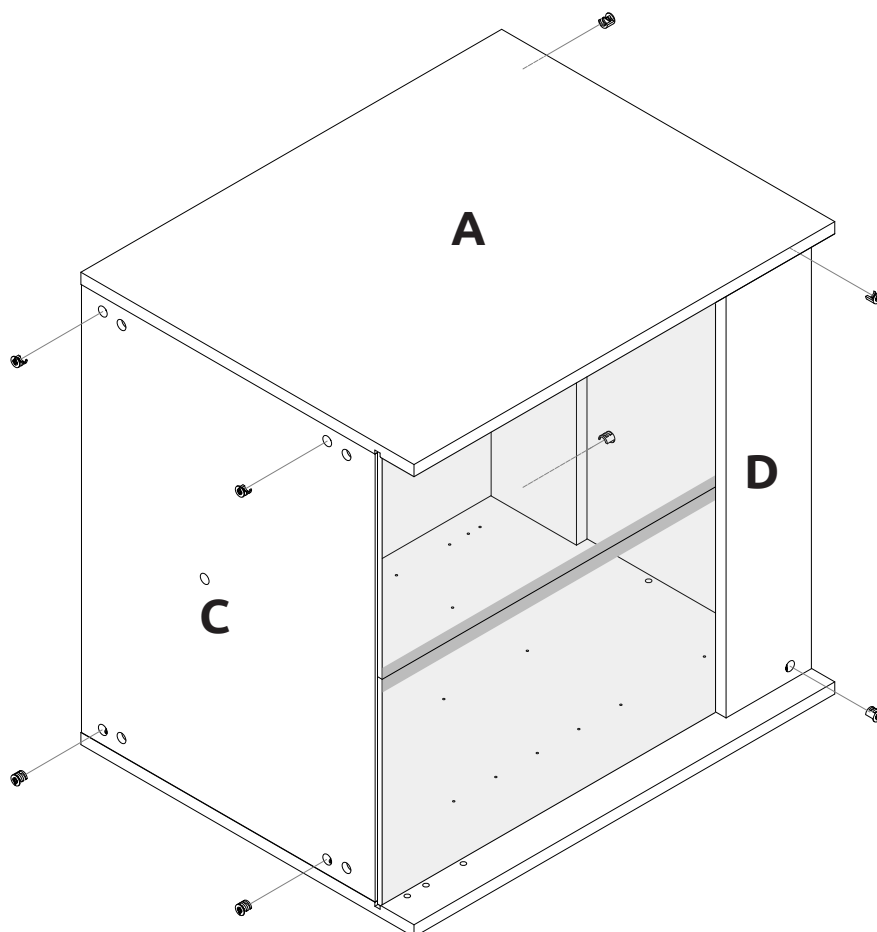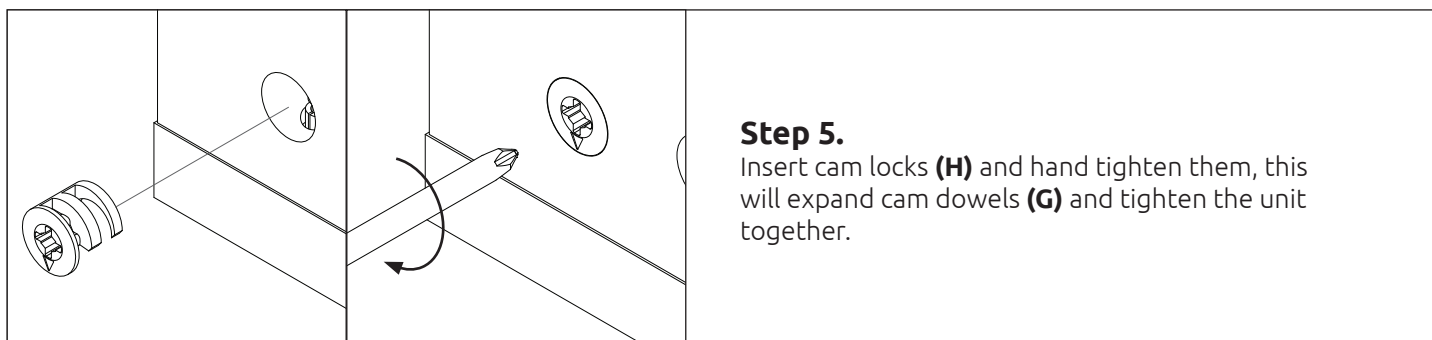

Do **not** use power tools with cam lock **(H)**


BASE UNIT

700 - 800, 2 Door Assembly Guide

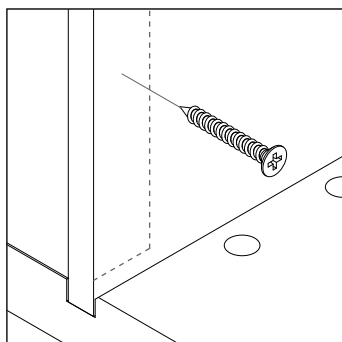

Step 6.

Ensure the unit is square. Secure back panel **(B)** with 4 x 30mm screws **(K)** equally spaced at the bottom of back panel **(B)** into base panel **(C)**, as shown. Ensure you screw into the centre of the base panel **(C)** (9mm from the edge).


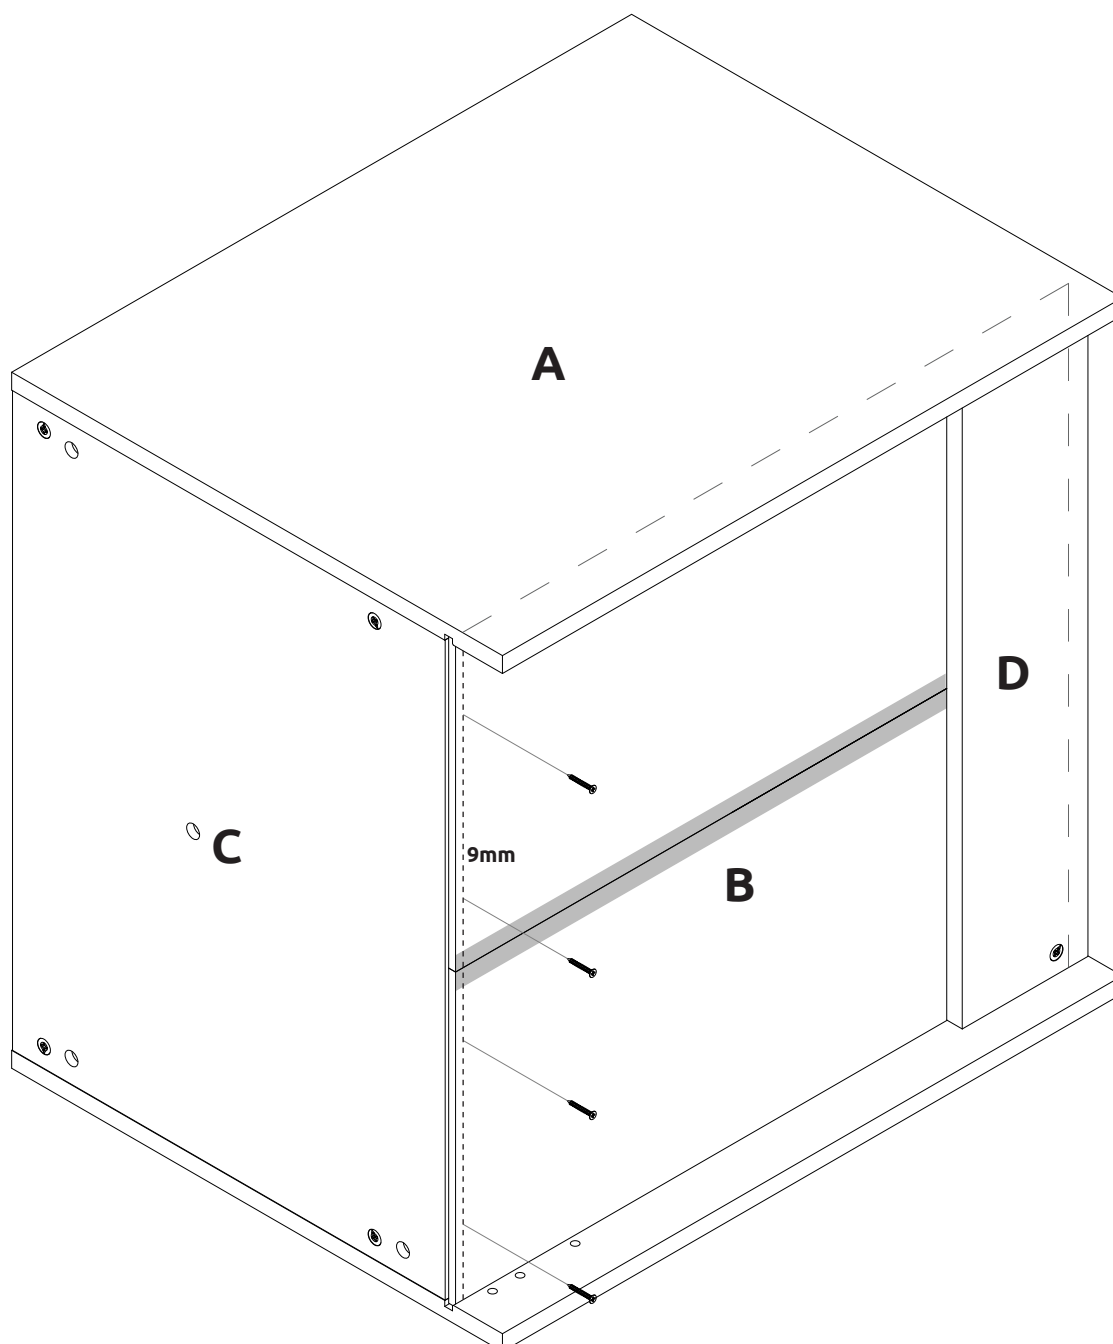


BASE UNIT


700 - 800, 2 Door Assembly Guide

Step 7.

Position legs as shown on the diagram below. Ensure legs are rotated to also provide support to the end panels **(A)**. Once positioned, secure each of the legs into place with 4 x 15mm screws **(L)** per leg. Push leg firmly down into leg base. Adjust legs to **155mm** before turning unit upright. Once in situ level accordingly.

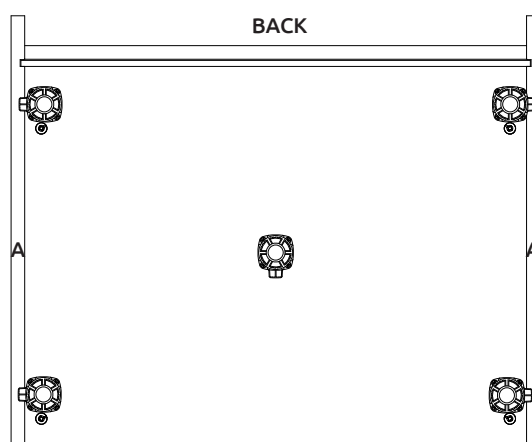


LEG POSITIONS - UNDERSIDE VIEW

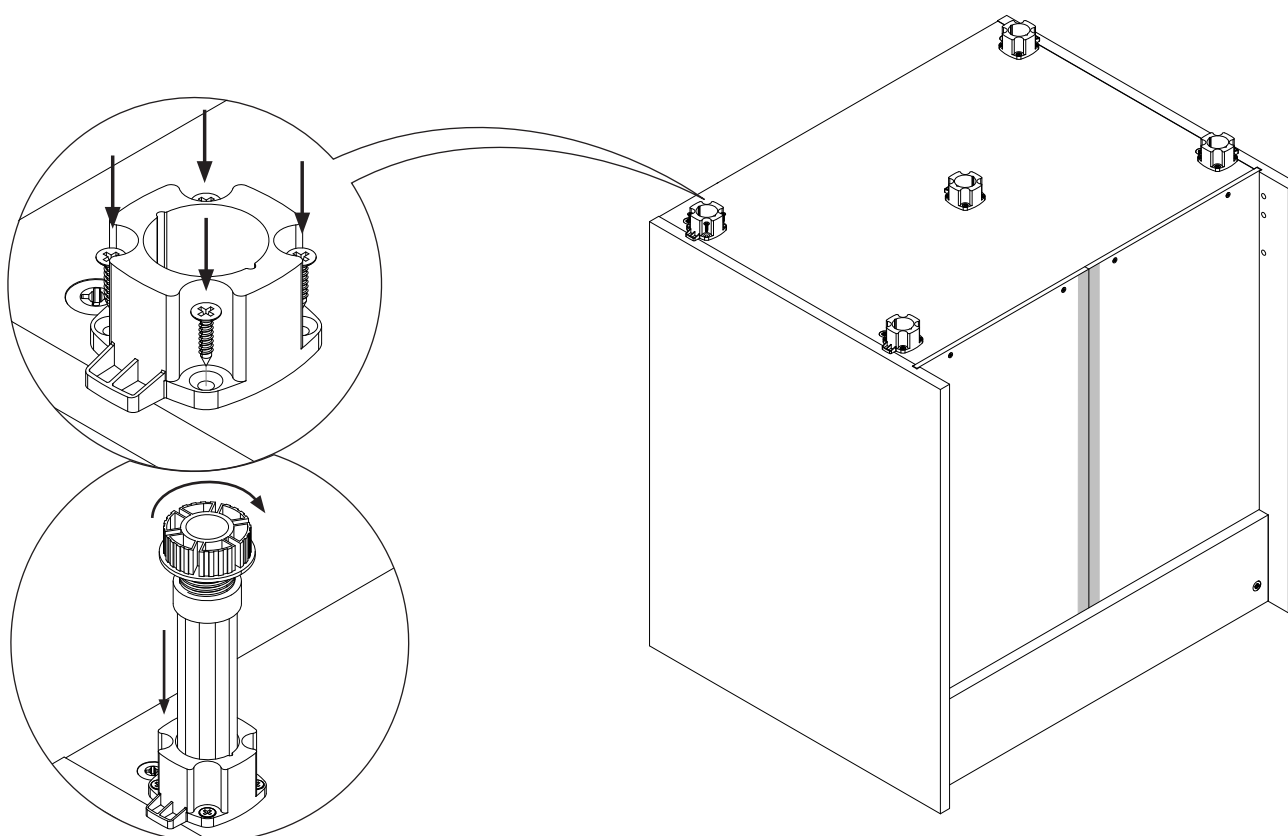

BASE UNIT


700 - 800, 2 Door Assembly Guide

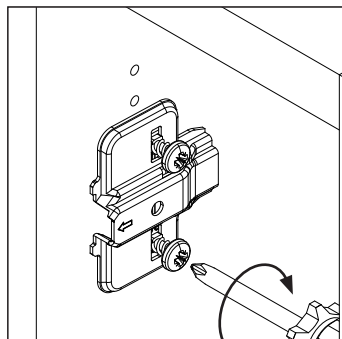

Step 8.

Attach hinge plates onto both end panels **(A)** as shown, using 2 screws already located in hinge plates.

Hinge side to be mounted in accordance to customer specific kitchen plan.

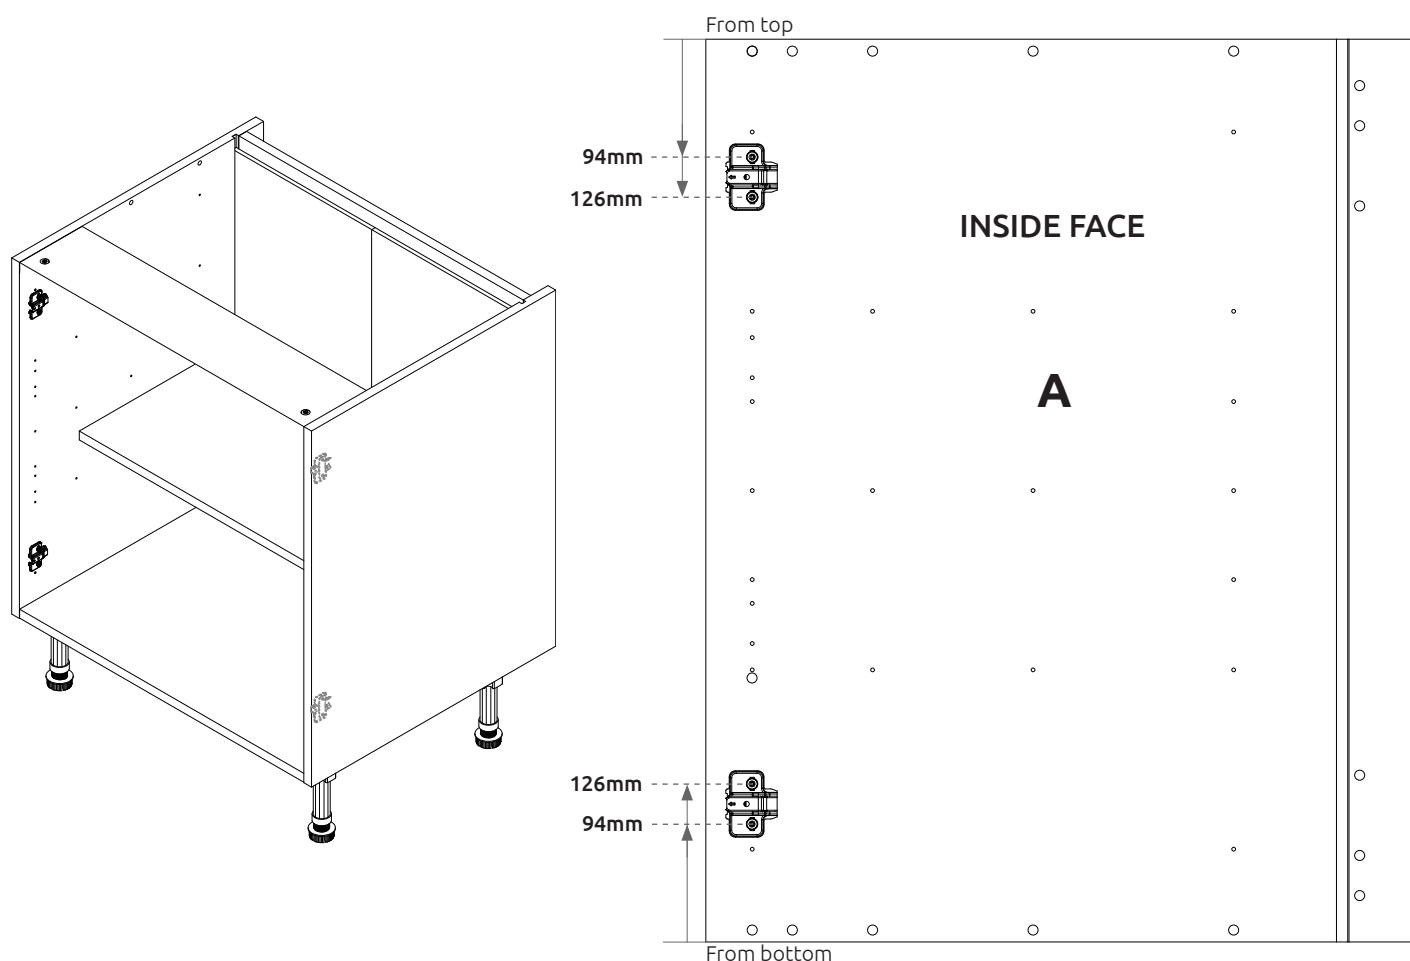


BASE UNIT

700 - 800, 2 Door Assembly Guide




Screws for attaching to walls and worktops are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall and worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.

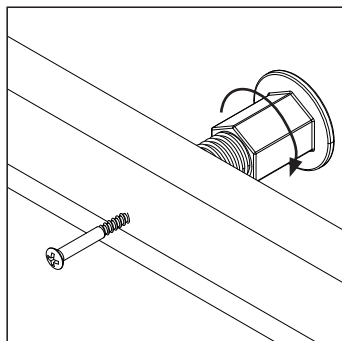


Step 9.

Ensure the unit is positioned correctly and level. Drill pilot holes through the back rail into the wall. Unwind space plugs until they contact both surfaces. Finally, secure to the wall using appropriate screws.

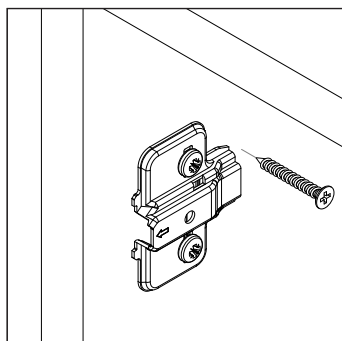



Step 10.

Screw into any side units using 30mm screws **(K)** provided to secure to unit. Screw just to the rear of hinge plate at the top and bottom of both sides of the unit, place cover caps **(M)** on the heads to conceal them.

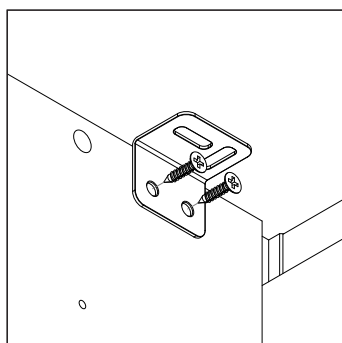

Step 11.

Use 2 x 15mm screws **(L)** to secure each of the L brackets to the top rear of the unit on both sides.


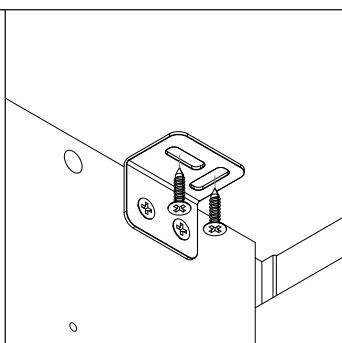
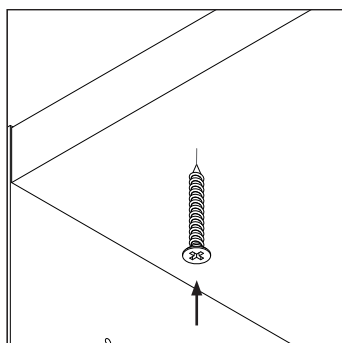



Step 12.



Screw up through the front rail and the L brackets into the worktop to secure it in place.

BASE UNIT

700 - 800, 2 Door Assembly Guide

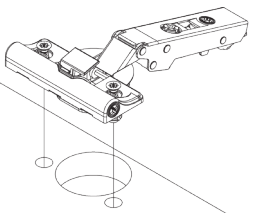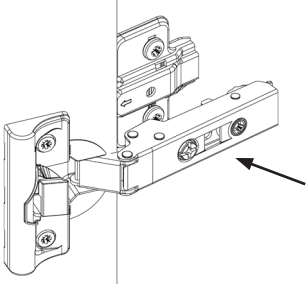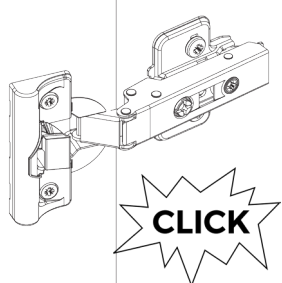	HINGE ATTACHMENT AND ADJUSTMENT Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.  <i>Hinge dowels</i>	
	 CLICK	Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.
Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.		

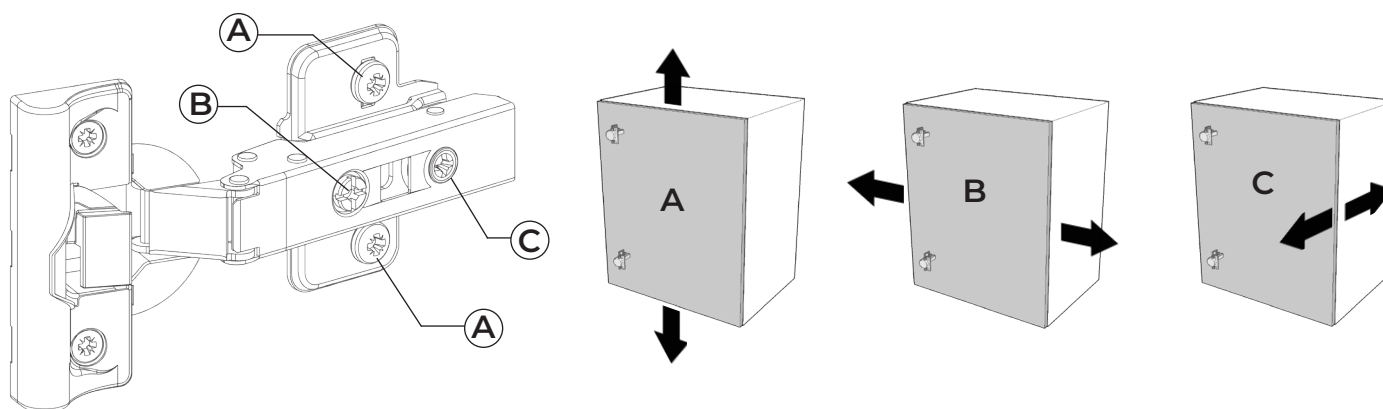

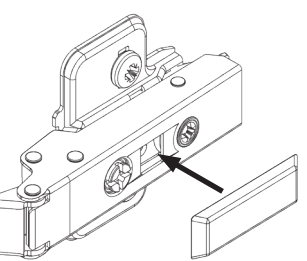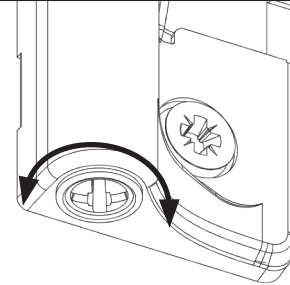	Step 4. Fit cover caps to hinges and adjust soft-close to suit.	
---	---	---



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.

Vogue

BASE UNIT

700-800, 2 Door Assembly Guide

wren

wren