


Vogue

wren

BASE UNIT

150, 1 Door Assembly Guide

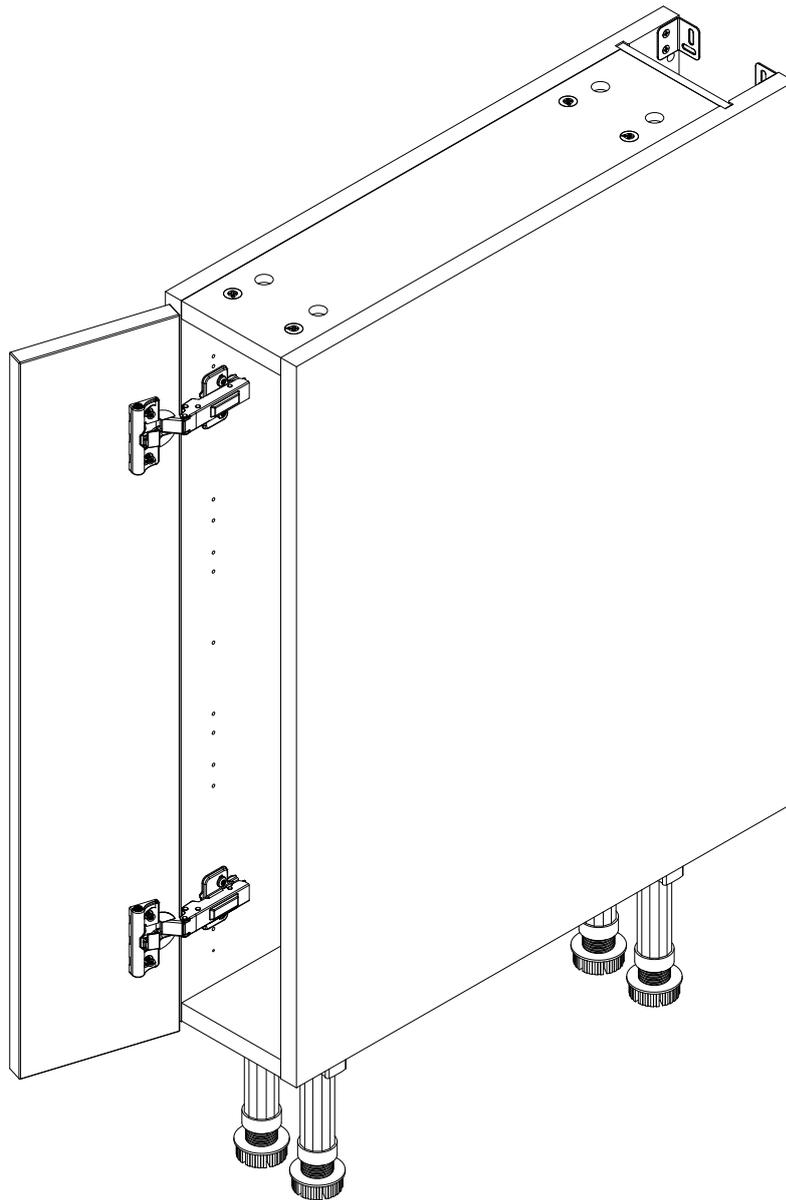

150 Base Unit

BASE UNIT


150, 1 Door Assembly Guide



BEFORE YOU START


INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

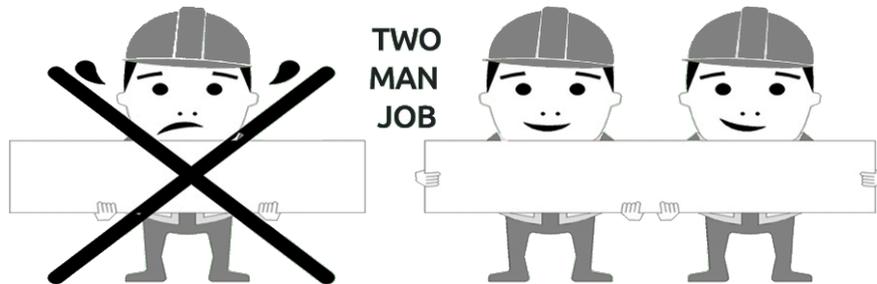

BASE UNIT


150, 1 Door Assembly Guide

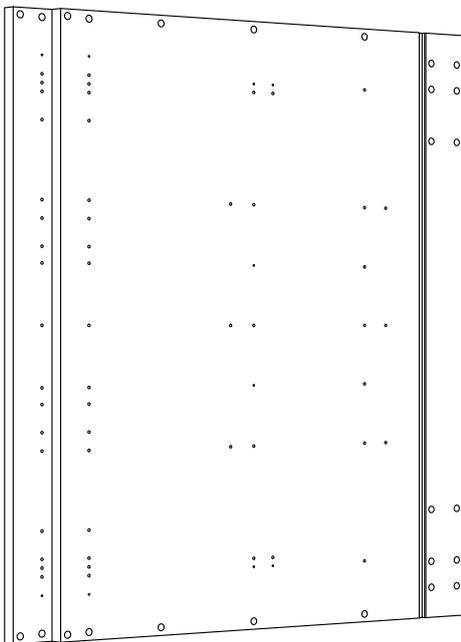


Panel A
x2 End Panel




Panel B
x1 Back Panel

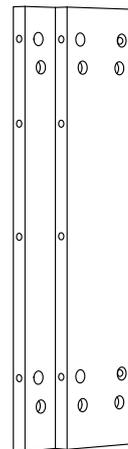

Panel C
x2 Fixed Shelf




Shelf
x1 Loose Shelf




Frontal
x1 Front Panel
(Packed Separately)

BASE UNIT


150, 1 Door Assembly Guide




(F) x12
Wooden Dowel




(L) x28
15mm Screw




(K) x7
30mm Screw




(G) x8
Cam Dowel (Expanding)

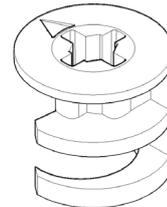


(H) x8
Cam Lock

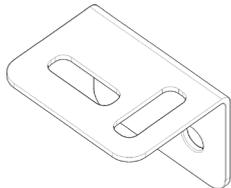


L Bracket
x2

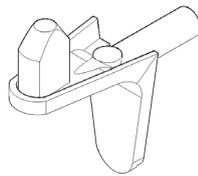


(Z) x4
Shelf Peg Metal




(M) x4
Cover Cap

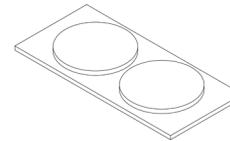


(N) x1
Door Buffer

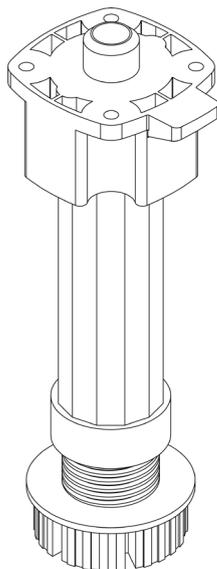

Leg

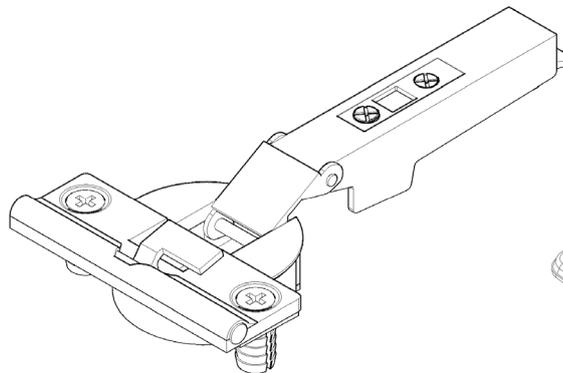

Hinge
Inc Screws & Cover Plate

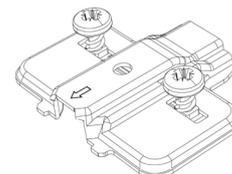


Hinge Mounting Plate
Inc Screws

BASE UNIT

150, 1 Door Assembly Guide

Step 1.

Seat dowels (F) into holes in both end panels (A) as shown.

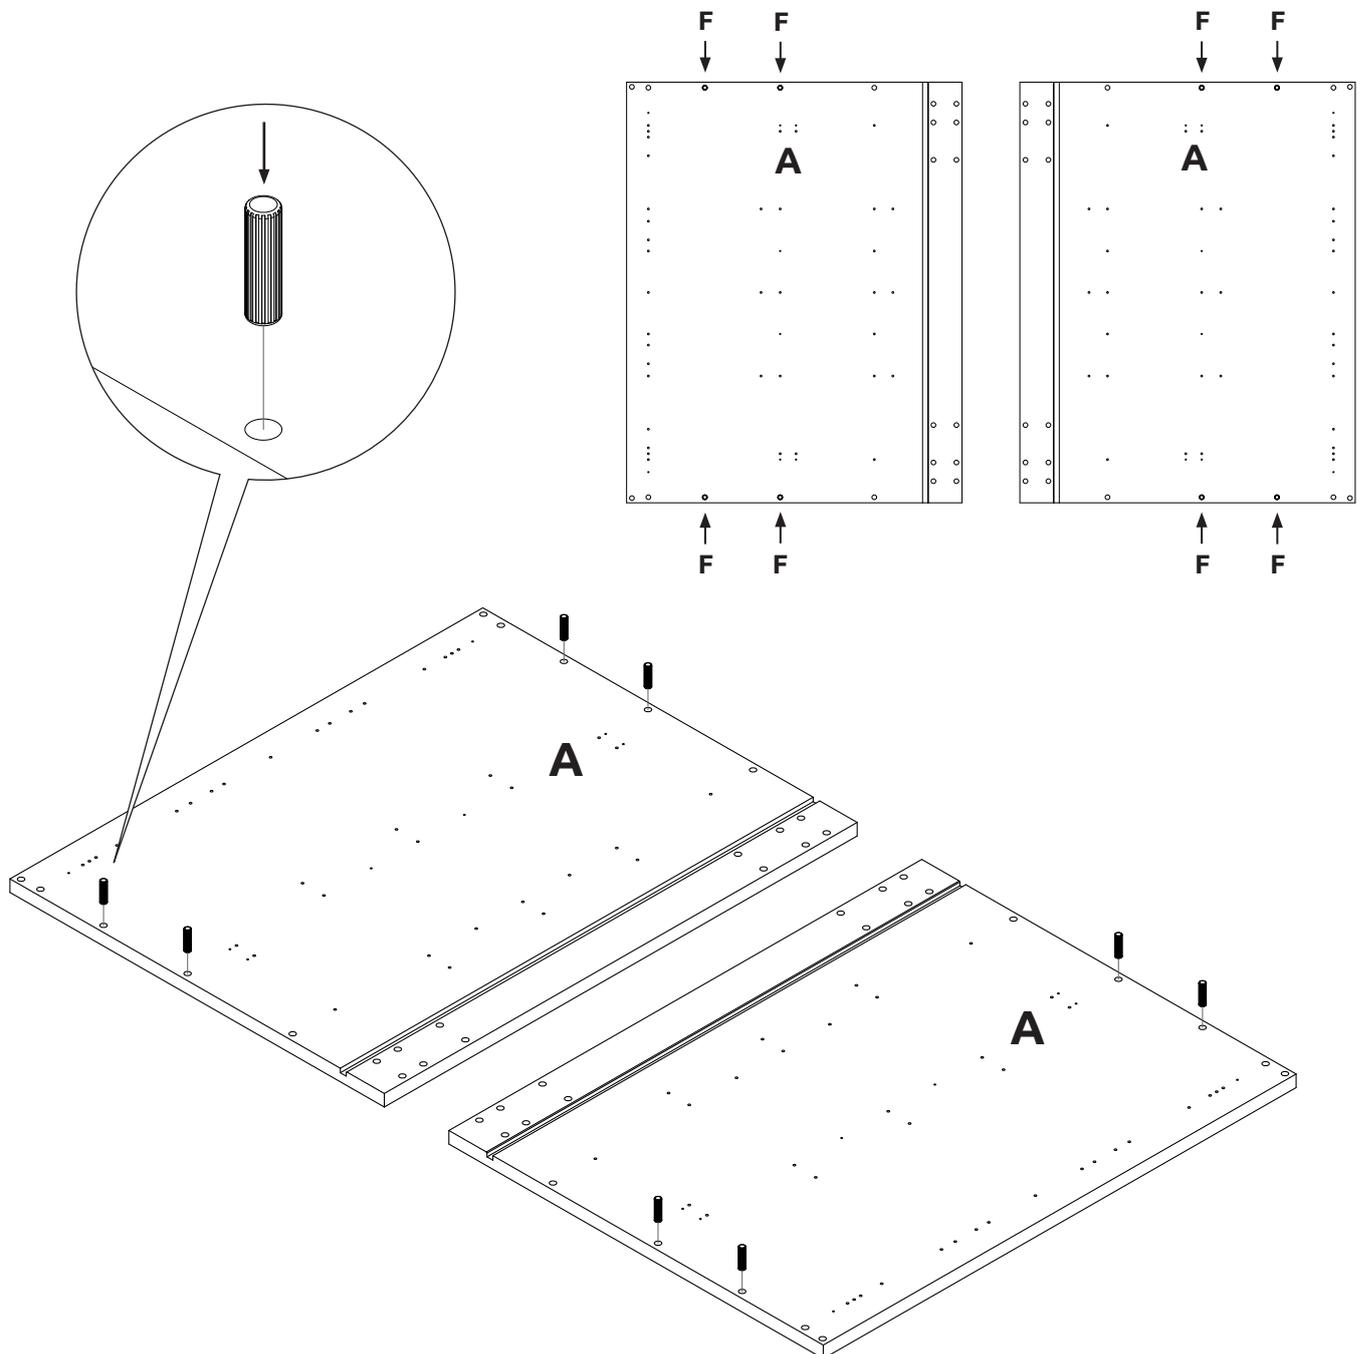


BASE UNIT

150, 1 Door Assembly Guide

Step 2.

Seat expanding cam dowels (G) into holes in both end panels (A) as shown.

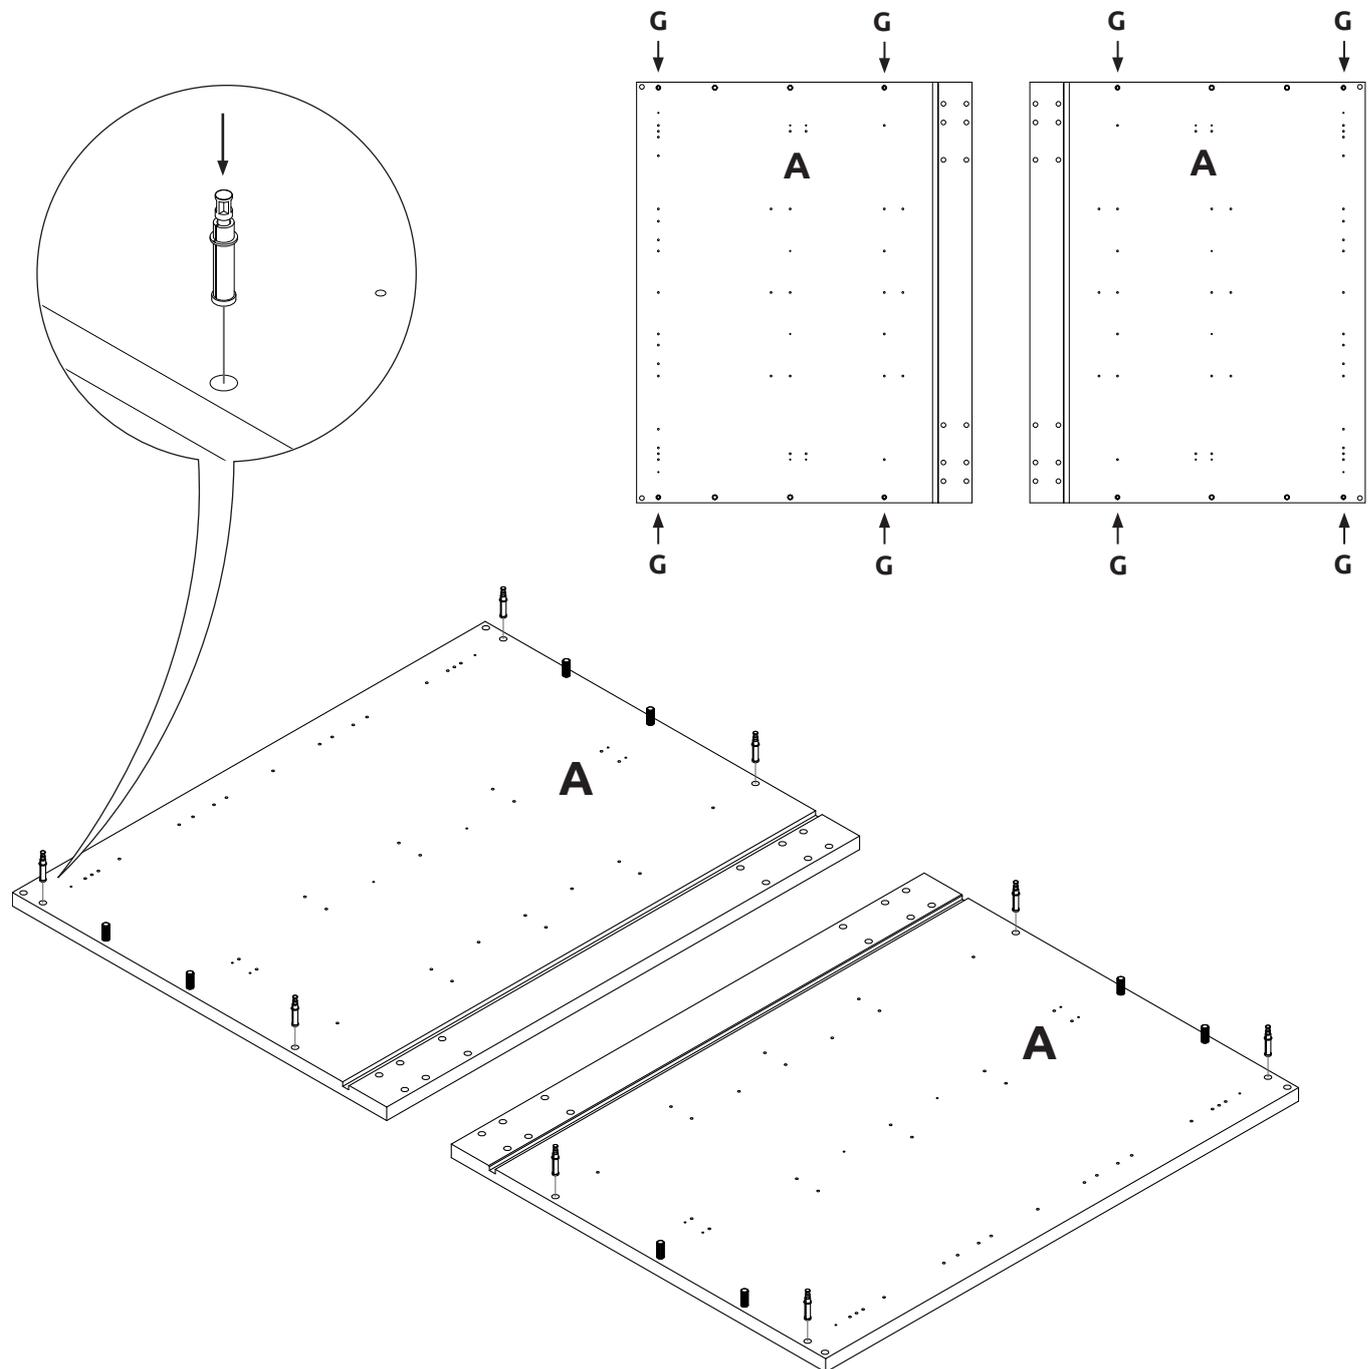


BASE UNIT**150, 1 Door Assembly Guide****Step 3.**

Attach fixed shelves (**C**) to panels (**A**), using expanding cam dowels (**G**), and wooden dowels (**F**) in positions as shown.



All cam lock (**H**) holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

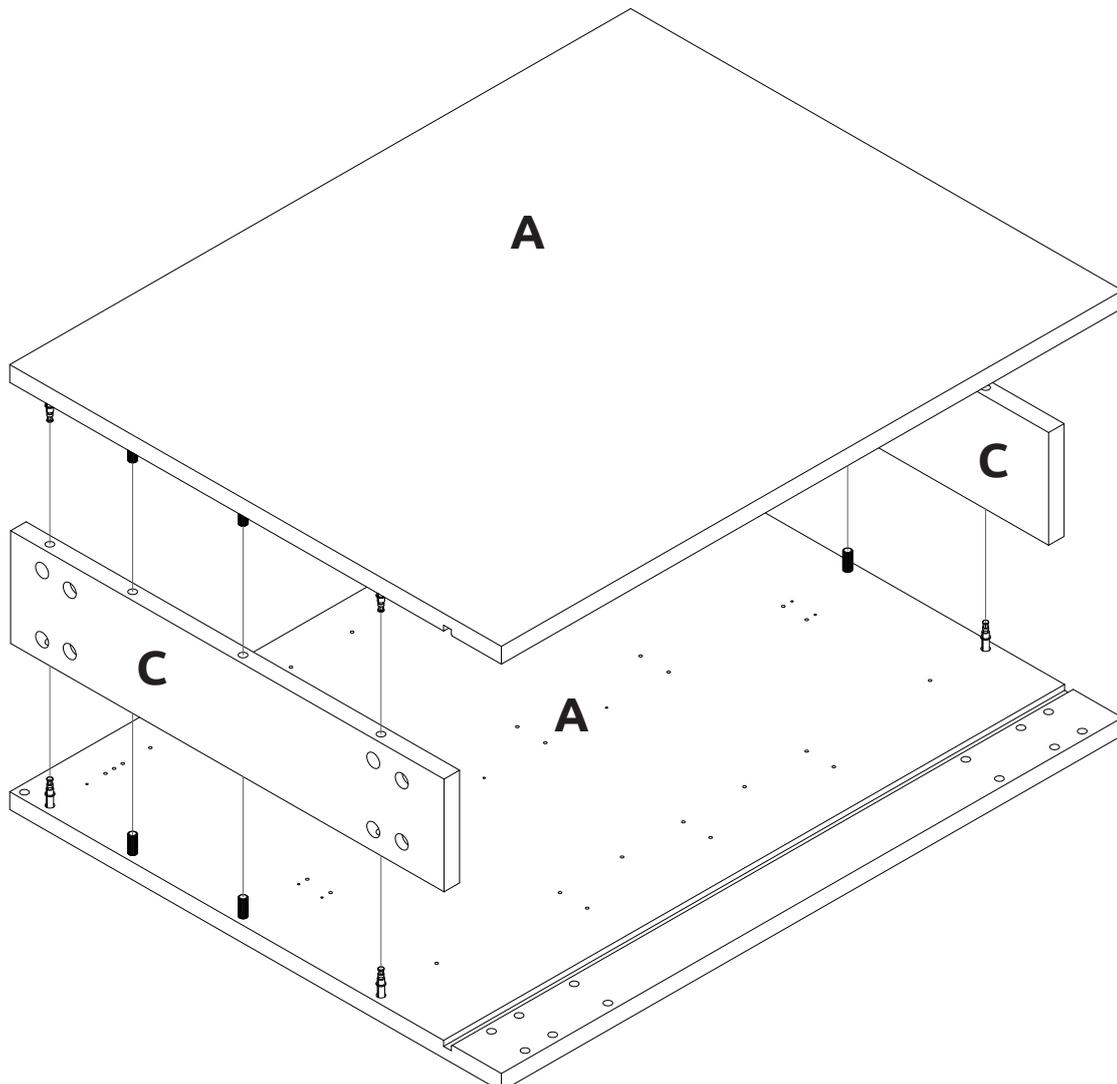


BASE UNIT

150, 1 Door Assembly Guide



Step 4.

Slide back panel **(B)** into groove of end panels **(A)**. Once back panel **(B)** is in position, ensure the panel is flush & square with bottom of end panels.

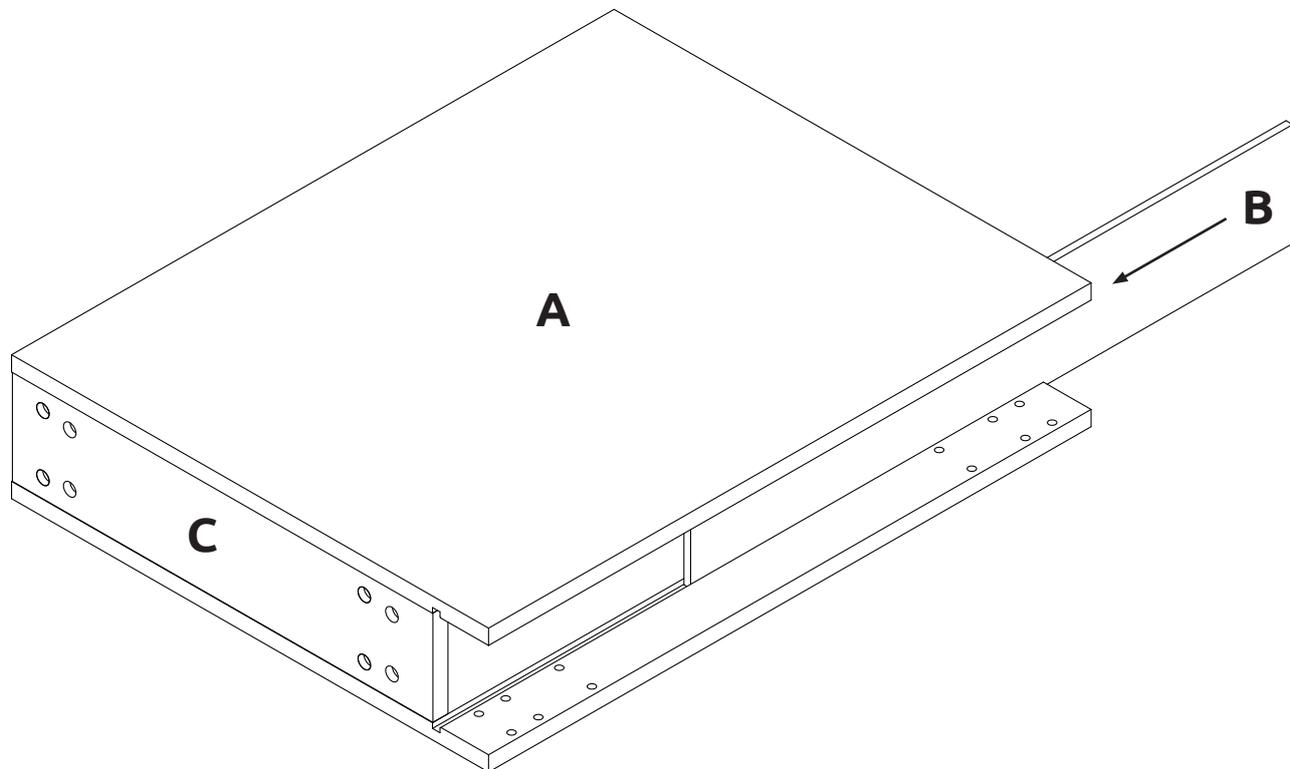

BASE UNIT


150, 1 Door Assembly Guide

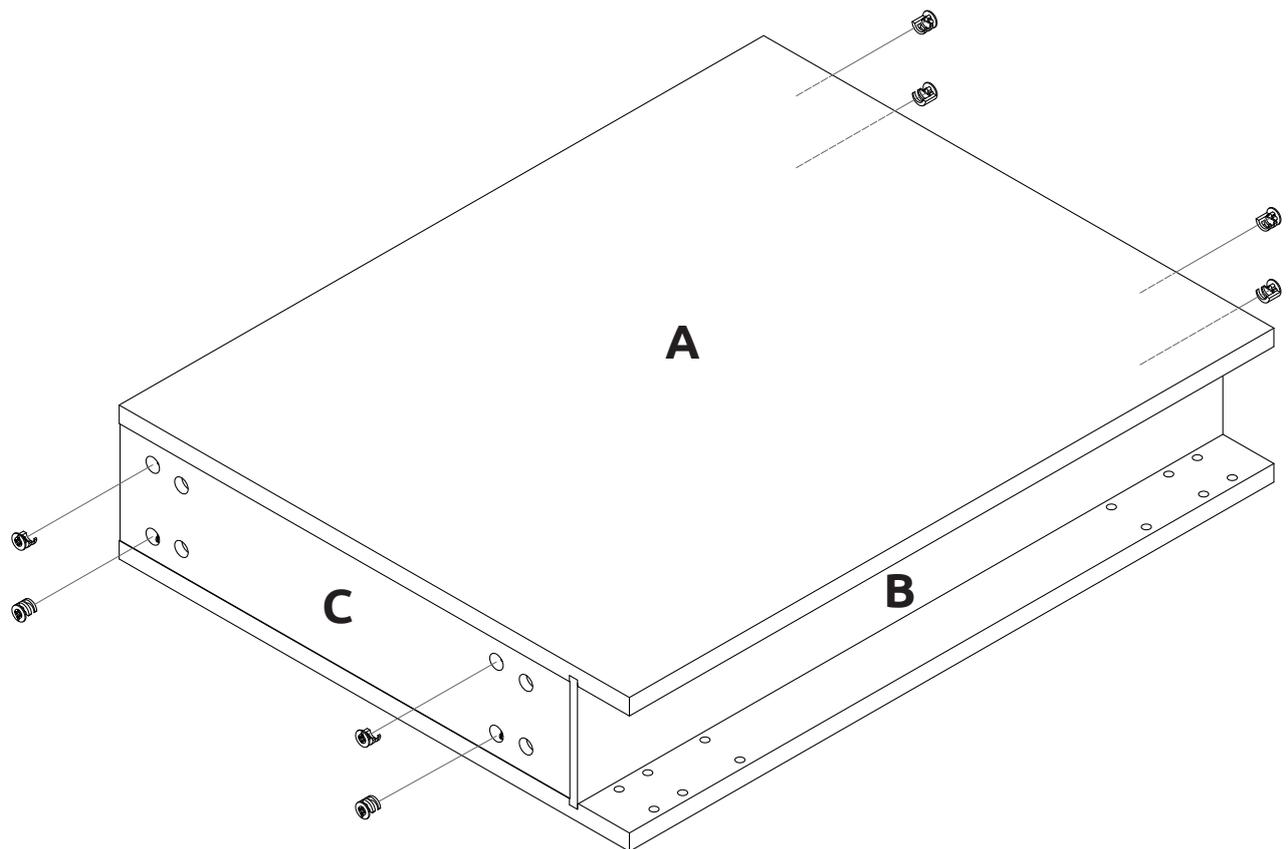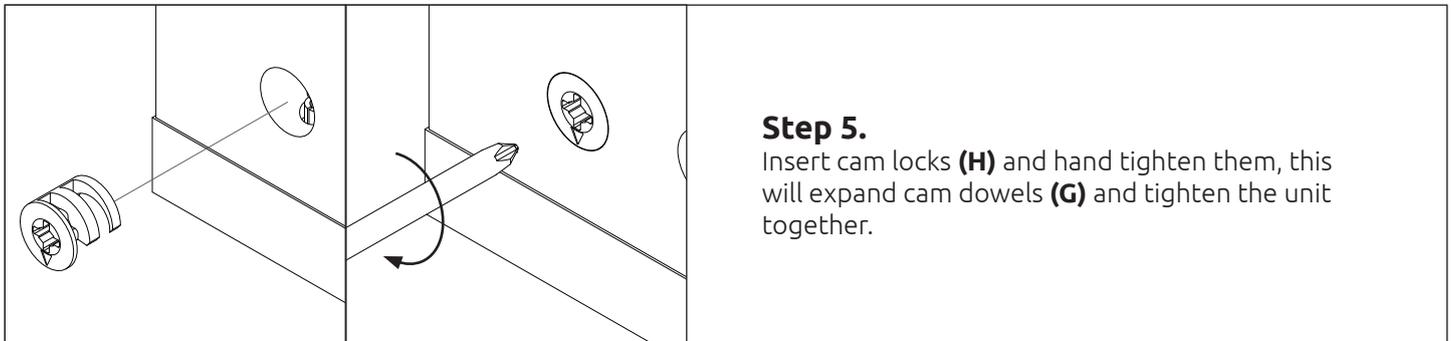


Do **not** use power tools with cam lock **(H)**

BASE UNIT

150, 1 Door Assembly Guide

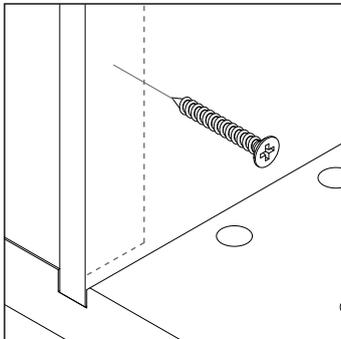

Step 6.
 Ensure the unit is square. Secure back panel **(B)** with 2 x 30mm screws **(K)** at the top & bottom of back panel **(B)** into both fixed shelves **(C)**, as shown. Ensure you screw into the centre of the fixed panels **(C)** (9mm from the edge).


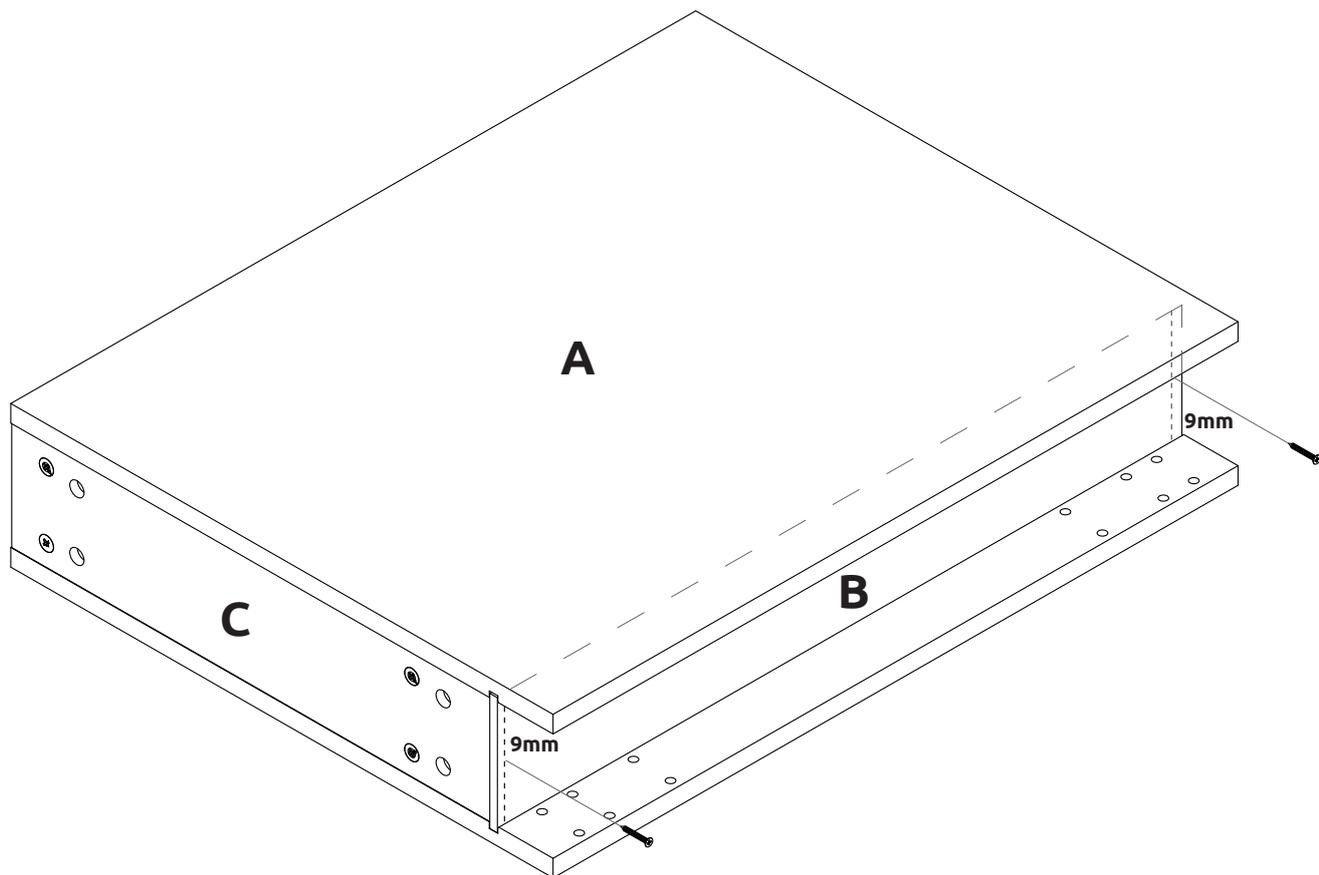


BASE UNIT


150, 1 Door Assembly Guide

Step 7.

Position legs as shown on the diagram below. Ensure legs are rotated to also provide support to the end panels (**A**). Once positioned, secure each of the legs into place with 4 x 15mm screws (**L**) per leg. Push leg firmly down into leg base. Adjust legs to **155mm** before turning unit upright. Once in situ level accordingly.

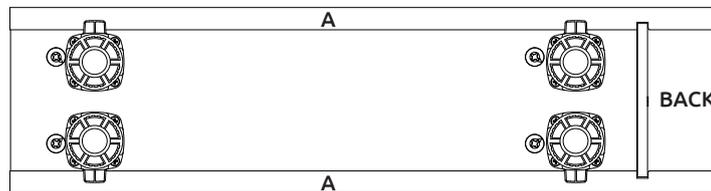


LEG POSITIONS - UNDERSIDE VIEW

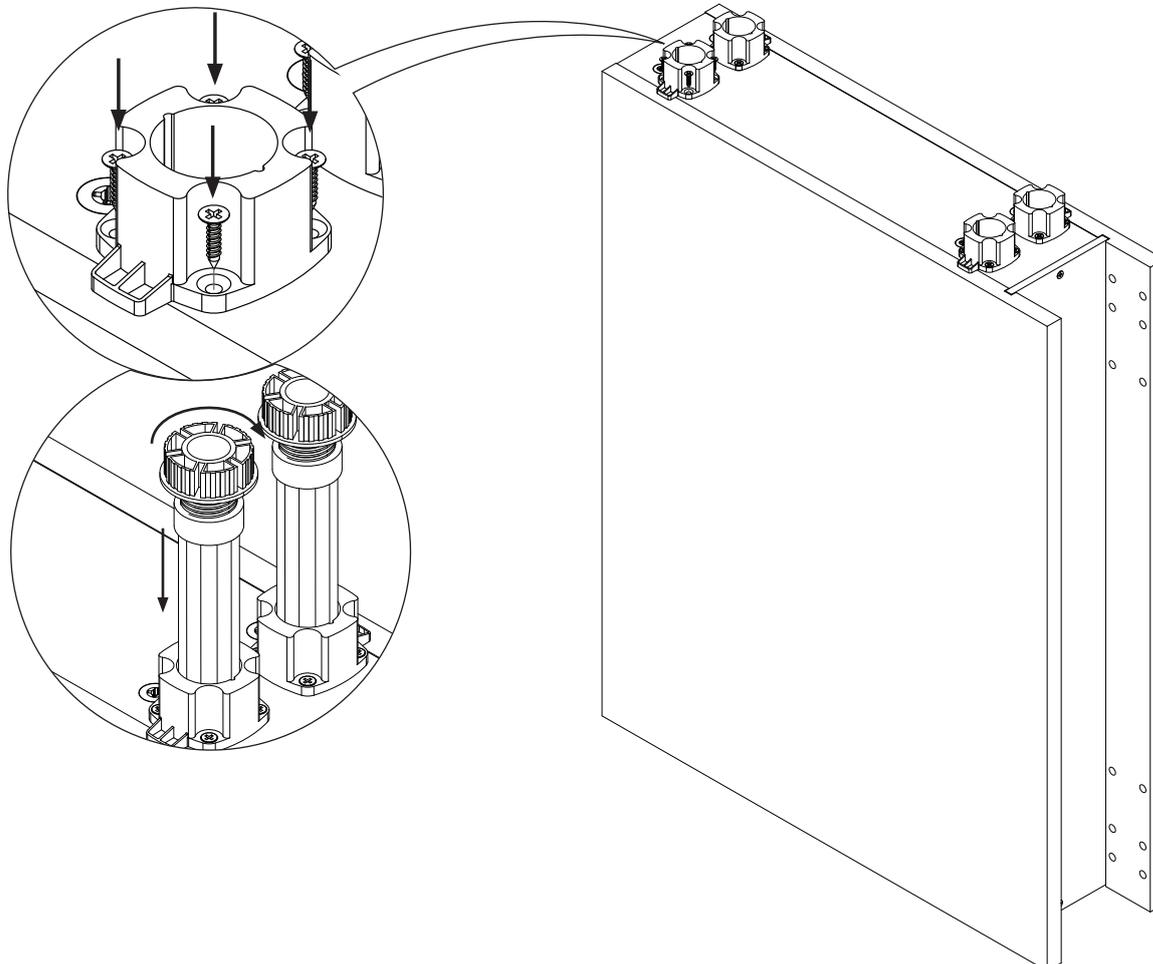

BASE UNIT



150, 1 Door Assembly Guide

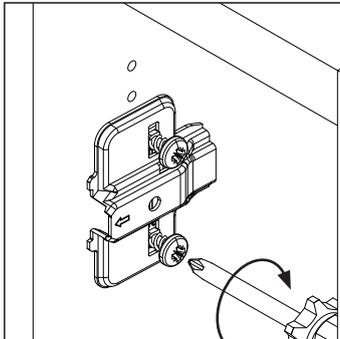

Step 8.

Attach hinge plates onto end panel **(A)** as shown, using 2 screws already located in hinge plates.

Hinge side to be mounted in accordance to customer specific kitchen plan.

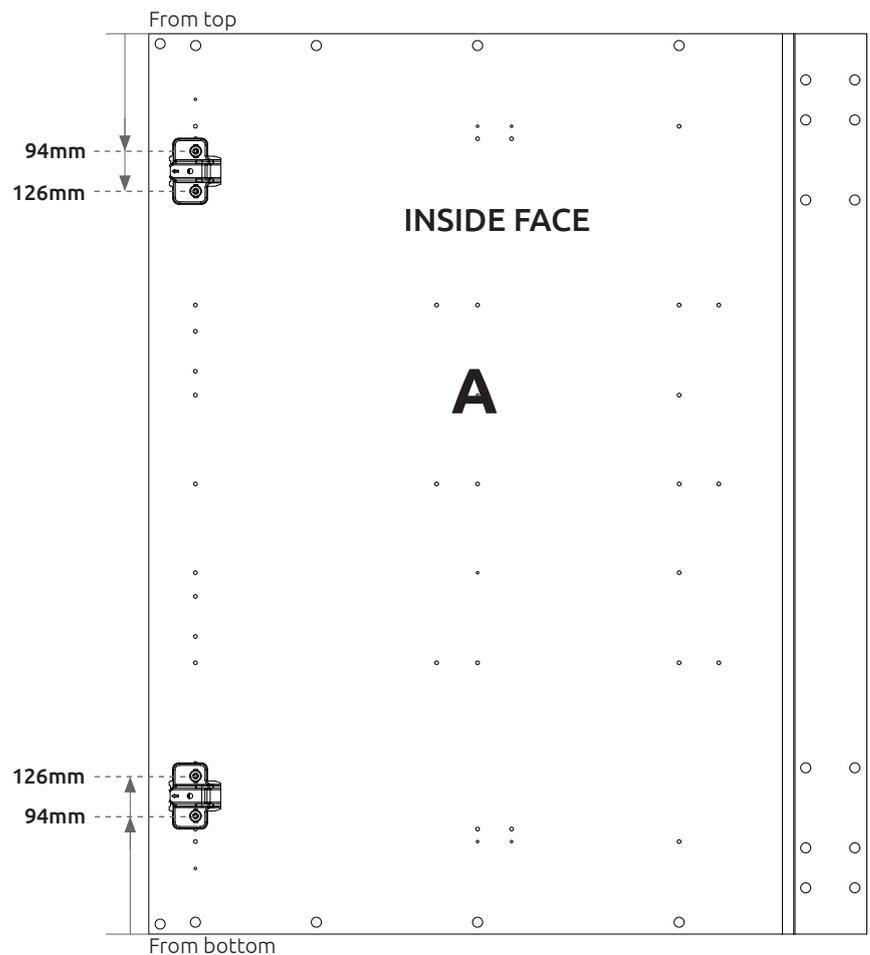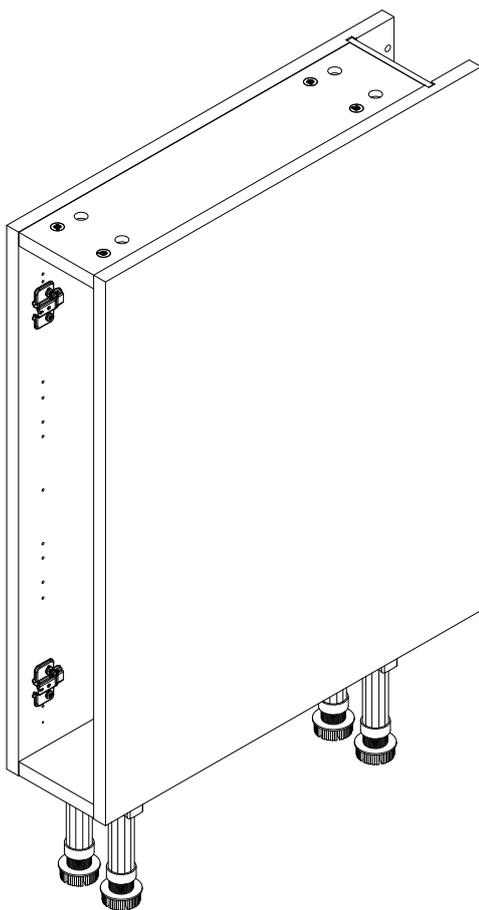

BASE UNIT




150, 1 Door Assembly Guide



Screws for attaching to walls and worktops are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall and worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.

Step 9.

Use 2 x 15mm screws (**L**) to secure each of the L brackets to the unit at either side.

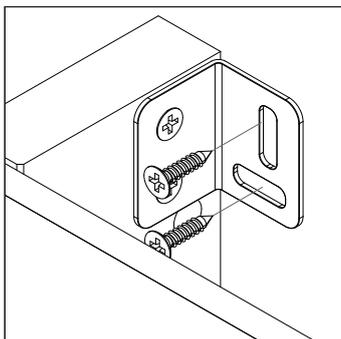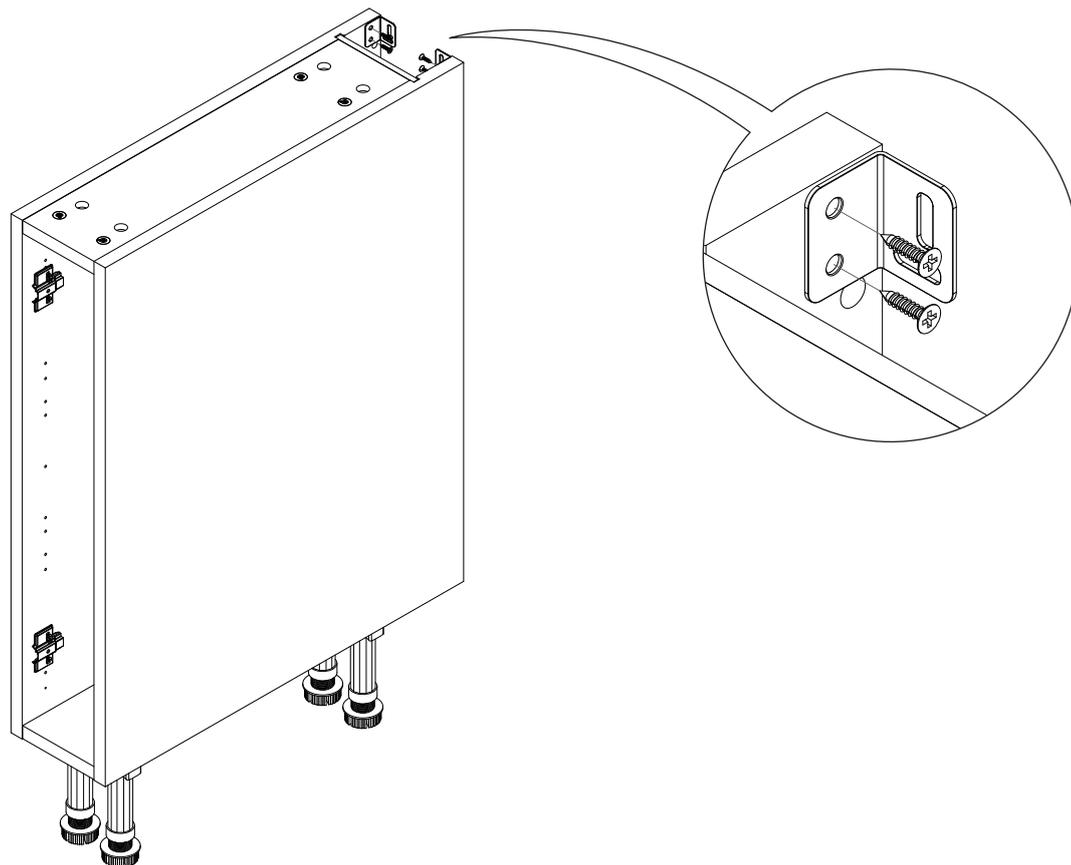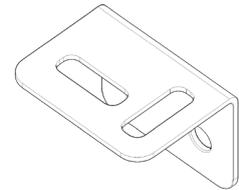

Step 10.



Ensure the unit is positioned correctly and level. Screw through the L bracket into the wall to secure the unit.

BASE UNIT

150, 1 Door Assembly Guide

Step 11.

Screw from inside adjacent units using the 30mm screws **(K)** provided. Screw just to the rear of the hinge plate at the top and bottom of the adjacent unit, place cover caps **(M)** to the screw heads to conceal them.


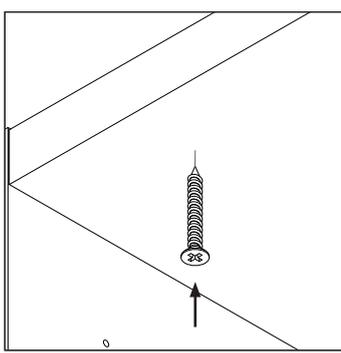
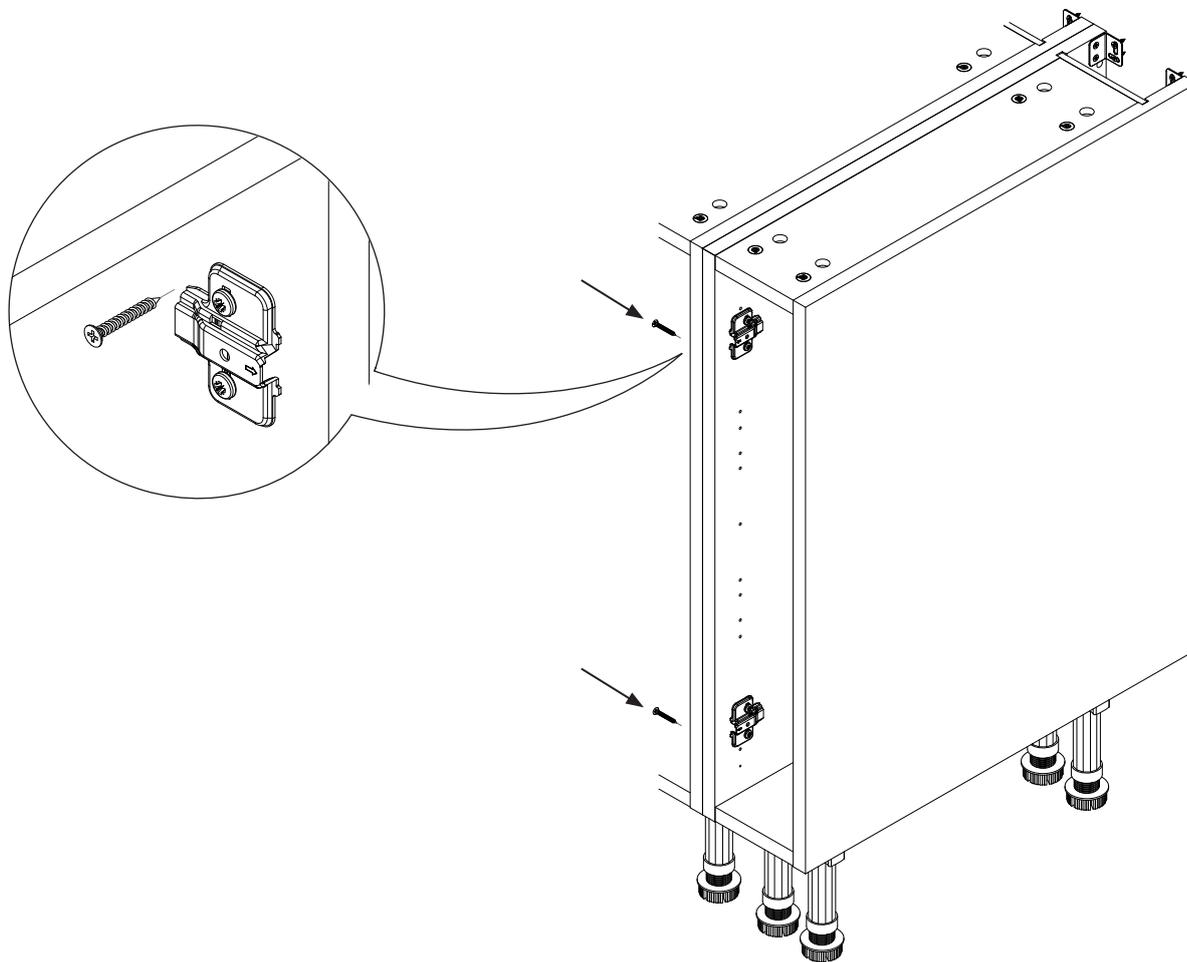



Step 12.



Screw up through fixed shelf **(C)** into your worktop to secure in place.

BASE UNIT

150, 1 Door Assembly Guide

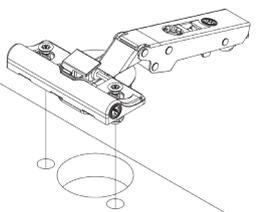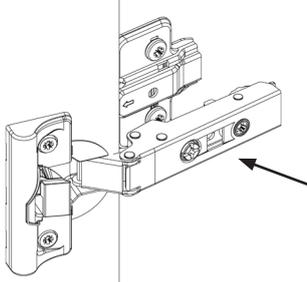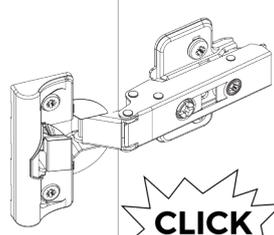	<p>HINGE ATTACHMENT AND ADJUSTMENT</p> <p>Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.</p>  <p>Hinge dowels</p>	
	 <p>CLICK</p>	<p>Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.</p>
<p>Step 3. Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

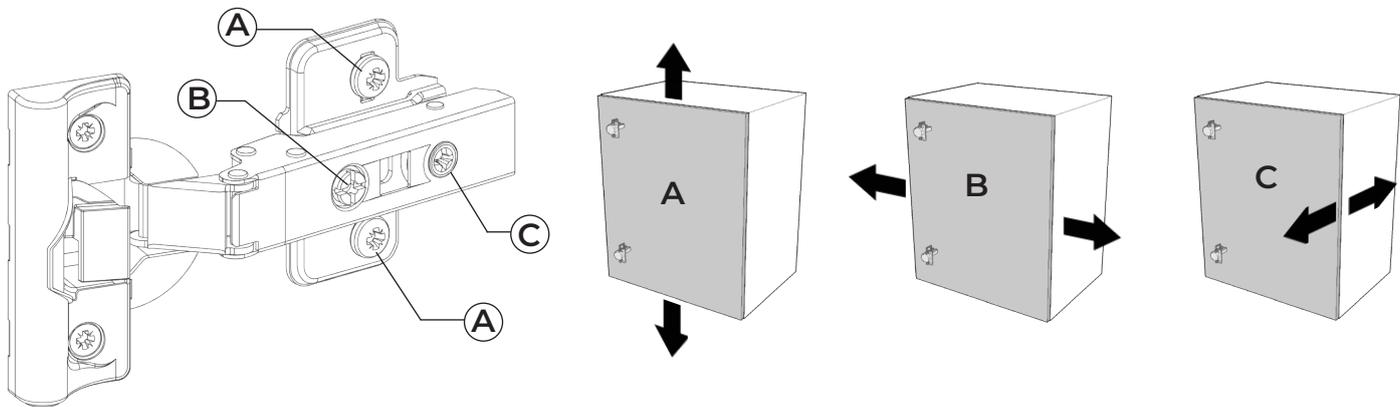

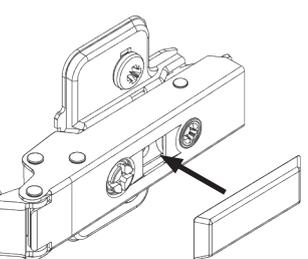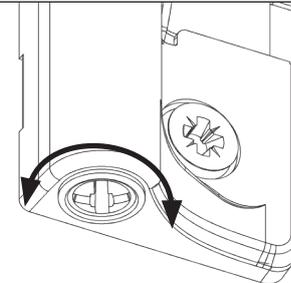	<p>Step 4. Fit cover caps to hinges and adjust soft-close to suit.</p>	
---	---	---



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.

wren