


Vogue


wren

TOWER UNIT


300-600, 2 Door 6 Shelf Assembly Guide

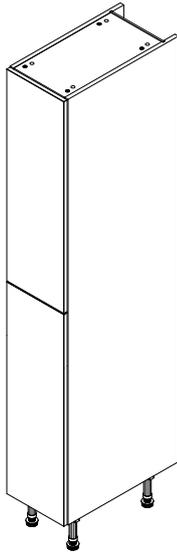


300 50/50

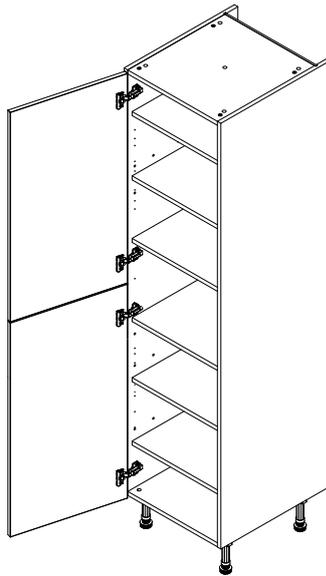


500 50/50

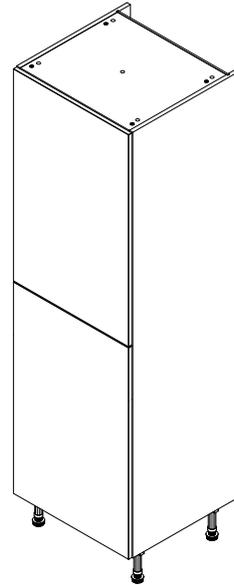


600 50/50

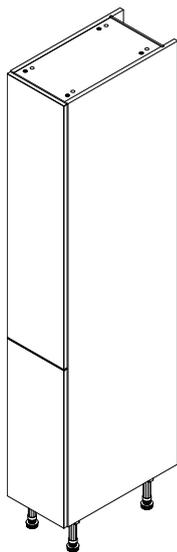

300 70/30

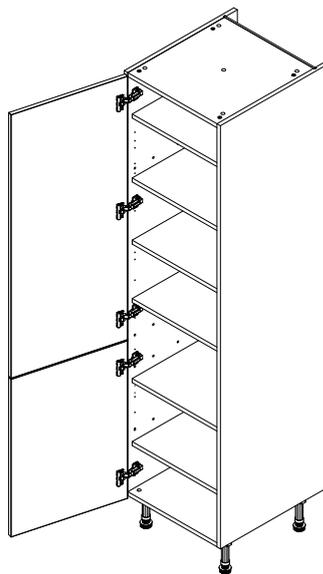

500 70/30

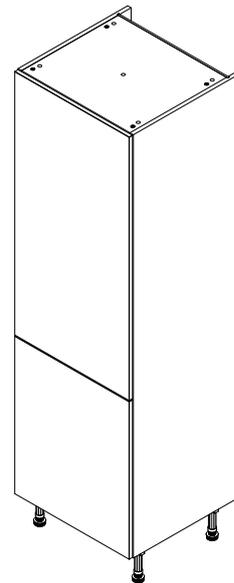

600 70/30

TOWER UNIT


300-600, 2 Door 6 Shelf Assembly Guide



BEFORE YOU START


INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

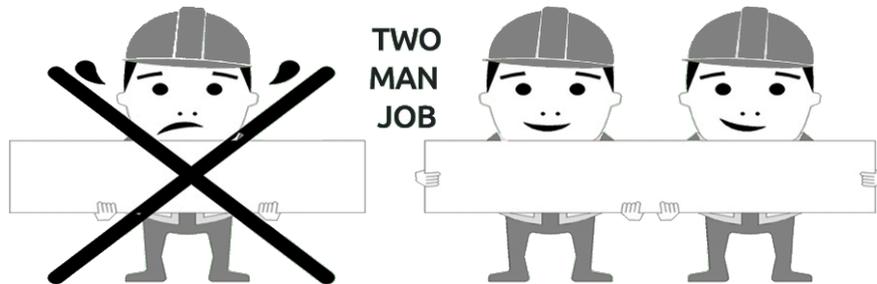


TOWER UNIT


300-600, 2 Door 6 Shelf Assembly Guide

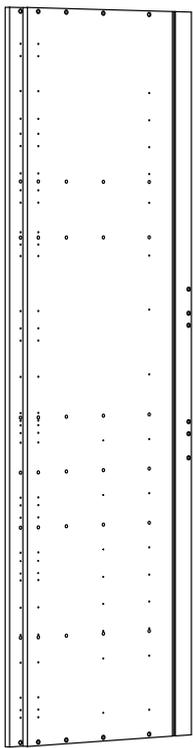


Panel A
x2 End Panel

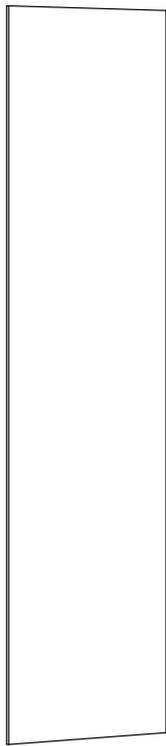


Panel B
x1 Back Panel

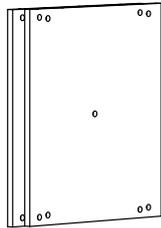


Panel C
x2 Fixed Shelf




Panel D
x2 Rail

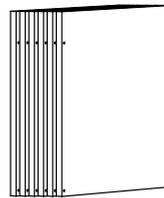

Shelf
x6 Loose Shelf

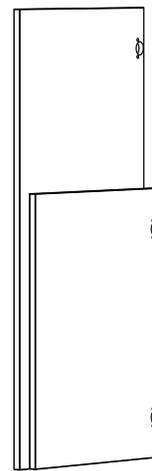


Frontal (70/30 Option)
x2 Front Panel
(Packed Separately)

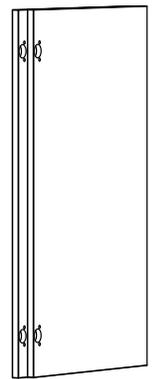

Frontal (50/50 Option)
x2 Front Panel
(Packed Separately)

TOWER UNIT


300-600, 2 Door 6 Shelf Assembly Guide




(F) x16
Wooden
Dowel




(L) x32
15mm
Screw




(K) x10
30mm
Screw




(G) x12
Cam Dowel
(Expanding)

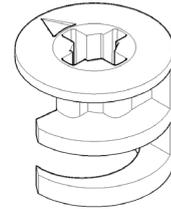


(H) x12
Cam Lock

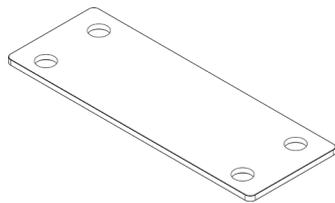

(U) x2
Fixing Plate

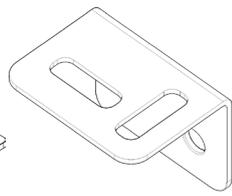


L Bracket
x2

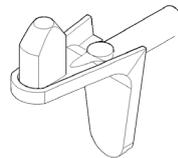


(Z) x24
Shelf Peg Metal




(M) x4
Cover Cap

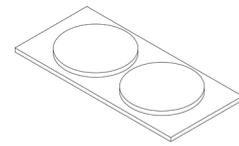


(N) x2
Door Buffer

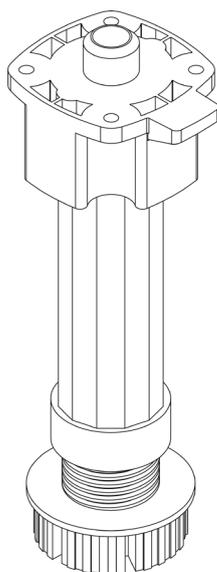

Leg

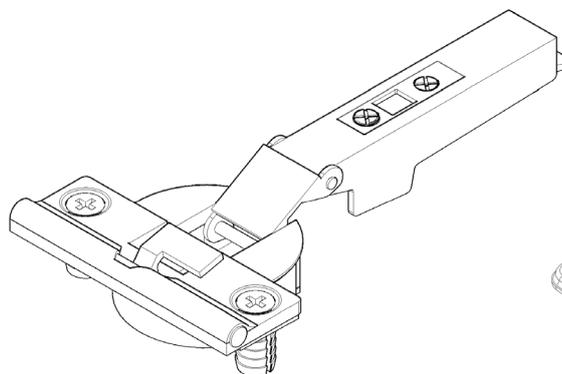


Hinge
Inc Screws & Cover Plate

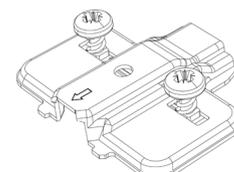


Hinge Mounting Plate
Inc Screws


TOWER UNIT

300-600, 2 Door 6 Shelf Assembly Guide

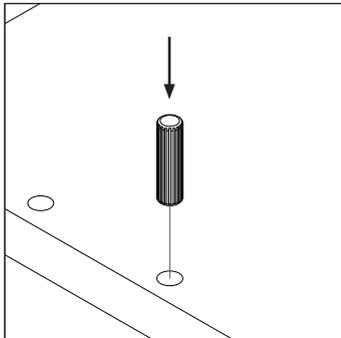

Step 1.
Seat dowels (F) into holes in both end panels (A) as shown.

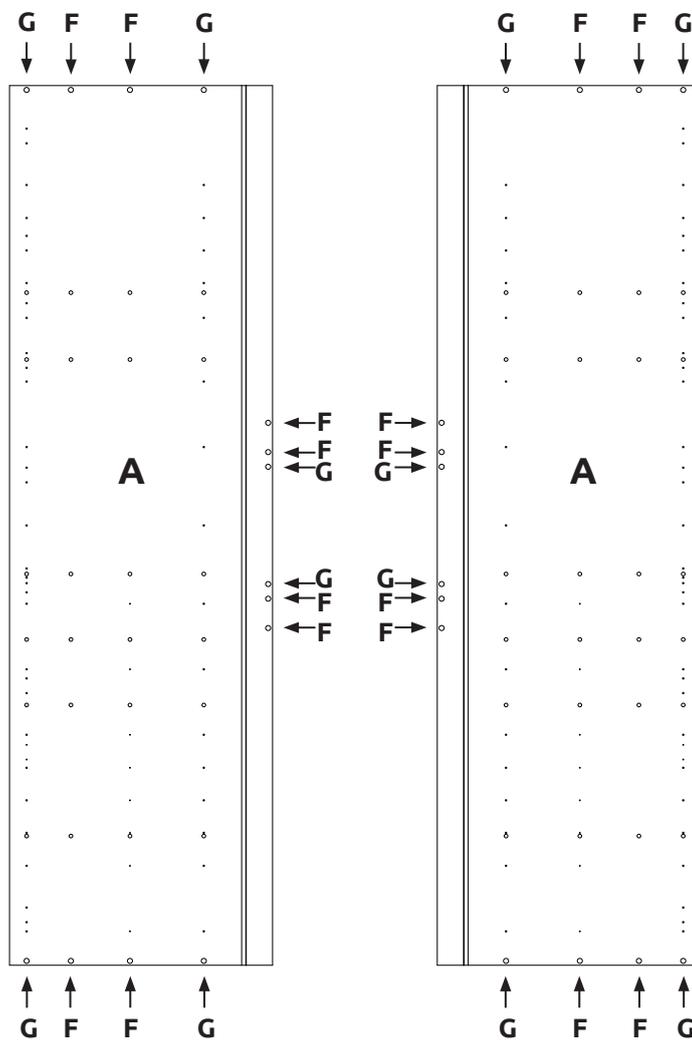

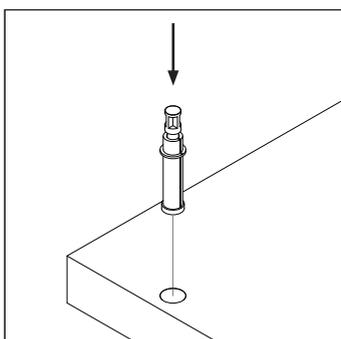

Step 2.
Seat expanding cam dowels (G) into holes in both end panels (A) as shown.

TOWER UNIT


300-600, 2 Door 6 Shelf Assembly Guide

Step 3.

Attach panels **(C)** & **(D)** to end panels **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown.



All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

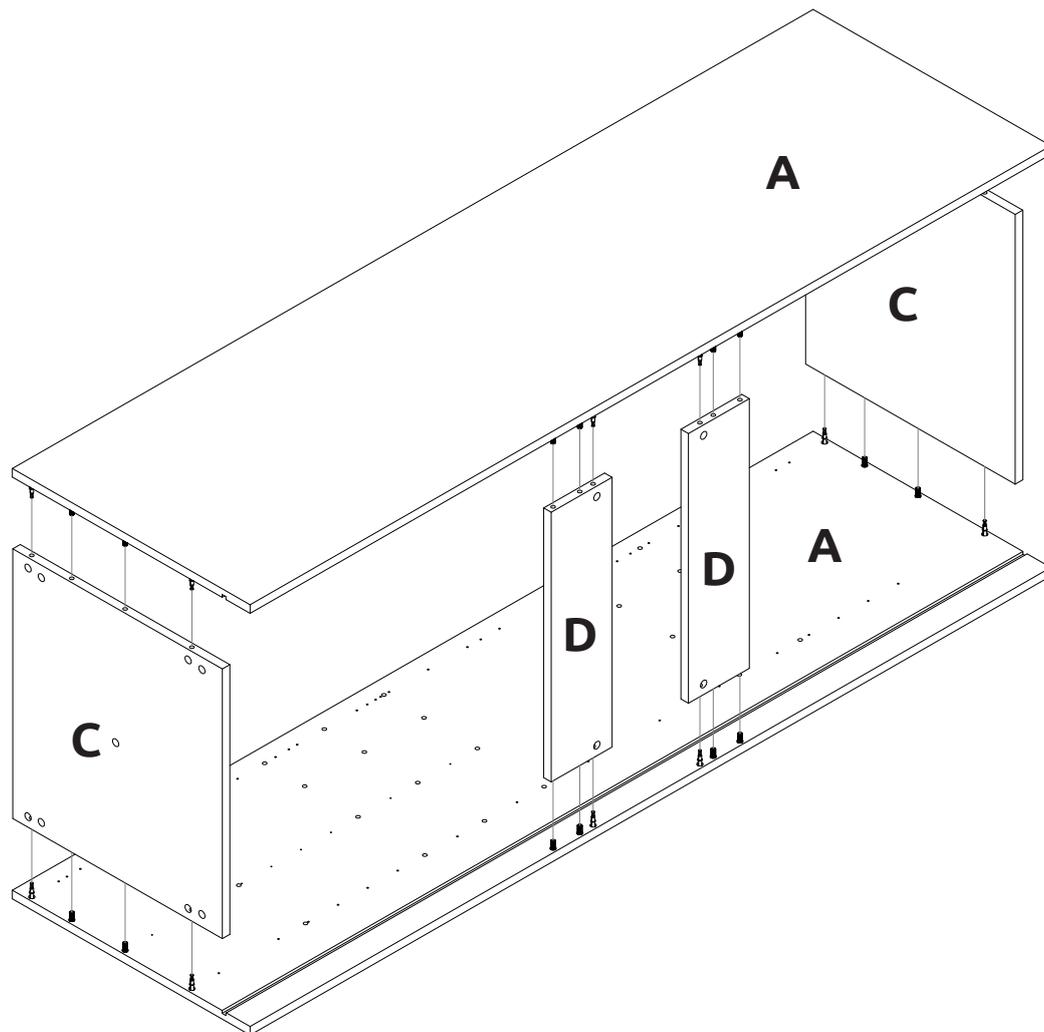


TOWER UNIT

300-600, 2 Door 6 Shelf Assembly Guide



Step 4.

Slide back panel **(B)** into groove of end panels **(A)**. Once back panel **(B)** is in position, ensure the panel is flush & square with bottom of end panels.

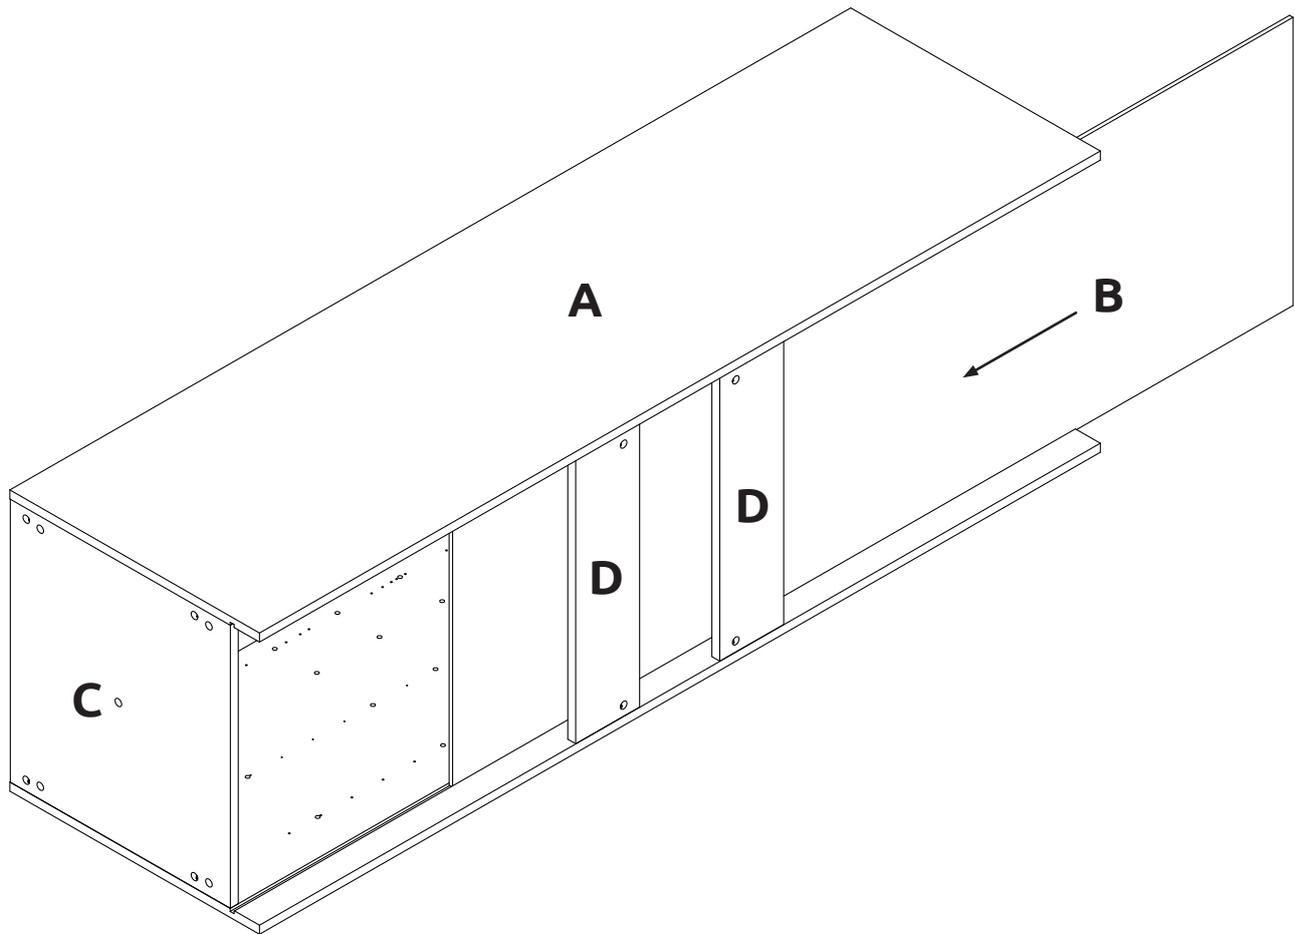

TOWER UNIT


300-600, 2 Door 6 Shelf Assembly Guide

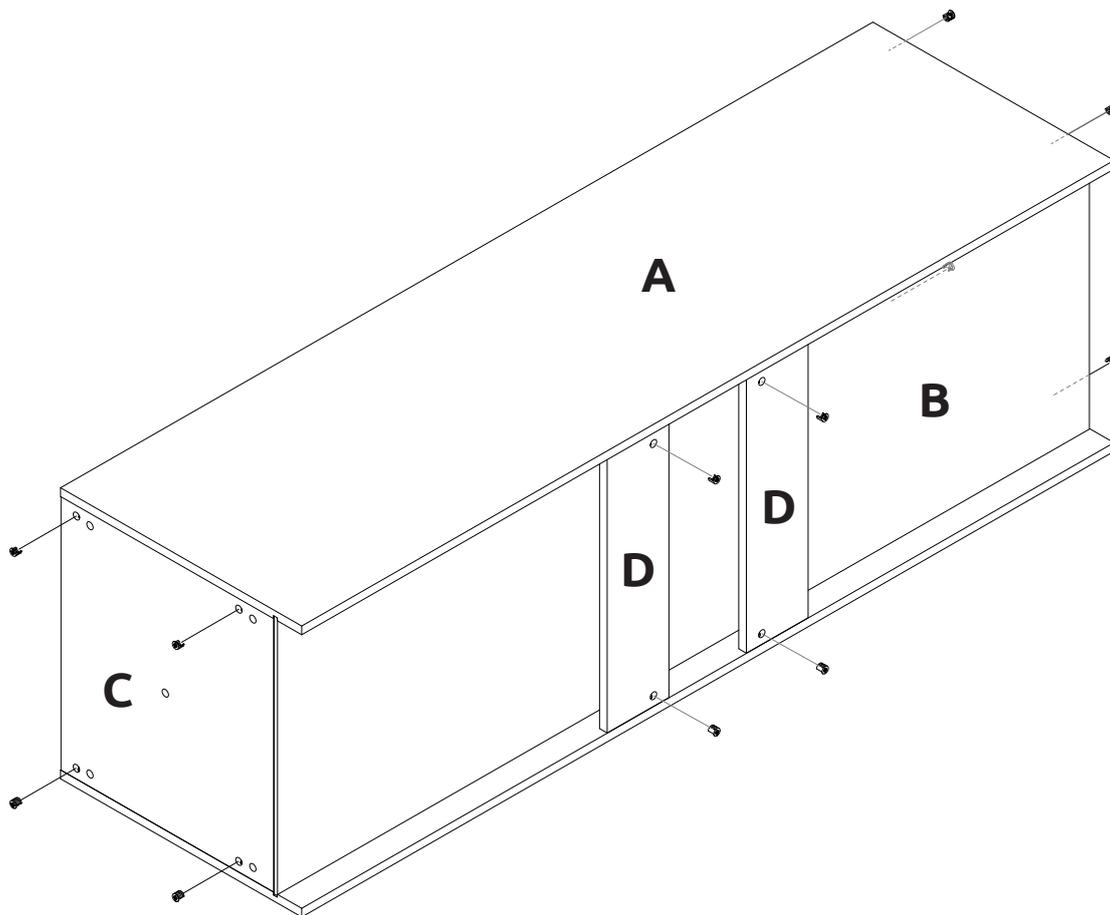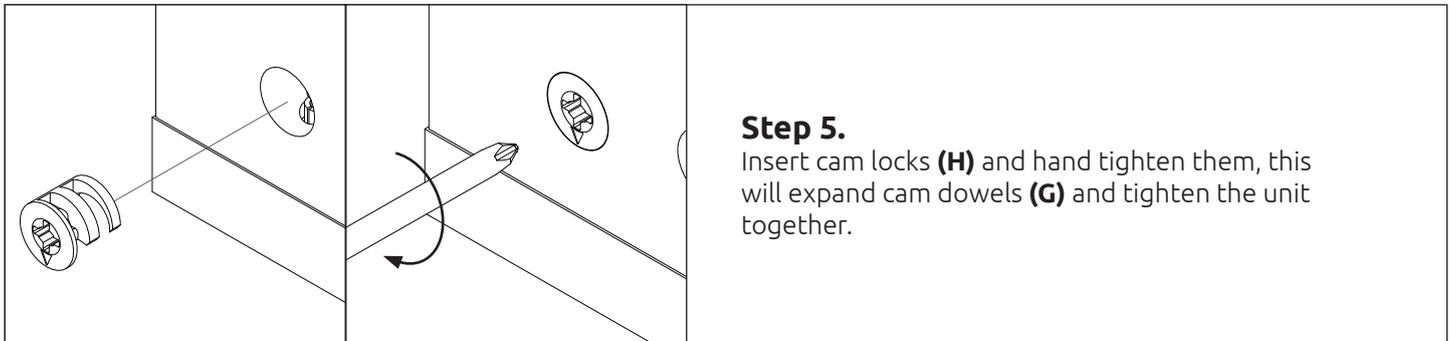


Do **not** use power tools with cam lock (**H**)

TOWER UNIT

300-600, 2 Door 6 Shelf Assembly Guide

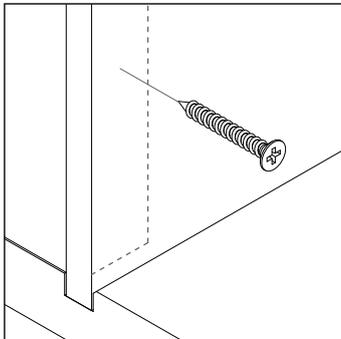

Step 6.
 Ensure the unit is square. Secure back panel (B) with 6 x 30mm screws (K) equally spaced at the top and bottom of back panel (B) into panels (C), as shown. Ensure you screw into the centre of the panels (C) (9mm from the edge).

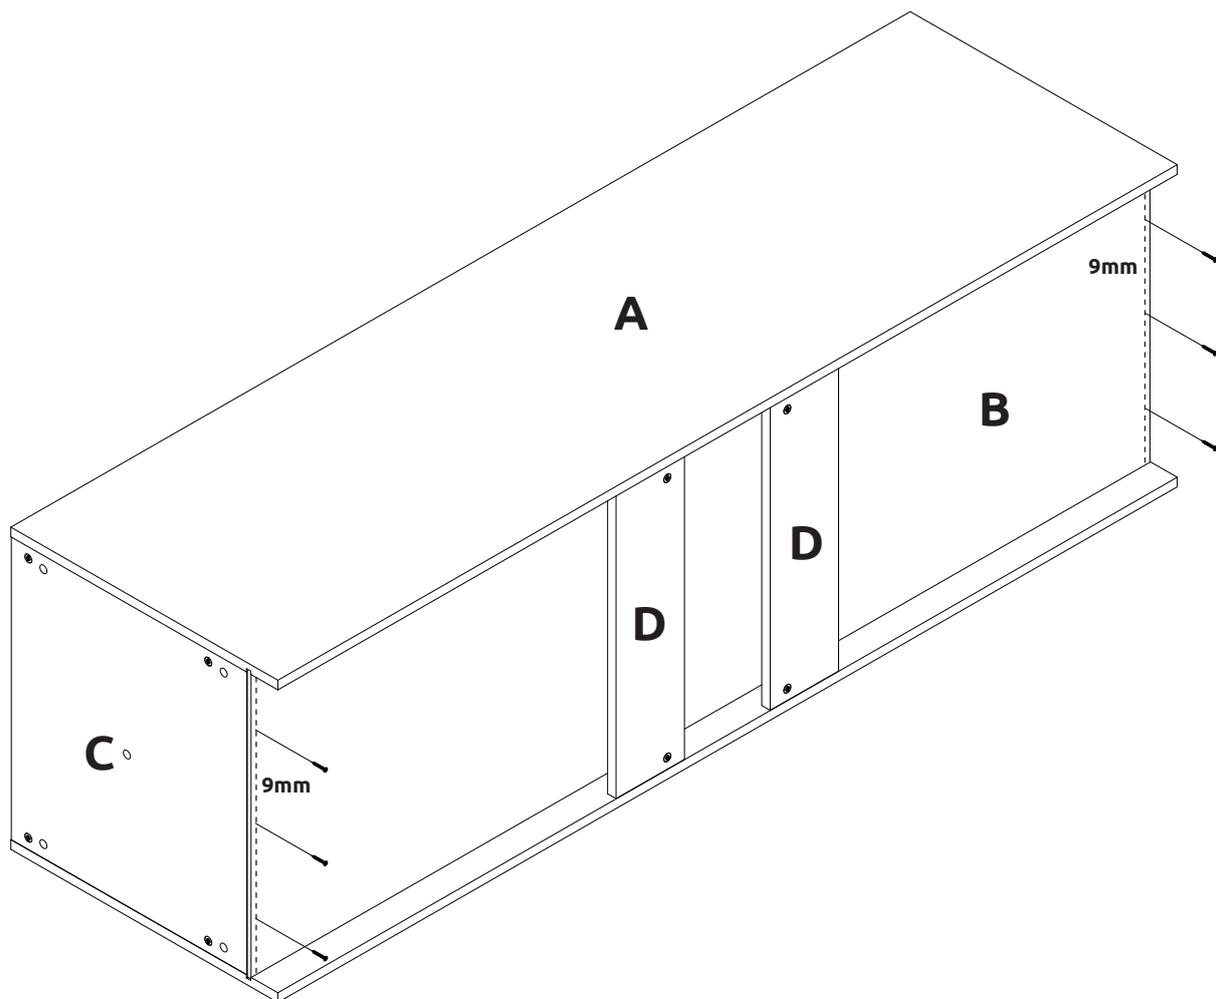

TOWER UNIT

300-600, 2 Door 6 Shelf Assembly Guide




Step 7.

Position legs as shown on the diagram below. Ensure legs are rotated to also provide support to the end panels (**A**). Once positioned, secure each of the legs into place with 4 x 15mm screws (**L**) per leg. Push leg firmly down into leg base. Adjust legs to **155mm** before turning unit upright. Once in situ level accordingly.



600 width = 5x leg



It is important to lift unit onto it's legs. Do not tilt as depicted in image.

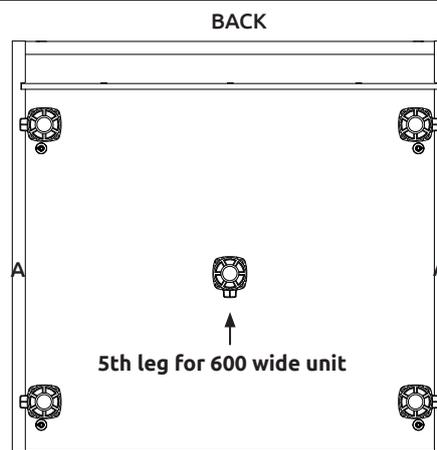


LEG POSITIONS - UNDERSIDE VIEW

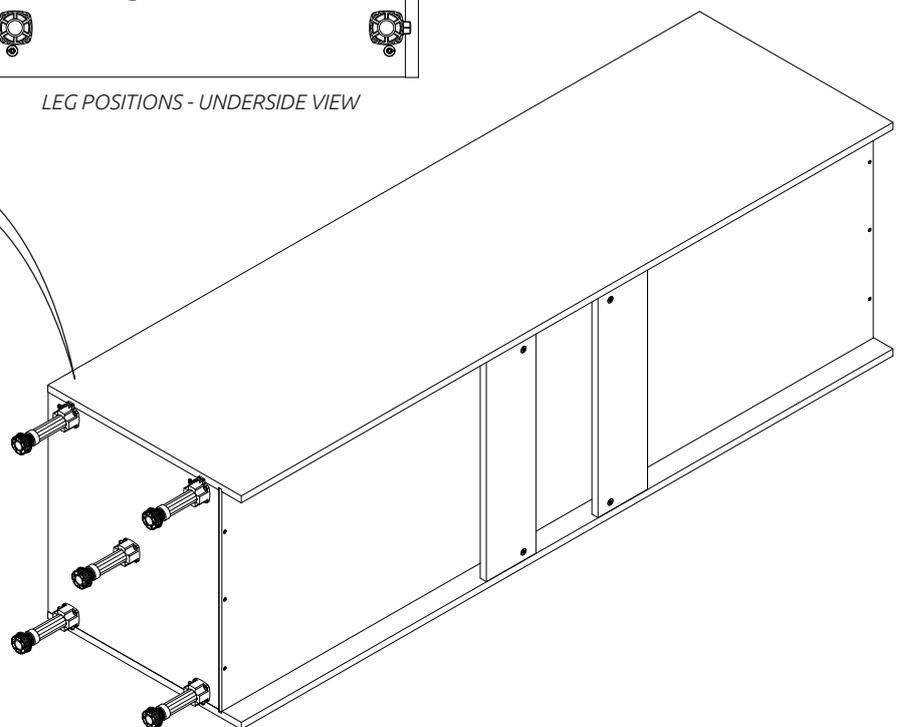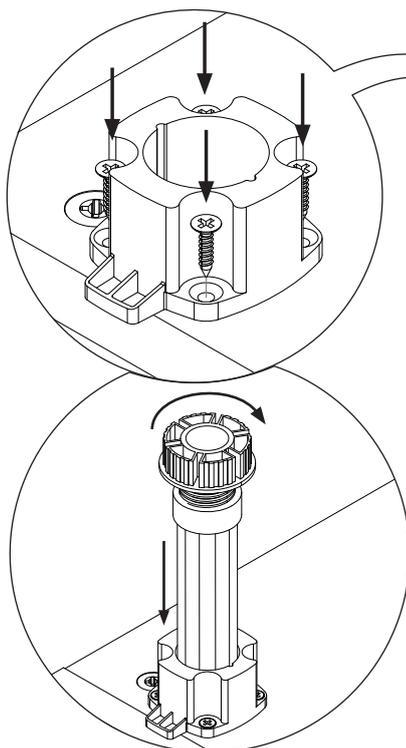

TOWER UNIT


300-600, 2 Door 6 Shelf Assembly Guide

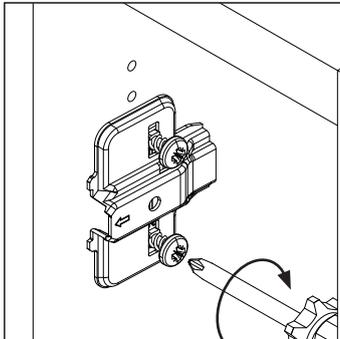

Step 8.

Attach hinge plates onto both end panels (A) as shown, using 2 screws already located in hinge plates.

Hinge side to be mounted in accordance to customer specific kitchen plan.

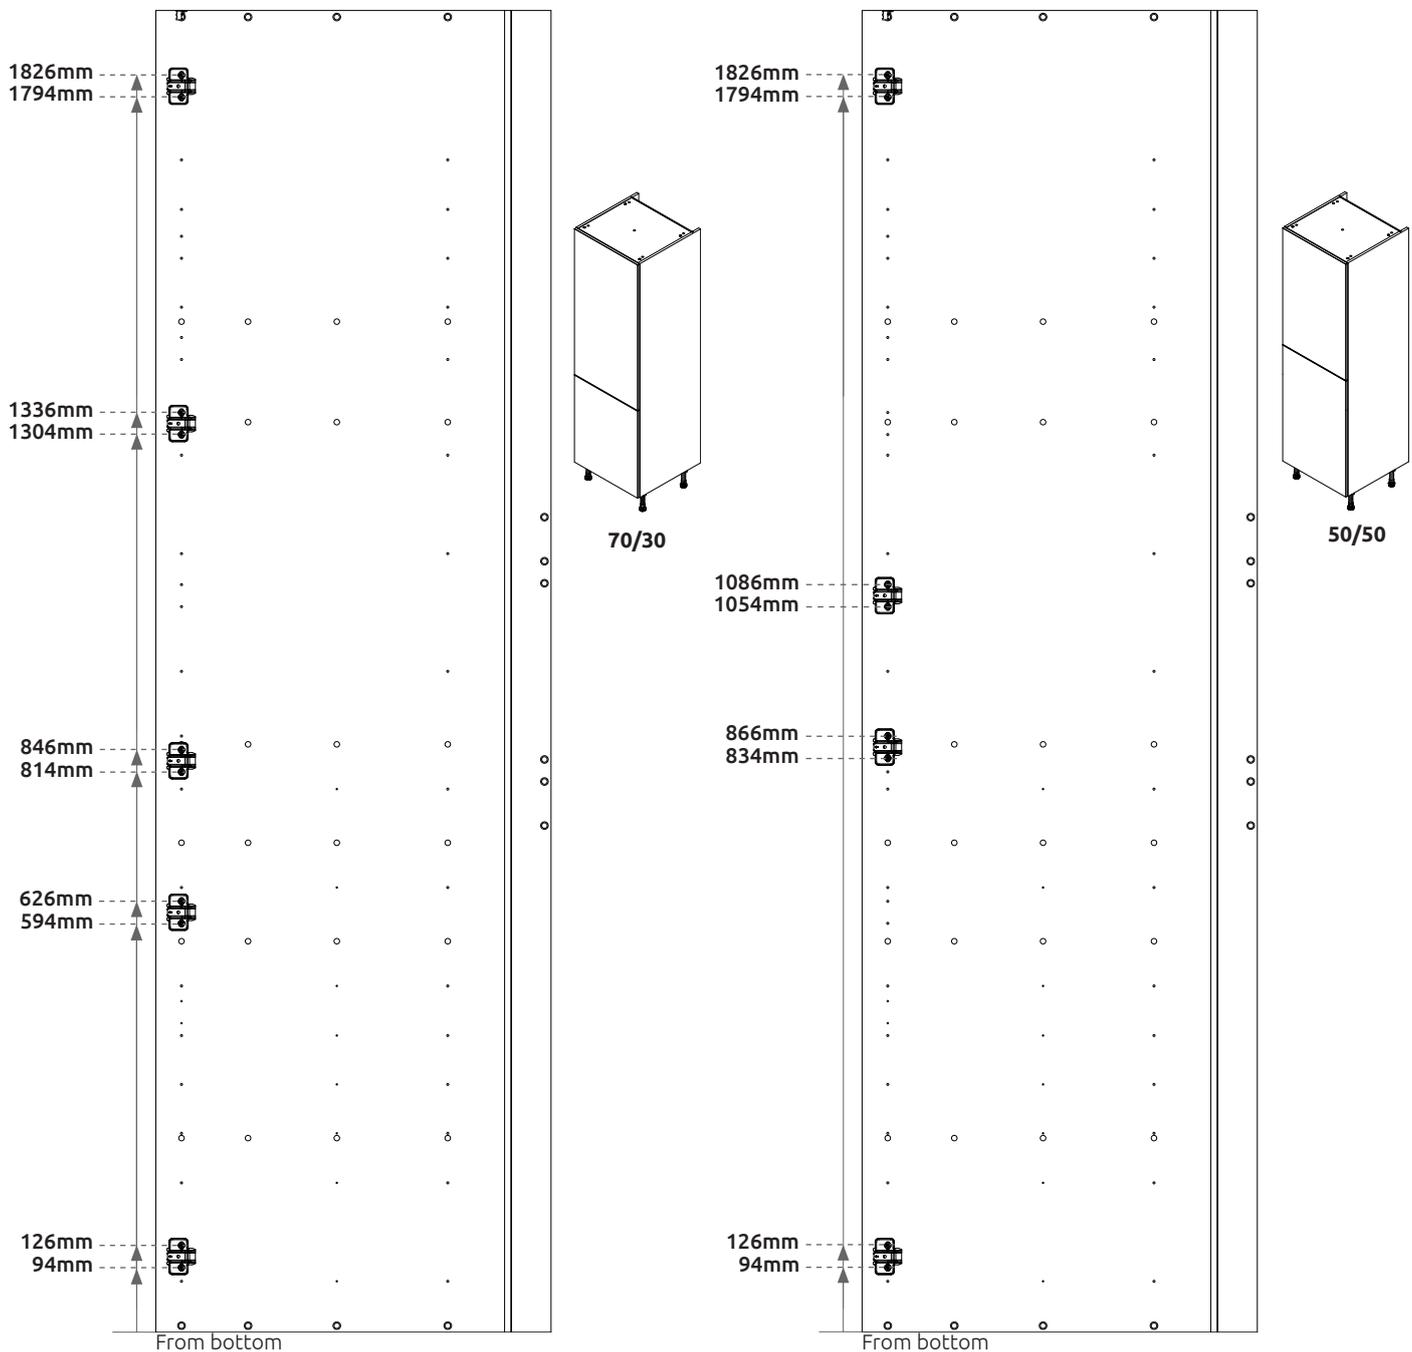


TOWER UNIT

300-600, 2 Door 6 Shelf Assembly Guide




Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

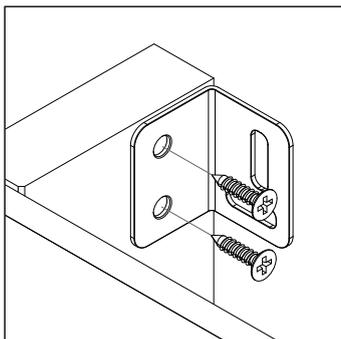


Step 9.

Use 2 x 15mm screws (**L**) to secure each of the L brackets to the rear of the unit at either side.

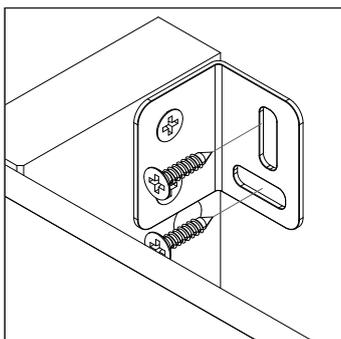

Step 10.

Ensure the unit is positioned correctly and level. Screw through the L bracket into the wall to secure the unit.

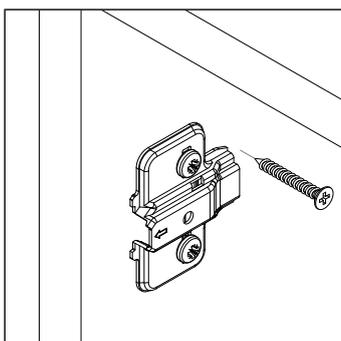



Step 11.



Screw into any side units using 30mm screws (**K**) provided to secure to unit. Screw just to the rear of hinge plate at the top and bottom of both sides of the unit, place cover caps (**M**) on the heads to conceal them.


TOWER UNIT




300-600, 2 Door 6 Shelf Assembly Guide

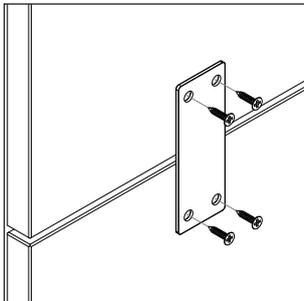	<p>FRONTAL AND HINGE ATTACHMENT</p> <p>Step 1. Align doors to join together using 2 x fixing plates (U) to the back of both frontals. Ensure a 4mm gap is maintained between each frontal once fixed together. Screw in place using 4 x 15mm screws (L) per fixing plate.</p>
---	---

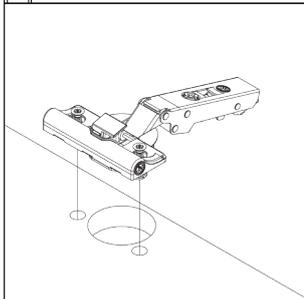	<p>Step 1. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws already located in the hinges.</p>
--	---

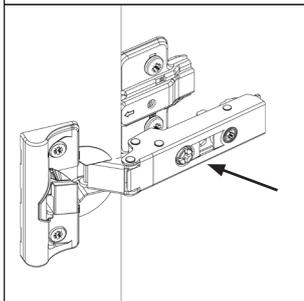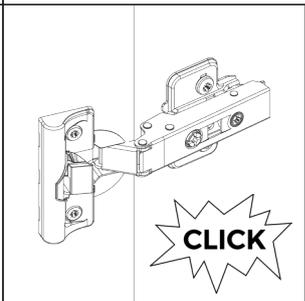	 <p>CLICK</p>	<p>Step 2. Attach the door to unit, clip hinges onto hinge plates and click to secure.</p>
---	---	---

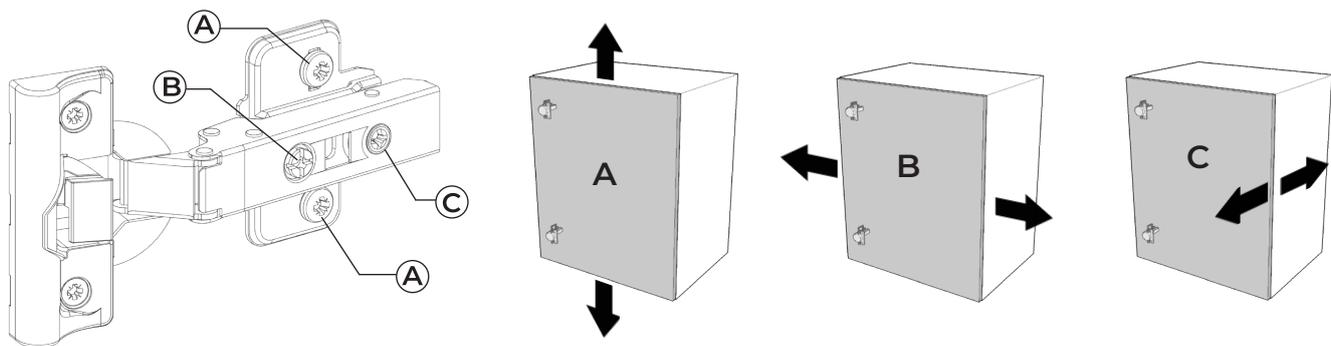

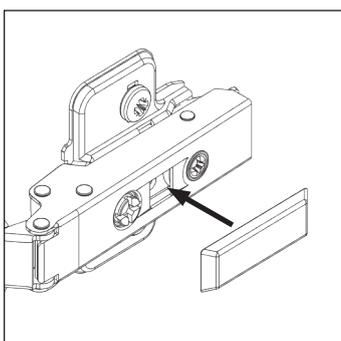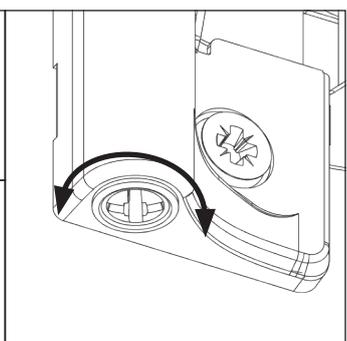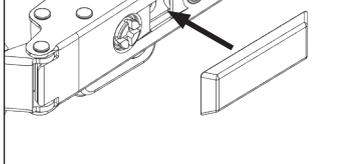	<p>Step 4. Adjust hinges to suit, using the highlighted screw(s) shown.</p>	
	<p>Step 5. Fit cover caps to hinges and adjust soft-close to suit.</p>	



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.

Vogue

wren

TOWER UNIT

300-600, 2 Door 6 Shelf Assembly Guide

Vogue

wren

TOWER UNIT

300-600, 2 Door 6 Shelf Assembly Guide

wren