


Vogue


wren

# WALL UNIT


600-800, Lift Assembly Guide

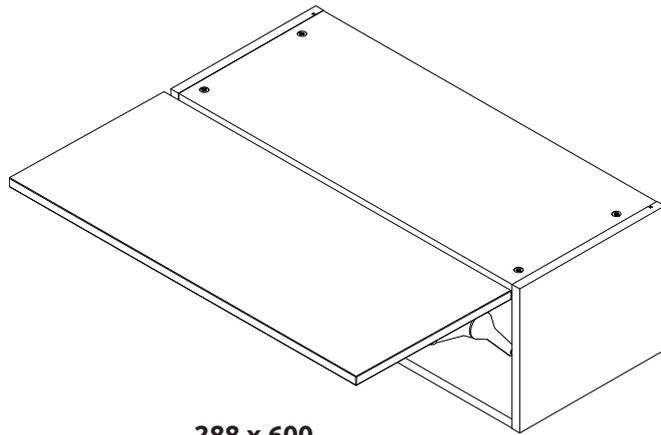


288 x 600

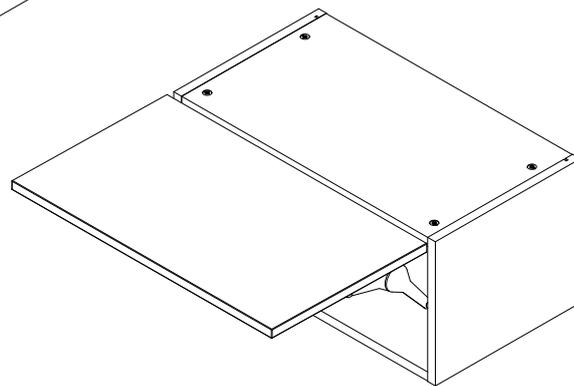

288 x 800

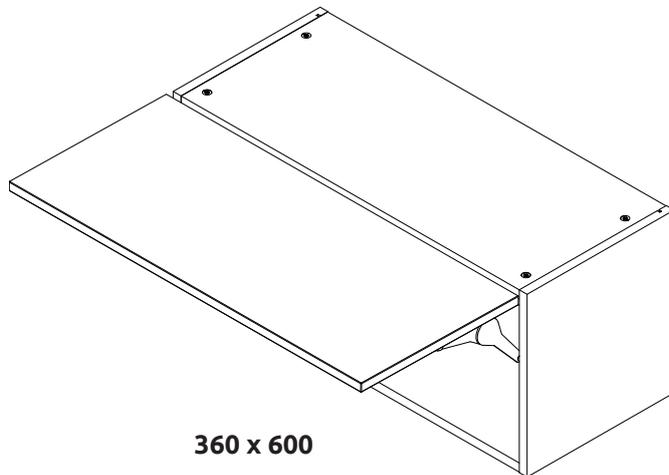

360 x 600

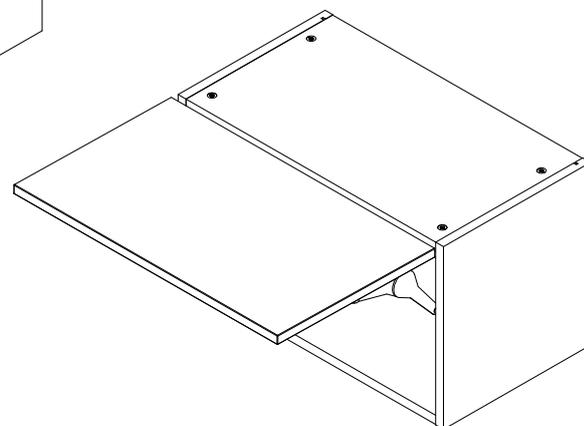

360 x 800

# WALL UNIT


## 600-800, Lift Assembly Guide



### BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

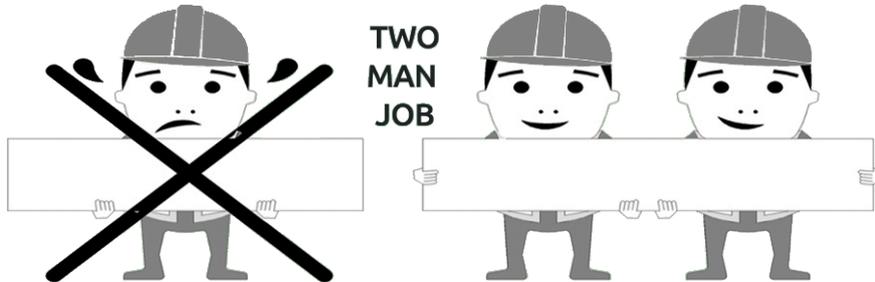


Vogue

wren

# WALL UNIT


600-800, Lift Assembly Guide

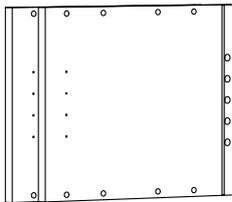


**Panel A**  
x2 End Panel



**Panel B**  
x1 Back Panel

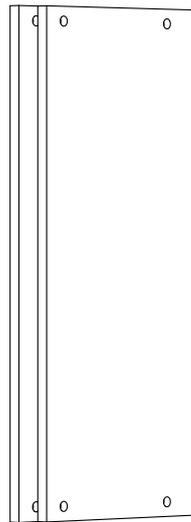


**Panel C**  
2x Fixed Shelf

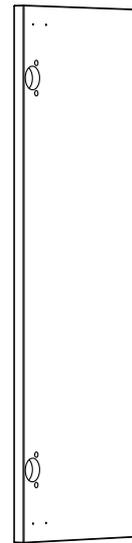

**Frontal**  
x1 Front Panel  
(Packed Separately)

# WALL UNIT


## 600-800, Lift Assembly Guide

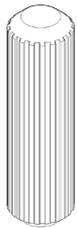

**(F) x8**  
Wooden Dowel



**(L) x8**  
15mm Screw

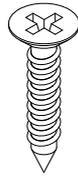


**(S) x4**  
20mm Screw




**(K) x4**  
30mm Screw




**(G) x8**  
Cam Dowel (Expanding)

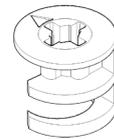


**(H) x8**  
Cam Lock

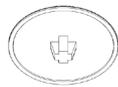


**(M) x8**  
Cover Cap

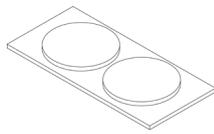


**(N) x1**  
Door Buffer

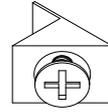


**(T) x10**  
Back Panel Support Clip

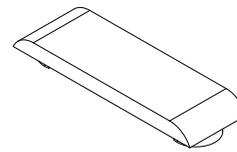


**Hanging Bracket Cover Cap**  
x 2

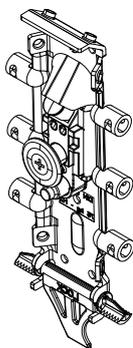


**Hanging Bracket**  
x 2 Inc Screws

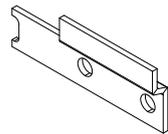


**Hanging Bracket Plate**  
x 2

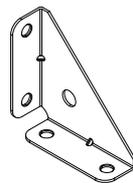


**Corner Gusset**  
x 2

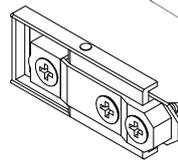

**Hinge Mounting Plate**

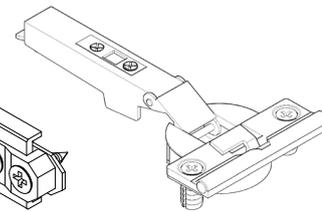

**Hinge**  
Inc Screws & Cover Plate

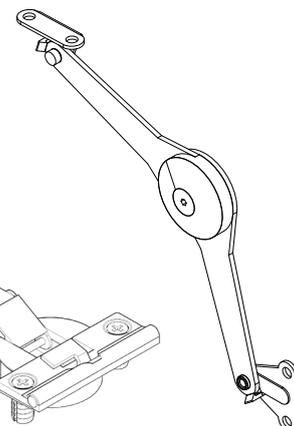


**Lift Hinge**  
2x Inc Screws

# WALL UNIT

## 600-800, Lift Assembly Guide

### Step 1.

Seat dowels (F) into holes in both end panels (A) as shown.

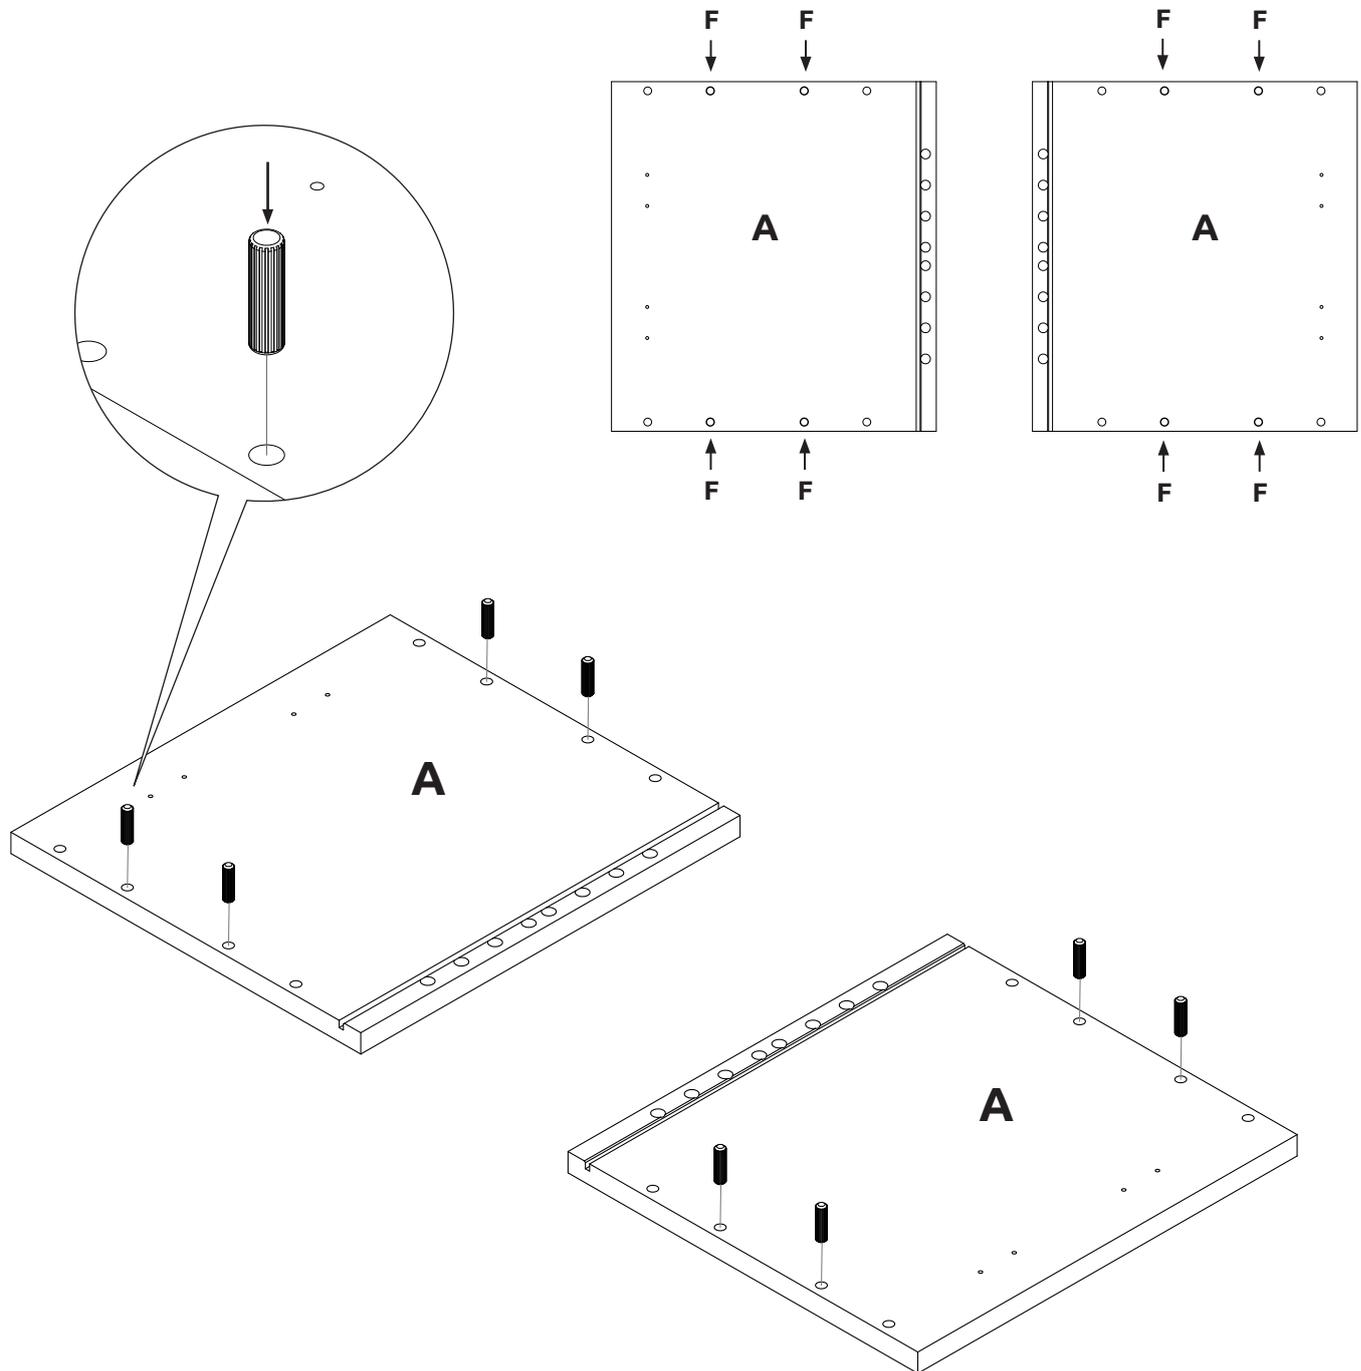


# WALL UNIT

## 600-800, Lift Assembly Guide

### Step 2.

Seat expanding cam dowels (G) into holes in both end panels (A) as shown.

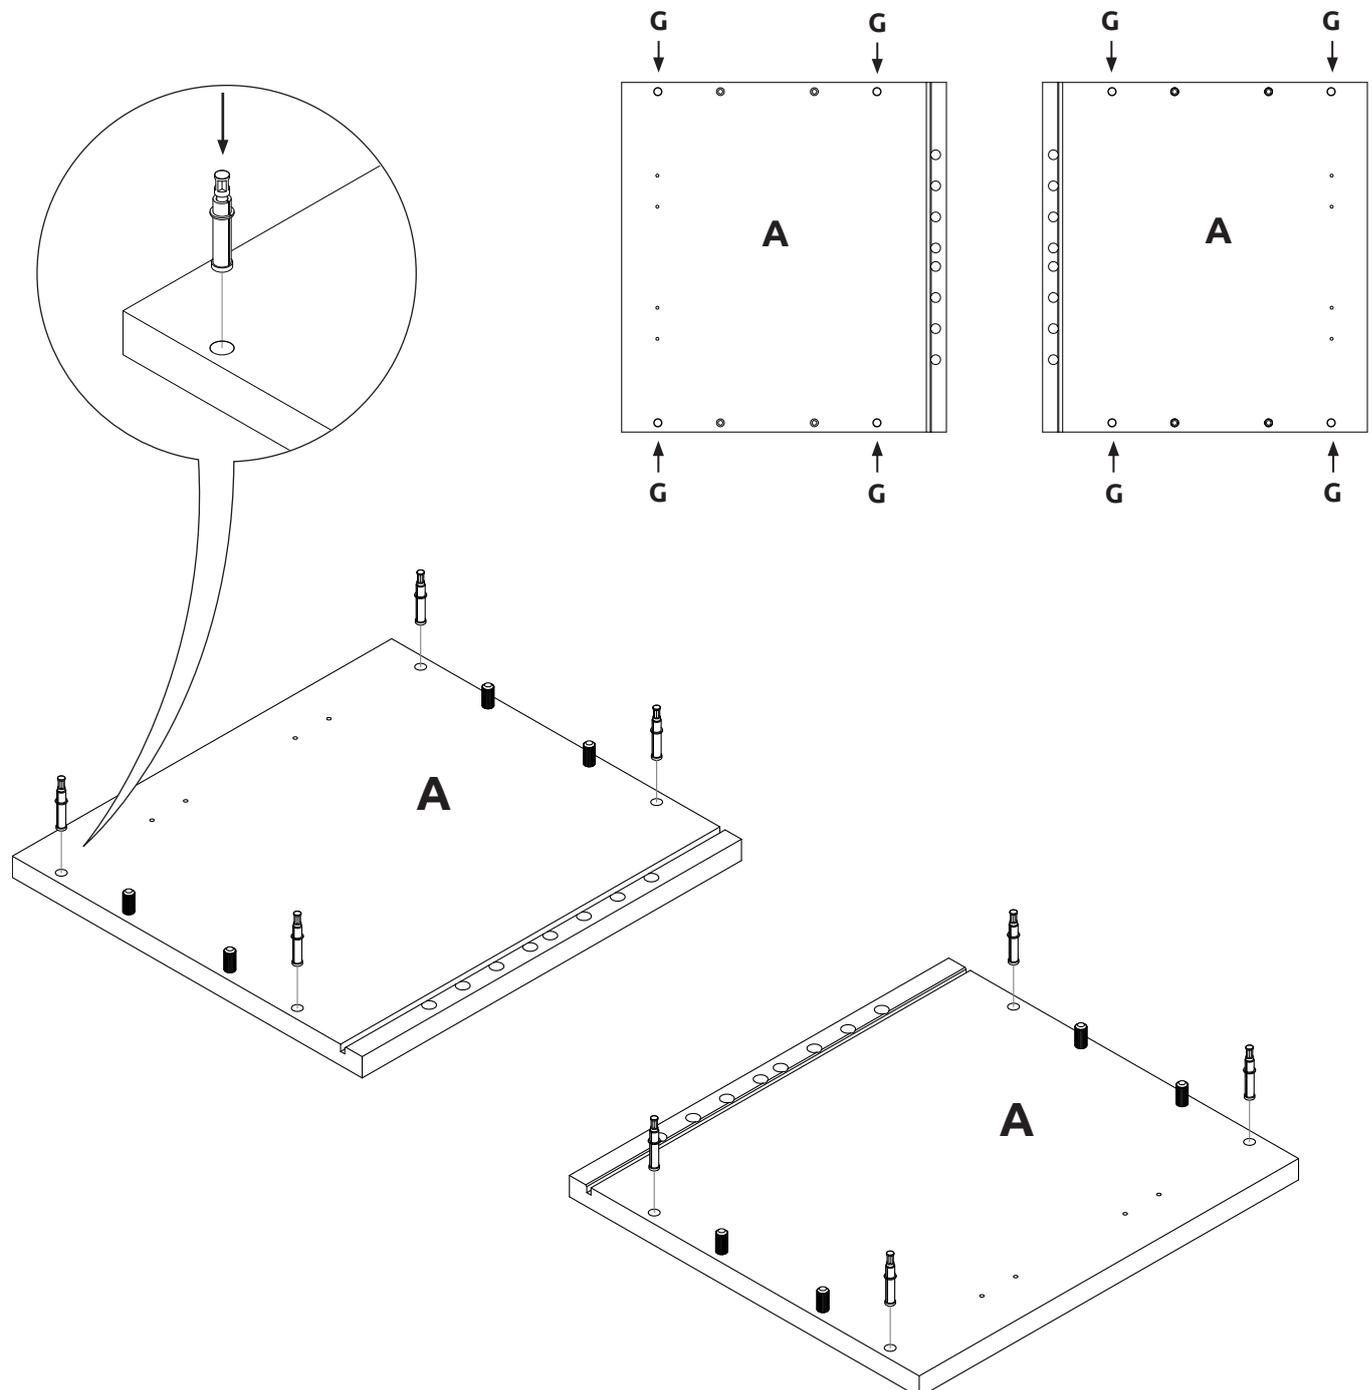

# WALL UNIT



## 600-800, Lift Assembly Guide

### Step 3.

Attach panels **(C)** to panel **(A)**, using expanding cam dowels **(G)**, and wooden dowels **(F)** in positions as shown. *Fig 1.*



All cam lock **(H)** holes are to be positioned facing the outside of the unit carcass, for ease of tightening.

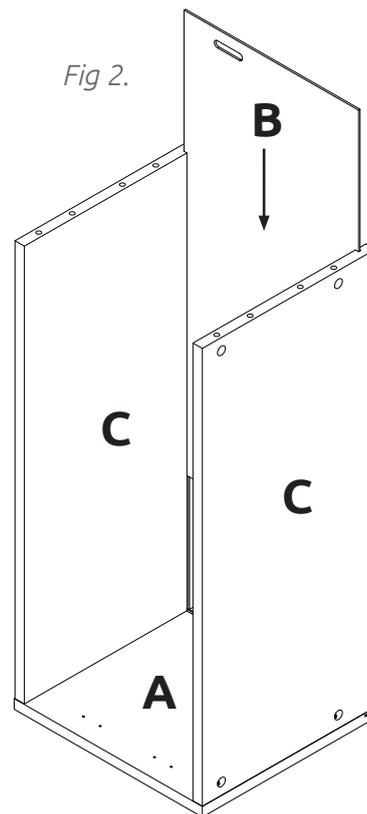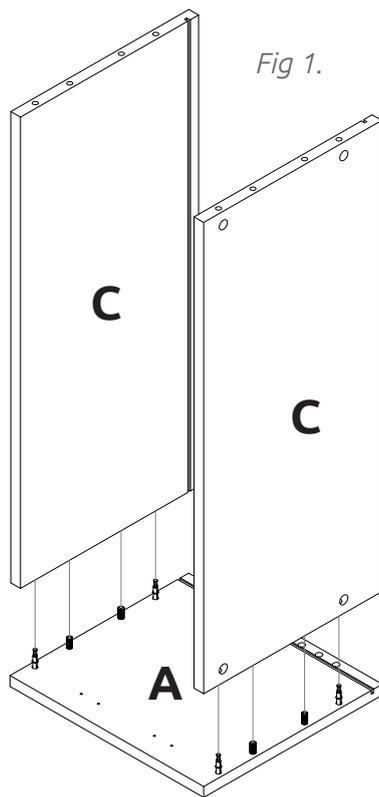

### Step 4.


Slide back panel **(B)** into grooves of panels **(C)** and end panel **(A)**. *Fig 2.*

# WALL UNIT

## 600-800, Lift Assembly Guide



**Step 5.**

Attach end panel (A), using expanding cam dowels (G), and wooden dowels (F) in positions as shown.

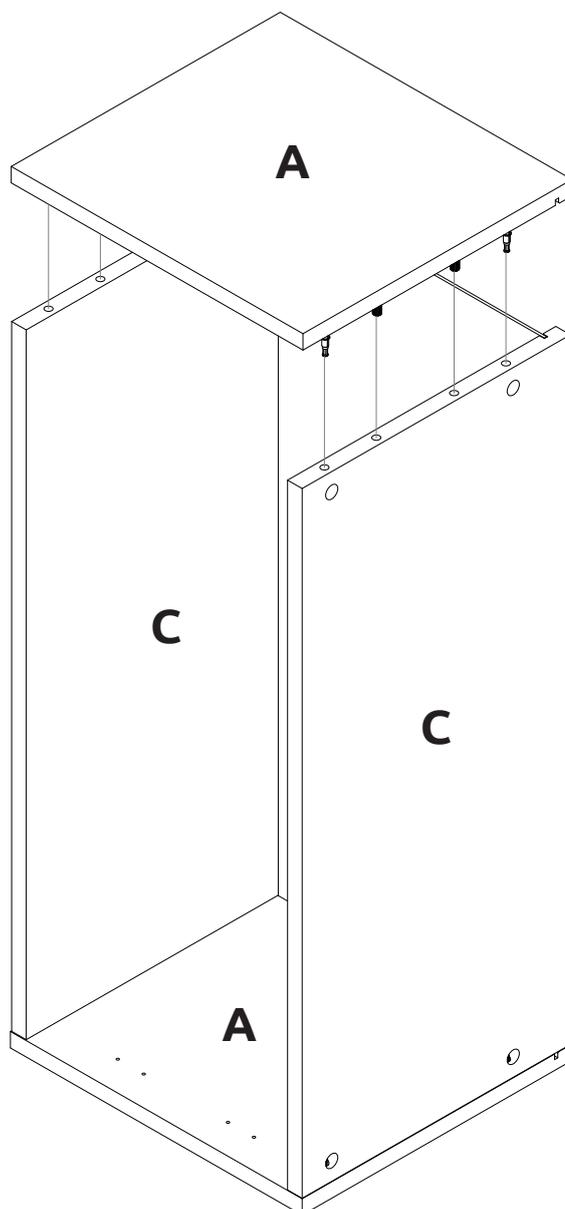

# WALL UNIT

## 600-800, Lift Assembly Guide

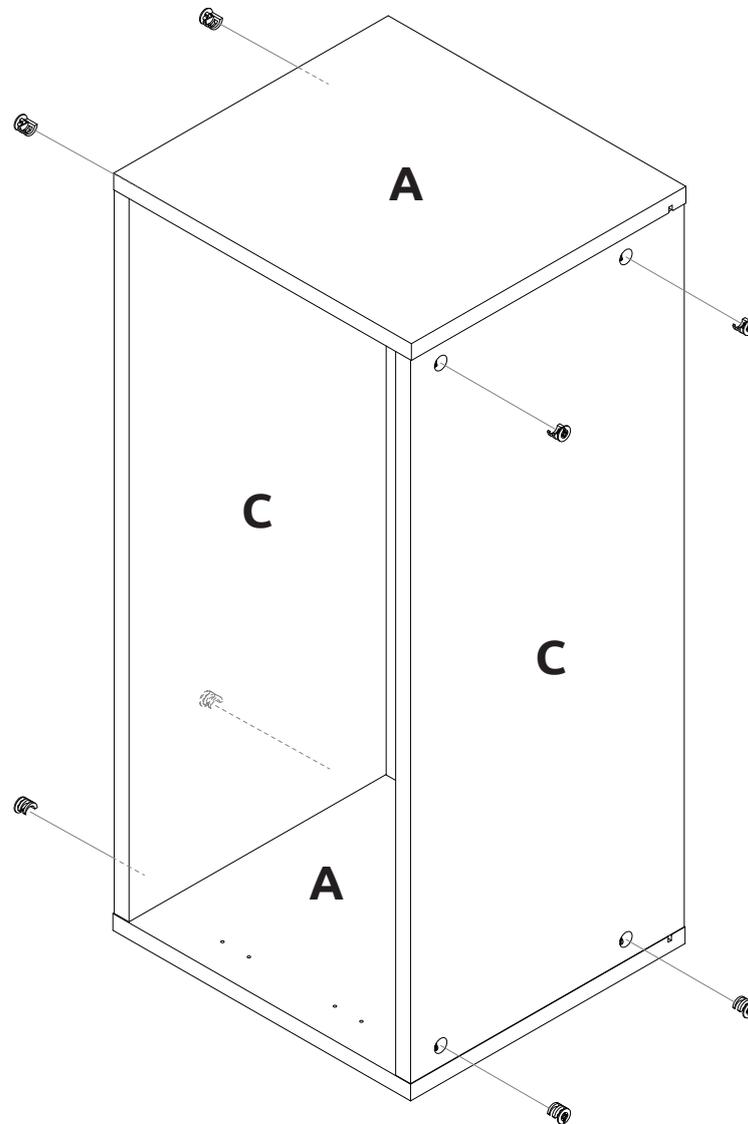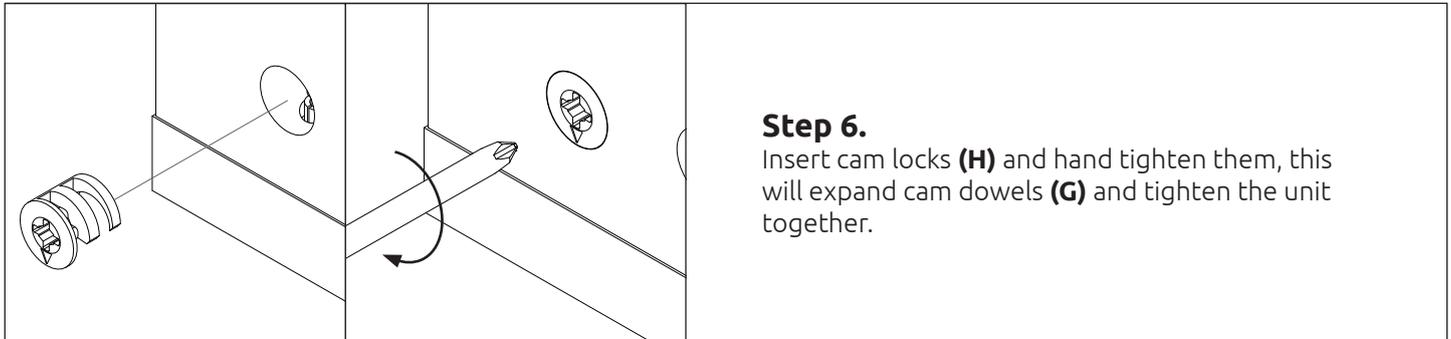

Do **not** use power tools with cam lock **(H)**


# WALL UNIT

## 600-800, Lift Assembly Guide

### Step 7.

Ensure the unit is square. Slide back panel clips **(T)** into the groove of both panels **(A)** & **(C)**. The back panel clips **(T)** should be evenly spaced as shown and positioned to allow the hanging bracket and corner gussets to be fitted. Once in place, tighten screw.

**The side back panel clips should be disregarded for the 288 units.**

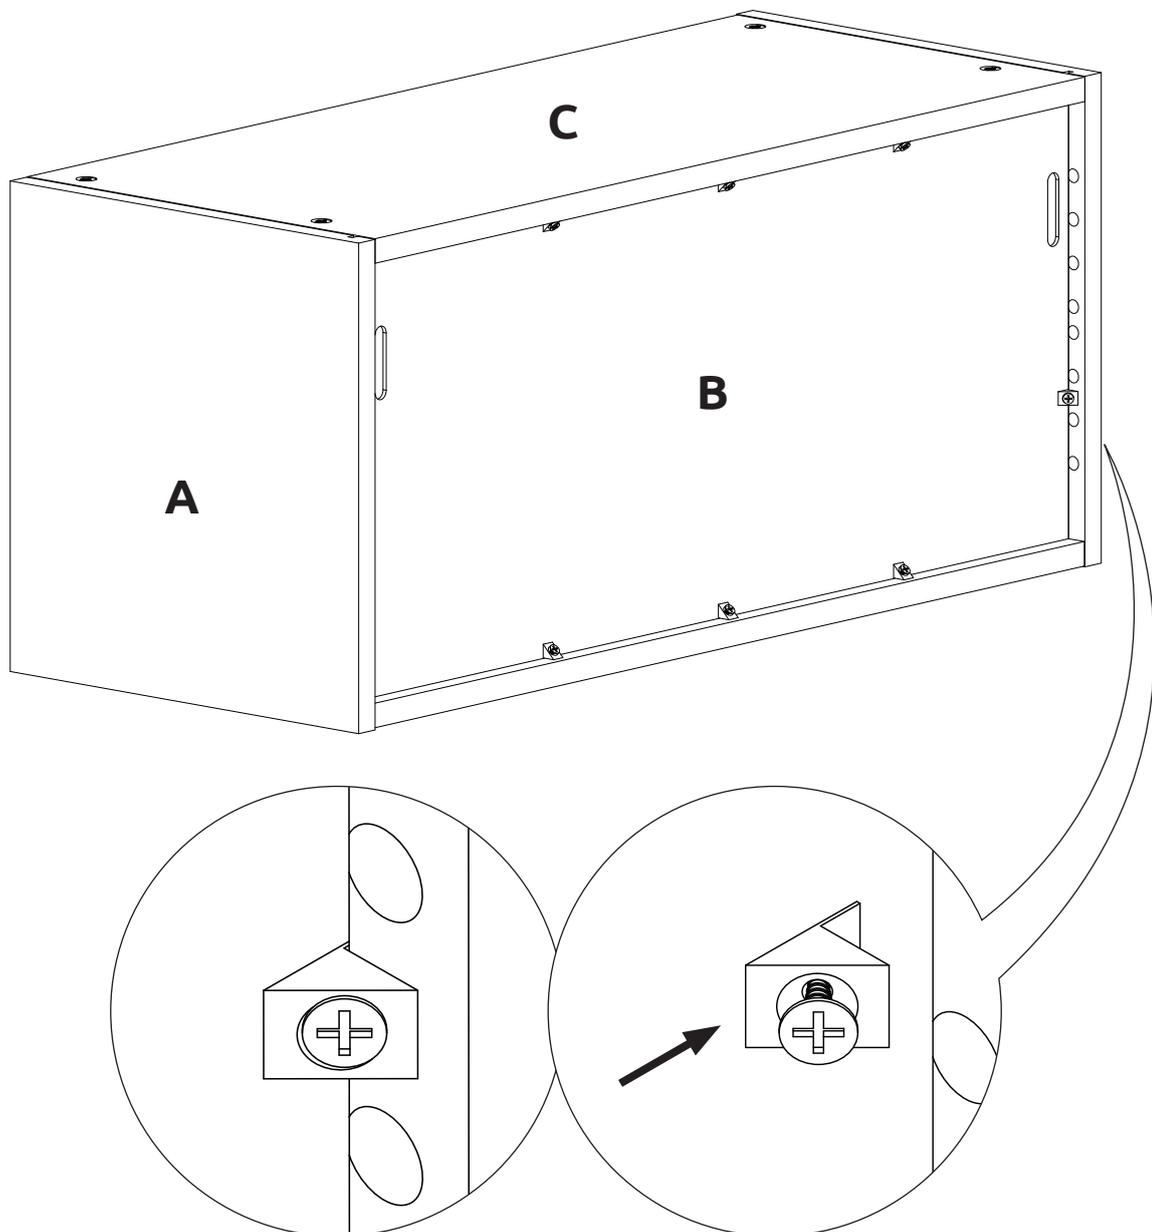

# WALL UNIT

## 600-800, Lift Assembly Guide



### Step 8.

Hanging brackets steps **A**, **B** & **C** to be carried out on both sides as shown.

**A.** Insert hanging bracket into pre-drilled holes.


**B.** Rotate locking lever 180 degrees.

**C.** Secure with provided 2 x 20mm screws (**S**) per bracket.

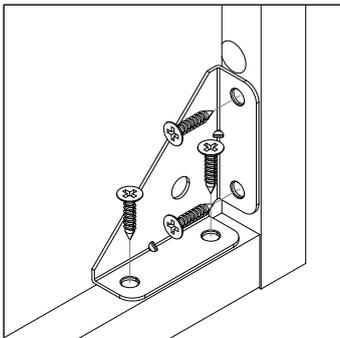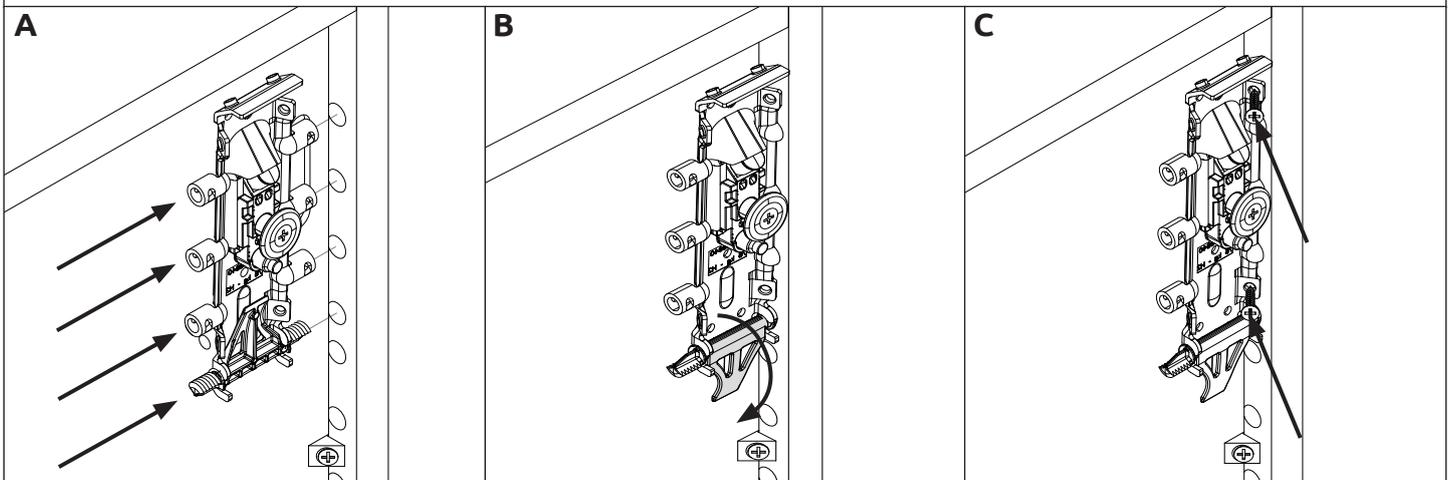

### Step 9.

Secure corner gussets to the bottom left and right hand side of the wall unit using 4 x 15mm screws (**L**) per plate.

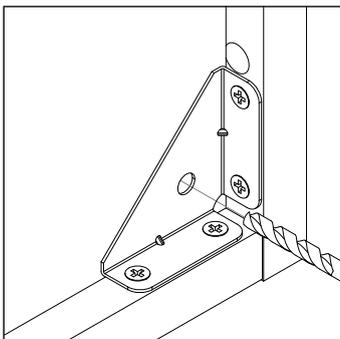

### Step 10.



Drill a small pilot hole through the centre of the Corner Gussets. Use this hole at the end of the process to screw through and into the wall.

# WALL UNIT

## 600-800, Lift Assembly Guide

### Step 11.


Measure and attach hinge mounting plates onto fixed shelf (C) as shown, using screws already positioned within hinge plates.

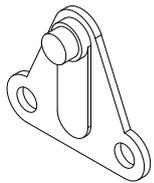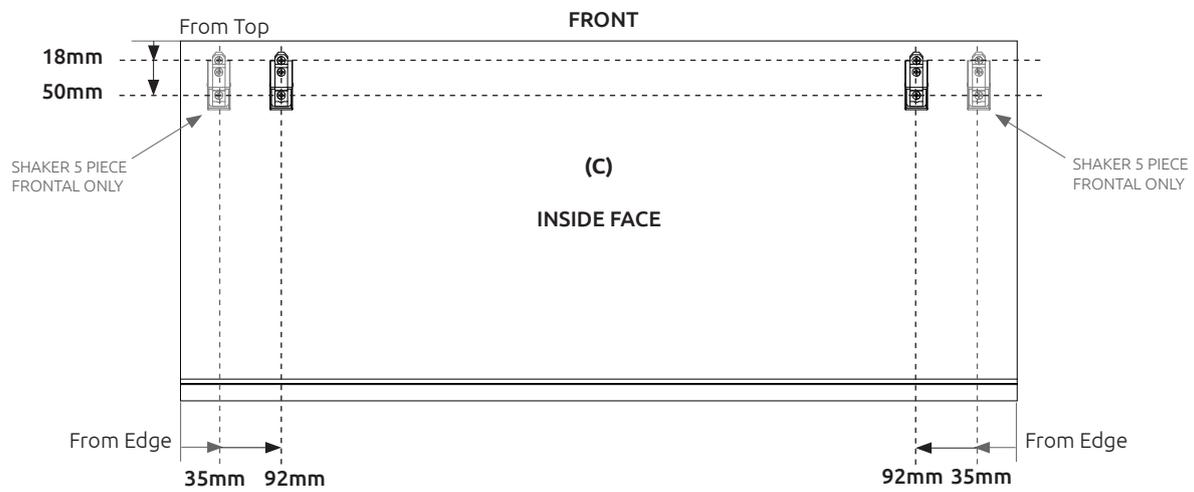

Lift hinge bracket


### Step 12.

Measure and attach lift hinge brackets onto both end panels (A), using 2x screws per bracket which are already included within lift hinge pack.

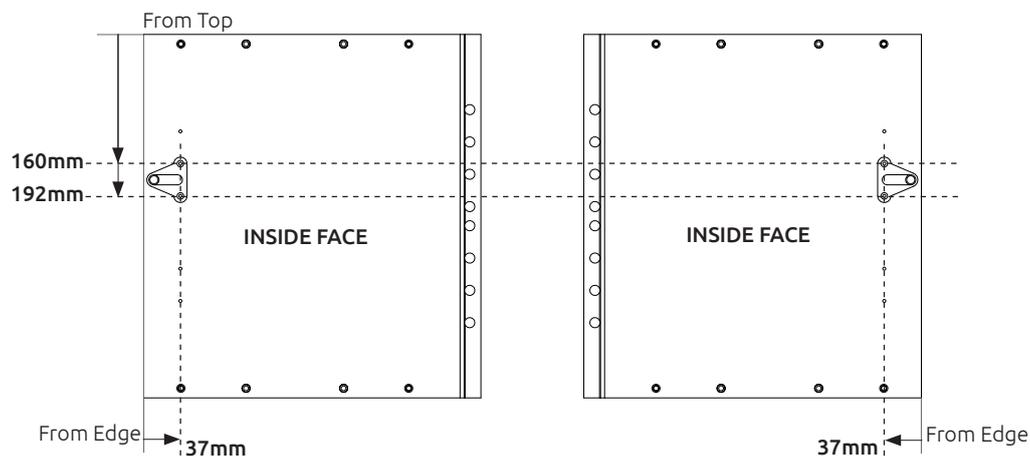

# WALL UNIT



## 600-800, Lift Assembly Guide

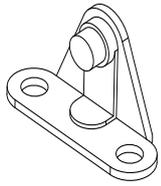

Lift hinge bracket

### Step 13.

Measure and attach lift hinge brackets to the frontal using 2x screws per bracket which are already included within lift hinge pack.

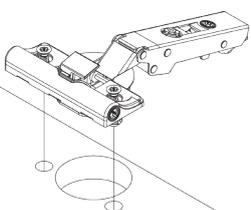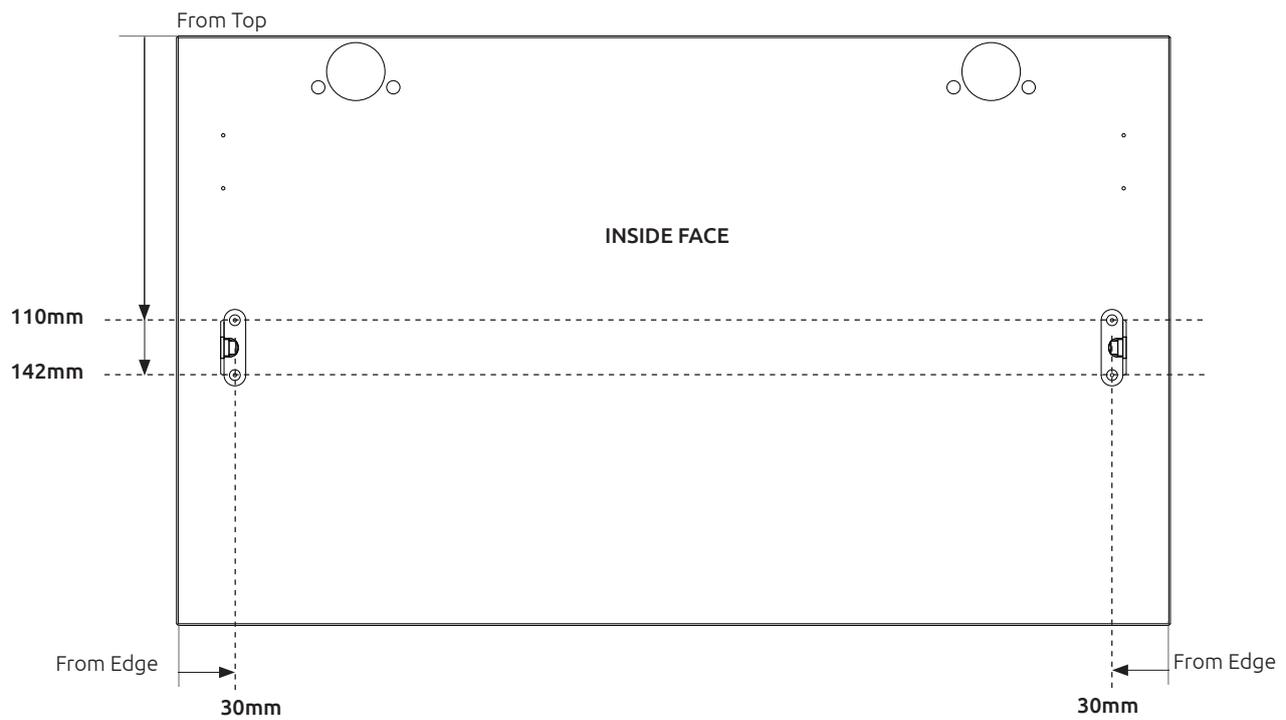

### Step 14.

Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.



# WALL UNIT


## 600-800, Lift Assembly Guide



Care to be taken. Hanging procedure is necessary for a safe installation.



Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

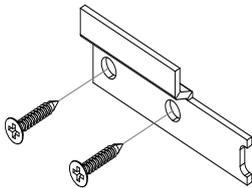


### Step 15.

Measure appropriately and attach the 2 x hanging bracket plates onto the wall screwing through the provided holes into your wall.

### Step 16.

Hang the unit using the brackets to hook onto the plate as shown.

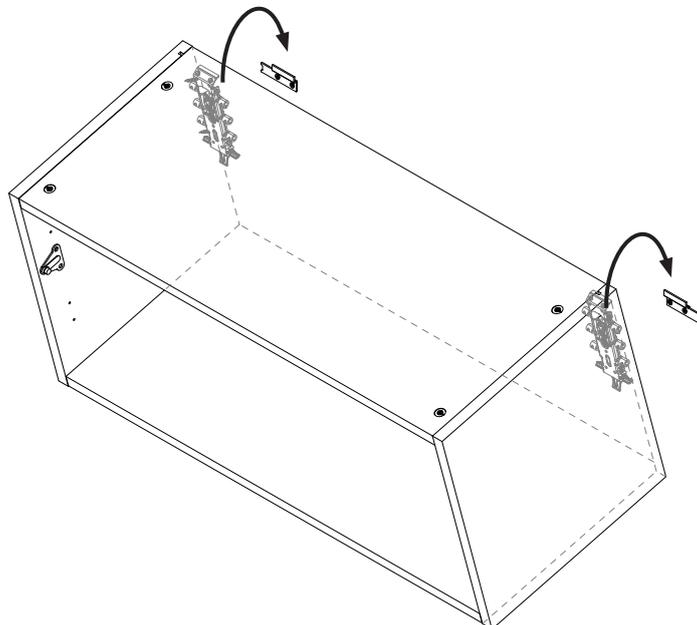


# WALL UNIT


## 600-800, Lift Assembly Guide

### Step 17.

Using points **a**, **b** & **c** adjust the unit to suit.

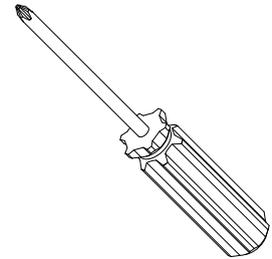

**a**

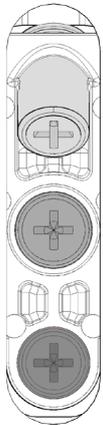

#### Point a.

Rotate the top screw clockwise to move the unit up.  
Anti-clockwise for down.

**b**

#### Point b.

Adjust the depth using centre screw.


**c**

#### Point c.

Turn the bottom screw until it touches the plate to lock in position.




Screws for attaching to walls are **not provided** as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

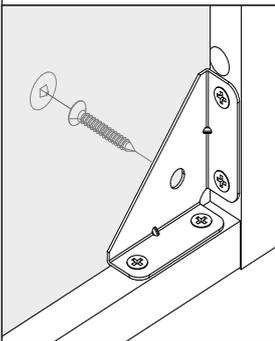

### Step 18.

Secure the unit to the wall by screwing through the pilot hole and gusset from **Step 10** into the wall. Place cover caps **(M)** on the heads to conceal them.




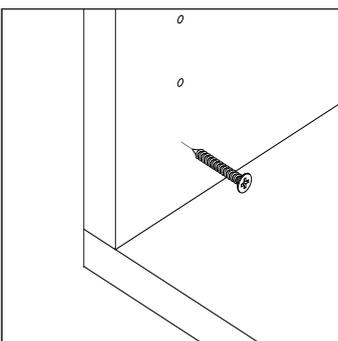



### Step 19.



Screw into any adjacent units using 30mm screws **(K)** provided to secure to unit. Screw at the top and bottom, place cover caps **(M)** on the heads to conceal them.

# WALL UNIT

## 600-800, Lift Assembly Guide

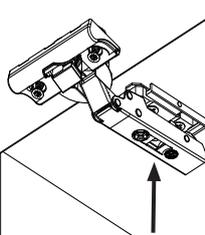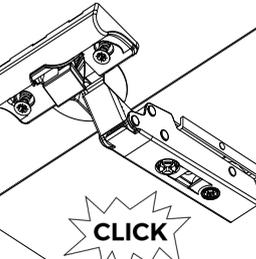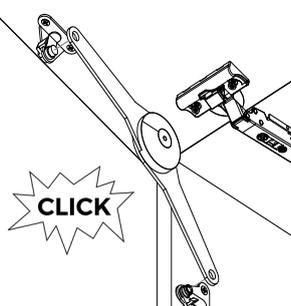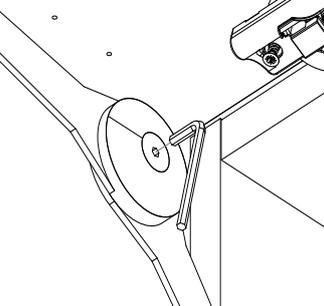		<p><b>Step 20.</b> Clip hinges into hinge mounting plates on the unit.</p>
		<p><b>Step 21.</b> Clip lift hinge mechanisms into each bracket. Use a 4mm allen key to adjust the strength of the lift hinge for the door weight</p>
<p><b>Step 22.</b> Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

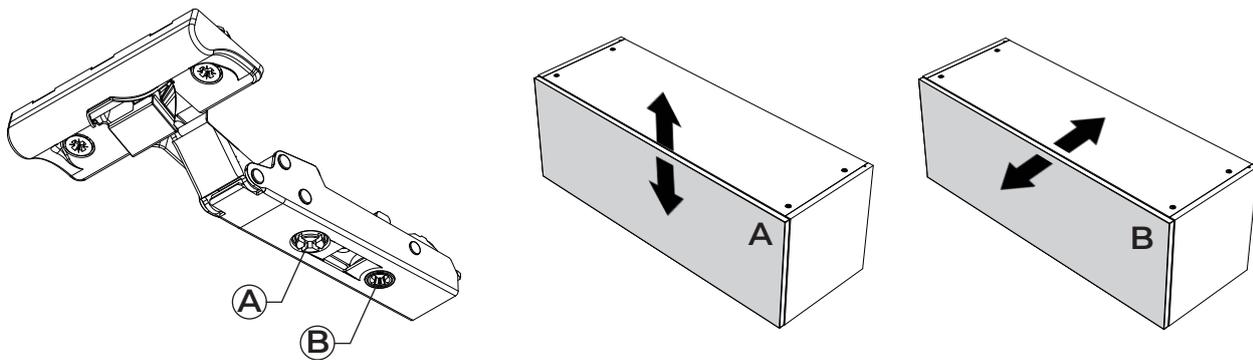

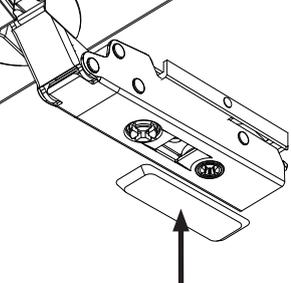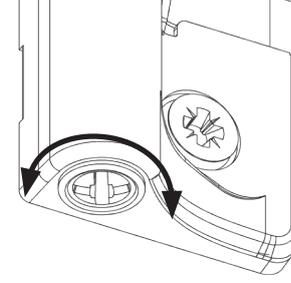	<p><b>Step 23.</b> Fit cover caps to hinges and adjust soft-close to suit.</p>	
---	--	---

	<p>Hinges <b>MUST</b> be adjusted to the <b>SAME STRENGTH</b>.</p>
---	--